



iX Developer

Reference Manual

English

Reference manual for iX Developer

Foreword

The iX Developer software is used to configure iX panels and PC operated control applications, including applications for IPCs (Industrial PCs).

The iX Developer makes it easy to create logical, flexible and effective HMI applications that provide the right information on the right occasion to operators and to other systems.

This manual describes the configuration software in detail.

Please see the iX Developer User's Guide (MAEN832x) for function-based descriptions.

The manual assumes that the most recent versions of the system program (image) and iX Developer are used.

For specific details of a connected controller refer to the help file for the controller driver. The function of a project application in an operator panel is not affected by the choice of controller.

The information in this manual is also available by pressing F1 while using iX Developer.

The present revision of this manual is valid for version 2.40 SP6 of iX Developer.

Order no: MAEN831Y

Copyright © 2021-06 Beijer Electronics AB. All rights reserved.

The information in this document is subject to change without notice and is provided as available at the time of printing. Beijer Electronics AB reserves the right to change any information without updating this publication. Beijer Electronics AB assumes no responsibility for any errors that may appear in this document. All examples in this document are only intended to improve understanding of the functionality and handling of the equipment. Beijer Electronics AB cannot assume any liability if these examples are used in real applications.

In view of the wide range of applications for this software, users must acquire sufficient knowledge themselves in order to ensure that it is correctly used in their specific application. Persons responsible for the application and the equipment must themselves ensure that each application is in compliance with all relevant requirements, standards, and legislation in respect to configuration and safety. Beijer Electronics AB will accept no liability for any damage incurred during the installation or use of equipment mentioned in this document. Beijer Electronics AB prohibits all modification, changes, or conversion of the equipment.

Contents

1	The Configuration Tool	12
1.1	Introduction	12
1.1.1	Operator Panels	12
1.1.2	Controller	13
1.1.3	Tags	13
1.1.4	System Requirements and Limitations	14
1.1.5	Getting Started	15
1.1.6	Installation	17
1.1.7	Configured Features	18
1.1.8	Project	18
1.1.9	File Structure	18
2	Working with Projects	22
2.1	Creating a Project	22
2.1.1	Connecting to a Controller	22
2.1.2	Designing a Screen Set	22
2.1.3	Designing Additional Functions	23
2.2	Importing an Information Designer Project	25
2.2.1	Information Designer Import Settings	26
2.3	Importing an H-Designer/ADP Project	27
2.3.1	Exporting the H-Designer/ADP Project	27
2.3.2	Importing the a2i File	27
2.3.3	Limitations	27
2.4	Optimizing Performance	29
2.4.1	Communication Performance	29
2.4.2	Communication Design	29
2.4.3	Performance in the operator panel	31
2.5	Moving Objects with the Touch Screen	35
2.5.1	Operate Objects	35
2.6	Peripherals	36
2.6.1	USB	36
2.6.2	Ethernet	36
2.6.3	Memory Card	36
2.6.4	SD card tests iX Developer	36
3	Development Environment	38
3.1	Starting iX Developer	38
3.1.1	Creating a New Project	39
3.1.2	Opening a Project	42
3.1.3	Getting Familiar with iX Developer	42
3.1.4	Starting iX Developer from the Command Line	44
3.1.5	File Menu	45
3.1.6	Quick Access Toolbar	50
3.1.7	Ribbon Tabs	51
3.1.8	Additional Properties	52
3.2	Desktop Area	52

3.2.1	Screen View in Desktop Area	53
3.2.2	Desktop View Modes	54
3.2.3	Positioning Windows	59
3.2.4	Configuration Pages	61
3.3	Screens	63
3.3.1	Screen Name and Screen Title	64
3.3.2	Background and Foreground Screen	64
3.3.3	Startup Screen	66
3.3.4	Screen Template	66
3.3.5	Screen Security	67
3.3.6	Popup Screen	67
3.3.7	Importing Screens	68
3.3.8	Screen Caching	68
3.3.9	Grid	69
3.4	Objects	70
3.4.1	Handling Objects	70
3.5	Navigation Manager	74
3.5.1	Screen Relations	75
3.5.2	Add Screen	75
3.5.3	Links in the Navigation Manager	75
3.5.4	Navigation Overview	76
3.6	Project Explorer	76
3.6.1	Project Explorer Groups	77
3.7	Component Library	81
3.7.1	Components	82
3.7.2	Add and Use Components	83
3.7.3	Component Library Window	83
3.7.4	XAML Import into iX Developer	87
3.8	Property Grid	91
3.8.1	Search	92
3.8.2	Toggling views	92
3.8.3	Favorites	93
3.8.4	Copy Properties	93
3.9	Object Browser	94
3.10	Output	94
3.11	Error List	94
3.12	Help	94
4	Tags	95
4.1	Adding Tags	95
4.1.1	Removing Unused Tags	95
4.1.2	Basic Settings	98
4.1.3	Scaling	99
4.1.4	Data Exchange	99
4.1.5	Others	99
4.1.6	Adding Tags during Editing	100

4.1.7	Selecting Multiple Tags	101
4.2	Tag Actions	101
4.3	Internal Tags	103
4.4	System Tags	103
4.5	Array Tags	106
4.5.1	Array Tag Set Up	106
4.6	Cross Reference	107
4.7	Triggers	107
4.8	Poll Groups	108
4.9	Station Handling	109
4.10	Index Registers	110
4.10.1	Index Addressing Example	111
4.10.2	Using Index Registers for Station Handling	114
4.11	Expressions	116
4.11.1	Definition	116
4.11.2	Using Expressions	116
4.11.3	Library Expressions	117
4.11.4	Limitations	118
4.12	Tag Expressions	118
4.13	Data Exchange	119
4.14	Importing and Exporting Tags	122
4.14.1	Handling Columns	122
4.14.2	Saving the Import Configuration	122
4.14.3	Tag Import Example	122
4.14.4	Importing Tags from the Command Line	125
4.15	Filtering Tags	126
4.16	Tag Format	126
4.17	Aliases	128
4.17.1	Creating Aliases	128
4.17.2	Instances	129
5	Controller	131
5.1	Adding a Controller	131
5.1.1	Notify Window	132
5.2	DEMO Controller	132
5.3	External OPC Server	133
5.3.1	OPC Classic Client	133
5.3.2	OPC UA Client	133
5.4	Updating Drivers	143
5.4.1	Updating Drivers from Internet	143
5.4.2	Updating Drivers from File	144
5.5	Synchronizing the Controller Clock	145
6	Web Server	146
6.1	Web Server Configuration	146
6.1.1	Web Site Configuration	146
6.1.2	Login Form	146

6.2	Javascript SDK	147
6.2.1	Javascript SDK Overview	147
6.3	Web Service API	157
6.3.1	RESTful Web Service API	157
6.3.2	General	157
6.3.3	REST API	157
7	Objects	161
7.1	Blinking Objects	162
7.1.1	Limitations for operator panel Targets	163
7.2	Shapes	163
7.3	HMI Controls	164
7.3.1	Action Menu Object	165
7.3.2	Alarm Viewer Object	166
7.3.3	Analog Numeric Object	167
7.3.4	Animated GIF	168
7.3.5	Animated Label Object	169
7.3.6	Audit Trail Viewer Object	170
7.3.7	Button Object	170
7.3.8	Circular Meter Object	173
7.3.9	Chart Object	176
7.3.10	Database Viewer Object	179
7.3.11	Digital Clock Object	179
7.3.12	Linear Meter Object	180
7.3.13	Multi Picture Object	181
7.3.14	Picture Object	182
7.3.15	Roller Panel Object	183
7.3.16	Slider Object	184
7.3.17	Tag Monitor Object	185
7.3.18	Text Object	186
7.3.19	Touch Combo Box Object	186
7.3.20	Touch List Box Object	187
7.3.21	Trend Viewer Object	188
7.4	Media Controls	188
7.4.1	Media Player Object	189
7.4.2	PDF Viewer Object	190
7.4.3	Web Browser Object	191
7.5	Miscellaneous Control Objects	193
7.5.1	QR Code object	193
7.6	Special Controls	195
7.6.1	Navigation List Box Object	195
7.6.2	Screen Carousel Object	196
7.7	Debug Tools	197
7.7.1	Alarm Distributor Viewer Object	197
7.8	Windows Controls	197
7.8.1	Check Box Object	198

7.8.2	Combo Box Object	198
7.8.3	Group Box Object	199
7.8.4	List Box Object	199
7.8.5	Progress Bar Object	200
7.8.6	Radio Button Object	200
7.8.7	Text Box Object	202
7.9	Additional Controls	202
7.9.1	Target Platform	203
7.9.2	Adding Controls to the iX Developer Toolbox	203
7.9.3	Default Controls and Installed Controls	205
7.10	WPF Controls	206
7.10.1	WPF User Controls	206
7.10.2	WPF Custom Controls	206
7.10.3	Creating a WPF User Control with Tag Connection	206
7.10.4	Creating a Windows Forms User Control for a PC Target	208
7.10.5	Creating a Windows Forms User Control for a CE Target	211
8	Ribbon Tabs	214
8.1	Home Ribbon Tab	214
8.1.1	Clipboard Group	215
8.1.2	Screen Group	216
8.1.3	Objects Group	216
8.1.4	Object Variations	217
8.1.5	Font Group	220
8.1.6	Format Group	221
8.1.7	Tag/Security Group	224
8.1.8	Name Group	225
8.1.9	Design Language Group	226
8.2	Project Ribbon Tab	226
8.2.1	Run Group	226
8.2.2	Transfer Group	227
8.2.3	Project Group	234
8.2.4	Command Window in Transfer Client	244
8.3	System Ribbon Tab	245
8.3.1	Date, Time, and Region Group	245
8.3.2	Buzzer Group	247
8.3.3	Backlight Group	247
8.3.4	Serial Ports Group	247
8.3.5	Servers Group	248
8.3.6	Output Devices Group	252
8.3.7	Service Menu Group	255
8.4	Insert Ribbon Tab	256
8.4.1	Functions Group	256
8.5	View Ribbon Tab	257
8.5.1	Windows Group	257
8.6	Dynamics Ribbon Tab	258
8.6.1	Layout Group	258

8.6.2	Color Group	260
8.6.3	General Group	261
8.7	General Ribbon Tab	268
8.8	Actions Ribbon Tab	269
8.8.1	Click Action Trigger	269
8.8.2	Mouse Button Action Triggers	269
8.8.3	Function Key Action Triggers	270
8.8.4	Value Changed Action Triggers	270
8.8.5	Tags Action Triggers	271
8.8.6	Focus Action Triggers	271
8.8.7	Navigation Action Triggers	271
8.8.8	Data Logger Action Triggers	271
8.8.9	Alarm Server Action Triggers	271
8.8.10	Action Groups	271
8.8.11	Script Action	276
8.8.12	Multiple Actions	277
9	Trend Viewer	279
9.1	Defining Trend Viewer Objects	279
9.1.1	Adding a Trend Viewer Object	279
9.1.2	Trend Viewer Legend	281
9.2	Historical Mode in Trend Viewer	282
10	Data Logger	283
10.1	Data Logging Strategies	283
10.1.1	Logging Based on Time Interval	283
10.1.2	Logging Based on Changed Tag Value	283
10.1.3	Maximizing the Lifetime of the Storage Media	284
10.2	Adding a Data Logger	284
10.2.1	General Settings	285
10.2.2	Actions	286
11	Scheduler	287
11.1	Scheduler Set Up	287
11.1.1	Adding a Scheduler	287
12	Reports	288
12.1	Reports Template Set up	288
12.1.1	Limitations	288
12.1.2	Database Driven Reports	289
12.2	Reports Set Up	290
12.3	Adding a Report	290
13	Recipe Management	291
13.1	Recipe Setup	291
13.1.1	Adding a Recipe Manager	291
13.2	Recipe Management in iX Design Time	293
13.2.1	Recipe Import	293
13.2.2	Recipe Export	294
13.3	Recipes in the iX panel	296

13.3.1	Loading Recipes	297
13.3.2	Saving Recipes	297
13.3.3	Creating Recipes in the iX panel	297
13.3.4	Editing Recipes Offline	297
13.4	Recipe Export	298
13.4.1	Recipe Export from an Operator Panel Target	299
13.4.2	Recipe Export from a PC Target	300
13.5	Recipe Import	300
13.5.1	Recipe Import to an Operator Panel Target	301
13.5.2	Recipe Import to a PC Target	302
14	Function Keys	303
14.1	Definitions	303
14.2	Configuring Function Keys	303
14.2.1	Function Key Actions	303
14.2.2	Function Key Scripts	304
14.2.3	Momentary Function	305
15	Alarm Management	307
15.1	Alarm Conditions	307
15.2	Alarm Server	307
15.2.1	General Settings	308
15.2.2	Alarm Server Events and Actions	309
15.2.3	Alarm Distribution Settings	310
15.3	Alarm Indicator	311
15.4	Alarm Items	312
15.4.1	Exporting and Importing Alarm Items	313
15.5	Alarm Groups	314
15.5.1	Defining Alarm Groups	314
15.6	Actions and Events for Alarm Items and Alarm Groups	315
15.6.1	Actions and Events	315
15.6.2	Example	315
15.7	Remote Alarm Server	316
15.7.1	Remote Alarm Server Limitations	316
15.7.2	Remote Alarm Server Properties	316
15.7.3	Remote Alarm Client	317
15.8	Alarm Distributor	318
15.8.1	Alarm Distribution Roles	318
15.8.2	Adding an Alarm Distributor	319
15.8.3	Configure Distribution Devices	323
15.9	Alarm Distributor Viewer	326
15.10	Alarm Viewer	327
15.10.1	Buttons Group	327
15.10.2	Display Settings Group	328
15.10.3	Alarm Viewer Commands	328
15.11	Alarm Management in Runtime	328
15.11.1	Alarm Acknowledgement	329
15.11.2	Sorting	329

15.11.3	Filtering	329
15.11.4	Play/Pause Button	329
15.11.5	Info Button	329
15.11.6	Modifying Alarm Distribution Settings in Runtime	330
15.11.7	Enable/Disable Selected Alarm	330
15.11.8	Manage Alarms	331
16	Security Management	333
16.1	General Security Settings	333
16.1.1	Password Rules Properties	334
16.2	Security Groups	334
16.2.1	Creating Security Groups	334
16.3	Users	335
16.3.1	Logging In and Logging Out	336
16.4	Object Security and Visibility	336
16.5	Cyber Security Best Practice	337
16.5.1	Web Server Security	338
16.5.2	FTP Server Security	338
16.5.3	Remote Server Security	338
16.5.4	OPC UA Security	339
16.5.5	Project Transfer Security	339
16.5.6	Email (Alarm distributor)	339
16.5.7	Ethernet Printer Devices	339
16.5.8	Password Settings	340
16.5.9	Define Security Users	340
16.5.10	Service Menu Password Setting	340
16.5.11	Audit Trail	341
16.5.12	Antivirus program	341
16.6	Physical Security	342
16.7	Open Ports	342
16.8	Client ports	343
17	Language Management	344
17.1	Setting Up Multiple Languages	344
17.1.1	Adding Languages	344
17.2	System Texts	346
17.3	User Texts	347
17.4	Text ID	347
17.4.1	Text ID Browser	348
17.5	Automatic Translation	350
17.6	Exporting Languages	352
17.7	Importing Languages	352
18	Audit Trail	354
18.1	Logging Strategies	354
18.2	Using the Audit Trail Function	354
18.2.1	Audit Trail Description	355
18.3	Audit Trail Viewer	356
18.4	Audit Trail Export	356

18.4.1	Audit Trail Export from an iX panel Target	357
18.4.2	Audit Trail Export from a PC	358
19	Text Library	359
19.1	Connecting Objects to Text Library Texts	360
19.2	Exporting and Importing Text Library Texts	360
20	Database Export	361
20.1	Setting up Database Export	361
20.1.1	Database Export from operator panel Target	362
20.1.2	Database Export from PC	363
21	Backup Databases (Action)	364
22	Restore Databases (Action)	366
23	Database Cleanup	368
24	Multiple Controllers	369
24.1	Adding a Controller	369
24.1.1	Addressing	370
24.1.2	Examples	370
25	Configuration settings for BoX 2	372
25.1	Enable Diagnostic page	373
25.2	LED	376
26	Troubleshooting	377
26.1	Project Build Failure	377
26.2	Back Up Project Issues	377
26.3	Invalid Names	377
26.4	Expression Cannot Be Found	377
26.5	Performance Issue Related to Graphics Card	377
26.6	Error Related to Third Party Controls	378
26.7	Performance Issue When Navigating in Script Tree View	378

1 The Configuration Tool

1.1 Introduction

The iX Developer software is used to configure operator panels and PC operated control applications, including applications for IPCs (Industrial PCs) from Beijer Electronics.

iX Developer contains all basic functions needed in an application. The functions are tested and developed with customer needs and preferences in focus.

Pre-defined objects in iX Developer can be used to create complete process images, providing an overview of a complex application. You can customize the pre-defined objects or create objects of your own.

Communication drivers for a large number of controllers and automation equipment are available.

The help file assumes that the most recent versions of the system program (image) and iX Developer are used.

1.1.1 Operator Panels

iX Developer can be used to configure several models of operator panels. To improve readability, unless stated otherwise, the information in this manual applies to the panels according to the table below:

Base model ¹⁾	Also applies to
X2 base	iX TxA-SC iX T7AM (including CAN) iX TxF-2 iX TxA
iX TxB	iX TxB-SC iX TxB-SM iX TxBR (including combinations of CAN, HB and HP) iX TxBM (including combinations of CAN and HB)
X2 pro	X2 marine (including HB) X2 marine SC (including HB) X2 control X2 extreme (including combinations of HP and 12V) X2 extreme SL (including HP) X2 extreme SL SC (including HP) X2 extreme SC (including HP)

¹⁾The term *Base model* does not necessarily mean that the panels share a common hardware platform, it merely indicates that they have the same capabilities from the perspective of iX Developer

1.1.2 Controller

iX Developer operator panels can be connected to many types of automation equipment, such as PLCs, servos, and drives. Further on, the expression *controller* is used as a general term for the connected equipment.

Related information
Controller

1.1.3 Tags

Data values in a controller are referred to as *tags*.

Tags may also belong to the system or be internal. A tag has a symbolic name and can be of different data types.

Objects connected to tags can change values in the controller, and tag values can be reflected by changing object appearance in various ways. Objects in a screen will remain static until connected to a tag.

Related information
Tags

1.1.4 System Requirements and Limitations

iX Developer

iX Developer System Requirements	
Parameter	Recommendation
RAM	2 GB
Processor	2 GHz or higher
Operating system	Microsoft Windows 10 Home, Pro and Enterprise editions. Supported versions: 1909, 2004 and 20H2.
Graphics card	Tier 2:
	DirectX version: 9.0 or higher
	Video RAM: 120MB or higher
	Pixel shader: version level 2.0 or higher
	Vertex shader: version level 2.0 or higher
	Multitexture units: 4 or more

Updates

Software, drivers and protocols may have been updated since the USB stick was produced. Therefore, it is recommended that you use the built-in update function in iX Developer before creating a project.

Related information
Update Software
Updating Drivers

iX Runtime

iX Runtime System Requirements	
Parameter	Recommendation
RAM	1 GB
Processor	1.3 GHz or higher
Operating system	Microsoft Windows 10 Home, Pro and Enterprise editions. Supported versions: 1909, 2004 and 20H2. Microsoft Windows 10 IoT Enterprise 2019 LTSC.
Graphics card	Tier 2:
	DirectX version: 9.0 or higher
	Video RAM: 120MB or higher
	Pixel shader: version level 2.0 or higher
	Vertex shader: version level 2.0 or higher
	Multitexture units: 4 or more

Updating the Panel Image in an operator panel

The Panel Image is pre-loaded in every operator panel on delivery. If necessary, this could be upgraded to a newer version using the Image Loader application.

Special Requirements for Some Objects

For some objects to be included in the iX Developer project, specific software versions are required. Simulation of the project on the development PC may also be limited for some targets.

Object	Minimum requirement	Simulation on PC target	Simulation on panel target
Media Player	Windows Media Player 10	Supported	Not supported
PDF Viewer	-	Supported	Not supported
Web Browser	Microsoft Internet Explorer 7	Supported	Not supported

1.1.5 Getting Started

iX Developer is installed on a development PC, where projects are developed, designed and compiled. The project is then run in an operator panel or PC to observe and control a controller (or a group of controllers).

Starting in iX Developer 2.30 it is possible to have multiple installations of iX Developer versions from the same generation on the same target PC in design time.

E.g. One version of iX Developer 1.x (e.g. 1.31), and one version of iX Developer 2.0 to iX Developer 2.20 SP2 (e.g. 2.20 SP1), and iX Developer 2.30 and all following versions after that.

Note:

Running two versions of iX Developer at the same time and copying and pasting from one version to another is not supported.

Target

iX Developer projects can be targeted for

- An operator panel from Beijer Electronics
- A PC (Industrial PC) from Beijer Electronics
- A standard PC with Microsoft Windows 10 Home, Pro and Enterprise editions.

To enhance readability, only operator panel will be mentioned sometimes, when all different targets actually could be included.

The functions in iX Developer depend on the model of operator panel used.

Some differences exist between the targets, for example:

Item	Support on PC target	Support on operator panel target
Media Player	Supported	Not supported on X2 base panels
Web Browser	Supported	
PDF Viewer	Supported	Not supported on X2 panels 4" and 7" (except for X2 marine 7 HB SC) panels
Navigation List Box	Supported	Not supported on operator panels
Screen Carousel	Supported	
Drop down shadow effect	Supported	
Rounded corners on rectangle	Supported	
Opacity	Supported	
Report	Supported	Reports containing charts and pictures can not be printed from an operator panel target
Dynamics	All dynamic settings are supported	Some dynamic settings are not supported on operator panels, e.g. background color for button, trend viewer and meter, and min/max values for meter

The models TxE and TxF are panel versions based on X2 base, and the same iX Developer items as for X2 base are supported.

License

A project for an operator panel can be used without any restrictions imposed by licensing.

A limited number of controller tags are available for a standard PC project. The number of tags is controlled by a USB hardware dongle.

The PCs from Beijer Electronics are configured with a fixed limit of tags, and do not require a USB dongle.

The number of used controller tags (including DEMO controller tags) is shown in the lower right of the desktop. The figures will turn red if the number of used tags becomes greater than the number of available tags.

There are no license restrictions for internal tags.

Note:

The license system does not work without internet connection after activation on a virtual machine. This is a safety measure to ensure that a key is not activated on a virtual machine and the virtual machine is then cloned. Please install iX Developer on a physical machine or make sure the virtual machine has internet connection.

Note:

The USB hardware dongle will not be detected when using **Remote Desktop Connection** in Windows to connect remotely.

A third party VNC based remote connection is recommended when remote connections are required.

Related information
Internal Tags
DEMO Controller

Product Registration

The first time iX Developer is started, a registration dialog is displayed. Entering the registration key provides unlimited access to all program functionality and software updates.

Alternatively, select to continue using a trial version of the software. You may evaluate iX Developer with full functionality for 30 days. When the evaluation period has expired, it will still be possible to use the software, but the functions in the **Run** and **Transfer** groups will be disabled.

Note:

If you have already used a Demo version of iX Developer for 30 days, you will not be issued another 30 days for evaluation.

Project Size

The project size is shown in the lower right of the desktop area when designing an operator panel project. The size was calculated at the latest validation.

Tags used: 13 Estimated project size: 79.7 / 80.0 MB

1.1.6 Installation

The iX Developer software is downloaded from <https://smartstore.beijerelectronics.com>.

The installation creates an icon for iX Developer in the group named iX Developer.

Note:

The iX Developer must be installed on a development PC, a iX TxC target can not be used to develop projects.


Installation of iX Runtime

To install iX Runtime on a PC, start the iX Runtime installer. To run the program, a dongle or software license is required that is supplied by Beijer Electronics.

1.1.7 Configured Features

iX Developer offers the possibility to add customer-specific features in the program. This is done through the use of registration keys that are entered after the iX Developer software installation has been done.

Clicking on **Show Features** displays a list of enabled features. To install a new feature, enter the feature registration key under **Configured Features** and click OK. A restart of the program is required to activate the function.

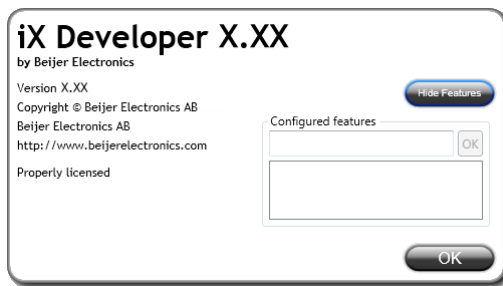

Related information

[About](#)

1.1.8 Project

The top folder for a specific application designed with iX Developer is referred to as the project folder.

During runtime, project database files can be updated, for example with new recipes. This means that to completely reproduce a project that has been in operation, it may be necessary to combine source files with files retrieved from the operator panel.

1.1.9 File Structure

A project contains a set of files related to the functional and graphical design and a set of files related to the runtime operation of the project, where the latter is compiled from the design files.

Project Folder

When a new project is created, a folder with the project name is created as the top-level container, the **Project** folder. The files that define the functional and graphical design reside in the top level of the project folder. Other folders are created as a result of validation and build.

Symbols

Pictures that are used in projects are converted to .png files when the project is validated.

Pictures are resized to the largest static usage in any of the project screens, in order to save memory space in the panel. If a picture is enlarged in runtime using dynamics, the enlarged picture will have a lower effective resolution.

Project pictures are stored in the **Symbols** folder as a compressed folder named Symbols.zip.

Temp

The **Temp** folder contains intermediate build files from project compilation.

The **Temp** folder also includes the **Output** folder. The **Output** folder contains all files needed to run the project in the target. These files are copied to an operator panel when the **Download** command is used. For a PC, the **Export** command is used to copy the necessary files to a USB stick to the runtime PC via a network connection.

When the Windows firewall is used, ports required by the iX Runtime are opened automatically by the installer. If your operating system is protected by another firewall product, this step needs to be done manually.

NeoRT_TCP

- Protocol: tcp
- Port: 9999
- Scope: any
- Application: CommunicationServer.exe

And:

NeoRT_UDP

- Protocol: udp
- Port: 9999
- Scope: any
- Application: TargetControlService.exe

Moving Design Files

To move the project files needed for the design:

1. Create a new folder for the project design files.
2. Copy all single files (files not included in any folders) as well as all folders, except the **Temp** folder, in the project folder.
3. Paste the files in the new folder.

Moving Application Project

The runtime project can be downloaded to the operator panel using the transfer or export commands, but can also be moved manually:

1. Create the new folder for the project files.
2. Copy the **Output** folder.
3. Paste it in the new folder.

Database

iX Developer uses SQLite as database.

The contents of the database can be managed with third-party database management tools. iX Developer includes a database viewer object that can be used to display database contents in runtime.

Some changes in the project will lead to data being lost when the updated project is downloaded to the operator panel. These changes include:

- Renaming a recipe
- Changing the data type or name of a recipe's items or runtime data
- Renaming a data logger
- Changing the data type or name of a data logger's items

A copy of the database can be made with the **Upload Database** command. Some of the databases can be exported individually in csv, comma separated values, format using the **Database Export** action. If possible, it is recommended to use the Database Export action rather than the Back Up Databases action.

Related information
Database Viewer Object
Download

Related information
Export
Upload Database
Database Export

2 Working with Projects

This section describes iX Developer and explains how to work with a project for an operator panel.

In iX Developer, ribbon tabs are used instead of menu commands. This reduces the number of steps needed to design complex components, and also supplies an attractive user interface.

Ribbon tabs are located in the top section of the tool window. Each ribbon tab holds one or several control groups. Each group contains a set of related controls. Controls are made to design screens, and to make settings for objects and controls in the project.

2.1 Creating a Project

A project can be created according to the following sections, but the work process can be adapted and rearranged if needed.

2.1.1 Connecting to a Controller

Establishing communication between an operator panel and controller is necessary to allow operator observation and control. The larger the project is, the more important it is to ensure that there is a suitable communication design.

There is a built-in DEMO controller in iX Developer. It can be used for test and simulation purposes.

Related information
Creating a New Project
Select Controller
Communication Design
DEMO Controller

2.1.2 Designing a Screen Set

It is important to organize the application well and to consider which functions are necessary. Start with an overall view and then work down to a detailed level.

A project contains a number of screens with objects that can exchange data with the controller. Screens can be arranged in hierarchies to achieve a structured application, or organized as sequence controls. When deciding which structure to use, consider how to best describe the process at hand and how to simplify procedures for the machine operator.

The complete application, or parts of it, can be tested in the development environment before downloading it to the operator panel.

Related information
Screens

2.1.3 Designing Additional Functions

Alarms

Alarms are used to make the operator aware of events that require immediate action. An alarm is set when a certain condition is met. An alarm condition is designed as a logical evaluation of a tag value. Alarms can be divided into groups to create an order of priority.

Related information
Alarm Management

Function Keys

Function keys can be used to perform actions and execute scripts. This allows operator control of data and screen functionality independent of which screen is active.

Related information
Function Keys

Multiple Languages

Translation of texts and system texts can be performed directly in the application, or via export to a text file to be translated in other software. The file is imported to the application after translation. The application language can be changed in runtime, for example based on a tag value.

Note:

Pre-translated system texts are provided with iX Developer. These texts are adapted for a PC, which means that they contain more strings than what is available for panel targets. This results in warnings when importing the system texts to projects created for a panel, but these warnings can safely be ignored.

Related information
Language Management

Security

Access to objects and actions in the project can be limited using security groups and user passwords.

Related information
Security Management

Text Library

With the text library function, text tables can be created, where values are linked to texts.

Related information
Text Library

Audit Trail

The Audit Trail function allows tracking of operator actions.

Related information
Audit Trail

Data Logger

Data can be logged and saved to file. Bit, 16-bit, 32-bit and Real (Float) values can be logged. Be aware that logging of data consumes system resources and memory.

Related information
Data Logger

Scheduler

Setting and resetting digital tags in relation to the real-time clock can be performed using a scheduler, in order to control events in the process at special calendar times.

Related information
Scheduler

Recipes

Recipes are used to set or save a predefined group of tags in one operation.

Values can be predefined or collected from the controller, and then saved to a recipe in the operator panel. The operator can download the recipe at any time to the controller, which will start working with the recipe values. Recipe handling makes it possible to reuse large parameter sets, to improve efficiency of time critical production where a change of products must be made quickly. Recipe files can be created in the development project or with the operator panel.

Related information
Recipe Management

Reports

The reports function allows adding excel report templates to the project.

Related information
Reports

2.2 Importing an Information Designer Project

Existing Information Designer projects can be imported to iX Developer. Information Designer is the previous software used to design projects for the EXTER operator panels.

Note:

This is not applicable if there is no Existing Information Designer projects.

The import function is accessed from the Welcome page, displayed when starting iX Developer.

1. Select the Information Designer project file.
2. Select a name and location for the imported project.
3. Click **Finish**.

The project will be imported to the corresponding iX panel target. All screens will be imported and graphical objects in the Information Designer project will be converted to corresponding iX Developer objects. Some objects may not be supported.

Functions such as recipes and data logging work differently in iX Developer, and will have to be reconfigured in the imported project.

During the import, a log file of unsupported objects and functions is created. It can be saved to disk for future reference.


Note:

If there is a crash when importing an Information Designer project, the problem could be solved by installing a hotfix from support.microsoft.com/kb/2461678.

2.2.1 Information Designer Import Settings

Since Information Designer objects do not always have an exact corresponding object in iX Developer, there may be more than one correct conversion action. In these cases, to increase the flexibility of the conversion, the desired conversion action can be chosen.

Before conversion, a dialog window will be displayed where the conversion options can be selected:

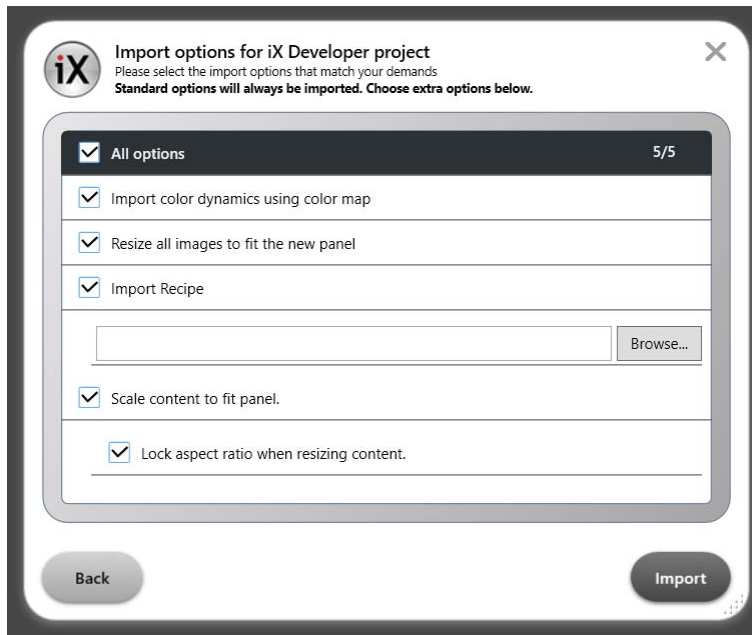

Option	Comment
Import color dynamics using color map	Allows the specification of RGB colors to be used in analog dynamics. If you activate this option, you must provide a file called ColorMap.txt in the same folder that contains the Information Designer project. The file should contain a single line of text which is a comma separated list of 16 bit values (e.g.: 32799, 33760, 64512). Only use the color map if the signals used by the color dynamics in your Information Designer project can exceed the documented range of 0-15.
Resize all images to fit the new panel	Resizes all images in the project to fit the new panel size, even if the project indicates that the images should not be resized. If not specified, images without the Stretch property are not resized.
Scale content to fit panel	If the new panel size is different from that of the project being converted, the contents of screens will be scaled to fit the new panel size.
Lock aspect ratio when reising content is visible	Only available when Scale content to fit panel is selected.

2.3 Importing an H-Designer/ADP Project

Existing H-Designer/ADP projects can be imported to iX Developer. H-Designer/ADP is the previous software used to design projects for the H-/PWS-series operator panels.

The following software versions are required:

Software	Version
ADP	6.50 build 184
iX Developer	2.0 or higher

2.3.1 Exporting the H-Designer/ADP Project

First, the H-Designer/ADP project has to be converted to an a2i file from within ADP by following the steps below:

1. Select **File/Export iX**.
2. Select a name and location for the export file, and click **OK**.

A message box confirms that the export is finished, and after clicking **OK**, you are asked if you want to see the log file. The log file is saved to the same location as the project file.

The log file declares successfully converted items as well as unsupported objects and functions.

2.3.2 Importing the a2i File

Then, the exported file is imported into iX Developer using the import function that is accessed from the Welcome page, displayed when starting iX Developer.

1. Select the a2i file.
2. Select a name and location for the imported project.
3. Click **Finish**.

The project will be imported to the corresponding iX panel target. All screens will be imported and graphical objects in the H-Designer/ADP project will be converted to corresponding iX Developer objects. Some objects and functions may not be supported at all, and some objects and functions need reconfiguring in the imported project.

During the import, a log file of unsupported objects and functions is created. It can be saved to disk for future reference.

2.3.3 Limitations

All parts of the original H-Designer/ADP project will not be fully supported in iX Developer. For example, for objects that use individual controller registers for read and write, only the register selected for write will be connected. Also, patterns and other decoration of objects may not be included in the imported project.

The following functions and objects will not be converted, or will need reconfiguration:

Function	Comment
Controller	Import of name list and addresses for the first two controllers in the ADP project is supported. Import of controller settings such as IP address and COM settings is not supported. Import of index registers is not supported.
Macro and sub-macro	Not supported
Recipes	Not supported

Object	Comment
Action push button	The graphical control will be imported but the actions need to be reconfigured.
Alarm history table, active alarm list, alarm frequency table and alarm marquee	Not supported
Animated graphic	Not supported
Bar graph deviation	The graphical control will be imported but needs to be reconfigured.
Day of week display	The graphical control will be imported but needs to be reconfigured.
Dynamic ellipse and dynamic rectangle	Not supported
Historical data table and historical event table	Not supported
Moving sign	Not supported
Multistate indicator	Not supported
Pie graph	Not supported
Set value push button	Not supported
Seven segments	Not supported
Trend graph	The graphical control will be imported but the curves need to be reconfigured.
X-Y chart	Not supported

Shape	Comment
Arc	Not supported
Free form	Not supported
Parallelogram and solid parallelogram	Not supported
Pie and solid pie	Not supported
Scale	Not supported

Shape	Comment
Shape	Not supported
Solid polygon	The graphical control will be imported but needs to be reconfigured.

2.4 Optimizing Performance

The following section presents a couple of issues to consider in order to optimize the iX Developer project. Some parts are related to the communication driver; other parts concern CPU load and flash operations.

2.4.1 Communication Performance

Signal Types

Tags used for driver communication can be static or dynamic. These are updated in different manners.

Static Tags

Static tags are updated continuously, even if they are not currently shown on the panel display.

Additionally, the operator panel reads the following items continuously:

- Alarm tags
- Data logger tags
- Multiple languages tags
- Controller tags with value change events

The communication time is not affected by the following:

- Alarm messages
- Schedulers
- Tags linked to function keys

Dynamic Tags

Dynamic tags are updated only when they are presented on the display. An analog numeric object serves as an example of when a dynamic tag is used.

2.4.2 Communication Design

This section describes how tags are read and how the reading can be optimized to make the communication between the operator panel and the controller fast and efficient.

Keeping Tags in Consecutive Order

Define controller tags consecutively, for example M0.0-M11.7. If the tags are spread (e.g. I0.4, Q30.0, M45.3 etc.) a complete update will take longer time. The number of tags in each package depends on the used driver and information about this can be found in the driver help file.

Tag Packages

Tags to be transferred are not all transferred at the same time, but are grouped into packages. The number of tags in each package depends on the driver for the controller.

To make communication as fast as possible the number of packages should be minimized. Consecutive tags require a minimum number of packages, but it is perhaps not always possible to program it this way. In such cases there is a “waste” between two tags.

Tag	1	2	3	4	5	6	7	8	9	10
Used	X	X					X	X	X	

Waste

Waste is the maximum distance between two tags that can be kept in the same package. The size of the waste depends on the driver used, and is included in the driver help file, e.g as in the table below:

Driver x	Analog signals	Digital signals
Number of signals/package	29	124
Waste	20	0

Bit-Addressed Words vs. Regular Bit Devices

In most drivers it is better to use bit-addressed words than regular bit devices, since you can fit more digital devices in one telegram when using bit-addressed words, than when using bit devices.

Example

Driver x	Analog signals	Digital signals
Number of signals/package	29	124
Waste	20	0

This specific driver can have 29 analog devices or 124 digital devices in one telegram. If you use bit-addressed words in the selected driver, you can fit 464 (29×16) digital devices in one package. This is almost four times as many devices.

ASCII Strings

ASCII strings are transmitted in separate telegrams, and having a large number of strings will affect the communication performance negatively. If an ASCII string only has a small number of different string values, it may be a good idea to use the Text Library function in iX Developer with predetermined contents, thus minimizing impact on driver performance.

Related information
Text Library

2.4.3 Performance in the operator panel

It is important to understand that due to the complex nature of a running system, there are several things that affects the overall performance. The following list gives some examples of things to consider, when it is necessary to optimize the performance of the operator panel:

- Number of tags
- Number of sampled tags in trend viewers and data logger
- Number of alarms
- Driver performance
- Multiple drivers
- Type of panel
- Alarm list size
- Size of pictures
- Scripts

Recommended Limits


In order to optimize performance, it is recommended to limit the number of items in the project. The recommended limits depend on the type of panel, and are listed in the table below.

	X2 base	iX TxB/X2 pro	iX TxC PC
Tags	1000	2000	4000
Active Controllers	3	10	Unlimited
Dataloggers	10	25	50
Database Items	50	700	2000
Alarm Items	150	500	4000
Alarm Viewer Rows	100	200	400
Alarm Database Max. Rows	500	1000	4000
Screens	100	500	1000
Objects on Screen	150	400	500

Tags

Try to avoid keeping the tag constantly active. If scripts are used, then hooking up event handlers on value change event will also set the tag to be always active. Use the passive value change event when possible. The passive event will only trigger when the tag is active, and the tag can be deactivated when it is not in use. When the tag is deactivated the passive event will remain idle until the tag is activated.

The default setting in iX Developer updates all tags every 500 ms. If some tags may be updated less often, it is possible to assign them to a poll group with a lower update interval. Poll groups are configured in the **Tags** configuration page.

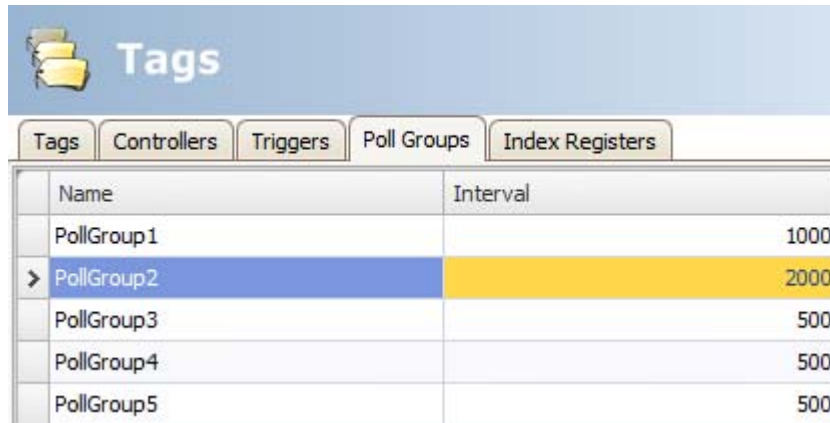

The screenshot shows a window titled 'Tags' with a folder icon. Below the title are five tabs: 'Tags', 'Controllers', 'Triggers', 'Poll Groups', and 'Index Registers'. The 'Poll Groups' tab is active, displaying a table with two columns: 'Name' and 'Interval'. The table contains five rows of poll groups. The second row, 'PollGroup2', is highlighted with a blue background and a yellow highlight on the 'Interval' cell.

Name	Interval
PollGroup1	1000
PollGroup2	2000
PollGroup3	500
PollGroup4	500
PollGroup5	500

Assign and configure poll-groups with care. High poll-interval frequency affects the performance.

Usage of the following properties on tags will reduce performance. The tag should not:

- be an array tag
- be connected to more than one controller
- be used in script mode
- be a system tag
- use data exchange
- use any of these properties:
 - Access Right (other than ReadWrite)
 - Offset
 - Gain
 - Read expression
 - Write expression
 - Non volatile
 - Index register
 - Log to audit trail

Screens

Optimizing screen update time minimizes CPU load and flash operations. This can make a significant difference in graphic-intense projects that approach the limits of the panel's capabilities.

Screen changes are carried out most efficiently through a show screen action, either on a function key or an object.

Screens with less content will in general load faster. Certain objects will take longer to load, such as an alarm viewer. If screens are frequently shown or used as a background, try to keep it as slim as possible.

Caching of screens have a great impact on screen switching times. The more screens that can be cached the more screens will load faster, hence it is preferred to keep RAM as low as possible to utilize it for screen caching. Large screens will take up more memory when cached and will possibly prevent smaller and more frequently used screens from being cached. It is possible to prevent screens from being cached by setting its **Cached** property to false. When utilized RAM reaches approximately 85% the application will start to remove screens from the cache in order to avoid the application from running low on memory. This implies that if

the application utilize more than 85% without caching the application will not be able to cache any screens and therefore not experience faster screen switching times.

Trend Viewers and Data Loggers

Several trend viewers can show data from the same log item.

In order to optimize performance in the panel, it is strongly recommended to place all log items logged on the same frequency/event in the same data logger or at least reduce the amount of data loggers.

Try to avoid having one data logger for each trend viewer.

Data logging in general have impact on the performance. Reconsider the data logger settings, the log frequency and the amount of log items. Heavy data logging will increase the CPU usage and will influence performance across the whole application.

Data logging is queued up if more logging is done than the database can handle at the moment. If the queue reaches a too high level, the warning *"Data logging has too high load. Data might be lost."* is shown on the screen in the top left notifier window. If the queue reaches a critical level, there is a risk that the system will malfunction. If this happens, alarm and data logging are turned off, the error message *"Data logging is overloaded. Data logging is now disabled."* is shown in the dialog and the system tag **Database Error Active** is set. The system tag **Database Error Message** contains the error message.

The system tag is not reset by the system. It is up to the user to reset it when the system error is taken care of.

Alarm and data logging are turned on again when the queue is below the critical level.

Storage Media

If the storage media reaches a critically low level, there is a risk that the system will malfunction. If this happens, alarm and data logging is turned off. The error message *"99% of disk used. Alarm logging is now disabled. Data logging is now disabled."* is shown and the system tag **Database Error Active** is set. The system tag **Database Error Message** contains the error message.

The system tag is never reset by the system. It is up to the user to reset it when the system error is taken care of.

Alarm and data logging are turned on again when the storage usage is below the critical level.

You can avoid this situation by using the **Max Size** setting for the database. When the limit is reached you will be informed by a warning message.

Database

If there is a risk of the database running out of storage media, then a warning is shown on the screen. If the usage reaches a critical level, risking the system to crash, alarm and data logging is turned off, an error message is shown and the system tag **Database Error Active** is set. The system tag **Database Error Message** contains the error message. Alarm and data logging are turned on again when the storage usage is below the critical level.

Gradients

Using objects with gradients creates a slightly higher load on the CPU. If a large number of objects use gradients, this will make the screen update time significantly slower. Pay special attention to objects with gradients that are updated frequently, e.g. a bar graph with a style with gradients connected to a tag that changes at short intervals.

Polygons

Avoid excessive use of polygons. Polygons are usually complex and are drawn each time the screen is shown, hence they will not benefit from caching the screen.

Buttons

From a performance perspective it is preferred to use styled buttons instead of the default button.

Transparency

Drawing transparent objects (circular meter, slider etc.) without transparency will result in improved performance. In order to do so these objects should not overlap other objects within their bounding box. Also, avoid gradients in backgrounds and dynamics on screens containing these types of objects.



A circular meter and its bounding box

Related information
Database
Action Groups
Trend Viewer
Reports
Data Logging Strategies
Symbols
Screen Caching

2.5 Moving Objects with the Touch Screen

iX panel with touch screens do not have a built-in keyboard. All maneuvering is done with the touch screen by pressing distinctly with a finger. Because of the resistive touch technology, the screen can only apprehend pressing on one place on the panel at the time. Pressing two points at the same time is interpreted by the panel as a point midway between the two pressed points.

Related information

2.5.1 Operate Objects

For an object to react, it is necessary to specify the behavior, typically by assigning a tag and defining an action. All objects can have actions linked to mouse down, mouse up, mouse enter and mouse leave events. Some objects have a predefined behavior, like sliders setting values, but can also have actions linked to mouse down and mouse up events.

Button

Pressing a button triggers a click- and mouse button event.

Text Box

Pressing on a text box object displays a virtual alpha-numeric keyboard on the panel screen. Type a text using this keyboard and finish by pressing [ENTER].

Analog Numeric

Pressing on an analog numeric object displays a virtual keyboard on the panel screen. The keyboard type depends on the format chosen for the Analog Numeric — String, Integer, Decimal, Hex or Binary. Enter a value using this keyboard and finish by pressing [ENTER].

In runtime a validation of the value is done. If the value entered is out of bounds, the corresponding limit value for the object will be shown.

Slider

Pressing on the desired value position of a slider object sets it to the pressed position.

Related information
Actions Ribbon Tab
Mouse Button Action Triggers
Click Action Trigger
Virtual Keyboard
Validation Group

2.6 Peripherals

2.6.1 USB

External devices such as a USB hub, flash drive, mouse, or keyboard can be connected to the USB host port.

2.6.2 Ethernet

The operator panel has built-in Ethernet port(s) for connection to controllers via TCP/IP. The number of ports varies by model.

Related information

2.6.3 Memory Card

An external memory card can be used as storage of e.g. pdf files, media files and databases to reduce used internal memory.

Limitations for Databases Location Setting: This setting is only made available for high performance panels with SD Card slot. It is also important to ensure the SD Card is already in the correct format (FAT32) before inserting it in the panel. If during startup an error message “Disk IO error” is displayed and the chosen Database Location is set to SD Card, please ensure the SD Card has an ample amount of space available on it.

If during the runtime of the panel, the SD Card is removed and the chosen location for the Database(s) is the SD Card then the panel will close the application and will continue to attempt to reboot until either an SD Card is reinserted into the panel or a project is downloaded to the panel with the location set to Hard disk. If the SD Card is chosen as the desired location to store the Database(s), during the transfer of the project to the panel the Audit Trail Database will not appear in the confirmation dialog of files to be kept on the panel. As a result, it will continue to use the existing Audit Trail Database. To avoid this the SD Card should be removed and the Audit Trail Database should be deleted via a PC. Any pre-existing scripts towards a database may not function as intended if the database location is changed and no build error or warning will be given.

Related information
Project Group

2.6.4 SD card tests iX Developer

Recommendations of use:

- Always use Industrial Grade both for SD card and USB.
- Use SD/USB with memory transfer rate x32/4.8 or higher.
- Filling the whole SD/USB with data will effect the performance.

Tested brands:

- Trancend Industrial 2GB.
- SanDisk Ultra 4GB C:10.
- SanDisk Extreme 64 GB C:4

- Inodisk Industrial 2GB C:10.

3 Development Environment

This section describes how to work with iX Developer.

Clicking the **Options** button in the File menu allows adapting the tool behavior.

Related information
File Menu
Options

3.1 Starting iX Developer

Click on **Start/All Programs/iX Developer/iX Developer** to start iX Developer.



iX Developer can also be started from the command line.

When starting a newly installed version for the first time the user gets the option to import the settings from the previous version.

This could also be done later from the File menu: Import settings

The following settings are imported:

- License key
- Recent Projects
- Added items in Component Library
- Additional Controls

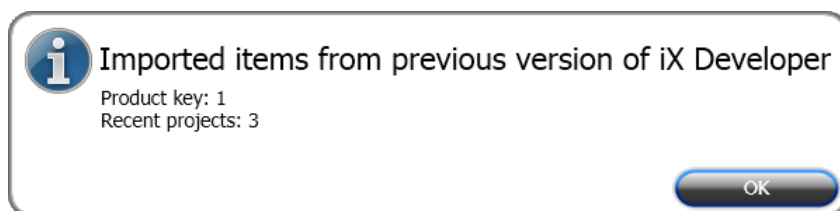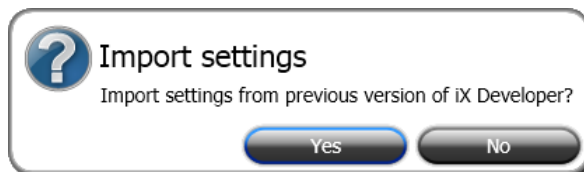

After importing settings from previous version, information about what has been imported is displayed.

When iX Developer is started, it is possible to:

- Create a new project using a wizard
- Open an existing project - a list of recently opened projects is displayed
- Open a sample project
- Upload a project from a target
- Import a project created in Information Designer
- View the User's Guide, based on an example project that serves as an instructive introduction to iX Developer



Projects can also be created or opened later from the File menu.

Related information
Creating a New Project
Importing an Information Designer Project
Starting iX Developer from the Command Line
Upload from Target


3.1.1 Creating a New Project

To create a new project using the wizard includes the following steps:

1. Start iX Developer.
2. Select to create a new project.
3. Select target for the project.
4. Select controller brand and model.
5. Name the project and define where files are to be saved in the PC environment.

Select operator panel

Select the appropriate target from the presented set of operator panel/PC.

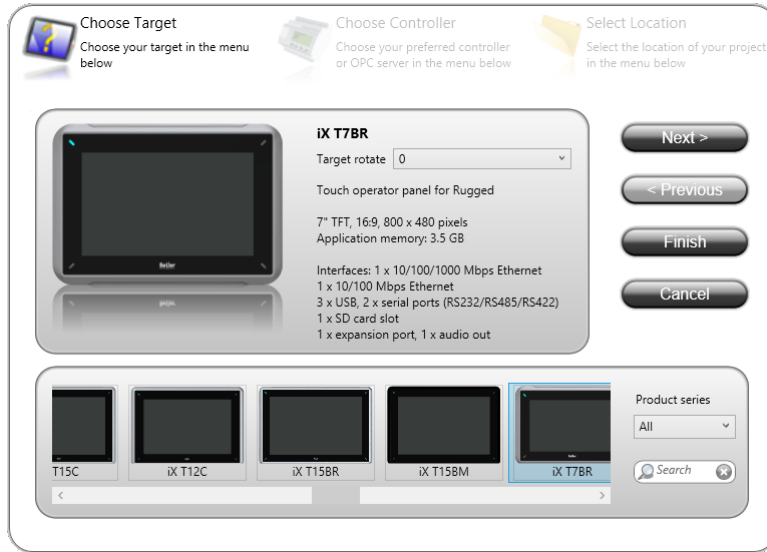


The target can be changed later, from the **Settings** group on the **Project** ribbon tab. For most panels it is possible to select a rotated view. When working with a project for a standard PC, it is possible to select resolution from a drop-down list. The PC resolution can be changed later, by entering the **Settings** group on the **Project** ribbon tab.

Related information

[Changing Project Target](#)

Select Controller

Select the appropriate controller for the project.

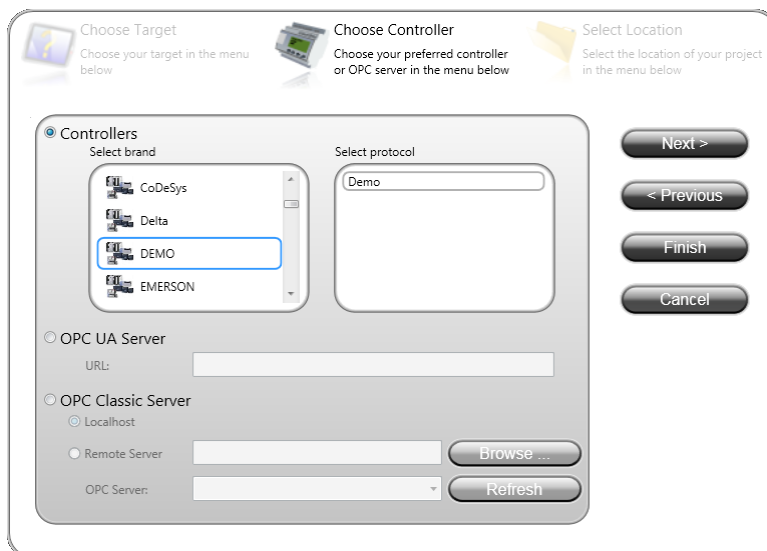

The demo controller, including regular tags (data containers) and counters, is used to design and test a project directly on the development PC without connection to an external controller.

Internal tags that work like controller tags, but are independent of an external controller, can be defined.

It is also possible to connect to an external OPC server.

The controller can be changed later by clicking the **Controller** button on the **Controllers** tab of the tags configuration page.

A project can connect to more than one controller.

Note:

OPC Classic is not supported for X2 pro series (OPC Classic is no longer supported by Windows Embedded Compact 2013).

Related information
Controller
DEMO Controller
Internal Tags
External OPC Server
Multiple Controllers

Select Location

The **Select Location** dialog controls naming of the project and where project files are saved in the computer environment.

The screenshot shows the 'Select Location' dialog box. At the top, there are three tabs: 'Choose Target', 'Choose Controller', and 'Select Location'. The 'Select Location' tab is selected. Below the tabs, there are three instructions: 'Choose your target in the menu below', 'Choose your preferred controller or OPC server in the menu below', and 'Select the location of your project in the menu below'. The main area of the dialog contains two text input fields: 'Name:' with the value 'Prod4' and 'Location:' with the value 'D:\Proj\Proj4'. To the right of the 'Location:' field is a 'Browse...' button. On the right side of the dialog, there are four buttons: 'Next >', '< Previous', 'Finish', and 'Cancel'.

1. Change the project name, if desired.

2. Select where to store the project files by clicking **Browse**, or accept the suggested location.
3. Click **Finish** to create the new project.

3.1.2 Opening a Project

To open an existing project using the wizard includes the following steps:

1. Start iX Developer.
2. Select to open a project.
3. Browse to the project file in the appearing **open project** dialog.


Note:

It is possible to open a compressed ZIP file of the iX Developer project. The user will be prompted for a path where the ZIP file can be decompressed.


Related information
Back Up Project
Download

3.1.3 Getting Familiar with iX Developer

The ribbon tabs (e.g. **Home**, **System** and **Insert**) are located in the top of the window when iX Developer is started. The control groups (e.g. **Clipboard**, **Screen**, **Objects** on the **Home** ribbon tab) are available in the ribbon area.

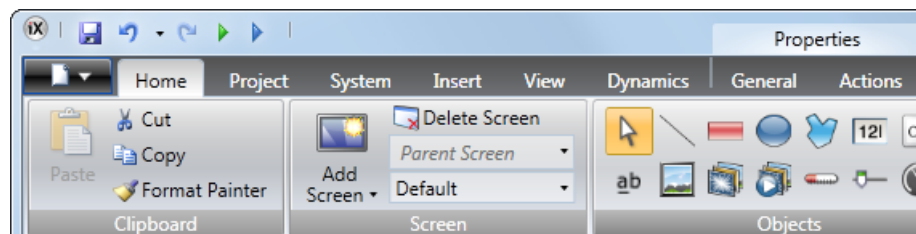

The Project Explorer contains a folder area, and is managed as a docked window. The desktop area is where screens are drawn and where tags and functions are handled.

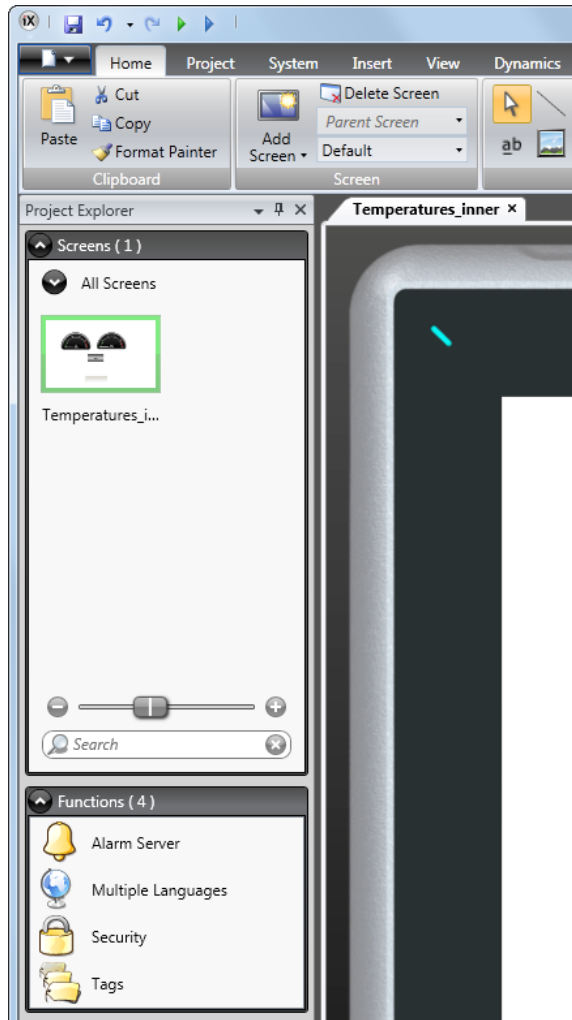


Configuration of objects on a screen is mainly performed using the controls in the **Home** and **General** tabs. Selecting an object on the screen displays the Home ribbon tab; double-clicking displays the General tab, except for the Button object, for which the Actions tab is displayed instead. Several common commands are also available by right-clicking on an object in a screen.

Related information
Project Explorer
Positioning Windows
Screens
Tags

Keyboard Navigation

Pressing **Alt** on the keyboard displays which keyboard shortcut commands can be used to execute a command or to enter a control group, e.g. **Alt + F** opens the **File** menu, and **Alt + I** displays the **Insert** ribbon tab control groups.

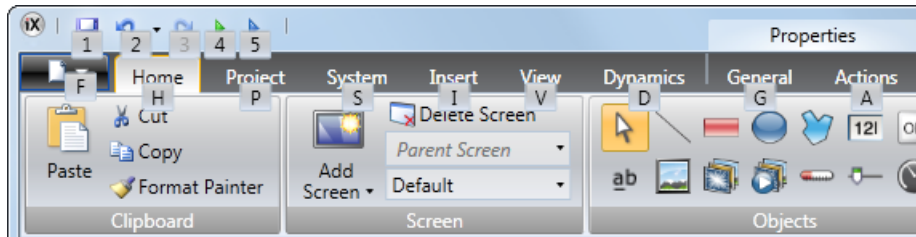

Keyboard Shortcuts and Function Key Commands

The list below includes some of the keyboard shortcuts and function key commands that are available in iX Developer:

Keyboard shortcut / function key	Description
Ctrl + P, [number of the screen]	Switch between screens according to their order on the desktop
Ctrl + E, L	Lock selected elements on active screen (E indicates active editor)
Ctrl + E, H	Hide selected elements on active screen (E indicates active editor)
Ctrl + Z	Undo
Ctrl + Y	Redo
Ctrl + A	Select all
Ctrl + X	Cut
Ctrl + C	Copy
Ctrl + V	Paste
Ctrl + N	New project
Ctrl + O	Open project
Ctrl + S	Save project
Ctrl + B	Bold style
Ctrl + I	Italic style
Ctrl + U	Underline
F1	Display help file. Pressing F1 from within the Script Editor displays scripting help.
F5	Validate project
F6	Run

3.1.4 Starting iX Developer from the Command Line

iX Developer can also be started from the command line, by entering:
`[Path to the NeoIDE.exe file] " [Project location]\[Project name].neoproj`


Example

To start iX Developer, and open the project named Test1 in the directory C:\MyProjects, select **Run** from Windows start menu, and type:

- `C:\Program Files (x86)\Beijer Electronics AB\iX Developer 2\Bin\NeoIDE.exe" "C:\MyProjects\Test1\Test1.neoproj`

3.1.5 File Menu

The **File** menu contains commands for creating, opening, closing saving and compressing projects. It also offers the possibility to upload a project from a target and to update drivers and iX Developer software via Internet or from file. The **File** menu is accessed by clicking on the top left button.

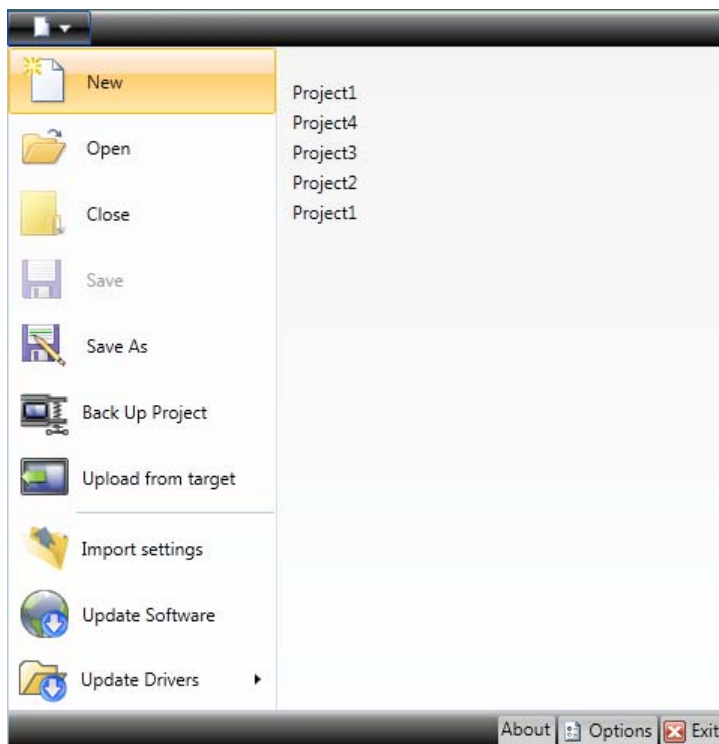

New

When you start iX Developer and select to create a new project, a wizard guides you through the creation of a new project, in the same way as having selected Create New Project from the Welcome page.

Related information

[Creating a New Project](#)

Open

Selecting **Open** displays a dialog that allows selection of an existing project file by browsing.

Save

Selecting **Save** saves the project to the current project folder.

Save As

Selecting **Save As** allows saving the project with a different name and/or in a different location.

To ensure that the original project remains unchanged, the new project file must be created with the **Save As** command before modifying its contents.

Creating a new folder when using the **Save as** command helps keeping the large number of project files neatly collected and easy to overview.

Note:

Selecting **Save as** cannot be used in order to make modifications of an existing project, keeping the original project unchanged, and saving the new version with another name. Changes will affect the original project anyway. It is recommended to make a backup copy of the original project, for example by using Windows Explorer, prior to modifying it.

Back Up Project

Selecting **Back Up Project** compresses the project and saves it as a ZIP file. The user will be prompted for a path where to save the ZIP file and will also be offered the possibility to password protect the ZIP file.


Related information
Back Up Project

Upload from Target

Selecting **Upload from Target** allows uploading a compressed ZIP file of a project from a connected target.

Note:

To be able to use the "Upload from target" function, the check box "Download all source code" on the "Download" dialog must have been clicked before downloading the project to an operator panel. See the "Download" chapter for more information.

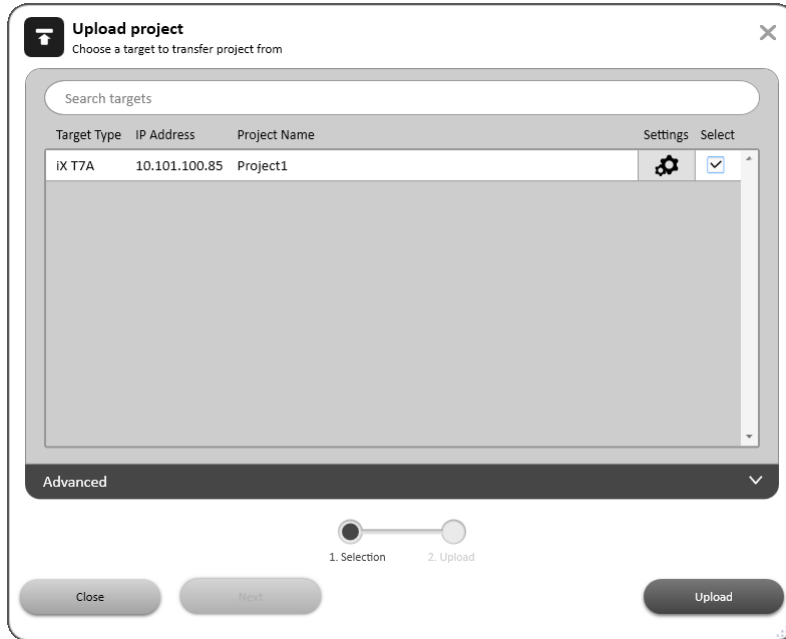

Parameter	Description
Connected targets	Choose the target type to transfer the project from.
Upload	Starts the transfer of the ZIP file from the selected target. The user will be prompted for a path where to decompress the ZIP file. If the ZIP file is password protected, the user must enter the password to be able to upload and decompress the ZIP file.
Log	Show the data being logged during the upload and verify process.

Related information

[Download](#)

Close Project

Selecting **Close Project** closes the current project and activates the start wizard.

Update Software

The latest updates and patches for iX Developer can be downloaded directly via an Internet connection.

Update Drivers

Drivers can be updated via Internet or from file.

Related information

[Updating Drivers](#)

About

Clicking the **About** button displays information about the current version of iX Developer including the product registration key.



Note:

The active project needs to be saved in order to access the list of features.

Note:

If a feature has previously been installed from an iX Developer version older than 2.40 SP5, then the registration key will automatically be converted when upgrading to iX Developer version 2.40 SP6.

Options

Clicking the **Options** button allows making settings that control the behavior and appearance of iX Developer.

Language Options

Select in which language to run iX Developer. A restart of the application is required for the new language selection to have an effect.

Build Options

Select whether the **CheckForUnusedTags** function should be activated or not. When building a project, the function checks for unused tags and presents a dialog in which it is possible to remove these.

Related information
Removing Unused Tags

Script Debugger Options

- **Arguments:** The “%1” argument is where the file name will be inserted. This option is applicable only when **Custom** is selected for **DebuggerType**.
- **Debugger:** Full path to the current debugger application.
- **DebuggerType:** Select **Default** or **Custom**. With the **Default** setting, the system will automatically provide the path to the debugger, if found. **Custom** allows the user to provide the path to a specific debugger.

Transfer options

Select if the **Download all source code** checkbox in the **Download** dialog should be automatically selected.


Usage Telemetry options

If the value of **AllowUsageTelemetry** is set to **FALSE**, no data will be collected and sent to the cloud regarding the usage telemetry. By default, the value is **TRUE**.

Message Info options

Select if the iX Developer version update information should be shown or not during startup.

If the value of **ShowVersionInfoOnStartup** is set to **FALSE**, the iX Developer version update information will not be shown during startup.

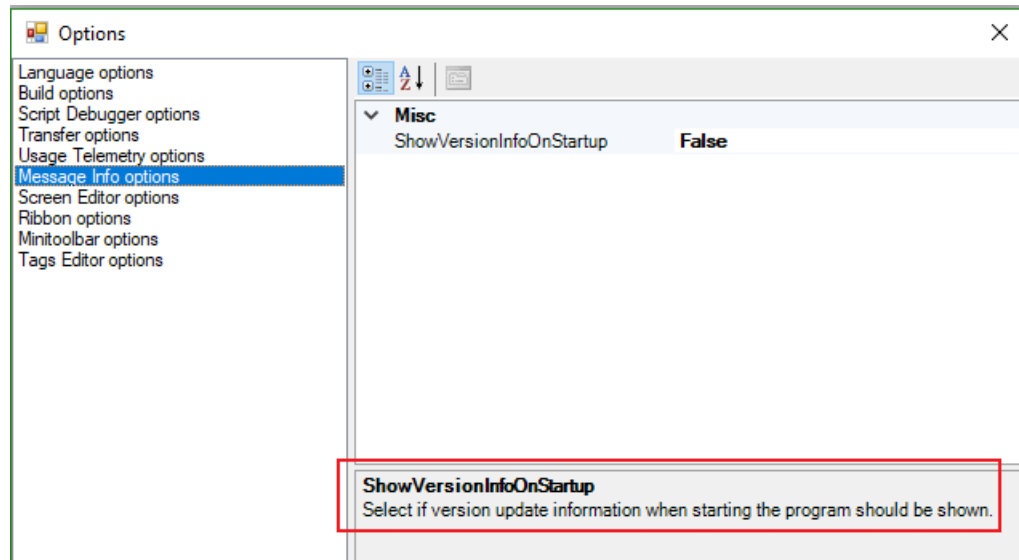

Screen Editor Options

- **EnableInPlaceEditing:** This option allows editing an object directly when selecting it on the screen without having to access its properties on e.g. the **General** ribbon tab.
- **ShowPanelAround:** This option displays an outline of the selected panel model around the desktop area.
- **ShowSizeAndDistanceInformation:** The size of an object is displayed while resizing it. Distance to the edges of the desktop area is displayed when moving an object. The indication can be turned off, if desired, by setting this option to **False**.
- **ShowToolTips:** Useful tool tips are automatically displayed in iX Developer. These can be turned off, if desired, by setting this option to **False**.

The screen editor options can also be modified using buttons in the lower part of the desktop area.

Related information

[Screen View in Desktop Area](#)

Ribbon Options

- **GoToDefaultRibbonStrategy:** This option changes the active ribbon based on the context of the selection in the desktop. When an object is created or selected, the **General** tab becomes active in the ribbon area.
- **SimpleRibbonStrategy:** This is the default setting, and does not swap the active ribbon when the context of the current desktop selection changes. Clicking on an object opens the **Home** ribbon, and double-clicking opens the **General** ribbon for most objects, but for buttons the **Actions** ribbon is activated.

Mini Toolbar Options

The mini toolbar is a context menu addition with a subset of common controls from the **Format**, **Tag/Security** and **Name** groups.

- **ShowMinitoolbarAutomatic:** When this option is set to **True** the mini toolbar part of the context menu is displayed already when an object is selected. The mini toolbar will always show in combination with the context menu. The mini toolbar will remain active for a selected object, also after it has disappeared, until the selection or the pointer moves away. To show the mini toolbar again move the mouse pointer to the upper right of the object. With the default setting, **False**, the mini toolbar will only show in combination with the context menu for an object.

Tags Editor Options

Selections under **Tags Editor Options** makes it possible to customize which columns to show by default in the tags configuration window.

Exit

Clicking the **Exit** button closes the application. If there are unsaved changes, you are asked if you want to save them before exiting.

3.1.6 Quick Access Toolbar

The **Quick Access Toolbar** contains controls, expected to be used frequently. The toolbar can be customized to include other buttons.




Save

Saves the current project to the location specified when the project was created.

Undo

Executed commands can be undone using the **Undo** button. Clicking the small arrow at the right of the **Undo** button lists recently made changes for selection of the undo operation.

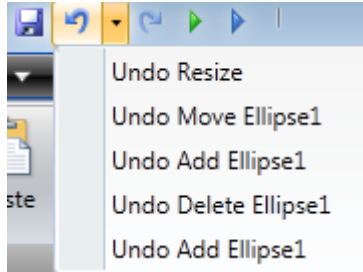

The keyboard shortcut for **Undo** is **Ctrl + Z**.

Redo

A command that has been undone with **Undo** can be redone with **Redo**. The keyboard shortcut for **Redo** is **Ctrl + Y**.

Run

Performs a validation of script code and compiles the project. If the project is valid, a simulation is started on the development PC with connection to the selected controller. Also available from the **Transfer** group on the **Project** ribbon tab.

Simulate

Performs a validation of script code and compiles the project. If the project is valid, a simulation is started on the development PC without connection to the selected controller. Also available from the **Transfer** group on the **Project** ribbon tab.

Related information
Project Ribbon Tab

Customizing Quick Access Toolbar

Some of the ribbon controls can be added to the Quick Access Toolbar. Right-click on the desired control and select **Add to Quick Access Toolbar** or **Remove from Quick Access Toolbar**.

3.1.7 Ribbon Tabs


The ribbon tabs contain grouped controls for editing and maintaining a project, screens and objects. Click on any ribbon tab to display the ribbon.

Use **Minimize the Ribbon** and **Maximize the Ribbon** to collapse and expand the ribbon control tabs, or double-click on a ribbon tab. This can also be done from the Quick Access toolbar.


Related information
Home Ribbon Tab
Project Ribbon Tab
System Ribbon Tab
Insert Ribbon Tab
View Ribbon Tab
Dynamics Ribbon Tab
General Ribbon Tab
Actions Ribbon Tab
Quick Access Toolbar

3.1.8 Additional Properties

Some ribbon groups include additional properties that can be configured by clicking the small arrow in the lower right corner of the current group.

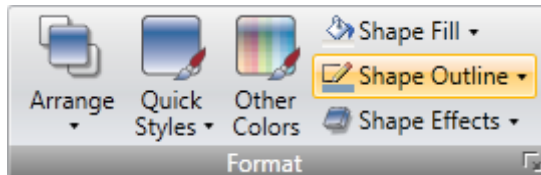

The properties window displays available property groups available for selection at the left. The property groups available differ depending on which object is selected.

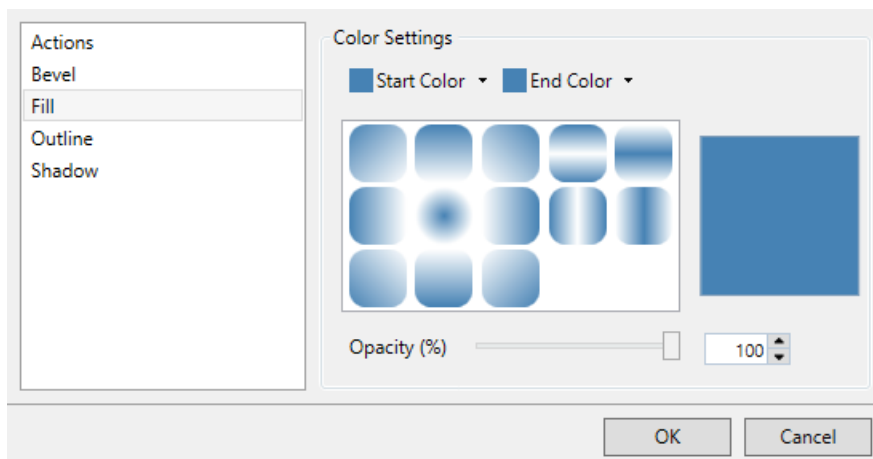

3.2 Desktop Area

The desktop area displays screens and configuration pages for project components such as controllers and functions. The desktop area shows only one screen or component at a time. When multiple screens or components are opened a row of tabs are shown in the upper part of the desktop area. Clicking on a tab activates its contents for editing.

If there are more tabs open than can be displayed, navigation arrows in the upper part of the desktop area can be used to scroll between them.


3.2.1 Screen View in Desktop Area

Object appearance as well as size and appearance of the current screen can be managed by controls in the lower part of the desktop area. It is also possible to turn on and off the in-place editing function that allows editing text in an object directly when selecting it on the screen.



Show/Hide Size and Distance Information


The size of an object is displayed while resizing it. Distance to the edges of the desktop area is displayed when moving an object.

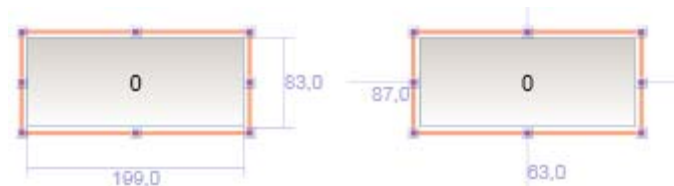

Show Size and Distance Information is activated

Show/Hide Info


It is possible to show information about which tag each object is connected to, and if dynamics or actions are configured for the object, by clicking on the **Show/Hide Info** button.

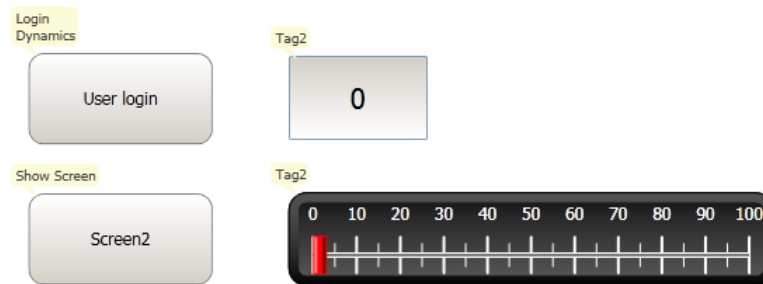

Show Info is activated

Show/Hide Screen Tooltips


A semi-transparent tooltip is displayed for each object when the cursor is rested on it, if **Show Screen Tooltips** is selected. Tooltips for e.g. menu commands are not affected by this setting; only tooltips for objects on the screen.

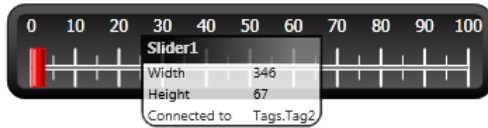

Show Screen Tooltips is activated

Enable/Disable In-place Editing

 This option allows editing an object directly when selecting it on the screen without having to access its properties on e.g. the **General** ribbon tab.



In-place Editing is enabled

Show/Hide Panel Frame

Show/Hide Panel Frame displays or hides a virtual panel frame surrounding the screen, when an operator panel is selected as target.

Fit to Screen

Click on **Fit to Screen** to make the screen the maximum size that will fit in the desktop area.

Zoom

The following methods can be used to zoom in to or out from the desktop area:

- Selecting a set zoom value from the **Zoom** drop-down list.
- Setting the **Zoom Slider** to a desired zoom level.
- Clicking the **Zoom In** and **Zoom Out** buttons.
- Placing the mouse pointer anywhere in the screen and using the scroll wheel.

Pan

Panning of the current screen is possible in Layout mode, if the screen is larger than the desktop area.

- Press and hold [**Spacebar**] (the mouse pointer will change its appearance from an arrow shape to an open hand).
- Drag to pan the screen (the mouse pointer hand closes in panning mode).

3.2.2 Desktop View Modes

Screens and functions have different view modes. The default setting is **Layout** view mode, but screens and functions can be partly viewed and edited directly in code. The desired mode is selected from the lower left part of the desktop area. The code for screens is in xaml and in C# for script.

Caution:

Incorrect code entered in text mode (Xaml and Script) may result in errors that are not possible to recognize during analysis and build.

Erroneous code may result in unpredictable behavior and loss of data.

Layout

Screens and objects are usually edited in **Layout** view mode.

XAML

A screen layout is defined in XAML (eXtensible Application Markup Language) code. The .xaml files are stored in the project folder.

XAML code can be added and changed in the **Xaml** view mode. Any changes done in the XAML code will affect the screen layout.

Script

In **Script** view mode scripted actions can be configured for screens, objects, tags, function keys etc.

Note:

To display a script guide that describes iX Developer scripting possibilities in detail, select **Script** view mode, click anywhere in the code, and press **F1**.

Note:

To be able to script inside iX Developer, any open Visual Studio Debug sessions needs to be closed first.

Caution:

Beijer Electronics only offers support for scripting for the included examples in iX Developer

Objects that can trigger events will show with expandable nodes in the **Script** view. Clicking the [+] of such a node expands it and shows the trigger events for the object. Double-clicking on an event inserts its method heading with an empty code body. Scripts are written in C# syntax.

When actions are defined for an object, this will have precedence over script code.

Note:

Avoid using multiple trigger methods as this may lead to undesired behavior.

Use either a script or define actions with the controls on the **Actions** tab. Avoid using [Click Action Trigger](#) actions in combination with [Mouse Button Action Triggers](#).

Note:

Creating scripts that block execution, waiting for other resources or user input, is not supported.

Note:

The **ValueOff** and **ValueOn** events for internal variables are available for selection in script mode, but they are not executed when running the project.

Note:

The **ValueChangeOrError** event is available in script mode, but it should only be used with controller tags. It does not support internal variables or system tags.

Note:

If an external editor, e.g. Visual Studio, is used for editing a script, the cross-reference will not be updated when building the project in iX Developer. The **Remove Unused Tags** function will report tags used in these scripts as unused.

For iX Developer to recognize a change made with an external editor, the script file needs to be opened in iX Developer and provided with just any small change using the script editor in iX Developer. Save the project once more before build.

Note:


Avoid static state when using script since this might cause memory leaks.

Always remember to unsubscribe events previously subscribed to, in order to avoid memory leaks.

Complex behavior can be created using script code.


Selections made in **Layout** view mode are kept when switching to **Script** view mode and vice versa.

Nodes with edited script code are highlighted in the expanded tree view.

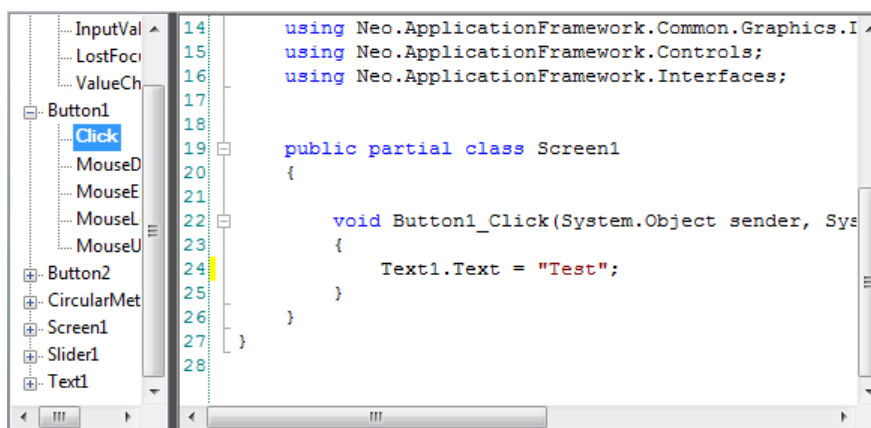

Highlight of an edited node in the tree view

It is possible to disable a script without deleting it, by right-clicking on a node with script, and selecting **Unhook event handler**. This excludes the script from being run, even though there is code, and the node will no longer be highlighted.

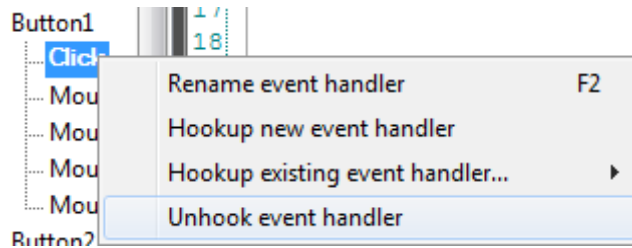

Some objects, such as text boxes, list boxes and combo boxes, rely on script code for advanced behavior.

Name Completion

A context sensitive name completion feature (IntelliSense) can be activated during typing with [Ctrl] + [Spacebar] and it triggers automatically when a period (‘.’) is typed after a code element. Using items outside the current scope is defined with the keyword **Globals**, but it is not possible to script to other screens than the currently selected.

Methods are completed without argument lists. Add parenthesis and arguments to complete a selection.

Note:

Incorrect script code may result in errors that are not possible to recognize during analysis and build. Erroneous code may result in unpredictable behavior and loss of data.

Note:

Not all tags available in **Tags** are visible in IntelliSense when scripting. The name completion function will not show tags and objects that have names similar to script command names.

If there are errors in script code during validation of a project, it is possible to navigate to the erroneous position by double-clicking the error in the error list. Press [Ctrl] + [Shift] + [Spacebar] while editing to get a tool tip with the allowed variants of an overloaded method. Use [Up arrow] or [Down arrow] to scroll. Make a new selection or press [Esc] to close the tool tip.

Note:

It is necessary to do an explicit type casting of the tag format for operands of an overloaded method.


Script code can be used to format objects. If an object attribute is selected a tool tip with allowed methods will appear. Methods not part of the default C# API is either addressed with the full path or the library can be included.

Related information
Error List
Tag Format
Format Group

Example:

Filling a rectangle object using a color gradient from one color to another color.

```
void Screen1_Opened(System.Object sender, System.EventArgs e)
{
    Rectangle.
```

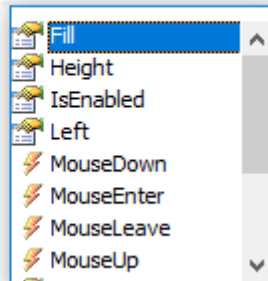

The following code implements a gradient from red to purple in the rectangle. The library with the “BrushCF()” method is added with “using” in the beginning of the example, together with the default libraries.

```
public partial class Screen1
{
    void Screen1_Opened(System.Object sender, System.EventArgs e)
    {
        Rectangle1.Fill = new BrushCF(System.Drawing.Color.Red,
            System.Drawing.Color.Purple,
            FillDirection.Center);
    }
}
```

Note:

When a timer is used in script code, it is important to close the timer in the code.

Note:

Renaming objects and screens included in scripts in Layout mode will cause the scripts not to function.

Referenced Assemblies

Third-party components and objects that are added to the project via **Referenced Assemblies** will be made available when scripting. Their methods and properties will be included by the name completion function, in the same way as for built-in components.

Related information
Referenced Assemblies
Name Completion

Aliases

Aliases can be configured in the **Aliases** view mode.

Import/Export for Alias

Alias instances can be exported and imported using the **Import/Export** button in the Alias Instances configuration page. The procedure is similar to exporting and importing tags. New Alias instances can be added by adding a row in the import file. Similarly, new aliases can be added by adding new columns in the import file. When exporting the Alias instances, the default values for the aliases will appear as a row in the exported file with the name **DefaultValue**. If the **DefaultValue** row exists when an Alias instance is imported, the values can be used to update the default values for the aliases.

Note:

For **DefaultValue**, use the **Overwrite** or **Merge** option to update the existing alias default values and to solve the name conflict. The default value will not be updated if the **Change** option is chosen for **DefaultValue**. Instead a new Alias instance is created with the changed name.

Related information
Importing and Exporting Tags
Tag Import Example

3.2.3 Positioning Windows

The behavior of many windows can be adapted in order to suit the user; for example shown or hidden, or moved to another position on the desktop.

Docked windows representing control tools can be converted to floating windows. Control tools can be docked separately or be managed as a tabbed group in a window. A docked tool window supports auto-hide.

When a window is dockable, a guide diamond appears when the window is moved on the desktop. Extended position arrows appear at the desktop edges. The guide diamond makes it possible to dock a tool window to one of the four sides of the desktop area. When a tool window is undocked, it floats on top of the desktop. Dropping a tool at the center of a guide diamond creates a tabbed group of the tools inside the window that the guide diamond belongs to.

Docking a Tool

Drag the window heading to any position on the screen. If the tool is not docked it will become floating.


To re-dock a tool:

1. If the tool is docked already, double-click on its heading to change to floating.
2. Drag the tool to the center of the desktop. A guide diamond appears, pointing towards the four edges of the desktop. Release the window to the desired direction. When the mouse pointer is in position, an outline of the window appears in the designated area.

Docking a Tabbed Group

It is possible to dock a tool to an existing group of tools, creating a grouped window with tabs:

1. If the tool is docked already, double-click on its heading to change to floating.
2. Drag the tool to the center of the existing group. A guide diamond appears.
3. Drop the tool at the guide diamond center.

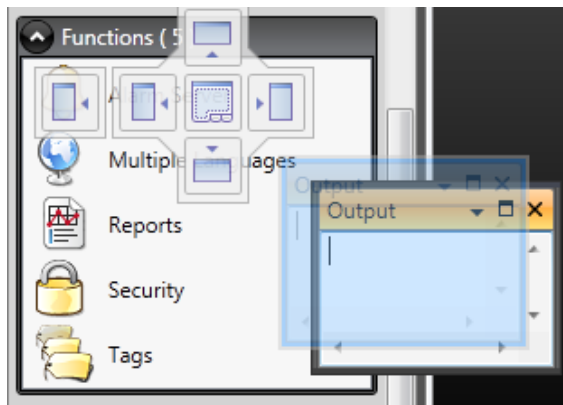

Releasing a Tool from a Tabbed Group

When a window contains multiple tools, they appear as tabs in the lower part of the window. To release a tool that resides in a tabbed group, drag the tab for the tool and drop it on the desktop.

Auto-Hide

Auto-Hide enables a maximized view of the desktop area by minimizing tool windows along the edges of the desktop area when not in use. Auto-Hide is turned on and off by clicking the Auto-Hide pushpin icon on the window title bar.

Tool windows expand to their original size when the pointer hovers over them. When a hidden tool window loses focus, it slides back to its tab on the edge of the desktop area. While a tool window is hidden, its name and icon are visible on a tab at the edge of the desktop area.

Note:

The Auto-Hide function has to be turned off before a tool can be moved.

3.2.4 Configuration Pages

Many functions, such as Alarm Server and Data Logger, are configured via table style configuration pages.

In some cases there are multiple configuration pages for a feature. When applicable, the configuration page for a feature can be opened to allow direct access. For example, it is possible not only to select a tag, but also to declare new tags, directly through the **Select Tag** field for an object.

Home

In a configuration page, the **Home** tab is used to add and remove items in a function or controller.

Edit Table Cells

Use the **Add** button to append a new item in the table view of the configuration page.

Use the **Delete** button in the **Home** tab or the **Delete** button on the keyboard to remove the active row in the table. Multiple rows can be selected using the [Ctrl] or [Shift] keys.

The screenshot shows a configuration page with a top navigation bar containing tabs for Tags, Controllers, Triggers, Poll Groups, and Index Registers. The 'Home' tab is active. Below the tabs, there are 'Add' and 'Delete' buttons, and a 'Columns Visible' section with checkboxes for 'Scaling', 'Data Exchange', and 'Others' (which is checked). Below this is a table with the following data:

Tag			Controllers	
Name	Data Type	Access Right	Data Type	Controller 1
> MeterAndSlider ...	DEFAULT	ReadWrite	INT 16	D0
Tag2	DEFAULT	ReadWrite	INT 16	D1
Counter	DEFAULT	ReadWrite	INT 16	C0
Weight	DEFAULT	ReadWrite	INT 16	D2
Length	DEFAULT	ReadWrite	INT 16	D3
Width	DEFAULT	ReadWrite	INT 16	D4
Area	FLOAT	ReadWrite	DEFAULT	
BoolAlarmTag	DEFAULT	ReadWrite	DEFAULT	
Calc	BIT	ReadWrite	DEFAULT	

Keyboard Navigation

Navigation in configuration pages can be made using arrow keys or with [Tab]. Pressing F4 inside a table cell will in some cases open selection list.

Pressing [Enter] acknowledges a selection, and pressing [Esc] cancels a selection.

Press [Delete] to remove a value when editing in a field. If a row is selected when pressing [Delete], the entire row will be removed from the table.

Use [Spacebar] to toggle a value in a check box.

Press [Ctrl] + [Tab] to shift focus from the table.

Navigation in Layered Pages

A layered configuration page (for example the alarm items page) has some specific navigation functions.

Keyboard navigation down is made by pressing [Ctrl] + [Down Arrow]. This will navigate into an expanded group, and out again when at the last of the expanded rows.

Keyboard navigation up and out of a group is done by pressing [Up Arrow].

Expand a group with [Ctrl] + [+], collapse with [Ctrl] + [-].

Keyboard navigation between fields inside a group is made with [Right Arrow] or [Left Arrow].


Pressing [Enter] acknowledges a selection, and pressing [Esc] cancels a selection.

Auto Fill


Fields in the configuration tables are when possible automatically filled in when [Down Arrow] is pressed when at the last table row. When needed, names and tag identifiers are incremented to avoid exact copies of symbolic names and tag identifiers. Incrementing is done if the last part of the string is an integer number. A "1" will be appended to the string if no numeral character ends the string. This is useful when there are consecutive tags of the same type in the controller data.

Filtering Items

Items in configuration pages can be filtered by selecting **Show Selection** from the **Show Selection/Show All** button.

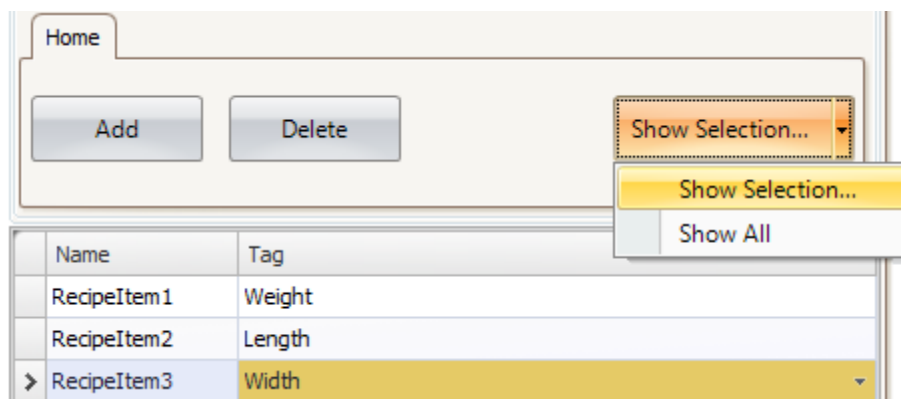

Clicking the button opens the Filter Builder.

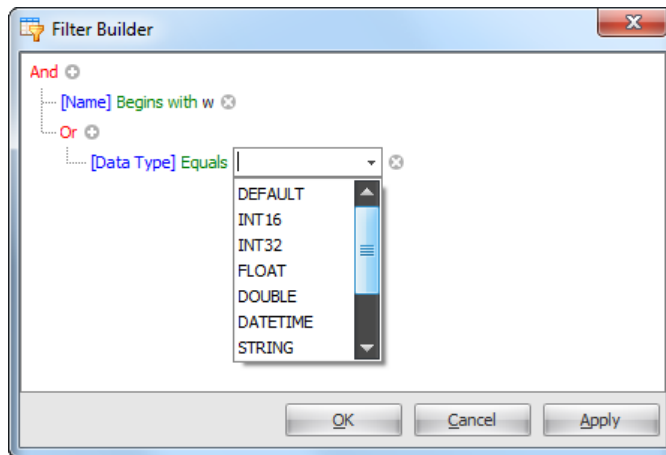


Several conditions can be used, and the different values/operators that can be used for making conditions are displayed when clicking on the condition building blocks.

Operands and operator nodes are context sensitive. Name strings are not case sensitive. Values in the filter builder are saved individually for each function during an edit session. A filter is built as a logical expression tree. A filter typically has operations on individual column values as leaf nodes and logical operators serve as main nodes.

The following color scheme is used:

Color	Function
Red	Logical operator
Blue	Column operand
Green	Value operator
Grey	Value operand

 An indication that a filter is used is displayed at the lower part of the configuration page.



Selecting **Show All** from the **Show Selection/Show All** button in the configuration page displays the complete, unfiltered list.

3.3 Screens

Screens contain objects that can be displayed for the operator in runtime. A screen can contain predefined objects, such as buttons or an alarm list. Pictures of physical objects, such a pump, connected to controller data, can also be included to be used for control and monitoring of the physical object.

Properties are defined for each screen.

Screens are edited in the desktop area and can be managed from:

Location	Used for
The Navigation Manager	Adding new screens, managing links between screens, deleting screens
The Screens list in the Project Explorer	Adding new screens, importing screens from other projects, renaming screens, setting screen as startup screen, saving screens as templates, deleting screens, editing screen scripts
The Screen group of the Home ribbon tab	Adding new screens, selection of screen template and background screen, deleting screens, language selection, screen security
The Screen group of the General ribbon tab	Managing popup screen properties


3.3.1 Screen Name and Screen Title

All screens have unique names, visible e.g. in the Project Explorer and the Navigation Manager. Names of all open screens are shown as tabs in the desktop area. The name of the current screen is displayed and can be changed in the Name group of the Home tab.


In runtime, the screen name is displayed together with the project title in the title bar as default. To display something other than the screen name, a screen title may be added in the Screen group on the General tab when the screen is selected.

Note:

The screen name in iX Developer is not updated when the screen title (for display in runtime) is renamed.

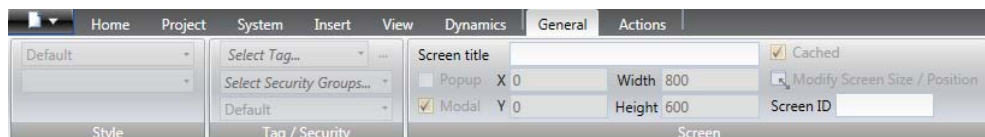

If the project title on the Project tab is left empty, only the screen name or screen title is displayed.

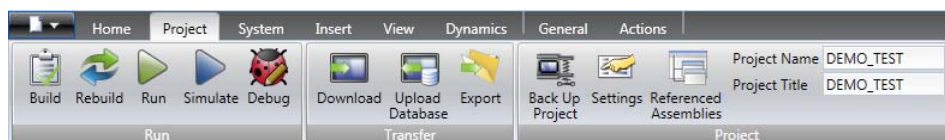

3.3.2 Background and Foreground Screen

It is possible to use another screen as background or foreground screen. This is for instance useful for creating a uniform design of the screens in the project and to avoid repetitive configuration.

Background and foreground screens belong to the current project.

Example

Follow the steps below to use a background screen. A foreground screen is created in the same way, except that you select **Foreground** instead in step 5.


1. Create a background screen with some reusable elements, such as navigation buttons, and rename it to a suitable name.



2. Create a new screen.



- Keep the new screen open on the desktop, and click on **Parent Screen** from the **Screen** group of the **Home** ribbon tab.

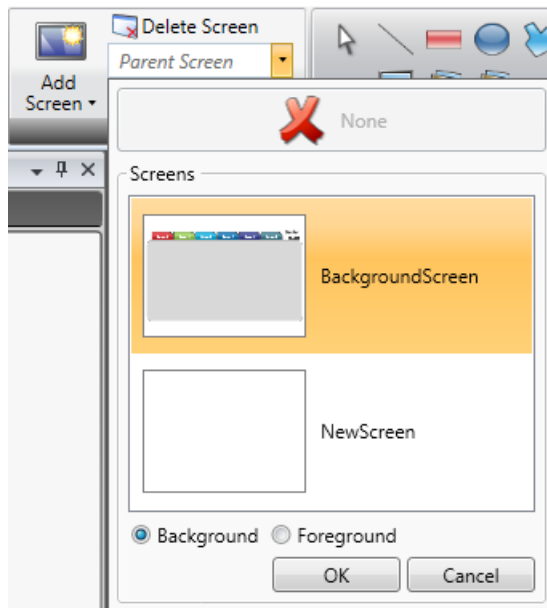

- Click the screen you want to use as background.
- Select **Background**.
- Click **OK**.

The background screen is now used for the screen.

Any modification made to the background screen will be reflected in all screens using it.

3.3.3 Startup Screen

The startup screen is the first screen that opens when a project is executed. By default, Screen1 is set as startup screen.

Another startup screen can be set at any time by right-clicking on the screen on the desktop or in the Project Explorer and selecting **Set as Startup Screen**.

The selected startup screen is easily distinguished from the other screens in the Project Explorer by a blue outline when in focus.

3.3.4 Screen Template

The installation of iX Developer includes a number of screen templates with basic functionality. It is also possible to save your own screens as screen templates, by right-clicking on the current screen and selecting **Save Screen as Template**.

The screen template can be used in the current or other iX Developer projects.

If a selected screen template contains tags that were not previously included in the project, you can select to automatically add these to the Tags list.

To use a template screen, click the lower part of the Add Screen button in the Screen group of the Home ribbon tab. A preview of screen templates is displayed.

User-created as well as predefined screen templates may be deleted by right-clicking on the template in the preview and selecting **Delete Screen Template**. The folder of the selected screen is then permanently deleted from disk.

3.3.5 Screen Security

Using security settings for screens makes it possible to restrict access to screens based on user security groups, similarly to object security.

It is not possible to set security for the Startup screen.

When using a background screen, the security settings of the top level screen are applied.

When screens are imported from other iX Developer projects or from Information Designer, security settings are included and will be used in the current project.

Related information
Object Security and Visibility

3.3.6 Popup Screen

Normally, only one screen is visible in the operator panel in runtime. Sometimes, a popup screen that behaves like as a floating window may be useful. Any screen can be configured as a popup screen:

1. Check **Popup screen** in the Screen group of the General tab.
2. Set the start position coordinates (X, Y) to determine where the screen will open. The position (1,1) corresponds to the upper left corner of the screen.
3. Set the desired width and height in pixels of the screen resolution.

Clicking **Modify Screen Size/Position** allows changing the popup screen size and position by dragging it with the cursor. The coordinates are updated automatically.

Modal Popup Screen

Checking the **Modal** option makes the selected popup screen modal, which means that the user cannot interact with other screens while this screen is visible. All other screens will still be updated.

Note:

It is not recommended to have more than two parallel modal popup screens open at the same time.

Note:

Do not use multiple modal popups triggered by background events such as alarms, tag value changes, etc.

Style

Different styles can be selected for popup screens for PC targets.

Note:

When using a web browser or pdf viewer object in a popup screen, only the default style for the popup screen is supported.

Open Popup Screen

A popup screen is opened in runtime by a **Show Screen** action on an object.

Note:

When configuring a Show Screen action for a popup screen, position of the screen can be selected. These settings override the settings made in the Screen group of the General tab.

Close Popup Screen

A popup screen is closed in runtime by a **Close Screen** action on an object.

If the **Close Screen** action is triggered from a tag, this will close both the popup screen and the parent screen.

3.3.7 Importing Screens

Screens from other projects can be imported, by right-clicking in Screens area of the Project Explorer and selecting **Import**.

If the selected screen has a name identical to one of the existing screens, a new screen name is proposed.

If the imported screen includes tags that do not already exist in projects, you are asked if you want to add these.

Note:

No tag information, other than tag names, will be added by the import function.

3.3.8 Screen Caching

Caching of a screen means that the content of the screen is temporarily stored in the memory, so that the screen can be loaded faster in the future.

A screen has events which will trigger when the screen loads and closes. There is no difference in this behavior whether the screen is cached or not cached. When a cached screen is replaced by another screen, the former will deactivate all dynamic bindings, hibernate any controls that might be running timers or processes and, at last, fire the closing and closed events subsequently.

Scripts in Cached Screens


When implementing scripts or actions in a cached screen, it is highly recommended to make sure that any implementation closes down gracefully. If using for instance a timer or a thread that will be initialized or started at the screen opened event, it must be paused, stopped or disposed on either the closing

or closed event. Otherwise the implementation will continue running in the background, even though the screen is cached, and possibly lead to unnecessary CPU load or otherwise bad behavior.

3.3.9 Grid

There are different methods to align objects in screens; **Snap objects to other objects** and **Snap objects to grid**. Grid properties are managed by right-clicking on the current screen and selecting **Grid** from the context menu. It is also possible to select not to snap objects.

Grid settings are global and will affect all screens.

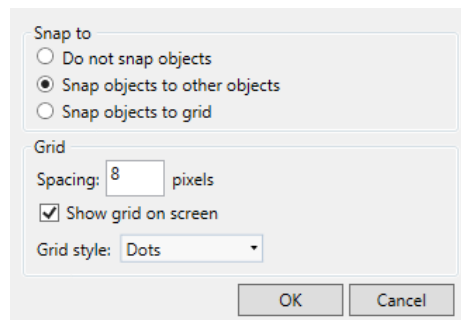

Snap Objects to Other Objects

To help position objects in a screen snap lines will appear when an object is moved across the screen. The snap lines are used to align the dragged object with other objects on the screen.

Blue snap lines appear whenever the right, left, top, or bottom boundaries coincide with other object boundaries. A horizontal red snap line indicates that the center of the object is aligned with the center of another object. For vertical center alignment, select the objects and use **Align Center** in the Arrange control of the Format group.

Snap Objects to Grid

Use the context menu and select **Snap to Grid** to enable binding to grid points for a moved object. **Snap to Grid** mode disables **Snap Lines** for dragged objects.

Grid

The different grid styles can be used as a help pattern when doing the layout of the objects on the screen.

Gridsetting	Description
Spacing	Number of pixels between grid lines
Show grid on screen	Displays the grid on the screen
Grid style	Selection between dots and lines as grid style

3.4 Objects

Objects that can be created in a screen are available from the Objects group and the Component Library.

Snap lines are used to position objects in a screen and align a moved object with other objects.

Information about tag connections as well as size and distance information for objects on the current screen can be displayed by using the buttons in the lower part of the desktop area.

Related information
Objects

3.4.1 Handling Objects

Create

To insert a default-sized object, click the position on the screen where you want to place the object.

To give the object a specific size and shape, press the mouse button and drag to create the object on the screen. Press and hold [**Shift**] while creating an object to retain the aspect ratio of the object.

When creating a line object, press and hold [**Shift**] to constrain the line at 45 degrees angles.

Select

The **Select** tool is available at top left in the Objects group when the group is not expanded. The **Select** tool is the default tool when editing screens. After applying any other object control, the mouse pointer will return to the **Select** tool. When the **Select** tool hovers over a selected object the mouse pointer changes to a cross with arrowheads.

Move

The position of an object is part of the properties for the object. The position of an object can be changed in different ways:

- Click and drag an object to move it to the desired position.
- Open the property grid and edit the **Left** and **Top** coordinates.

To move the selected object one pixel at the time, select the object and use the arrow keys on the keyboard.

Copy and Move

Use [**Ctrl**] + drag to make a copy of the selected object, and to move it to the desired position.

Resize

The size of an object is part of the properties for the object. To change the size of an object:

- When the Select tool hovers over the resize handles of a selected object, the mouse pointer changes to an arrow. Resize the object to the desired size.
- Open the property grid and edit the **Height** and **Width** values.

To resize the selected object one pixel at the time, select the object, press **[Shift]** and use the arrow keys on the keyboard.

Rotate

Rotate is only supported for projects designed for PC targets, and not for all objects.

Angle and rotation center is part of the properties for an object. The rotation center for an object is shown as a small white circle which by default is located in the center of the selected object.

When the Select tool hovers over the rotation center of a selected object the mouse pointer changes to a circle inside a square with arrow sides. This indicates that it is possible to move the rotation center.


To change the rotation center of an object:

1. Point to an object to select it. When an object is selected a red frame with handles is shown around the object.
2. Drag-and-drop the rotation center circle to the position that is to be the center of the rotation.

When the Select tool hovers next to a corner of the selection frame for a selected object the mouse pointer changes to a circular arrow. This indicates that the object is possible to rotate by the frame handle around the rotation center.

To change the rotation angle of an object:

1. Drag to rotate the object around its center position.
2. Use **[Ctrl]** + drag to rotate in steps of 15 degrees.

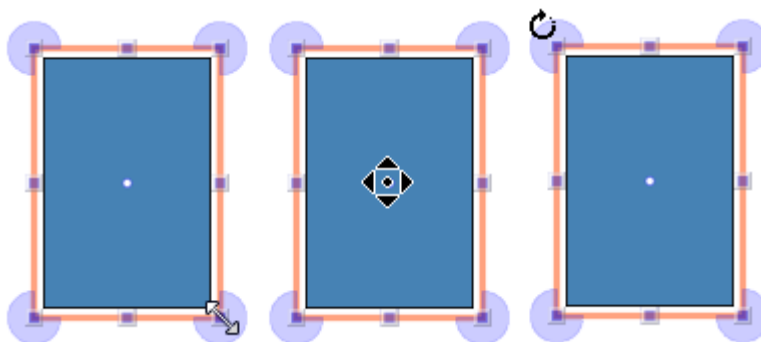

Cursor appearance for Resize, Rotation centre, and Rotate.

Selecting Multiple Objects

Multiple objects on the current screen can be selected at the same time, with the use of the mouse pointer to draw a frame that touches the objects. Alternatively, select one object and then use [Ctrl] + click to select or de-select other objects.

A multiple selection can be used to arrange objects, by using the Arrange control on the Format ribbon tab. The object with the primary selection is used as guide object.

When multiple objects are selected, the primary selection is shown with a red frame, while all other objects in the group have blue frames.

Click on any object in the group to change this to the primary selection. A click or double-click on any object will make it the primary selection, and, if applicable, change the ribbon focus according to the selected ribbon behavior.

The groups shown in the General and the Actions tabs are dependent on the selection. When multiple objects are selected the tabs will show only the properties that are common for the objects in the selection. Property changes will affect all selected objects.

Hiding and Locking Objects

Objects can easily be hidden and locked using the Object Browser, but the commands are also available from the context menu. To make a hidden object visible again, or to unlock a locked object, the Object Browser can be used.

Related information
Object Browser
PropertyGrid

Creating Series

The Create series function facilitates creating a number of identical objects. The function handles adding graphic elements as well as controller connections.


The following example creates a series of analog numeric objects quickly and easily:

1. Create an analog numeric object and connect it to a tag (in this example; D0).
2. Right-click on the object and select **Create series** from the context menu.

3. Fill in the number of objects to add and make settings for the address incrementation, and click **OK**.

Parameter	Description
Number of copies	Enter the number of columns and rows to create
Spacing	Specify the number of pixels between the added objects
Address incrementation	Select how to increment addresses for the added objects. Only addresses available in the driver will be added.
Increment direction	Select if addresses are to be incremented in horizontal or vertical direction

Graphical objects are added on the screen according to the settings made:

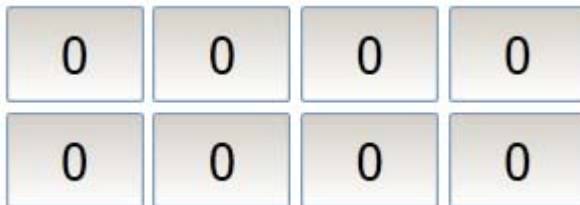


Tags are added to the project according to the settings made:

Tag			Controllers	
Name	Data Type	Access Right	Data Type	Controller 1
Tag1	DEFAULT	ReadWrite	INT16	D0
Tag1_D2	DEFAULT	ReadWrite	INT16	D2
Tag1_D4	DEFAULT	ReadWrite	INT16	D4
Tag1_D6	DEFAULT	ReadWrite	INT16	D6
Tag1_D8	DEFAULT	ReadWrite	INT16	D8
Tag1_D10	DEFAULT	ReadWrite	INT16	D10
Tag1_D12	DEFAULT	ReadWrite	INT16	D12
> Tag1_D14 ...	DEFAULT	ReadWrite	INT16	D14

Right-clicking in the Tags configuration page and selecting **Create series** makes it possible to create a series of tags quickly and easily, without adding graphic objects.

3.5 Navigation Manager

The Navigation Manager is used to manage screens and their relations with respect to project navigation in runtime. It can be activated/deactivated from the View tab. It provides an overview of all screens in the current project.

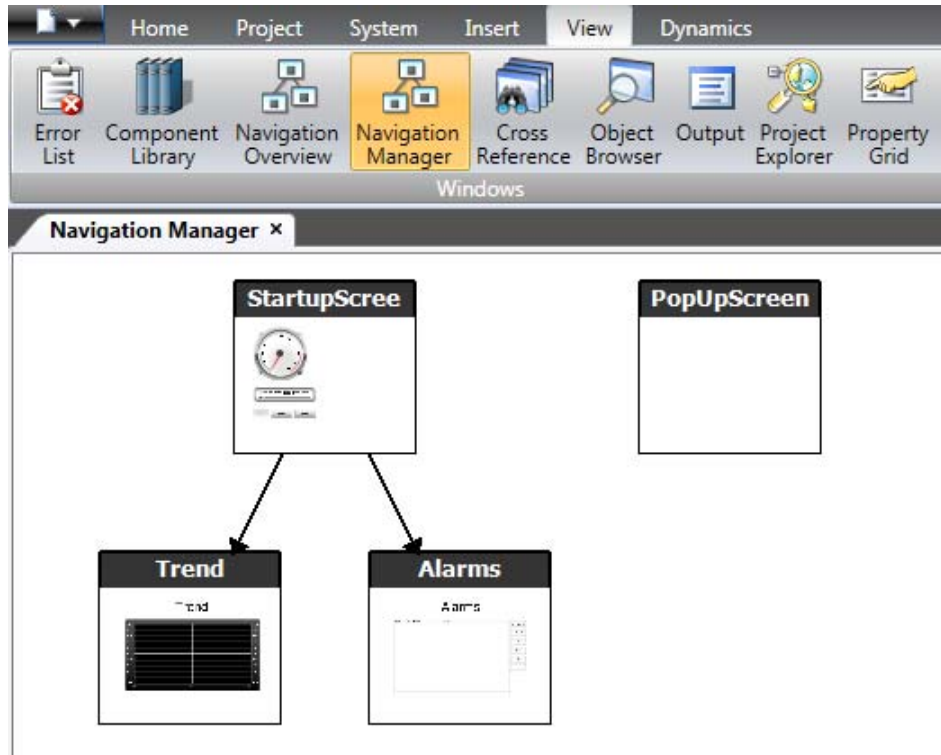

3.5.1 Screen Relations

The Navigation Manager is used to create relationships between screens.

Dragging the mouse pointer from one screen to another screen creates a relation. A button with a **Click** action is defined in the first screen. This **Show Screen** action has the second screen as target, and when clicking it in runtime, the second screen is opened.

Double-click on a screen to open the screen for editing in the desktop area.

3.5.2 Add Screen

New screens can be added directly in the Navigation Manager.

Dragging the mouse pointer from an existing screen to an empty location in the Navigation Manager area creates a new screen, with a relation to the original screen. A button with a **Click** action is defined in the first screen. This **Show Screen** action has the second screen as target, and when clicking it in runtime, the second screen is opened. The button must be removed or changed manually if the new screen is deleted later.

3.5.3 Links in the Navigation Manager

A structure of screens and their relations to other screens will be imposed and shown in the Navigation Manager. The Navigation Manager will provide an overview to help add screens and manage the link relations between project screens.

Right-click anywhere in the Navigation Manager to change link appearance.

Link setting	Description
Show Same Level References	Filters out links to screens on the same hierarchical level.
Show Back References	Shows navigation links to higher hierarchical levels. When not selected, only links to screens on lower levels and links between screens on the same level are shown.
Directed Links	Draws straight link lines between screens, using the shortest way.
Orthogonal Links	Draws link lines in an orthogonal pattern.

Changing the setting or the type affects the appearance in the Navigation Manager only.


3.5.4 Navigation Overview

It is also possible to display the **Navigation Overview** by selecting it from the **View** ribbon tab. It provides an overview of all screens included in the project, with zooming facilities.

3.6 Project Explorer

The Project Explorer shows all screens and components included in the application. It can be activated/deactivated from the **View** tab.

The Project Explorer is divided into five groups; . **Screens**, **Functions**, **Data Loggers**, **Script Modules** and **Recipes**.

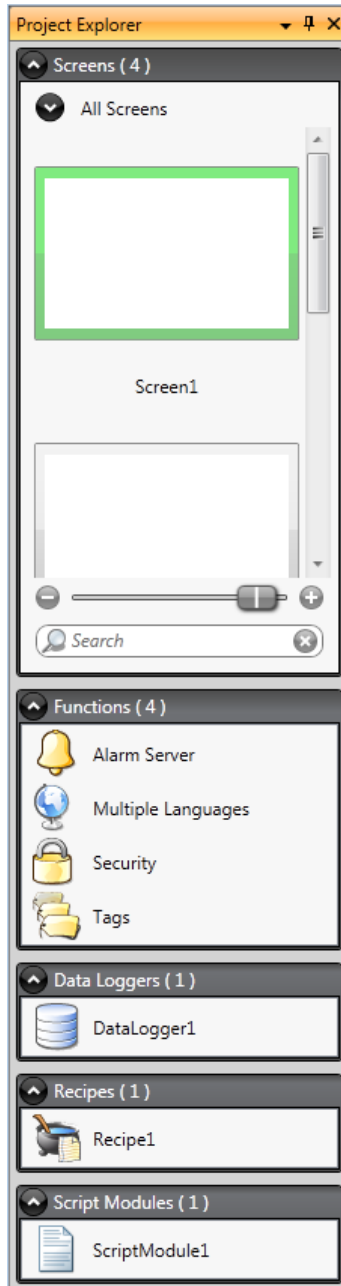

3.6.1 Project Explorer Groups

Click on the group heading to expand/collapse the groups. The number of components in each folder is apparent from the group headings. Right-clicking on a group opens a subset of the commands from the **File menu** and **Insert tab**.

Right-clicking on a component in a Project Explorer group opens a context menu with a selection of common operations. Not all commands are available for all components.

Context menu command	Description
Show	Opens the selected project component for editing in the desktop area
Rename	Renames the selected project component
Add	Adds a new project component to the project
Import	Imports a project component via browsing the hard disk; e.g. a screen from another project
Delete	Deletes the selected component from the project

Screens

The **Screens** explorer lists the screens included in the application. Clicking on a screen opens it for editing in the desktop area.

Screen Context Menu

Right-clicking a screen opens a context menu with a selection of available operations:

- Show
- Rename
- Import
- Delete
- Set as startup screen
- Save screen as template screen
- Add to screen group
- Remove from screen group

The screen set to be the startup screen is marked with a green frame in the **screens** explorer.

Groups

The **Screens** explorer offers a possibility to assign screens to groups.

- Right-click on the **All screens** heading in the **Screens** explorer and select **Add group** followed by entering a unique name for the group in the appearing dialog.
- To assign a screen to a group, simply right-click a screen in the **Screens** explorer and select “Add to Screen Group” from the context menu. Select a group to add the screen to from the appearing “Select Screen group” dialog.
- To show available groups, double-click the **All screens** heading in the **Screens** explorer. Screens not assigned to a group will be listed as **ungrouped screens**.
- Right-clicking a group enables a context menu from which you can choose to rename or delete the group.

Note:

Deleting a Screen group also deletes all of its assigned screens.

It is also possible to assign a screen to a group by a simple drag and drop operation. Drag the screen symbol and release it on the group.

Zoom Slider

The Zoom slider is found in the **Screens** explorer and provides a way to quickly zoom in and out of your **screens** explorer.

Search

The search function provides the option to search for screens using the screen name or **screen-id**.

The search searches across all columns.

Functions

The Alarm Server, Multiple Languages and Security functions are predefined, as well as Tags, and cannot be deleted from the Functions folder. The other functions can be added from the Insert menu. Most functions will be available from the Functions folder after having added them to the project, but some functions are assigned folders of their own.

Clicking on the function in the Functions folder opens its configuration pages for editing in the desktop area.

Alarm Distributor

Alarms can be distributed between operator panels, with notification via printer, SMS or e-mail using the alarm distributor.

Related information
Alarm Distributor

Alarm Server

The Alarm Server handles alarm groups and alarm items.

Related information
Alarm Server
Alarm Groups
Alarm Items

Audit Trail

The Audit Trail function enables tracking of operator actions.

Related information
Audit Trail

Function Keys

Function keys for operator panels as well as for the regular PC keyboard can be configured.

Related information
Function Keys

Multiple Languages

Configuring multiple languages for user texts and system texts are supported. The texts can be exported, edited and reimported to the project. A tool for automatic translations is also included.

Related information
Language Management

Reports

The reports function allows adding excel report templates to the project.

Related information
Reports

Scheduler

A scheduler can be used to control events in the process at special times.

Related information
Scheduler

Security

Users and groups of users can be set up for security purposes.

Related information
Security Management

Tags

Clicking on **Tags** in the Functions folder displays the tags configuration page in the desktop with all the tags that are used in the application. Tags are added by clicking on the **Add Tag/Add System Tag** button.

Tags can belong to a connected controller, or be internal. Internal tags can be used and selected in the same way as a regular controller tags.

System tags are used to monitor or access variables from the system, for example *Used RAM* or *DateTime*. System tags are indicated by blue color in the tag list.

Related information
Tags
Internal Tags
System Tags

Text Library

With the text library function, text tables can be created, where values are linked to texts.

Related information
Text Library

Recipes

Several recipes can be inserted in the project. Each recipe function handles a pre-defined set of recipe items.

Related information
Recipe Management

Script Modules

Clicking on a script module in the Script Modules folder opens the script editor in the desktop area. A script module can be included to program features not covered by included functions and actions, or to be used to share functionality among functions.

There is also a script action function that can be used to apply script modules to an object in the same way as with other trigger actions.

Related information
Script
Script Action

Data Loggers

Data can be logged and saved to a database on time intervals or depending on changed values.

Related information
Data Logger

3.7 Component Library

The Component Library contains reusable components for a project.

3.7.1 Components

The Component Library includes a large number of predefined graphical objects, categorized into groups. User-defined graphical objects and other files may also be saved in the component library. All components in a sub folder must have unique names.

Examples of components that may be included in the library:

- predefined components
- objects
- text objects configured with multiple texts
- symbol objects configured with multiple symbols
- grouped objects
- external pictures
- text
- folders (file folders)
- HTM/HTML files
- media files
- PDF files

Since plain text can be saved as a component, it is possible to save reusable script components by dragging a section of script code from the Script view into the Component Library.

A component is displayed with its name and a thumbnail representation in the Component Library window.

Grouped objects are displayed as a thumbnail representing the primary selection of the object. Text files and folders are represented by operating system thumbnails.

Note:

Only static graphical objects are supported in iX Developer.

Project Pictures

The Project Pictures folder is project specific, and contains pictures that are used in the current project. The components in Project Pictures are stored in the project's Symbols folder.

Project Files

The Project Files folder is project specific, and contains files that have been added when creating the project.

Project files and folders can be added and deleted from the Project Files folder before downloading the project to an operator panel. The Project Files folder is located in the Project folder.

For instance, "C:\MyProjects\ProjectFolder\Project Files".

It is also possible to access the operator panel via FTP to add and delete files and folders after the download, provided that a FTP service is enabled in the project.

Note:

Avoid using special characters (e.g %, & , #) within the filename/filepath.

Related information
FTP
Download

3.7.2 Add and Use Components

Drag-and-drop any component from the library to the current screen, or use copy [Ctrl + C] and paste [Ctrl + V] commands.

Objects can be copied or moved to the Component Library.

A text file, that is saved in the Component Library will be converted to a text box object when pasted into a screen.

A component (picture or group) that is originally copied from an object with a tag connection will keep its tag connection and any dynamic properties when used from the Component Library.


Note:

If a component with a tag association is reused in another project then all referenced tags must be present in the new project.

3.7.3 Component Library Window

The component library is available as a tab at the right-hand side of the desktop. The window is configured with auto-hide functions, and can also be activated/deactivated from the View ribbon tab. Its appearance can be managed just as other tools; as docked or floating windows.

The Component Library is also accessible when selecting and placing the Picture object from the Home ribbon tab.

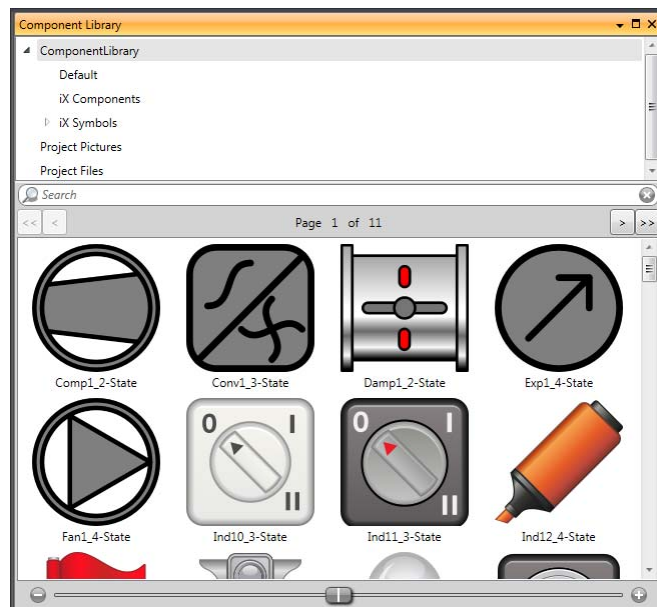

User-Defined Categories

Right-click on an empty space of the Component Library window and select **Add Components** to add a component to the library. To create a new category, select **Add category** and choose a name of your preference. A category could also be renamed or deleted.

User-defined categories are not project specific. This means that all objects saved in a user-defined category will be available in all iX Developer projects.

Exporting and Importing Components

By using the Import and Export functions in the Component Library, categories of components can easily be copied and moved between projects. Right-click on the category folder and select **Import** or **Export**. Find the location in the project file from where the components should be imported or to where they should be exported. The program will not indicate where the component files are located. Single objects can not be exported or imported.

Expand and Collapse Folders

The top area is a contents frame that is used to navigate through the folders of the Component Library. The contents heading displays the name of the currently selected folder. The folder view can be expanded and collapsed with the control to the left of the displayed folder name.


The display of the components is filtered through the selection of the folders, i.e. all components are displayed if the top folder is selected.

Search

The **Search** feature provides a case-insensitive and alphabetical search, based on the component label, in the current folder and in all sub folders.

Zoom

The Zoom slider at the bottom area of the tool window can be used to change the size of the displayed components. Resting the mouse pointer over a component displays a full-size picture of the component.

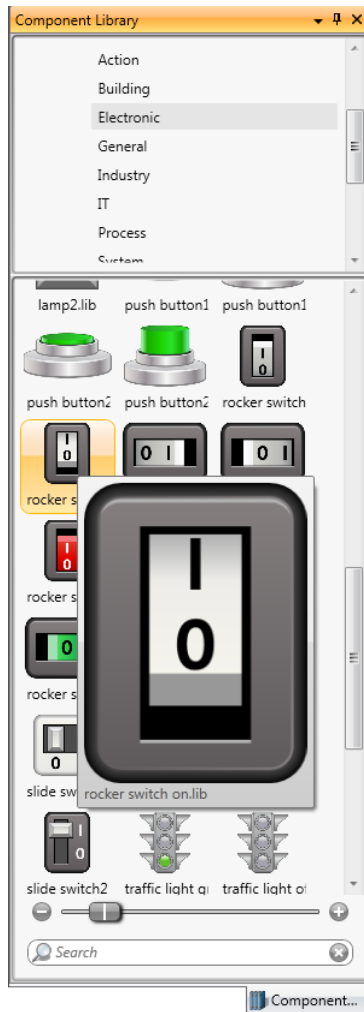

Component Library window, displaying full size of a selected component

XAML Guidelines

All information, including the image, must be contained within the XAML-file. Links to external objects will result in missing objects. Furthermore, the appearance of the XAML-file may not be dependent of external inputs, like for example a parameter controlling a multi-picture based on internal logic within the XAML-file.

Naming Controls in XAML

```
<ContentControl
  xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
  xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml"
  xmlns:d="http://schemas.microsoft.com/expression/blend/2008"
  Width="120"
  Height="15"
  x:Name="Root">
  <TextBlock x:Name="Description" Text="This is a description" />
</ContentControl>
```

Not supported

```
<ContentControl
  xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
  xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml"
  xmlns:d="http://schemas.microsoft.com/expression/blend/2008"
  Width="120"
  Height="15">
  <TextBlock Text="This is a description" />
</ContentControl>
```

Supported

Specify Width and Height

The root control must specify a width and a height.

```
<Rectangle
  xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
  xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml"
  xmlns:d="http://schemas.microsoft.com/expression/blend/2008"
  xmlns:signatures="http://www.beijerelectronics.com/hmi/ix/signatures"
  Fill="Red" />
```

Not supported

```
<Rectangle
  xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
  xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml"
  xmlns:d="http://schemas.microsoft.com/expression/blend/2008"
  xmlns:signatures="http://www.beijerelectronics.com/hmi/ix/signatures"
  Width="50"
  Height="50"
  Fill="Red" />
```

Supported

Bindings

These are the only properties that are supported for XAML-binding within components:

- ISymbolViewboxSignature.Fill is presented as “Fill” within the property grid
- ISymbolViewboxSignature.Stroke is presented as “Outline” within the property grid
- ISymbolViewboxSignature.StrokeThickness is presented as “Outline Thickness” within the property grid

It is not supported to bind to anything outside of the component.

Supported:

```
<Rectangle
  xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
  xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml"
  xmlns:d="http://schemas.microsoft.com/expression/blend/2008"
  xmlns:signatures="http://www.beijerelectronics.com/hmi/ix/signatures"
  Width="50"
  Height="50"
  Fill="{Binding Fill, RelativeSource={RelativeSource AncestorType={x:Type
signatures:ISymbolViewboxSignature}}}"
  Stroke="{Binding Stroke, RelativeSource={RelativeSource AncestorType={x:Type
signatures:ISymbolViewboxSignature}}}"
  StrokeThickness="{Binding StrokeThickness, RelativeSource={RelativeSource
AncestorType={x:Type signatures:ISymbolViewboxSignature}}}" />
```

3.7.4 XAML Import into iX Developer

It is possible to import vector graphics, XAML components, into iX Developer.


Basic - Import XAML into iX Developer

Install Inkscape. The software is free and can be downloaded at <https://inkscape.org>.


Note:

The file needs to be opened as .svg and then saved to XAML before importing.

1. Open Expression Design and draw your image.

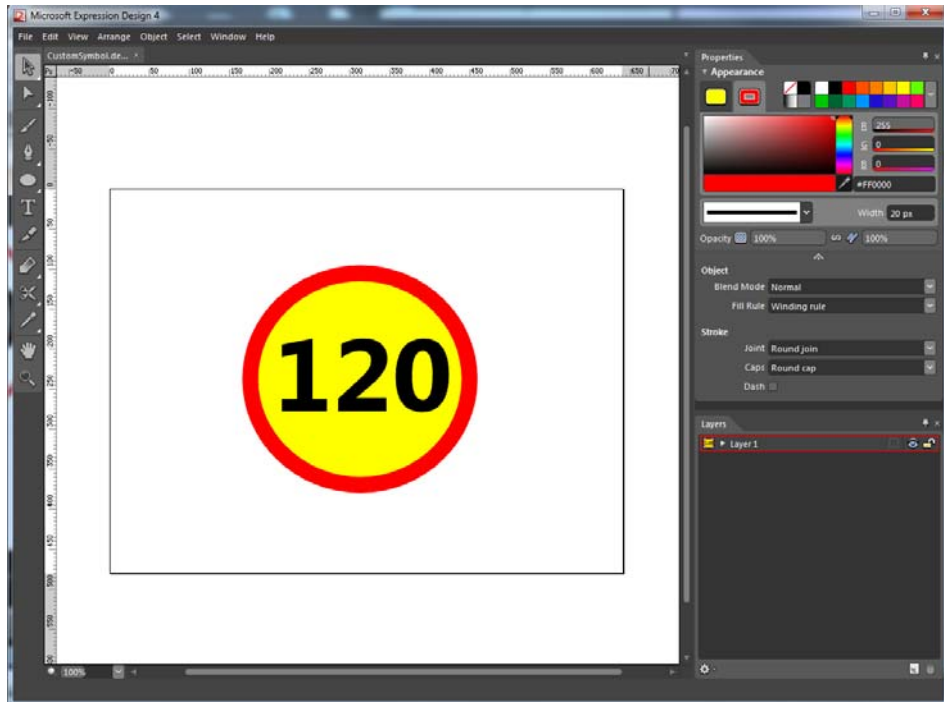

2. Select all your components and choose **File > Export...**
3. Use the same settings as shown in the picture below.

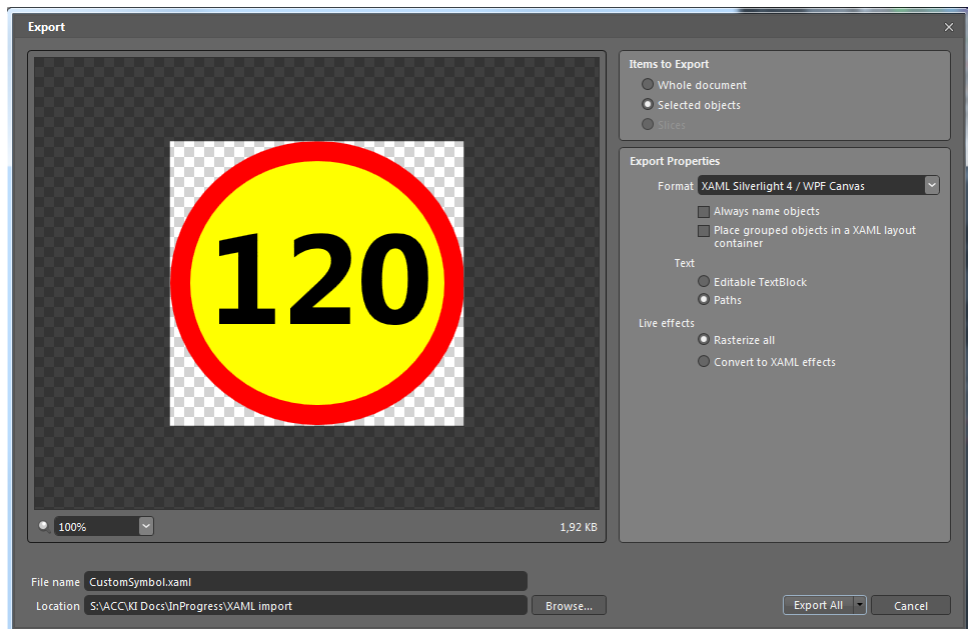

4. Click **Export All** and save the file.
5. Open iX Developer.

6. Right-click on a node in the **Component Library** and choose **Add Components**.
7. Select the XAML file that you exported from Expression Design.


Advanced - XAML bindings in iX Developer

It is possible to bind some of the component's properties to tags directly in iX Developer's property grid. The following properties are supported:

- Fill
- Outline
- Outline thickness

Kaxaml tool

1. Download Kaxaml tool.
2. Open your exported xaml file in Kaxaml.
3. Localize which part of the graphic that you want to control with fill, outline and outline thickness. Changing the fill color for each section makes it easier to find which parts of the XAML code that needs to be modified.

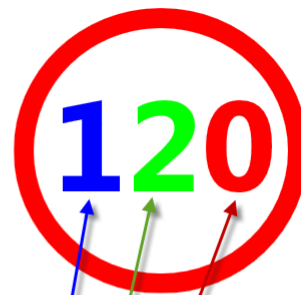

```
<?xml version="1.0" encoding="utf-8"?>
<Canvas xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation" xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml" Width="293.5" Height="284.5" Canvas.Left="0" Canvas.Top="-7.62939e-006" Stretch="Fill" StrokeThickness="20" StrokeStartLineCap="Flat" >
  <Path Width="56.32" Height="90.88" Canvas.Left="49.24" Canvas.Top="91.62" Stretch="Fill" Fill="#FF0000" Data="F1 M 105.56,182.5L 49.24,142.2" >
  <Path Width="61.44" Height="90.88" Canvas.Left="119.64" Canvas.Top="91.62" Stretch="Fill" Fill="#FF00FF" Data="F1 M 142.26,165.48L 142.26,105.56" >
  <Path Width="66.56" Height="92.16" Canvas.Left="191.32" Canvas.Top="91.62" Stretch="Fill" Fill="#FFFF00" Data="F1 M 224.08,183.78C 202.26,183.78,202.26,183.78,202.26,183.78" >
</Canvas>
```

Dynamic properties

The following dynamic properties are supported by iX Developer:

```

//Namespace
xmlns:signatures="http://www.beijerelectronics.com/hmi/ix/signatures"
//Fill
Fill="{Binding Fill, RelativeSource={RelativeSource AncestorType={x.Type
signatures:ISymbolViewboxSignature}}}"
//Stroke
Stroke="{Binding Stroke, RelativeSource={RelativeSource AncestorType={x.Type
signatures:ISymbolViewboxSignature}}}"
//Stroke Thickness
StrokeThickness="{Binding StrokeThickness, RelativeSource={RelativeSource AncestorType={x.Type
signatures:ISymbolViewboxSignature}}}"

```

XAML code before modification:

```

<?xml version="1.0" encoding="utf-8"?>
<Canvas xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml" Width="293.5" Height="284.5"
Clip="F1 M 0,0L 293.5,0L 293.5,284.5L 0,284.5L 0,0">
    <Ellipse Width="293.5" Height="284.5" Canvas.Left="0" Canvas.Top="-7.62939e-006"
Stretch="Fill" StrokeThickness="20" StrokeStartLineCap="Round" StrokeEndLineCap="Round"
StrokeLineJoin="Round" Stroke="#FFF000" Fill="#FFFFFF00"/>
    <Path Width="56.32" Height="90.88" Canvas.Left="49.24" Canvas.Top="91.62"
Stretch="Fill" Fill="#FF000000" Data="F1 M 105.56,182.5L 49.24,182.5L 49.24,167.14L
68.44,167.14L 68.44,110.82L 49.24,114.66L 49.24,99.3L 87.64,91.62L 87.64,167.14L
105.56,167.14L 105.56,182.5 Z "/>
    <Path Width="61.44" Height="90.88" Canvas.Left="119.64" Canvas.Top="91.62"
Stretch="Fill" Fill="#FF000000" Data="F1 M 142.26,165.48L 142.26,165.86L 179.8,165.86L
179.8,182.5L 119.64,182.5L 119.64,166.86L 146.1,142.24C 151.433,137.307 155.183,133.17
157.35,129.83C 159.517,126.49 160.6,122.98 160.6,119.3C 160.6,111.087 155.953,106.98
146.66,106.98C 138.58,106.98 130.853,109.967 123.48,115.94L 123.48,98.56C 131.56,93.9333
140.673,91.62 150.82,91.62C 160.327,91.62 167.747,93.9 173.08,98.46C 178.413,103.02
181.08,109.18 181.08,116.94C 181.08,127.3 174.547,138.007 161.48,149.06L 142.26,165.48 Z "/>
    <Path Width="66.56" Height="92.16" Canvas.Left="191.32" Canvas.Top="91.62"
Stretch="Fill" Fill="#FF000000" Data="F1 M 224.08,183.78C 202.24,183.78 191.32,168.887
191.32,139.1C 191.32,123.647 194.273,111.87 200.18,103.77C 206.087,95.67 214.653,91.62
225.88,91.62C 247.213,91.62 257.88,106.76 257.88,137.04C 257.88,152.12 254.967,163.68
249.14,171.72C 243.313,179.76 234.96,183.78 224.08,183.78 Z M 225.02,106.98C 216.207,106.98
211.8,117.527 211.8,138.62C 211.8,158.487 216.12,168.42 224.76,168.42C 233.187,168.42
237.4,158.18 237.4,137.7C 237.4,117.22 233.273,106.98 225.02,106.98 Z "/>
</Canvas>

```

Modify the xaml code by replacing Fill, Stroke and StrokeThickness with dynamics properties. Don't forget to add the namespace.

```

<?xml version="1.0" encoding="utf-8"?>
<Canvas xmlns:signatures="http://www.beijerelectronics.com/hmi/ix/signatures"
xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml" Width="293.5" Height="284.5"
Clip="F1 M 0,0L 293.5,0L 293.5,284.5L 0,284.5L 0,0">
  <Ellipse Width="293.5" Height="284.5" Canvas.Left="0" Canvas.Top="-7.62939e-
006" Stretch="Fill" StrokeThickness="{Binding StrokeThickness,
RelativeSource={RelativeSource AncestorType={x.Type |
signatures:ISymbolViewboxSignature}}}" StrokeStartLineCap="Round"
StrokeEndLineCap="Round" StrokeLineJoin="Round" Stroke="{Binding Stroke,
RelativeSource={RelativeSource AncestorType={x.Type
signatures:ISymbolViewboxSignature}}}" Fill="{Binding Fill,
RelativeSource={RelativeSource AncestorType={x.Type
signatures:ISymbolViewboxSignature}}}" />
  <Path Width="56.32" Height="90.88" Canvas.Left="49.24" Canvas.Top="91.62"
Stretch="Fill" Fill="#FF000000" Data="F1 M 105.56,182.5L 49.24,182.5L 49.24,167.14L
68.44,167.14L 68.44,110.82L 49.24,114.66L 49.24,99.3L 87.64,91.62L 87.64,167.14L
105.56,167.14L 105.56,182.5 Z "/>
  <Path Width="61.44" Height="90.88" Canvas.Left="119.64" Canvas.Top="91.62"
Stretch="Fill" Fill="#FF000000" Data="F1 M 142.26,165.48L 142.26,165.86L
179.8,165.86L 179.8,182.5L 119.64,182.5L 119.64,166.86L 146.1,142.24C
151.433,137.307 155.183,133.17 157.35,129.83C 159.517,126.49 160.6,122.98
160.6,119.3C 160.6,111.087 155.953,106.98 146.66,106.98C 138.58,106.98
130.853,109.967 123.48,115.94L 123.48,98.56C 131.56,93.9333 140.673,91.62
150.82,91.62C 160.327,91.62 167.747,93.9 173.08,98.46C 178.413,103.02 181.08,109.18
181.08,116.94C 181.08,127.3 174.547,138.007 161.48,149.06L 142.26,165.48 Z "/>
  <Path Width="66.56" Height="92.16" Canvas.Left="191.32" Canvas.Top="91.62"
Stretch="Fill" Fill="#FF000000" Data="F1 M 224.08,183.78C 202.24,183.78
191.32,168.887 191.32,139.1C 191.32,123.647 194.273,111.87 200.18,103.77C
206.087,95.67 214.653,91.62 225.88,91.62C 247.213,91.62 257.88,106.76
257.88,137.04C 257.88,152.12 254.967,163.68 249.14,171.72C 243.313,179.76
234.96,183.78 224.08,183.78 Z M 225.02,106.98C 216.207,106.98 211.8,117.527
211.8,138.62C 211.8,158.487 216.12,168.42 224.76,168.42C 233.187,168.42
237.4,158.18 237.4,137.7C 237.4,117.22 233.273,106.98 225.02,106.98 Z "/>
</Canvas>

```

Import to iX Developer

1. Open iX Developer.
2. Right-click on a node in the **Component Library** and select **Add Components**.
3. Select the XAML file that you modified in Kaxaml.

Observe how your component's appearance is altered when changing fill/outline color or outline thickness.

When you have modified the component you can easily copy it to the **Component Library**. This will allow you to reuse the graphic/component later on.

3.8 Property Grid


Most properties and settings for an object or screen are defined from its **General** and **Home** tabs.

A detailed overview of object properties is available by selecting **Property Grid** from the **View** ribbon tab or by selecting **Properties** from the context menu.

The property grid includes more properties and settings than the ribbon tabs, for example size and position of objects, and delay of mouse and touch screen input in runtime.

Property groups can be collapsed/expanded.

The window is configured with auto-hide functions. Its appearance can be managed just as other tools; as docked or floating windows.

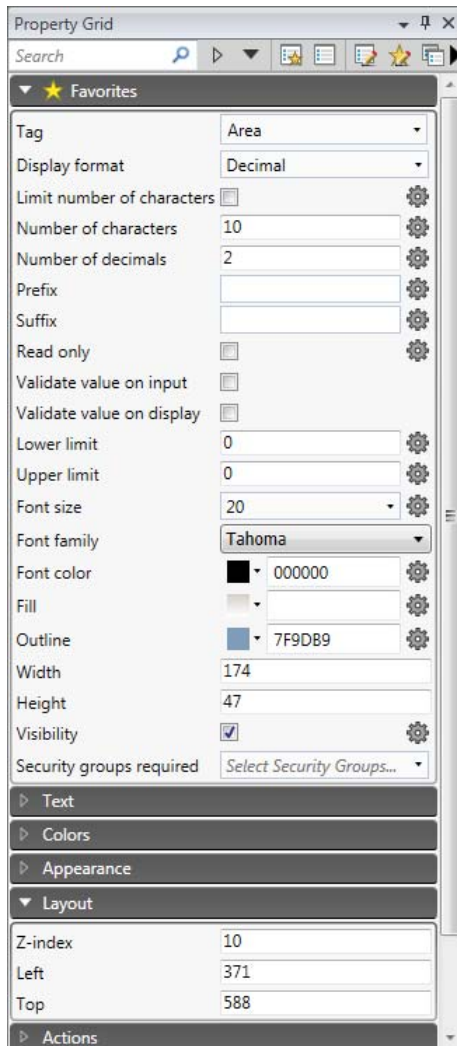






3.8.1 Search

The Search feature provides a case-insensitive and alphabetical search, that makes it easy to reduce the number of displayed properties.

3.8.2 Toggling views



The different views in the Property grid can be selected by using the menu on the top of the window.



	Show only the properties marked as favorites
	Show all properties in the Property Grid
	Show all properties that do not have their default value
	Select whether Favorites are editable or not
	Show or hide the Copy Properties functions in the Property Grid

3.8.3 Favorites

The properties most commonly used can be added to a Favorites-category for easier access. The favorites are saved per object type, i.e. Button has one set of favorites, Analog Numeric has one set of favorites, Chart has one set and so on.

	A yellow star indicates that the property is added as a favorite. By clicking the star, the property is deselected and removed from the Favorites-category
	When clicking on a greyed out star, the corresponding property is added to the Favorites-category





3.8.4 Copy Properties



Multiple properties can be copied from one object to one or more targets. The properties can be selected either one by one by clicking the check box next to each property, or all at once by clicking the button for Select all, followed by a click on the **Copy Properties** button. The values are then pasted onto the target object(s) when selecting the target(s) and clicking on **Paste**.


Note:

Only the properties that are shared by both source and target objects are transferred. An exception to this is actions, which can only be copied between objects of the same type (for instance from button to button).

	Selects all properties for the object
	Deselects all properties for the object
	Copies the selected properties to the clipboard
	Clicking Paste pastes the copied properties onto the selected object(s)

3.9 Object Browser

An overview of all objects included in a screen can be displayed in the Object Browser.

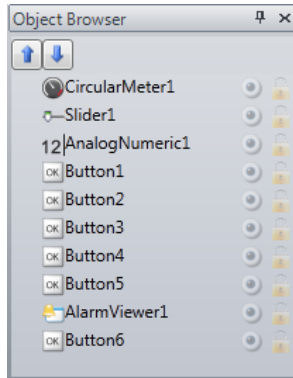

It is easy to bring objects that may have been obscured by other objects up front, by using the arrows at the top left.

Clicking the buttons at the right side of each object enables simply hiding/showing and locking/unlocking objects.

Note that the top-to-bottom order in the Object browser corresponds to the front-to-back order on the screen.

3.10 Output

The Output window contains messages concerning the project validation and build. Created project files with folder paths and any found errors will be listed in Output.

Note:

Incorrect code entered in text mode (Xaml and Script) may result in errors that are not possible to recognize during analysis and build.

3.11 Error List

The Error List contains information about problems and errors detected in iX Developer for the current project. Build errors are reported in the Output window.

3.12 Help

The Help file for iX Developer can be opened by pressing **F1** on the keyboard or using the **Help** button in the ribbon tab heading.

4 Tags

Objects connected to tags can change values in a controller, and controller values can be reflected by changing object appearance in various ways. Objects in a screen will remain static until connected to a tag.

A tag has a symbolic name and can be of different data types.

Tags can belong to a connected controller, be internal or belong to the system. Internal tags are used to handle local data values, and can be viewed and treated in screens just like regular controller tags.

The global tag list provides an overview of all used tags, regardless of controller. This makes it easy to develop projects that can be used with a variety of controllers. It is also possible to connect a tag to more than one controller simultaneously.

4.1 Adding Tags



Tags are handled by clicking on **Tags** in the Functions folder in the Project Explorer.

Home					
Add		Delete		Columns Visible	Filter
				<input type="checkbox"/> Scaling <input checked="" type="checkbox"/> Others	<input type="text"/>
				<input type="checkbox"/> Data Exchange	
Tag	Data Type	Access Right	Data Type	Controller 1	Others
MeterAndSlider	DEFAULT	ReadWrite	INT 16	D0	
Tag2	DEFAULT	ReadWrite	INT 16	D1	
Counter	DEFAULT	Read	INT 16	C0	
Weight	DEFAULT	Write	INT 16	D2	
Length	DEFAULT	ReadWrite	INT 16	D3	
Width	DEFAULT	ReadWrite	INT 16	D4	
Area	FLOAT	ReadWrite	DEFAULT		
BoolAlarmTag	DEFAULT	ReadWrite	DEFAULT		
Calc	BIT	ReadWrite	DEFAULT		


Clicking the **Add Tag/Add System Tag** button adds a new tag to the list. Make settings for each added tag. When predefined values are available, these can be selected by clicking the arrow at the right of the table cell.

4.1.1 Removing Unused Tags

The **Delete** button in **Tags** can be used to detect unused tags for immediate removal via the **Remove Unused Tags** dialog.

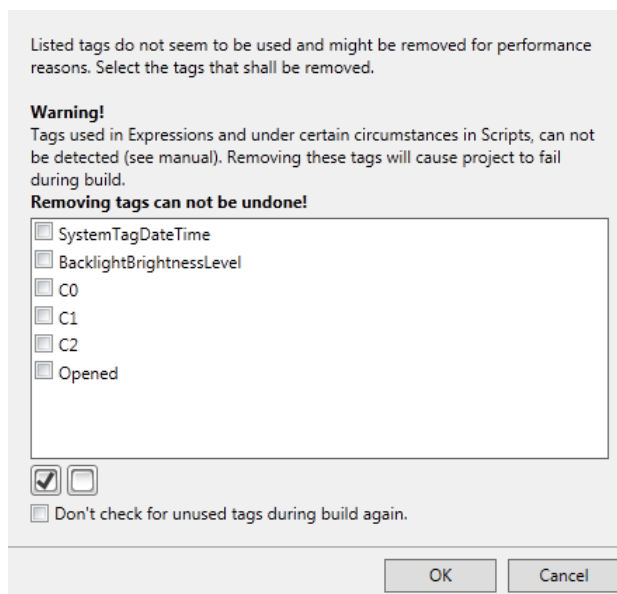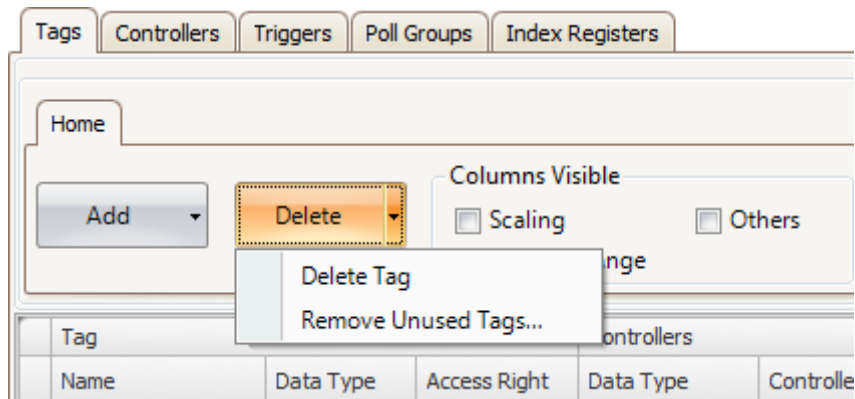

Similarly, when building the project, a notification of any unused tags will automatically be done by displaying the **Remove Unused Tags** dialog. To disable or enable pop-up of this dialog, go to **Options** in the **File** menu. Select **Build options** in the list and then select **CheckForUnusedTags** under **Misc**. Change the status of the function to **True** or **False**.

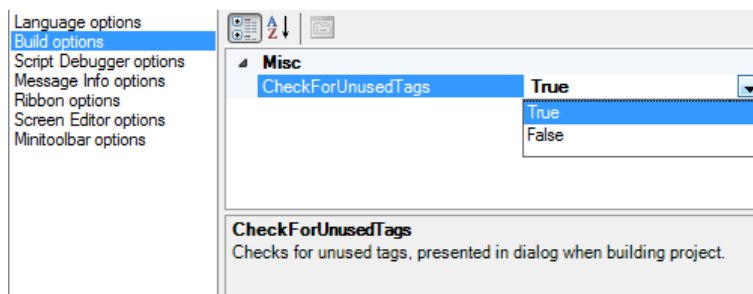

Note:

Always review the candidates for removal prior to removing unused tags, since removing tags that are used in e.g. a script can result in a corrupt project.

To be able to detect tags used in scripts, a certain syntax must be used. It is recommended to use the **IScriptTag** interface within the arguments list for the **ScriptModule**, thus enabling the **ScriptModule** to be used and reused without being locked to a specific tag setup. Use the syntax **Globals.Tags.TagName** for direct tag references within scripts and expressions.

If an external editor, e.g. Visual Studio, is used for editing a script, the cross-reference will not be updated when building the project in iX Developer. The **Remove Unused Tags** function will report tags used in these scripts as unused.


For iX Developer to recognize a change made with an external editor, the script file needs to be opened in iX Developer and provided with just any small change using the script editor in iX Developer. Save the project once more before build.

```

1  //-----
2  // Press F1 to get help about using script.
3  // To access an object that is not located in the current class, start the call with Globals.
4  // When using events and timers be cautious not to generate memoryleaks,
5  // please see the help for more information.
6  //-----
7
8  namespace Neo.ApplicationFramework.Generated
9  {
10     using System.Windows.Forms;
11     using System;
12     using System.Drawing;
13     using Neo.ApplicationFramework.Tools;
14     using Neo.ApplicationFramework.Common.Graphics.Logic;
15     using Neo.ApplicationFramework.Controls;
16     using Neo.ApplicationFramework.Interfaces;
17
18
19     public partial class ScriptModule1
20     {
21         /// <summary>
22         /// This ScriptModule method,
23         /// sums the int-value of the provided tag arguments.
24         /// The tags involved must be activated
25         /// </summary>
26         /// <param name="arg1"></param>
27         /// <param name="arg2"></param>
28         /// <param name="arg2"></param>
29         /// <returns></returns>
30
31         public void Sum(IScriptTag arg1, IScriptTag arg2, IScriptTag result)
32         {
33             result.Value = arg1.Value.Int + arg2.Value.Int;
34         }
35     }
36 }
37

```

The **Sum** method inside the script can be utilized in many different contexts. The following picture shows how Tag3 will contain the sum of Tag1 and Tag2 when the button is clicked. Notice that the tags used in scripts must be activated to work as expected.

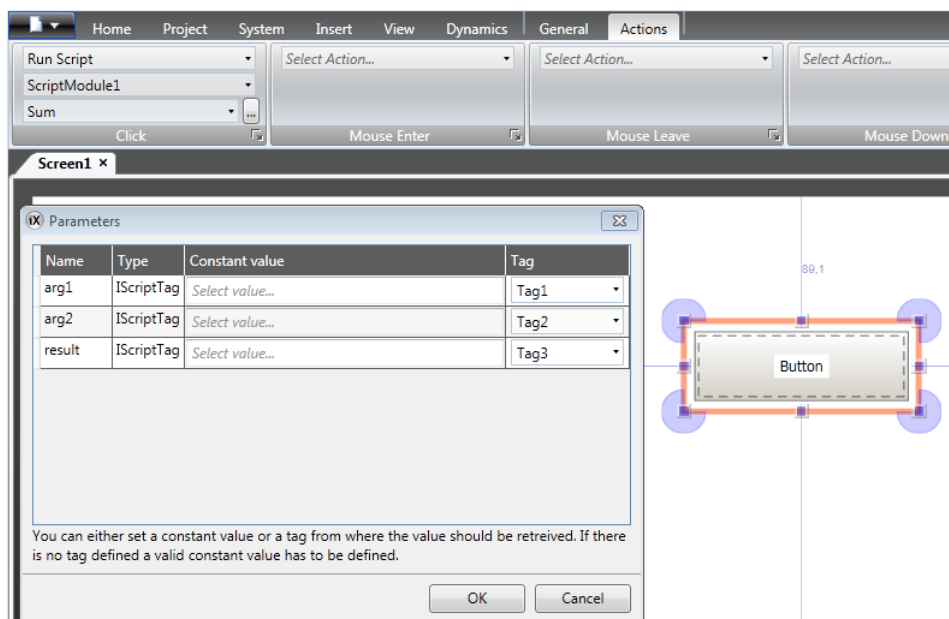

Related information

[Tags Editor Options](#)

[Options](#)


4.1.2 Basic Settings

To reduce complexity in the tags configuration page, some columns can be made hidden/visible. The basic settings are always displayed. It is possible to customize which columns to show by default using **Tags Editor Options**.

Enter name, data type and access rights for the tag. Select if the tag is to belong to a controller entered on the Controllers tab. If no controller tag address is entered, the tag will be treated as an internal tag.

Parameter	Description
Name	Symbolic name. The name can be any alphanumeric string, beginning with a letter (a-z, A-Z).
Data Type (Tag)	Selection of presentation format; for example used to show the correct engineering unit when using scaling. DEFAULT follows selection made for Data Type (Controller).
Access Rights	Defines access rights to the tag
Controller	Controller address
Data Type (Controller)	Selection of data type

To rename a tag it is necessary to enter the **Rename** dialog for the change to take place. The dialog appears when clicking on the three dots to the right of the name in the tags list.

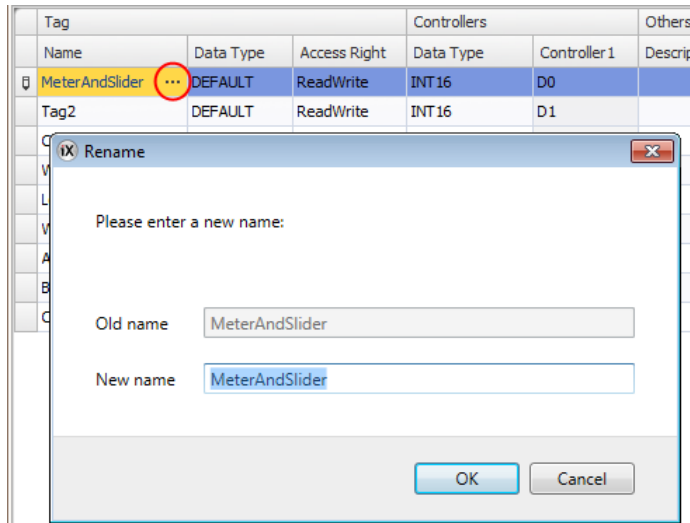

Related information

[Scaling](#)

4.1.3 Scaling

Scaling affects only tags connected to a controller.

Checking the **Scaling** box displays the **Offset** and **Gain** columns. These parameters are used to change the scale of the controller value to a value shown in accordance with the following equation:

$$\text{Panel value} = \text{Offset} + (\text{Gain} \times \text{Register value})$$

When the value for an object is changed from the operator panel, the scale is changed to the value shown in accordance with the following equation:

$$\text{Register value} = (\text{Panel value} - \text{Offset}) / \text{Gain}$$

Scaling does not affect the defined maximum and minimum values, or the number of decimals.

4.1.4 Data Exchange

Checking the **Data Exchange** box displays the **Direction** and **When** columns.

Data exchange supports real time data exchange between different controllers; also of different brands. The data exchange can be performed when a digital tag is set or at a certain time interval, set up on the Triggers tab. Data exchange can be selected for individual tags, array tags or for the complete range of tags.

Related information

[Data Exchange](#)

4.1.5 Others

Checking the Others box makes it possible to configure a number of additional tag properties.

Parameter	Description
Description	An optional description of the tag. Description of system tags is added automatically. Please note that the description can not be more than 200 characters long. Descriptions longer than that will cause build errors.
Poll Group	Makes it possible to poll groups of tags at different intervals.
Always Active	Prevents the tag from becoming inactive. This may be useful for actions and scripting purposes. Note: The Active setting for the controller on the Controllers tab is predominant over the Always Active setting for a particular tag.
Non Volatile	Keeps the last tag value in memory even when the panel or PC is powered off. Only available for internal tags.
Initial Value	Makes it possible to assign a tag an initial value at system startup. Only available for internal tags.
Index Register	Makes it possible to select a register from which an object is to collect the shown value.
Action	Makes it possible to configure actions based on a condition of a tag.
Log to Audit Trail	Logs operator actions on the tag. Only available if the Audit Trail function is activated in the project.
Audit Trail Description	Optional static or dynamic descriptions for operator tag actions, that are saved in the Audit Trail database and visible in the Audit Trail Viewer. If Dynamic Description is selected, value before change can be included in the description by using {0}; value after change by using {1}. Only available if the Audit Trail function is activated in the project.

Static Description

Dynamic Description

Description	Start Value	End Value
Value changed from {0} to {1}	0	75
Limit exceeded - current value is {1}	76	100

OK Cancel

4.1.6 Adding Tags during Editing

Tags can be added directly when editing objects. When an object is selected, the tag association can be managed from the Tag/Security group in the Home or General ribbon tabs, or by right-clicking on the object and using the Mini Toolbar. In both cases, tags are added by clicking the **Add** button.


Note:

Tags added during editing will stay internal until connected to a controller on the tags configuration page.

Related information
Tag/Security Group
Mini Toolbar Options

4.1.7 Selecting Multiple Tags

Multiple rows of tags can be selected using the [Ctrl] or [Shift] keys. This makes it easy to, for example, delete a number of tags quickly.

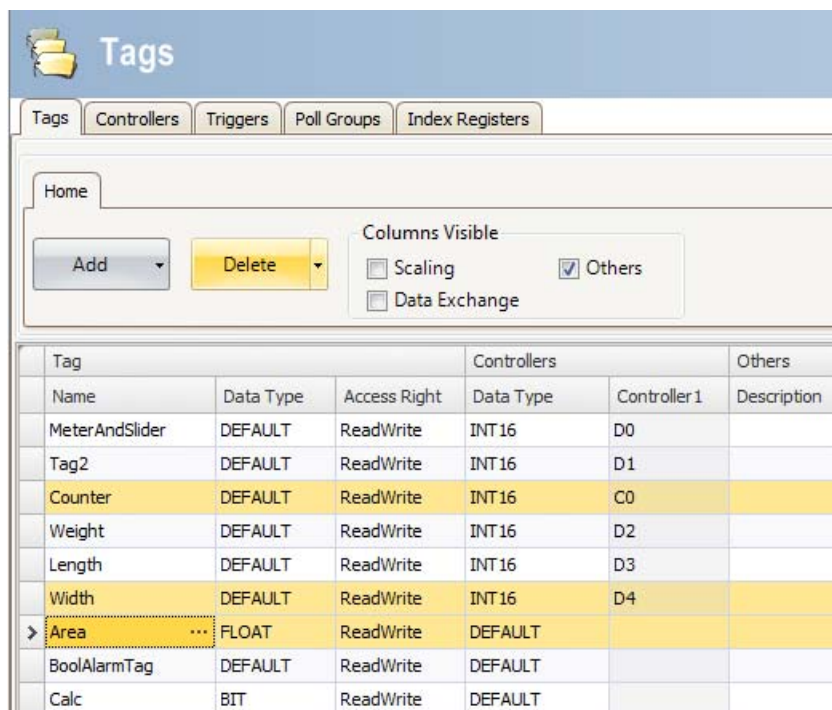

The screenshot shows the 'Tags' configuration page. At the top, there are tabs for 'Tags', 'Controllers', 'Triggers', 'Poll Groups', and 'Index Registers'. Below the tabs, there is a 'Home' section with 'Add' and 'Delete' buttons, and a 'Columns Visible' section with checkboxes for 'Scaling', 'Data Exchange', and 'Others' (which is checked). The main part of the page is a table with the following columns: Tag, Name, Data Type, Access Right, Controllers (Data Type, Controller 1), and Others (Description). Several rows are highlighted in yellow, indicating they are selected.

Tag	Name	Data Type	Access Right	Controllers (Data Type)	Controller 1	Others (Description)
	MeterAndSlider	DEFAULT	ReadWrite	INT 16	D0	
	Tag2	DEFAULT	ReadWrite	INT 16	D1	
	Counter	DEFAULT	ReadWrite	INT 16	C0	
	Weight	DEFAULT	ReadWrite	INT 16	D2	
	Length	DEFAULT	ReadWrite	INT 16	D3	
	Width	DEFAULT	ReadWrite	INT 16	D4	
	> Area ...	FLOAT	ReadWrite	DEFAULT		
	BoolAlarmTag	DEFAULT	ReadWrite	DEFAULT		
	Calc	BIT	ReadWrite	DEFAULT		

4.2 Tag Actions



One or multiple actions can be configured depending on a changed value of a tag. The Action column is displayed when the **Others** box is checked in the Tags configuration page.

Clicking ... in the Actions column for the selected tag brings up the Action properties window. First, a trigger is selected, then a condition is configured by clicking **Add** under Condition. Select a condition, enter a value and click **OK**.


Note:

Only integers are allowed for numeric values.

For **BOOL** and **STRING** types, only the operands == and != are allowed.

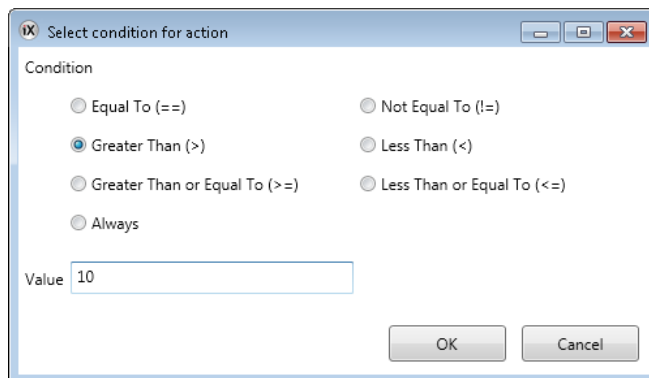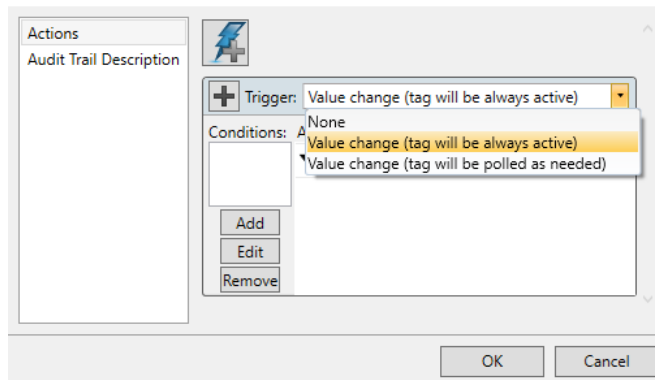

Then, configure actions to be executed when the condition is met.

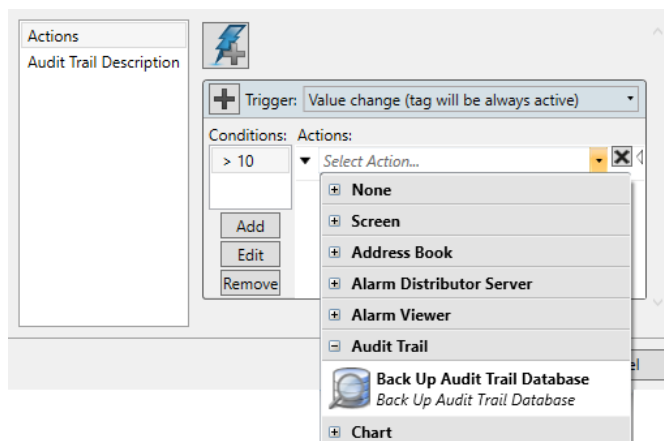

Note:

A tag action which alters its own tag, may cause unwanted behavior and should be avoided.

Related information

[Actions Ribbon Tab](#)

4.3 Internal Tags

Internal tags can be used to calculate values that need not be represented in the controller, for example information only for the operator. Internal tags are selected in the same way as an external controller tags. Any number of volatile user defined tags can be created.

Note:

Internal tag values will not be saved in the operator panel when the project is restarted, unless the **Non Volatile** option is used.

Unlike the regular drivers, it does not matter if internal tags are used in consecutive order or not.

4.4 System Tags

System tags are used to monitor or access variables from the system. System tags are handled as regular controller tags, i.e. can be used in screens, logged, included in scripts etc. The Date and Time system tags can be used when you want to use the controller clock in the panel project. The following system tags are available:

System tag group	System tag	Description
Communi- cation	Communication Error Message	Latest communication error message
	Communication Errors	Number of active communication errors on all controllers
	Remote Alarm Server Connection Errors	Number of remote alarm servers with connection errors, e.g. disconnected servers
Database	Database Error Active	Set to 1 when there is an active database error
	Database Error Message	Latest database error message
	Database Max Size Exceeded	Set to 1 when the database maximum size is exceeded
Date and Time	DateTime	Current date and time
	Day	Day component of current date
	Day of Week	Day of current week (1-7 where 1 is Sunday)
	Hour	Hour component of current time
	Minute	Minute component of current time
	Month	Month component of current date
	Second	Second component of current time
Year	Year component of current date	

System tag group	System tag	Description
Project	Current Screen Id	The ID of the current screen. The data type of this tag is int16 and it only has read access. This tag gets updated every time you open a screen, with the exception on popup screens. When opening a pop up screen the current screen id tag will not be updated. When entering a screen without a screen id the tag value of the current screen id will be set to -1. Note that 0 is a valid screen id.
	Current Screen Name	Name of the current screen
	Latest Loaded Recipe	Name of the latest loaded recipe
	New Screen Id	The ID of the new screen. The data type of this tag is int16 and it has read/write access. The tag is always active. When the new screen id tag changes value a screen jump is made to the screen with corresponding screen id. If no such screen exists a notification message will show. If the new screen contains configured screen instances (alias), the default instance is always displayed.
	Number of Disabled Alarms	Read the total number of disabled alarms
System	Project Name	Name of the current project
	Runtime Version	Runtime version of framework
	Screen Update Time	Screen update time (in ms)
	Available RAM	Amount of available RAM memory (in kB)
	Available Storage	Amount of available storage memory (in MB)
	Backlight Brightness Level	Backlight brightness level (in percent) When approaching 0% backlight, changes in brightness level may no longer be noticeable in the panel. Complete dimming (to 0%) is only possible to achieve with the marine panel types, such as iX T7AM and iX T15BM.
	CPU Load	Amount of used CPU capacity (in percent)
	CPU Load Core 1 ⁽²⁾	Amount of capacity used in CPU Core 1 (in percent)
	CPU Load Core 2 ⁽²⁾	Amount of capacity used in CPU Core 2 (in percent)
	CPU Load Core 3 ⁽²⁾	Amount of capacity used in CPU Core 3 (in percent)

System tag group	System tag	Description
	CPU Load Core 4 ⁽²⁾	Amount of capacity used in CPU Core 4 (in percent)
	Current User	The user name of the currently logged in user
	Debug Logging Enabled	Indicates if debug logging is enabled
	Digital Output #1 ⁽²⁾	Digital output
	Digital Output #2 ⁽²⁾	Digital output
	Flash Memory EOL Info ⁽²⁾	Information about the flash memory end of life. The three possible values are Normal , Warning - Consumed 80% of reserved block and Urgent .
	Flash Memory Life Time Used ⁽²⁾	The usage of the device life time (in percent)
	Internal Temperature ⁽¹⁾	Internal panel temperature (in °C)
	Physical RAM	RAM memory installed (in kB)
	Serial Number ⁽²⁾	Serial number of the panel
	Storage Memory	Storage memory installed in computer (in MB)
	Used RAM	Amount of used RAM memory (in kB)
	Used RAM Percent	Amount of used RAM memory (in percent of physical)
	Used Storage	Amount of used storage memory (in MB)
	Used Storage Percent	Amount of used storage memory (in percent of all storage)
	Windows CE Image Version	Windows CE Image Version
	Power LED Blink Frequency	Blink frequency of the power LED (1-10 Hz, 0 = always on)
	Power LED Blue Intensity	Intensity of the blue power LED (0-100)
	Power LED Red Intensity	Intensity of the red power LED (0-100)
	Power LED Green Intensity ⁽³⁾	Intensity of the green power LED (0-100)
	Max Screen Cache memory load	Amount of memory available to the screen cache (in percent of the physical RAM memory available (50-90))

⁽¹⁾ Not applicable on X2 base and iX TxC.

⁽²⁾ Not applicable on X2 base, X2 pro, PC, or X2 control.

⁽³⁾ Not applicable on X2 base, X2 pro.

System tags are indicated by blue color in the tag list.

System tags are added by clicking the **Add Tag/Add System Tag** button in the tags configuration page.

4.5 Array Tags

An array tag is a tag containing multiple values.

If the array size is >1 , the tag is considered as an array tag.


Note:

Array tags are only supported by controllers which use addresses that can be numerically increased.

4.5.1 Array Tag Set Up

Clicking the **Add** button adds a tag to the list. Make settings for each added tag. When predefined values are available, these can be selected by clicking the arrow at the right of the table cell.

Clicking the **Data Type** cell in the **Controller** column brings up the data type configuration page. An array tag is configured by setting the array size to a value >1 .

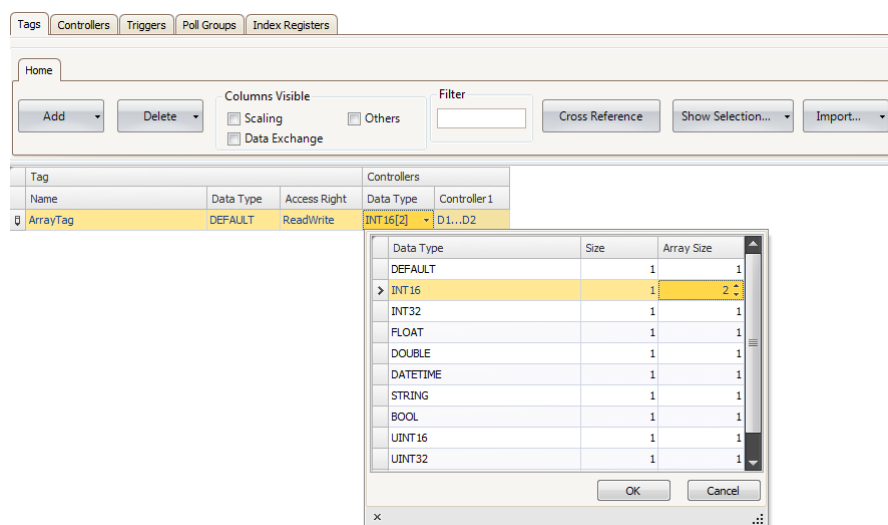

Data type	Description
Data Type	Selection of presentation format.
Size	Set the array size.
Array Size	If the array size is >1 , the tag is considered as an array tag.


Limitation

When using controllers with named variables and accessing individual bits with the syntax `VariableName.BitNo`, array tags of data type `BOOL` with bit addressing, are only supported for 16-bits tags.

Related information
Tags
Chart Object
Data Exchange

4.6 Cross Reference

The Cross Reference tool provides an overview of where a specific tag is used in the current project.

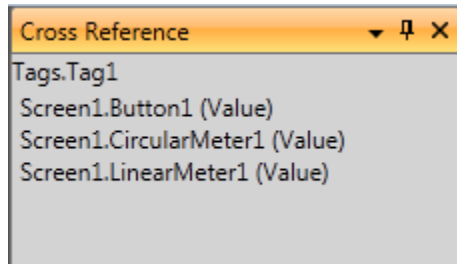


All occurrences of the tag in the current project are listed. Double-clicking on an occurrence in the list automatically brings you to the object or function where the tag is used.

The cross reference tool can be accessed by clicking the cross reference button on the **Tags** tab or on the View ribbon. It can also be accessed from the context menu.

4.7 Triggers


Triggers are used to determine when data exchange is to be performed; based on tag or a certain interval.

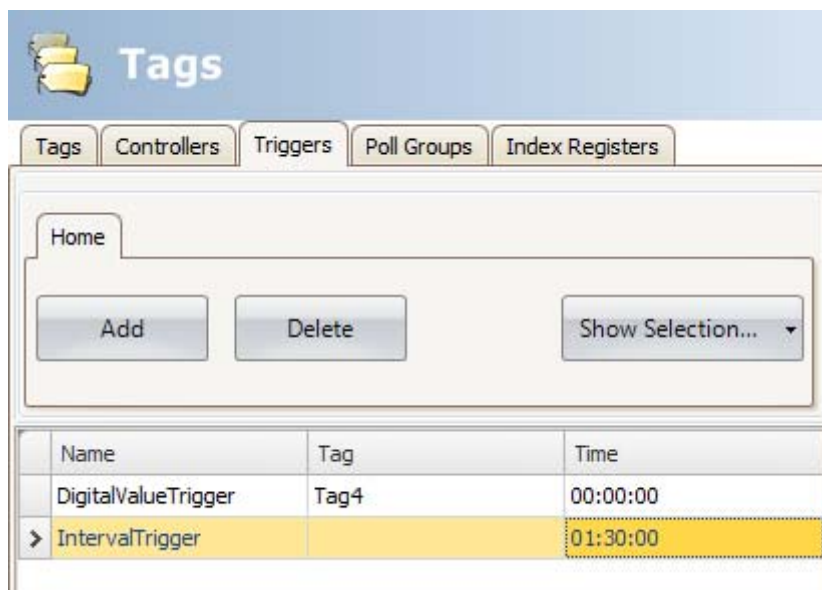

Parameter	Description
Name	Symbolic name. The name can be any alphanumeric string, beginning with a letter (a-z, A-Z).
Tag	Selection of a tag, which when changed to a value other than 0, triggers data exchange
Time	Time interval between data exchange operations in the format -d.HH:MM:SS.ff (days.hours:minutes:seconds.fractions of a second). The minus sign is optional and indicates a negative time interval.

4.8 Poll Groups

Poll groups allow grouping tags for polling at 5 different intervals. The groups defined on the Poll Groups tab are available for selection from the Tags tab after checking the **Others** box.

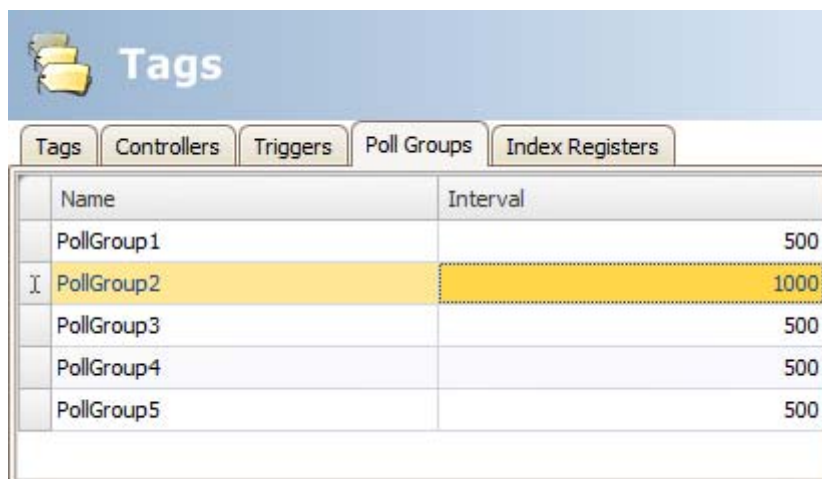

Parameter	Description
Name	Symbolic name. The name can be any alphanumeric string, beginning with a letter (a-z, A-Z).
Interval	Polling interval in ms

Note:

The following operator panels can be set to 25 ms: BoX2 pro, BoX2 extreme and BoX2 pro-SC.

This may impact the performance of the operator panel.


Conversion to other operator panel types will change to lowest allowed value for that target.

4.9 Station Handling

For some controllers, it is possible for the operator to define from which controller station to read or write values. The station number is given as a prefix to the controller address.

The station number for each controller is defined on the Controllers tab of the Tags configuration page, by clicking the **Settings** button.


The default station is set on the **Settings** tab, and the stations are defined on the **Stations** tab.

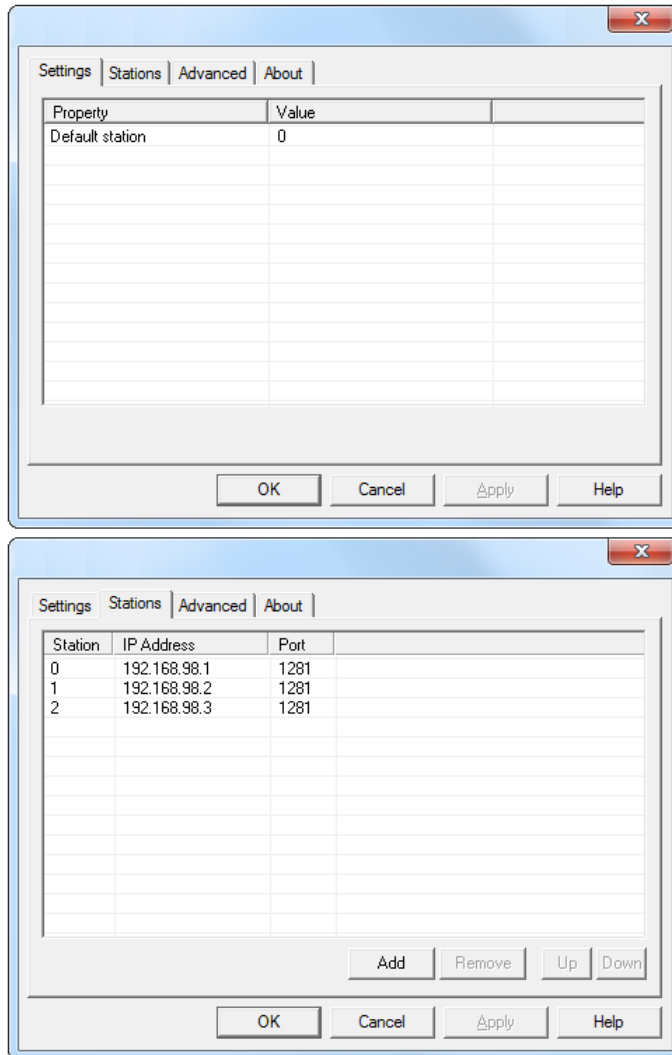

In this example, from an Ethernet driver, Station 0 is the default station.

The default station is the station addressed without using a prefix. The other stations can be addressed either as a fixed number or as an index register. With fixed station numbers, an object is always connected to the same controller address, and only the value of this controller address can be used in the object.

When addressing for example D10 in station 2, the following syntax is used:
2:D10

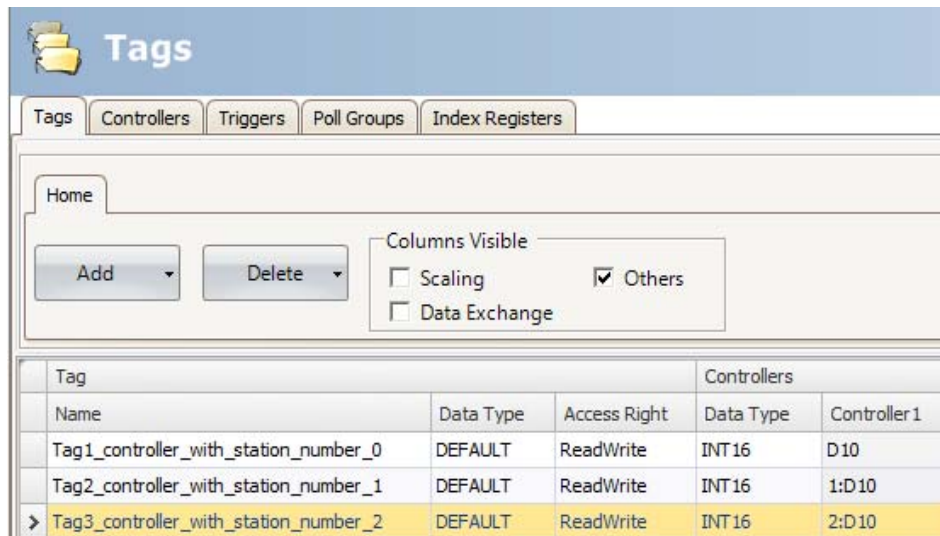

The screenshot shows the 'Tags' configuration page with the following table:


Tag			Controllers	
Name	Data Type	Access Right	Data Type	Controller 1
Tag1_controller_with_station_number_0	DEFAULT	ReadWrite	INT 16	D10
Tag2_controller_with_station_number_1	DEFAULT	ReadWrite	INT 16	1:D10
Tag3_controller_with_station_number_2	DEFAULT	ReadWrite	INT 16	2:D10

Related information

[Using Index Registers for Station Handling](#)

4.10 Index Registers

With index addressing, it is possible for the operator to select from which tag an object is to collect the shown value. Without index addressing an object is always connected to the same controller address, and only the value of this address can be shown in the object.

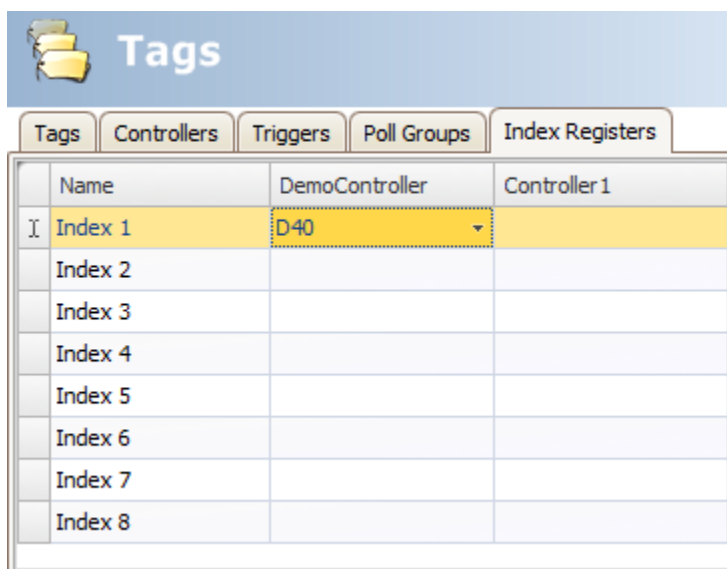

The screenshot shows the 'Index Registers' tab with the following table:

Name	DemoController	Controller 1
Index 1	D40	
Index 2		
Index 3		
Index 4		
Index 5		
Index 6		
Index 7		
Index 8		

Which tags to use for indexing are defined on the Index Registers tab of the tags configuration page. Up to eight different index registers can be used for each controller, and each index register can be used for more than one object. Index registers can be connected to any tag in the global tag list, but the tag has to be selected for each controller.

Tags are connected to index registers on the Tags tab.

In general index addressing can be formulated as:

Display value = the content in tag (the object's address + the content in the index register)

If the content in the index register is 2, and the address of the tag specified in the object is 100, the value shown in the object will be collected from address 102.

If the value in the index register is changed to 3, the value in the object will be collected from address 103 instead.

4.10.1 Index Addressing Example

Using index registers may be convenient when for example controlling torque and speed of a number of connected motors from the same screen, without having to configure and display maneuverable objects for each motor.

The following example is based upon the presumption of three motors, and the torque and speed of each motor is held in a different tag:

Motor 1		Motor 2		Motor 3	
Torque	Speed	Torque	Speed	Torque	Speed
D11	D21	D12	D22	D13	D23

1. Create a project where the Demo Controller is selected as controller.

- Add tags and labels and connect them to Demo Controller tags according to below:

The screenshot shows the 'Tags' configuration window with the 'Tags' tab selected. The window includes a 'Home' section with 'Add' and 'Delete' buttons, and a 'Columns Visible' section with checkboxes for 'Scaling', 'Data Exchange', and 'Others'. Below is a table listing tags and their connections to controllers.

Tag			Controllers	
Name	Data Type	Access Right	Data Type	DemoController ▲
MotorIndex	DEFAULT	ReadWrite	INT 16	D0
Torque	DEFAULT	ReadWrite	INT 16	D10
TorqueMotor 1	DEFAULT	ReadWrite	INT 16	D11
TorqueMotor 2	DEFAULT	ReadWrite	INT 16	D12
TorqueMotor 3	DEFAULT	ReadWrite	INT 16	D13
Speed	DEFAULT	ReadWrite	INT 16	D20
SpeedMotor 1	DEFAULT	ReadWrite	INT 16	D21
SpeedMotor 2	DEFAULT	ReadWrite	INT 16	D22
> SpeedMotor 3 ...	DEFAULT	ReadWrite	INT 16	D23

- Select the Index Registers tab and connect **Index 1** to the **MotorIndex** tag (D0).


The screenshot shows the 'Tags' configuration window with the 'Index Registers' tab selected. The window displays a table for configuring index registers.

Name	DemoController
> Index 1	MotorIndex
Index 2	
Index 3	
Index 4	
Index 5	
Index 6	
Index 7	
Index 8	

4. Select the Tags tab again and check the **Others** box in order to display the Index Registers column.
5. Connect the **Torque** and **Speed** tags to Index Register 1.


Tags											
Home											
Columns Visible											
<input type="checkbox"/> Scaling		<input checked="" type="checkbox"/> Others		Filter		Cross Reference		Show Selection...		Import...	
Tag											
Name	Data Type	Access Right	Data Type	DemoController	Description	Poll Group	Always Active	Non-volatile	Initial Value	Index Register	Action
MotorIndex	DEFAULT	ReadWrite	INT 16	D0		PollGroup1	<input type="checkbox"/>	<input type="checkbox"/>		None	
Torque	DEFAULT	ReadWrite	INT 16	D10		PollGroup1	<input type="checkbox"/>	<input type="checkbox"/>		Index 1	
TorqueMotor1	DEFAULT	ReadWrite	INT 16	D11		PollGroup1	<input type="checkbox"/>	<input type="checkbox"/>		None	
TorqueMotor2	DEFAULT	ReadWrite	INT 16	D12		PollGroup1	<input type="checkbox"/>	<input type="checkbox"/>		None	
TorqueMotor3	DEFAULT	ReadWrite	INT 16	D13		PollGroup1	<input type="checkbox"/>	<input type="checkbox"/>		None	
Speed	DEFAULT	ReadWrite	INT 16	D20		PollGroup1	<input type="checkbox"/>	<input type="checkbox"/>		Index 1	
SpeedMotor1	DEFAULT	ReadWrite	INT 16	D21		PollGroup1	<input type="checkbox"/>	<input type="checkbox"/>		None	
SpeedMotor2	DEFAULT	ReadWrite	INT 16	D22		PollGroup1	<input type="checkbox"/>	<input type="checkbox"/>		None	
SpeedMotor3	DEFAULT	ReadWrite	INT 16	D23		PollGroup1	<input type="checkbox"/>	<input type="checkbox"/>		None	

6. Now, create a ComboBox object for selection of motor, and two analog numeric objects that will display (or set) the Torque and Speed tags for each motor. Also add explaining labels.
7. Click **Configure Texts** for the ComboBox object, connect the object to the MotorIndex tag, and add three texts and values according to below.

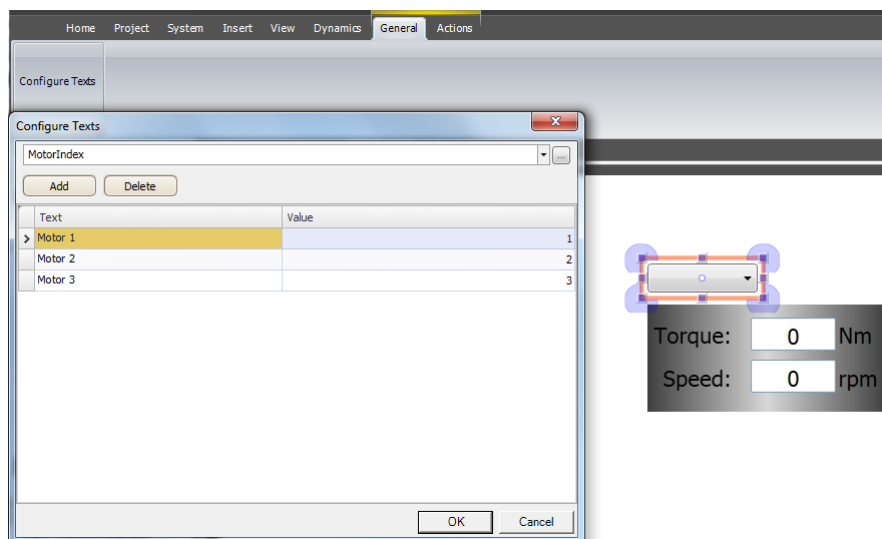

8. Connect the analog numeric objects to the Torque and Speed tags.
9. In order to test that the index addressing works even though no controller is connected, add maneuverable objects, e.g. sliders, and connect them to the D11–D13 and D21–D23 tags.

10. Run the project, enter values for the objects connected to D11–D13 and D21–D23, and select the different motors using the ComboBox.

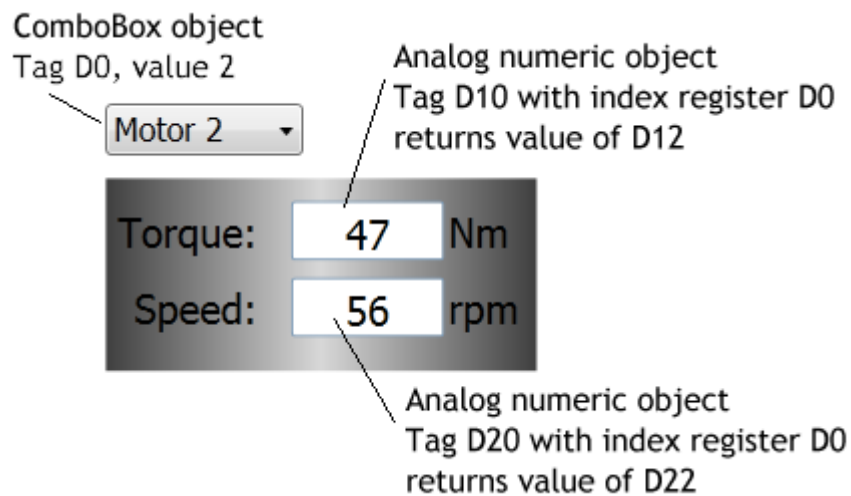

4.10.2 Using Index Registers for Station Handling

For some controllers, it is possible for the operator to define from which controller station to read or write values. The station number is given as a prefix to the controller address.

This is stated either as a fixed number or as an index register. The default station is the station addressed without using a prefix. The other stations can be addressed either as a fixed number or as an index register. With fixed station numbers, an object is always connected to the same controller address, and only the value of this controller address can be used in the object.


Index addressing reduces the number of tags needed as well as the number of objects to be configured in the iX Developer project when showing values from / writing to multiple controller stations.

The syntax when using index registers for station handling is for example *I1:D10*.

Tag			Controllers	
Name	Data Type	Access Right	Data Type	Controller 1
Tag1_controller_with_station_number_0	DEFAULT	ReadWrite	INT16	D10
Tag2_controller_with_station_number_1	DEFAULT	ReadWrite	INT16	1:D10
Tag3_controller_with_station_number_2	DEFAULT	ReadWrite	INT16	2:D10
> Tag_with_indexed_station	DEFAULT	ReadWrite	INT16	I1:D10
Tag_index_I1	DEFAULT	ReadWrite	INT16	D0

Name	Controller 1
> Index 1	Tag_index_I1
Index 2	
Index 3	
Index 4	
Index 5	
Index 6	
Index 7	
Index 8	

This means that the value in the controller address connected to Index 1 will point out which controller station number to read or write values.

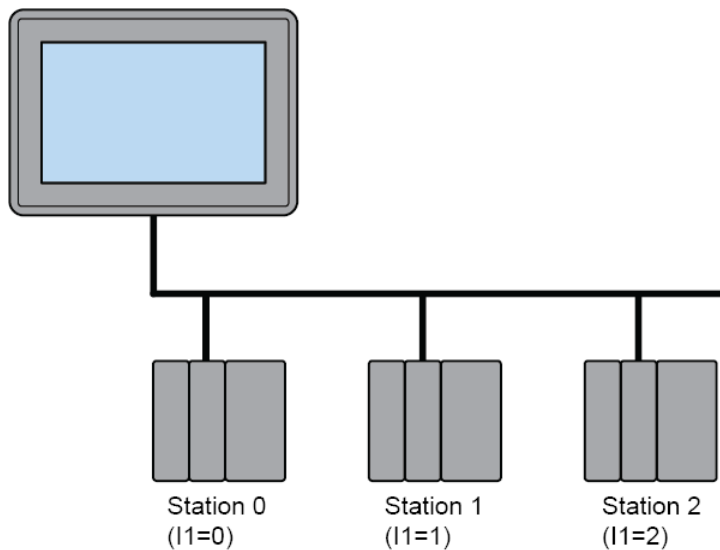

Related information

[Station Handling](#)

4.11 Expressions

The Expressions functionality is used when connecting an object to a tag and the purpose is not to use the tag value as it is. Expressions enable the user to e.g. extract a bit from a tag, add a dynamic offset or gain, and then to use this value for a specific object.

Note:

Static offset and gain for a tag is set in the tags configuration page.


The same expression can be connected to more than one object in the project.

4.11.1 Definition

An expression is a one line return statement in C#. The default expression code is "value".

4.11.2 Using Expressions

Right-click on an object and then click the button ... next to **Select Tag**. The Expressions dialog is displayed.

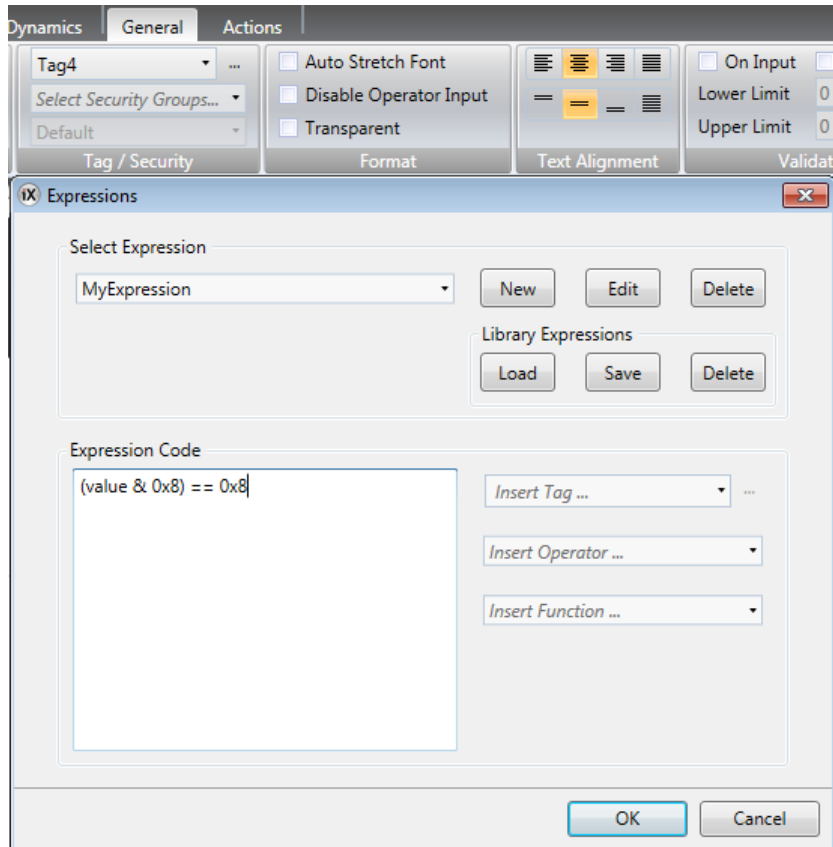

Click **New** to create an expression and expression group (optional). Existing expressions are available from the **Select Expression** drop-down menu. Use the **Edit** and **Delete** buttons to edit or delete existing expressions.

Select among the tags, operators and functions to insert. It is also possible to type the expression manually, but without assistance from IntelliSense (auto completion). If an expression is not valid, an error message is given when validating the project. The expression is run, when the value of the original tag that is connected to the object is changed.

Expressions added to an object in a project are available only in the current project. If an object with a local expression is saved into the Component Library, the object can be used in an other project, but the expression is not included. In order to reuse expressions, they have to be saved in the expressions library.

Related information

[LibraryExpressions](#)

4.11.3 Library Expressions

Examples of expressions (how to extract bits from an int) are included when installing iX Developer and can be added to the project by clicking **Load**.

Expressions can be reused in other projects by saving them in the expression library. Select the expression in the drop-down list and click **Save**. The expression is saved to a file in the PC. To load the expression in another project, click **Load**. A

selection dialog is displayed. Select the expression in the drop-down list and click **OK**.

If you have saved expressions to the library that you want to remove, click **Delete** and select among the saved expressions in a dialog. Expressions included when installing iX Developer are not listed, since these cannot be deleted.

4.11.4 Limitations

An expression is executed only on *read*, i.e. when the value is changed in the controller.

When writing a value (from e.g. an analog numeric tag), the expression is not executed.

If another tag than the original tag is used in the expression, the expression is not triggered on its value change.

If an expression that is used in more than one location is either renamed or deleted, references are not updated. A build error is given.

Expressions can be used for all data connections except for

- actions
- the Property grid
- recipe item tags
- current language tag in Multiple languages configuration
- trigger tags
- index tags
- scheduler tags
- dynamic text for alarm items

Expressions use explicit bool comparison.

Example:

Do not use: value; Globals.Tags.Tag1.Value

Use: value != 0; Globals.Tags.Tag1.Value == 1

4.12 Tag Expressions

Tag expressions are applied before reading or writing a tag value. Tag expressions should only be used on tags that have an associated address on a controller.

There are two different tag expressions, referred to as read expressions and write expressions. A read expression is applied to a tag when the tag value is changed from the controller. A write expression is applied to a tag when the tag value is changed from the user interface or script. When both a read expression and a write expression are assigned to a tag it is strongly recommended that the read expression is the inverse of the write expression and vice versa.

When using a write expression make sure the controller's data type matches any possible result from the expression. For example, the data type float should be used if the expression would multiply an integer value with 0.1.

4.13 Data Exchange


Data exchange between different controllers is supported; also between controllers of different brands. The data exchange can be performed when a digital tag is set, or at a certain time interval. Data exchange can be selected for individual tags, array tags or for the complete range of tags.

Note:

The data exchange function is isolated from general tag/controller settings. For example, a tag assigned read access only for the operator, may still be read and written by the data exchange function.

Follow the steps below to set up data exchange with three different controllers involved:

1. Select the **Controllers** tab of the tags configuration page and enter short names for the controllers in the ID column, and make sure that all controllers are active.

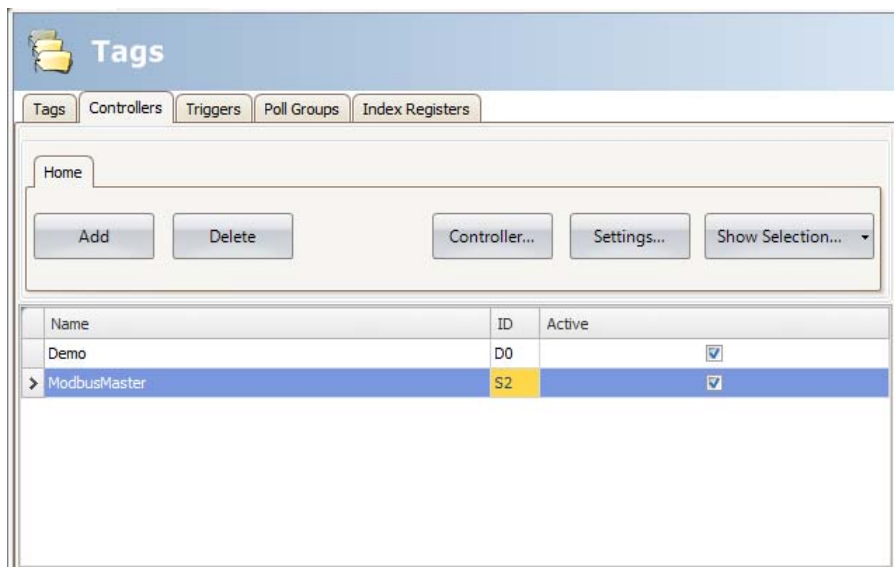

2. Select the **Tags** tab and check **Data Exchange** to display the Direction and When columns.

3. Select an address that is represented in all of the controllers.

The screenshot shows the 'Tags' application interface. The 'Tags' tab is selected. The 'Home' section contains 'Add' and 'Delete' buttons, 'Columns Visible' options (Scaling, Data Exchange), and a 'Filter' field. The main table lists tags with columns for Name, Data Type, Access Right, Data Type, DemoCo..., Siemens..., Mitsubishi..., Direction, and When. The 'Width' tag is highlighted in yellow, and its 'Direction' column contains an ellipsis (...).

Tag	Name	Data Type	Access Right	Data Type	DemoCo...	Siemens...	Mitsubishi...	Direction	When
Tag1	Tag1	DEFAULT	ReadWrite	INT 16	D0	V10			Value Change
Tag2	Tag2	DEFAULT	ReadWrite	INT 16	D1	V11	D3		Value Change
Weight	Weight	DEFAULT	ReadWrite	INT 16	D10	V12			Value Change
Length	Length	DEFAULT	ReadWrite	INT 16	D11	V13			Value Change
>	Width	DEFAULT	ReadWrite	INT 16	D12	V14	D4	...	Value Change
	SystemTagDateTime	DEFAULT	Read	DATETIME					Value Change
	Tag5	DEFAULT	ReadWrite	INT 16		V20	D5		Value Change
	Tag6	DEFAULT	ReadWrite	INT 16		V22	D6		Value Change
	Tag7	DEFAULT	ReadWrite	DEFAULT					Value Change
	SystemTagAvailab...	DEFAULT	Read	INT32					Value Change
	Tag4	DEFAULT	ReadWrite	BIT	M0				Value Change
	D40	DEFAULT	ReadWrite	INT 16	D40				Value Change
	Counter	DEFAULT	ReadWrite	INT 16	C0				Value Change

If an array tag is selected, the complete address range corresponding to the array size will be exchanged:

The screenshot shows the 'Tags' application interface with the 'ArrayTag' selected. The 'Direction' column for 'ArrayTag' contains 'DemoController1 -> DemoController2'.

Tag	Name	Data Type	Access Right	Data Type	DemoController1	DemoController2	Direction	When
>	ArrayTag	DEFAULT	ReadWrite	INT16[5]	D10...D14	D20...D24	DemoController1 -> DemoController2	Value Change


4. Click ... in the Direction column to set up the direction of the data exchange.

The screenshot shows a dialog box for setting the direction of data exchange. It has columns for ID, Name, From, and To. The 'CB' row is selected, and the 'To' checkbox is checked.

ID	Name	From	To
DC	DemoController	<input checked="" type="checkbox"/>	<input type="checkbox"/>
CA	ControllerA	<input type="checkbox"/>	<input checked="" type="checkbox"/>
CB	ControllerB	<input type="checkbox"/>	<input checked="" type="checkbox"/>

OK Cancel

5. Add a trigger tag on the Triggers tab with time interval for data exchange or use a tag, which when greater than 0, will trigger the data exchange. Alternatively, set up a trigger that includes both value change and a time interval.

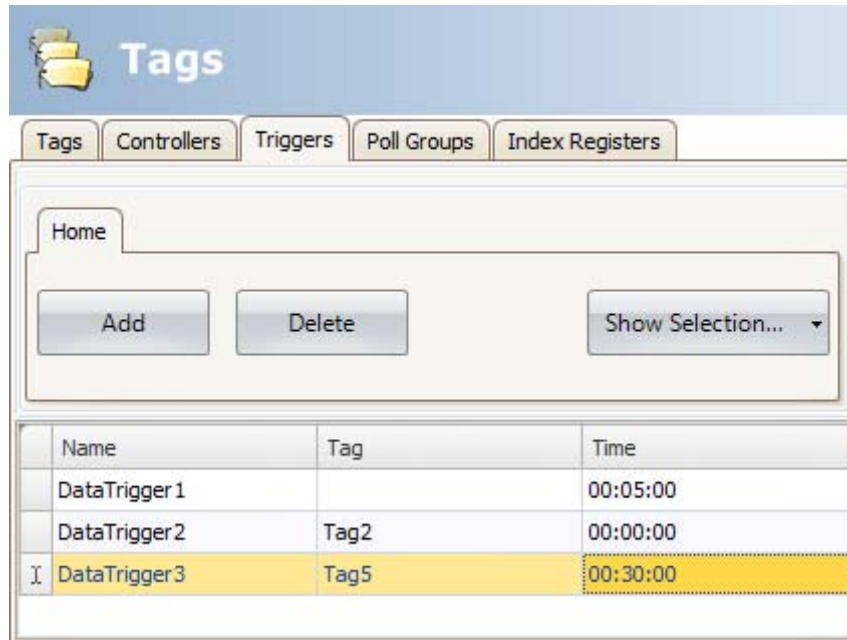

6. Return to the Tags tab and select which trigger to use.

Tag			Controllers			Data Exchange	
Name	Data Type	Access Right	DemoController	ControllerA	ControllerB	Direction	When
Tag1	INT16	ReadWrite	D0				Value Change
Counter	INT16	ReadWrite	C0				Value Change
Tag2	INT16	ReadWrite	D1				Value Change
Weight	INT16	ReadWrite	D10	D20	40000	DC -> CA, CB	DataTrigger2
Length	INT16	ReadWrite	D11	D21	40001		Value Change
Width	INT16	ReadWrite	D12	D22	40002		Value Change
SystemTagDateTime	DATETIME	Read					Value Change
Tag5	DEFAULT	ReadWrite					Value Change
Tag6	DEFAULT	ReadWrite					Value Change
Tag7	DEFAULT	ReadWrite					Value Change
SystemTagAvailableSt...	INT32	Read					Value Change
D40	DEFAULT	ReadWrite					Value Change

Note:

If the poll group contains many tag values that change frequently, the time required for them to be handled could exceed the set poll time. This could lead to problems updating the data exchange between the controllers. Set the Poll Group Interval to a higher value or use a time trigger to control the data exchange operations.

Related information

[Triggers](#)

4.14 Importing and Exporting Tags

Tags can be imported to and exported from an iX Developer project, to, for example, be edited in Excel or a text editor, or to be transferred to another project. The complete tag list may be imported and exported, or the actions can be based on connected controllers.

The import function also allows selecting individual tags for import.

4.14.1 Handling Columns

The import function allows skipping columns, or binding columns in the import file to any column in the Tags configuration page.

The **Name** and **Data Type** columns must always be bound.

A column may only be bound once.


4.14.2 Saving the Import Configuration

For repetitive import actions the import configuration, e.g. how columns are bound and from which row to start the import, can be saved and reused. The import configuration is saved by clicking the **Save mapping as import module** button prior to performing the import. Next time the Import Tags dialog is opened, the configuration is available from the **Import module** drop-down list. Saving import configurations is valid only for files in text or Excel format.


4.14.3 Tag Import Example

If the controller in the project is changed to a system with other names for the tags used, these must be changed:


1. Click on **Tags** in the Project Explorer.
2. Click on the arrow to the right of the **Import/Export** button to display the available options of import and export operations.

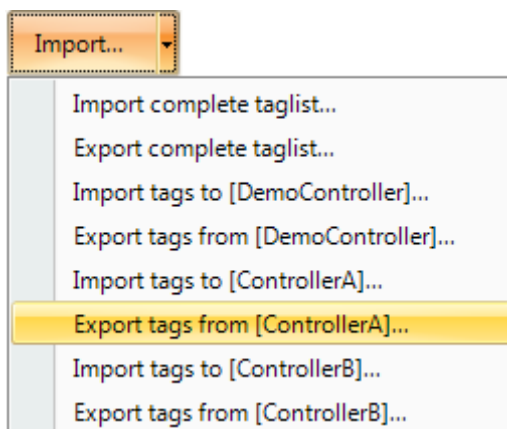


3. Select **Export tags** from the desired controller to export the list to a text file or an Excel sheet. Enter a file name and browse to a location. Define how the columns to separate and which columns to export. Use the arrows if you want to change position of the columns.

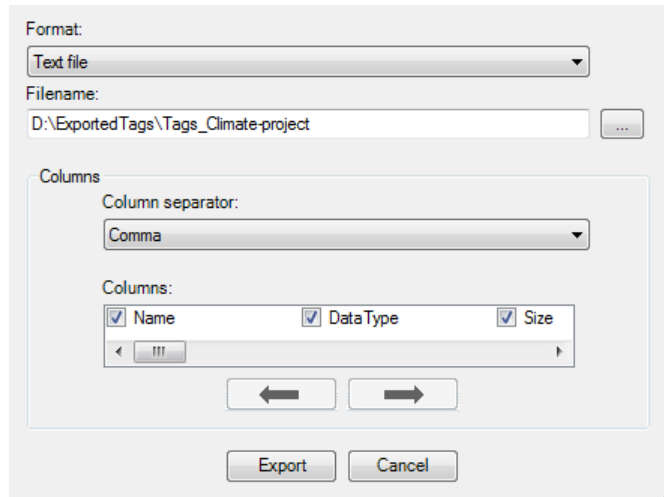

4. Click **Export**.
5. Open the text file in a text editor or a spread sheet application.

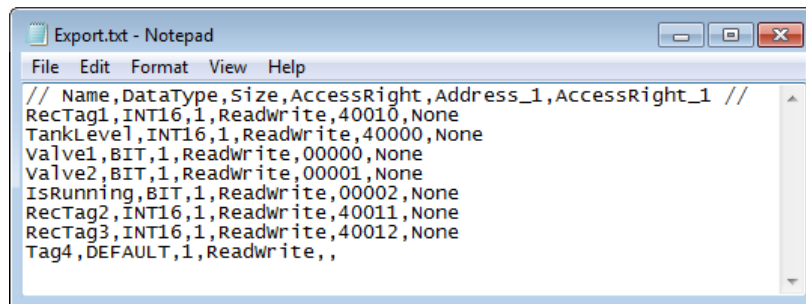

6. Change all current tags to corresponding tags used in the new controller, and save the file.

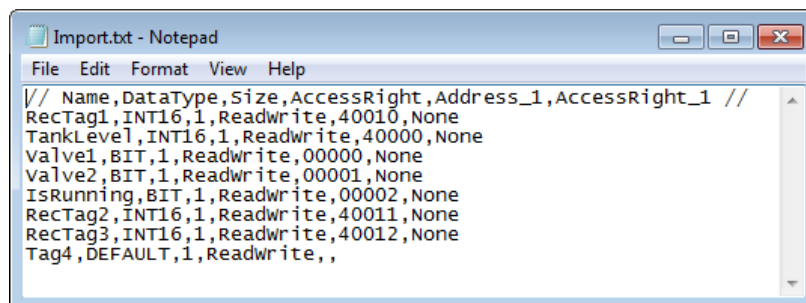

- Select **Import tags** to the desired controller and browse to the updated file. If desired, select a row from which to start the import. It is possible to rebind columns before importing to the project, and to exclude columns. These settings can be saved by clicking the **Save mapping as import module** button, and will then be made available for selection from the Import module drop-down list at next import.

Import module: Filename: ...

More...

Column separator: Import start at row:

Bind importfile column to tag column:

Name	DataType	Size	AccessRight	Address_1	Skip	Skip
0 Name						
1 Tag1	INT16	1	ReadWrite			
2 Tag2	INT16	1	ReadWrite			
3 Weight	INT16	1	ReadWrite			
4 Length	INT16	1	ReadWrite			
5 Width	INT16	1	ReadWrite			
6 Tag5	INT16	1	ReadWrite			
7 Tag6	INT16	1	ReadWrite			

Importfile columns preview:

Name	DataType	Size	AccessRight	Address_1	Description
Skip					
Name					
DataType					
Size					
AccessRight					
Offset					
Gain					
PollGroupName					
IndexRegisterNumber					
LogToAuditTrail					
AlwaysActive					
NonVolatile					
InitialValue					
Address_1					
AccessRight_1					
Description					

Save mapping as import module Refresh Import Cancel


- Click **Import**. It is now possible to deselect import of some tags.

All Items

- Weight
- Length
- Width
- Tag5
- Tag6

OK Cancel

9. In case there are name conflicts, these can be handled by changing the name, overwriting, merging or skipping conflicting items. The actions taken are saved to a log file for future reference.

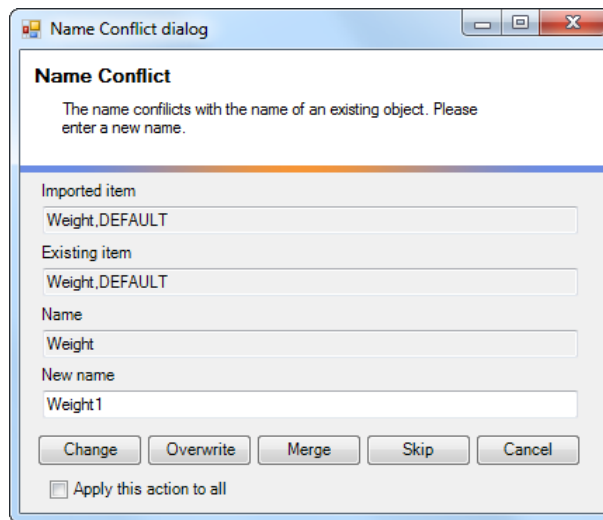

Note:

If you select **Overwrite**, all settings for the existing tag will be overwritten. If you select **Merge** between empty data to data with value, the data with value is kept, to avoid tags with no address.

For example: Tag1 with address C1, merging a CSV or TXT file with Tag1 with an empty address, results in a Tag1 with address C1. Tag2 with an empty address, merging a CSV or TXT file with Tag2 and address C2, results in a Tag2 with address C2.

The imported tags are now added to the current project.

Related information
Basic Settings

4.14.4 Importing Tags from the Command Line

Tags can also be added to the current iX Developer project using a command line switch, by entering the following:

```
[Executable file] "[Project location]\[Project name].neoproj" /ImportTags="[Tag file location]\Tag file"
```

In this case, no application window is displayed, as long as the import is successful.

To open the project named Test1 with the tag file VarFile.txt in the directory C:\MyProjects, run iX Developer from the command line with the following arguments:

```
NeoIDE.exe "C:\MyProjects\Test1\Test1.neoproj" /ImportTags="C:\MyProjects\VarFile.txt"
```

Removing Existing Controller Tags at Import

The */ImportTags* command line switch may be used together with the switch */RemoveTagsNotInFile*. This will remove all existing tags in the controller that are not included in the import file.

4.15 Filtering Tags

A selection of tags can be displayed using the Filter Builder. Several conditions can be used, and the different values/operators that can be used for making conditions are displayed when clicking on the condition building blocks.

Operands and operator nodes are context sensitive. Name strings are not case sensitive. Values in the filter builder are saved individually for each function during an edit session. A filter is built as a logical expression tree. A filter typically has operations on individual column values as leaf nodes and logical operators serve as main nodes.

Perform the following steps to create a filter:

1. Click on **Tags** in the Project Explorer.
The tag list is displayed in the desktop area.
2. Select **Show Selection** from the Show Selection/Show All button to build a filter.

It is also possible to filter tags depending on tag name by typing in the **Filter** box. The filtering affects the tags list directly as letters are entered in the box.

The screenshot shows the Filter Builder interface. At the top, there are buttons for 'Add' and 'Delete', and a 'Filter' input box containing the text 'te'. Below the buttons are checkboxes for 'Columns Visible' with options 'Scaling', 'Data Exchange', and 'Others'. Below this is a table of tags:

Tag			Controllers
Name	Data Type	Access Right	DemoController
SystemTagDateTime	DATETIME	Read	
SystemTagAvailableStorage	INT32	Read	
Counter	INT16	ReadWrite	C0

Only tags including "te" in their names are displayed

x [Name] Like '%te%'

The filter indication when having entered "te" in the Filter box

Related information
Filtering Items

4.16 Tag Format

The following tag formats (data types) are available in the dialog for a tag, provided that the selected driver or OPC server supports the tag format.

Format	Data type	Range
-	DEFAULT	Treated as INT16
Bit	BIT	0 and 1
Bit	BOOL	Values can be "false" (0) or "true" (1) ⁽¹⁾
Signed 16-bit	INT16	-32,768 - +32,767
Unsigned 16-bit	UINT16	0 - +65,535
Signed 32-bit	INT32	-2,147,483,648 - +2,147,483,647 ⁽²⁾
Unsigned 32-bit	UINT32	0 - +4,294,967,295 ⁽²⁾
Float with exponent, 64-bit	DOUBLE	1.7×10^{308} ⁽¹⁾
Float with exponent, 32-bit	FLOAT	$\pm 3.4 \times 10^{38}$ ⁽¹⁾
7 x Signed 16-bit	DATETIME	An Analog Numeric object can present the time format ⁽¹⁾ Syntax ⁽³⁾ : <yyyy-MM-dd hh:mm:ss> 7 consecutive registers are used to store a time: Dx , seconds, 0-59 Dx+1 , minutes, 0-59 Dx+2 , hours, 0-23 Dx+3 , day, 1-31 Dx+4 , month, 1-12 Dx+5 , year, 100-9999 Dx+6 , weekday, 1-7
String	STRING	Storing character strings in tags. For this data type, size can be selected.

⁽¹⁾Controller representation for this type is dependent on the driver software.

⁽²⁾Regarding resolution of values in 32-bit format: both iX Developer and the operator panel can handle up to six decimal digits of an integer 32-bit value. Remaining digits will be truncated or changed into zeros.

⁽³⁾yyyy=year, MM=month, dd=date, hh=hour, mm=minute, ss=second.

For use in script code, the following table shows the type representation in C#. This is used when there is a need to do a type casting, for example in calculations that are using overloaded operators.

C# type	Data type	Description
-	DEFAULT	Treated as INT16
uint	BIT	C# does not have a "bit" type. In the controller this is a bit.
bool	BOOL	C# bool type that can have the values "false" (0) and "true" (1)
int	INT16	16 bit, -32,768 - +32,767
uint	UINT16	16 bit, 0 - +65,535

C# type	Data type	Description
int	INT32	32 bit, -2,147,483,648 - +2,147,483,647
uint	UINT32	32 bit, 0 - +4,294,967,295
float	FLOAT	32 bit, $\pm 3.4 \times 10^{38}$
double	DOUBLE	64 bit, $\pm 1.7 \times 10^{308}$
DateTime	DATETIME	7 elements are used to store a time
string	STRING	Storing character strings in tags

Related information
Script


4.17 Aliases

An alias should be treated as a property of a screen and can act as a stand-in for a tag. The alias can be used to reference a tag wherever that tag can be referenced directly. An exception to this are foreground and background screens, where tags can be used but aliases not. When used, iX Developer will act the same as if the original tag had been used. Each screen using aliases can be configured with a different instance with different tag references.

Using aliases will enable reuse of screens without having to create a new duplicated screen.

4.17.1 Creating Aliases

Aliases are handled by clicking **Aliases** on the desktop view mode tab.

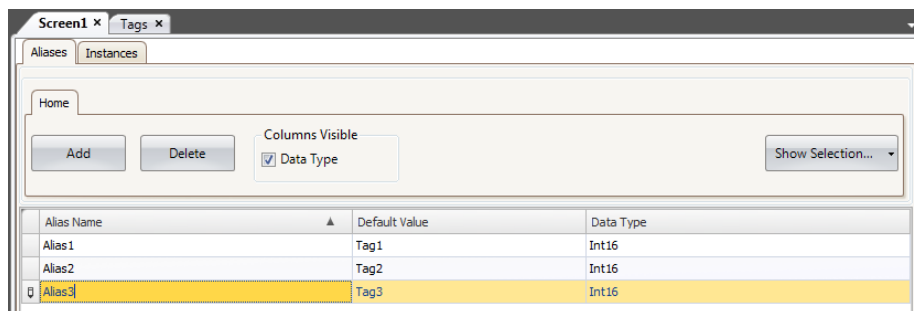

Clicking the **Add** button adds an alias to the list. Make settings for each added alias. When predefined values are available, these can be selected by clicking the arrow at the right of the table cell.

Basic Settings

Enter **Alias name** and **Default value** for the alias. If no default value is entered, the alias will be treated as a local screen variable.

Parameter	Description
Alias Name	Symbolic name. The name can be any alphanumeric string, beginning with a letter (a-z, A-Z).
Default Value	Selection of tags to create aliases of. If no tag is selected the alias will be treated as a local screen variable. The default value will be the default value for the alias in the created instances. It will also be the reference for the default instance. See <i>Instances</i> .
Data Type	Selection of data type. This setting is enabled by first clicking the Data Type check box. The data type will by default reflect the data type of the selected Default Value.


4.17.2 Instances

The aliases created in the project are presented in a table on the instances tab. It is possible to change the value for the aliases in this tab, in order to override the default value configured in the aliases tab.

If a value for an alias is changed in the instances tab, the new value is displayed with bold text to indicate that it differs from the alias' **default value**.

To revert back to the **default value**, delete the value followed by pressing [Enter].

The **default value** can be changed in the aliases tab.

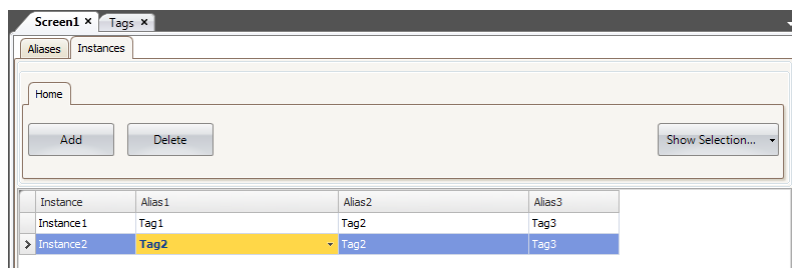


Parameter	Description
Instance	Symbolic name. The name can be any alphanumeric string, beginning with a letter (a-z, A-Z).
Aliases	The names of all aliases created in the project will be displayed in the columns headers. The values connected to the aliases will be listed in each columns.

Using the "Show Screen" Action with Instances

The "Show Screen" action can be used to display a specific screen. For screens that have aliases, it is also possible to select which instance of the screen to use, and thereby also which set of tags to assign to the screen's aliases.

The **Default** option is a virtual instance configured with the alias' default values.

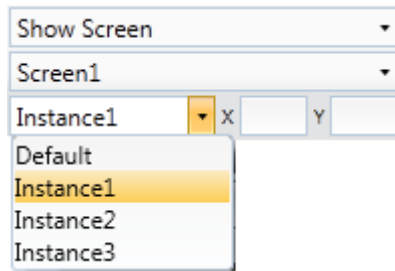

“Show Screen” Action Parameters.

Related information

[Action Groups](#)

Limitations

- Aliases do not support array tags.
- Aliases can not be used in connection with expressions.
- Aliases can not be used with the Trend Viewer object.
- Aliases can not be used on background screens.
- No scripting support for value changed event on an alias.

5 Controller

iX panel can be connected to many types of automation equipment, such as PLCs, servos, and drives.

The expression *controller* is used as a general term for the connected equipment.

It is possible to connect a tag to more than one controller simultaneously.

This makes it possible to use the same application with different controllers.


Controllers can be enabled and disabled in runtime. A project can contain multiple controller connections.

A project can also be connected to an external OPC server.

Related information
Multiple Controllers
External OPC Server
Internal Tags

5.1 Adding a Controller

When a new project is created, one of the steps is to choose which controller brand and model to connect to. Clicking on **Tags** in the Project Explorer, selecting the **Controller** tab displays the Controller configuration page.

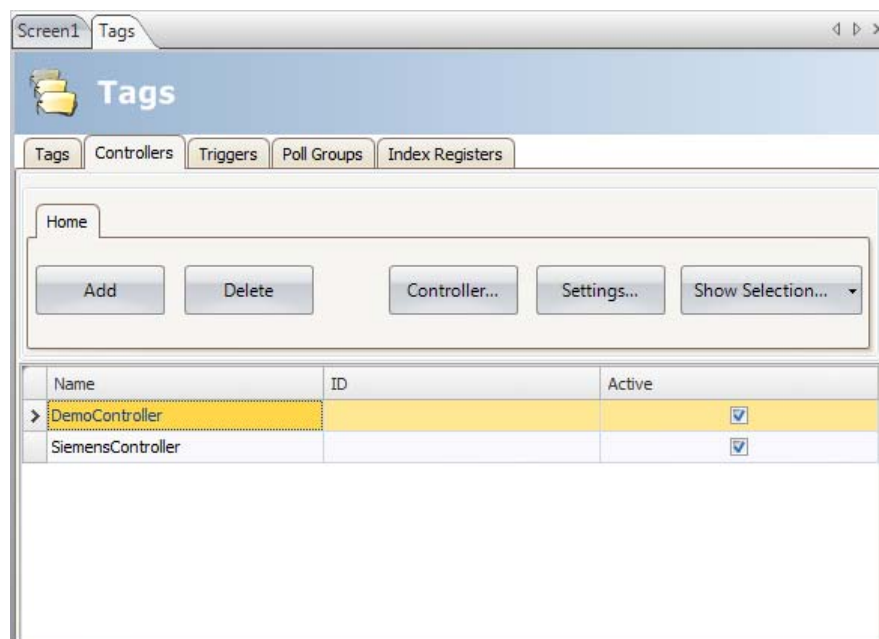

Parameter	Description
Name	Symbolic name. The name can be any alphanumeric string, beginning with a letter (a-z, A-Z).
ID	Optional short name for controller; displayed in functions such as Data exchange.
Active	Selection of which controllers are to be active in runtime. Change of active controllers can also be performed in runtime using an action or script.

Controllers are added and deleted using the **Add** and **Delete** buttons.

Clicking **Controller** allows selecting another controller, and **Settings** displays settings for the selected driver.

Clicking **Help** in the driver settings dialog opens the help file for the driver.

Related information
Select Controller

5.1.1 Notify Window

If a communication error between the application and the controller is detected in runtime, this will result in a communication error, and a Notify Window will be displayed in the operator panel. The Notify Window is a floating window that starts in the upper left corner of the screen. It is also used to display the alarm indicator.

The Notify Window can be moved to any position on the current screen.

5.2 DEMO Controller

The DEMO controller is used and selected in the same way as a regular controller driver, to design and test a project directly on the development PC without connection to an external controller.

A number of predefined tags can be selected:

Data type	Tag ID	Description
BIT, BOOL	M0 - M99	Digital tags
INT16, UINT16	D0 - D99	Analog tags

The DEMO controller also includes counters and digital tags with predefined functions:

Data type	Tag ID	Description
BIT	M100 - M104	Toggles OFF and ON every 1,000 ms
INT16	C0 - C4	Counts from 0 to 100 with 1,000 ms interval by default; min/max values can be defined

5.3 External OPC Server


OPC is an industrial standard created in a collaboration of automation hardware and software suppliers. The standard defines methods for exchanging real-time automation data between PC-based clients using Microsoft operating systems.

An OPC server acts as a controller towards an operator panel.

5.3.1 OPC Classic Client

To update settings for the OPC Classic client, do the following:

1. Select the **Choose Controller** dialog.
2. Select **Localhost**, when accessing an OPC server running in your local PC or **Remote Server** when accessing an OPC server in the network environment, and click **Browse** to select the OPC server.
3. Click the small arrow at the right-hand side of the **Add** button on the Tags tab to add OPC server tags.

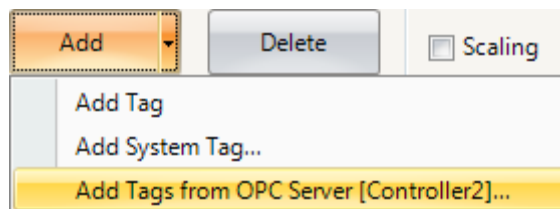

Use the **Refresh** button to make it possible to select the OPC server from the OPC Server drop-down list next time.

To validate tags from a remote OPC server in the iX Developer project, return to the Controllers tab and select the remote OPC server once more, and click **OK**.

This procedure is necessary as the tags in the remote OPC server may have been changed since they were selected on the Tags tab.

5.3.2 OPC UA Client

Settings for the OPC UA client can be made in the **Choose Controller** dialog. Open the dialog by clicking the **Add** button on the Controllers tab.

Enter the URL to the OPC UA server.

Controller Settings Dialog

The settings dialog for the OPC UA Server is available by clicking the **Settings** button on the Controllers tab.

The screenshot shows the 'Properties' dialog for an OPC UA Client. The 'URL' field is set to 'opc.tcp://127.0.0.1/'. Under 'Authentication settings', 'User name' is selected, with empty fields for 'User name' and 'Password'. The 'Allow non-secure connections' checkbox is unchecked. The 'Namespace settings' table is as follows:

Prefix	URI
NS0	http://opcfoundation.org
NS1	urn:WindowsCE:Beijer Electronics AB:iX Developer 2.40 SP5
NS2	TagProvider
NS3	
NS4	
NS5	

In 'Tag View settings', the 'Default namespace' is set to 'NS2'. In 'Subscription settings', 'Max subscriptions' is 5, 'Max items per subscription' is 500, and 'Connection delay (in ms)' is 0.


Parameter	Description
URL	Enter URL to the OPC UA server. Only UA TCP Binary is supported which means the URL must start with "opc.tcp://"
Authentication settings	Choose whether to use anonymous login or enter a user name and password to enable a secured login.
Namespace settings	This setting offers a possibility to declare a namespace URI and bind it to a prefix.
Tag View settings	Namespace separator character: Enter a character to be used to separate the namespace URI prefix from the tag ID when presented on the tag tab.
	Default namespace: Select the default namespace URI prefix to be used when entering a tag on the tag tab.
Subscription settings	Max subscriptions: Enter the maximum number of subscriptions supported by the server ⁽¹⁾
	Max items per subscription: Enter the maximum number of items per subscription supported by the server ⁽¹⁾
	Connection delay (in ms): The time in milli seconds the application will wait before connecting to the OPC UA server after the application has started.

⁽¹⁾ Please refer to the server manual for limitations

Note:

When option user name and password is chosen it will also be possible to make a secondary choice, Allow non-secure connections. This option should be used with great caution and only when a connection is made to an OPC UA server that is based on 2.40 SP4 or older version.

See warning message below.

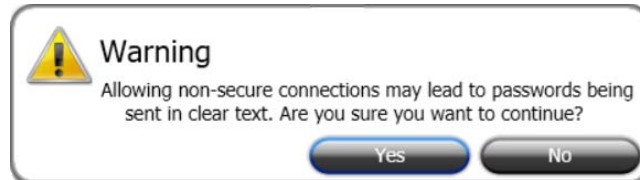

Add Tags from OPC UA Server

You can add tags from OPC UA Server in three different ways.


Option 1, do the following:

1. Click **Tags - Add** to add tags from OPC UA server.
2. Enter the **BrowseName** along with the preferred namespace URI prefix, defined in the controller settings dialog. Make sure to separate the values with the separator character.

Example:

"NS3:tag"

If no namespace URI prefix is entered, the default namespace URI prefix as defined in the controller settings dialog will be used.

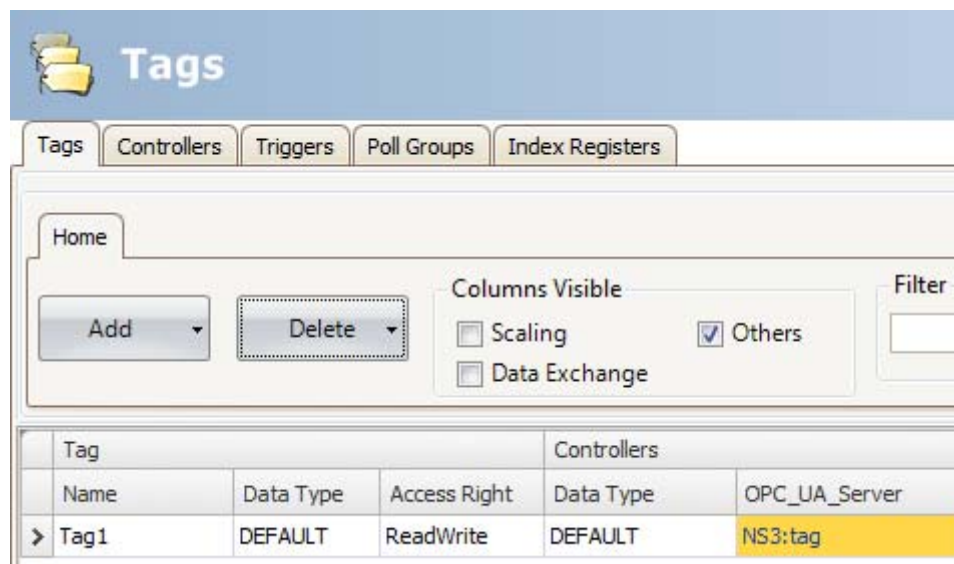

Option 2, do the following:

1. Click **Tags - Add** to add tags from OPC UA server.

2. Enter the information in the following order: asterisk (*) – namespace URI prefix – separator – NodeId Identifier Type – separator – NodeId identifier.

Example:


*NS3:Numeric:42949672

*NS3:String:Tag1

Tag			Controllers	
Name	Data Type	Access Right	Data Type	OPC-UA_Server
Tag1	DEFAULT	ReadWrite	DEFAULT	*NS3:String:Tag1

Option 3, do the following:

1. Click Tags - Add - Add - Add Tags from OPC Server [Controller1]... to add tags from OPC server.

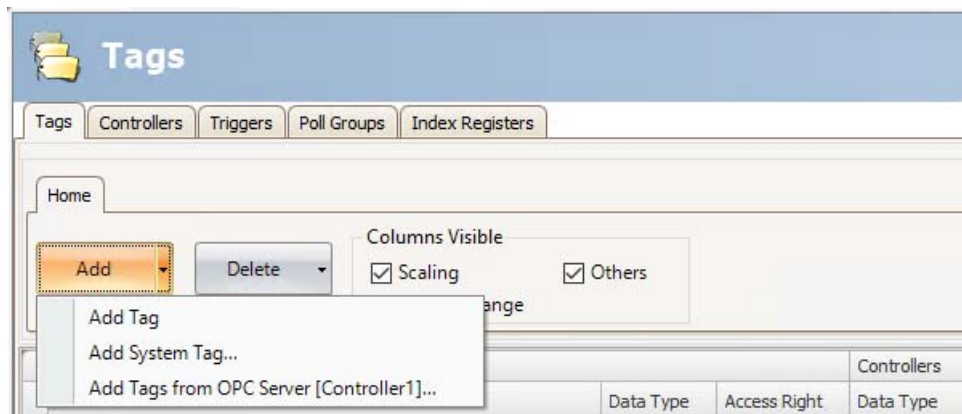

2. Browse OPC Server dialog, select tags and click **OK**.



Note:

Array tags are not supported by OPC UA controllers.

The button Sync Namespace can be used to import/sync namespace settings without importing any tags.

Supported Functions

Data Access (UA part 8) is supported.

Read / write of objects, structs and arrays is not supported.

Limitations

Limitation	Description
Address input in GUI	<p>When using Namespace and BrowseName to identify a variable in the server, this combination must be unique. Otherwise, the client cannot identify the variable.</p> <p>This is not a problem when connecting to an iX Developer server, since all tag names (variables) are unique.</p> <p>In those situations, NodeId Identifier can be used for identification.</p>
NodeId Identifier type	Supported NodeId Identifier types are Numeric and String. Nodes with unsupported types, such as Guid and Opaque, will be skipped during import.
Tags with dynamic data type	OPC UA controller does not support tags with dynamic data types. This can lead to unexpected values during runtime.

Related information


[OPC UA Server](#)

OPC UA Structured Tags


OPC UA Structured Tags are disabled by default for the project.

Activating the feature

1. To activate the OPC UA Structured Tags functionality, go to **Project - Settings - Advanced**.

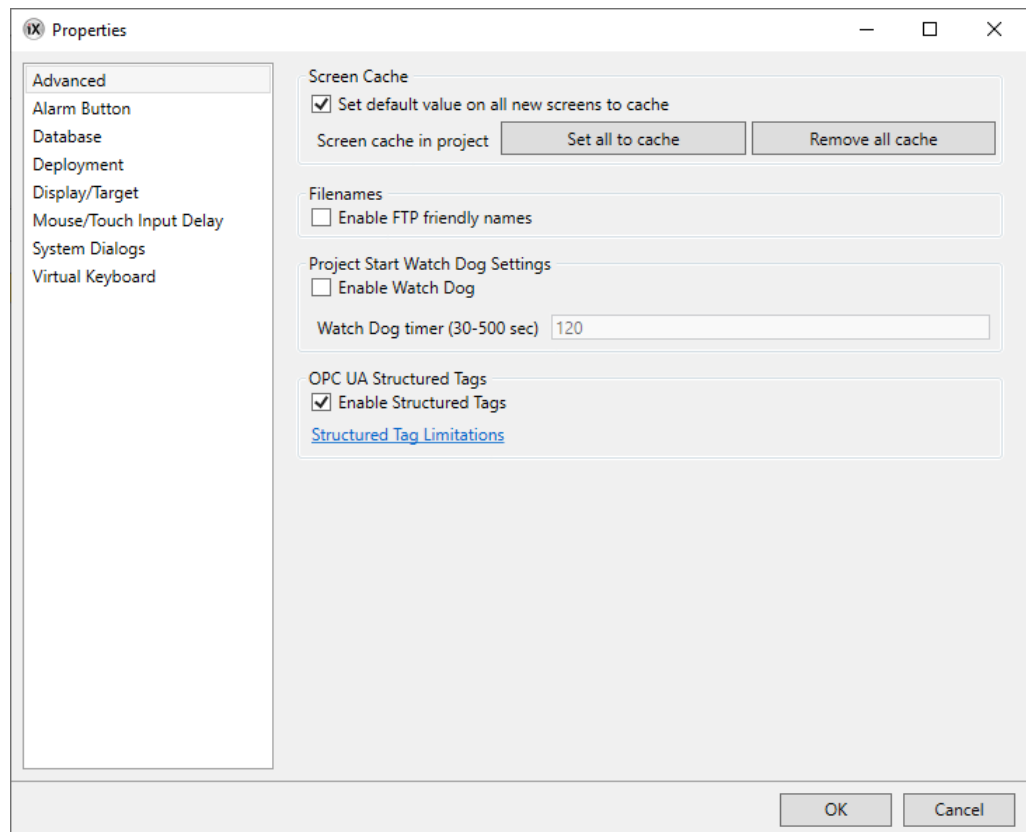

- When the feature is active, two new tabs (Structured Tags / Structured Types) will appear in the Tags editor.

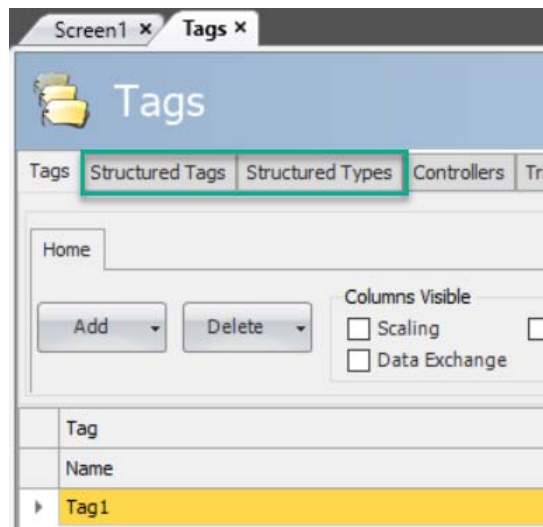


Note:

Read the **Limitations document** before enabling structured tags.

Importing Structured Tags

Structured tags are added in the same way as other OPC UA tags. If one or more tree structures are selected in the browse dialog, the imported structure will end up in the Structured Tags tab. If only leaf nodes are selected however, they will be handled as if Structured Tags were not active, and end up in a flat list under the Tags tab.


- Click **Tags - Add - Add Tags from OPC Server [Controller name]...** to add tags from OPC server.

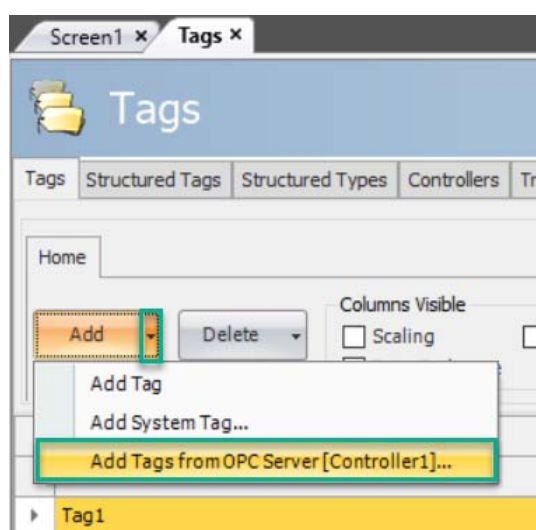

2. Browse OPC Server dialog, select a tree structure or leaf nodes and click **OK**.



3. The nodes of imported structured tags can be accessed from tag lists in the same way as other tags. Filtering is also possible.

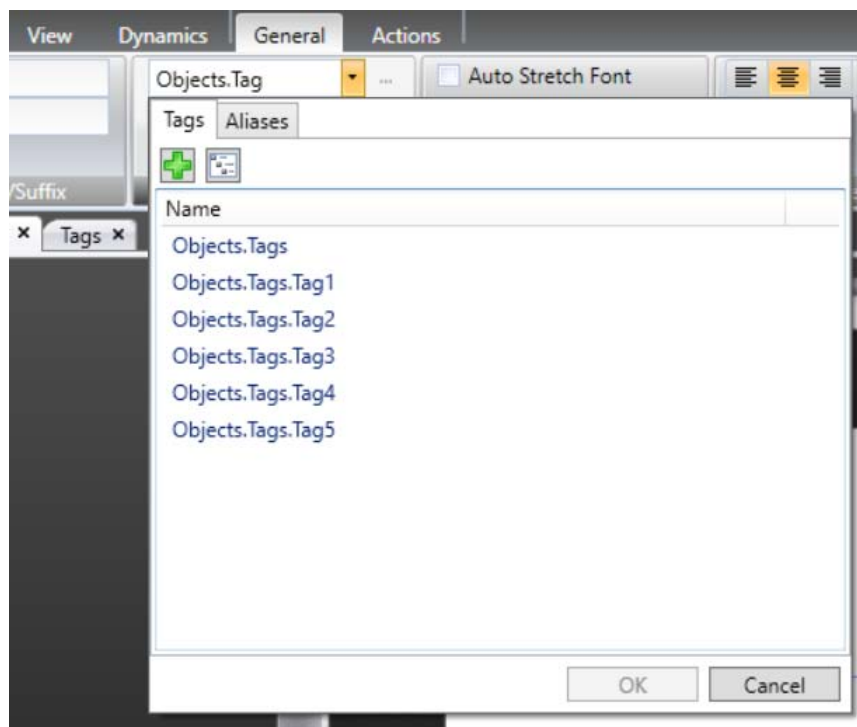


Note:

Information about skipped nodes and other issues during import will be displayed in the Output window. The Output window should be enabled before import.

Synchronizing Structured Tags

A project is not static, and nodes in the server can be renamed, added, moved, or removed. The synchronization functionality (see picture below) can be used to synchronize the content of the structured tags with the corresponding content of the server.

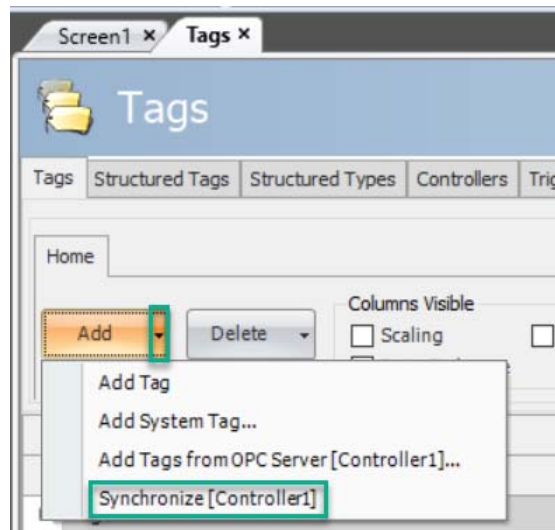**Note:**

Only already imported structured tags are updated with this functionality. If tags connected to objects are renamed through synchronization, those tag connections will be lost (name of tag reference will not be updated).

Structured Types Tab


Under the Structured Types tab, it is possible to get some more details about the nodes contained in the imported structures.

Disabling the Feature

If the OPC UA Structured Tags functionality is disabled, the tabs Structured Tags and Structured Types will be removed, and all imported structured tags will be permanently deleted.

Limitations

Limitation	Description
Structured Tags	Limitations and known issues connected to the StructuredTags feature can be found under Project - Settings - Advanced (see image below).

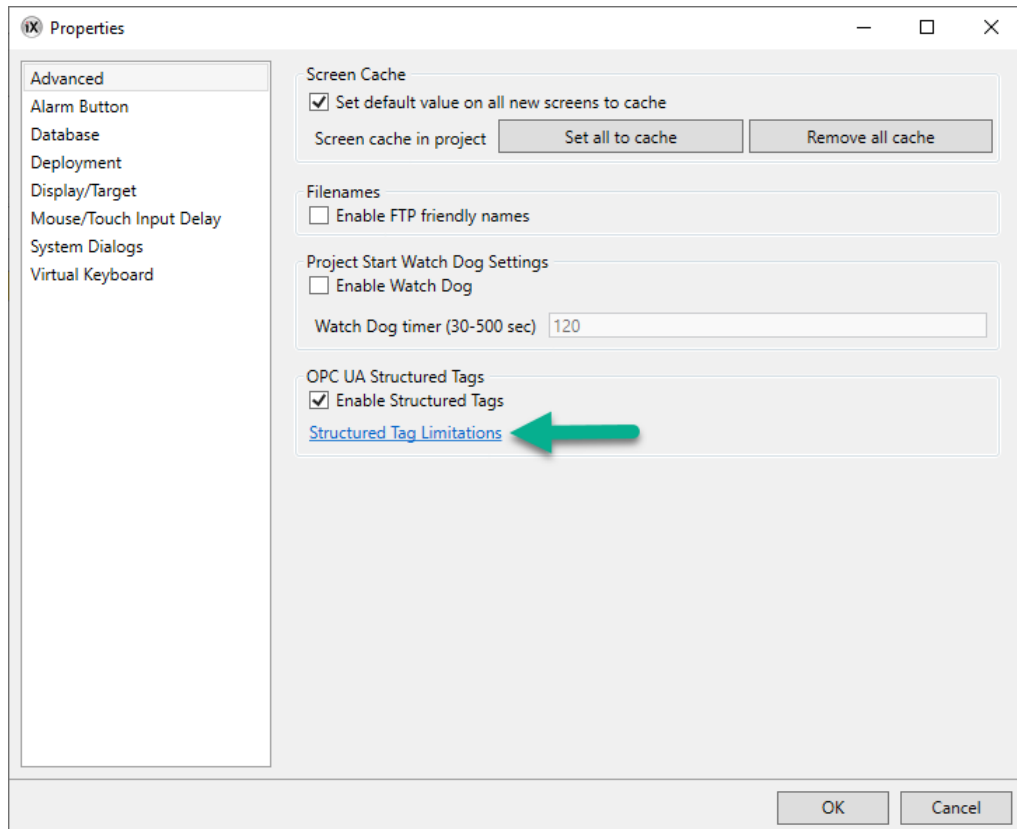

Related information

[Tags](#)

5.4 Updating Drivers

Note:

Run as Administrator for iX Developer when downloading or updating drivers. Administrator user rights are needed since files in the Program Files folder are changed.


Drivers can be updated via Internet or from file.

Each driver takes up approximately 3.0 MB. To use the downloaded drivers, iX Developer must be restarted.

5.4.1 Updating Drivers from Internet

A web browser is not required to update drivers via an Internet connection. A list of drivers that can be downloaded via Internet is displayed when the connection is established.

1. In the File menu, click **Update Drivers** and select **Update Drivers From Internet** to update available drivers to the latest version, or to install new drivers.

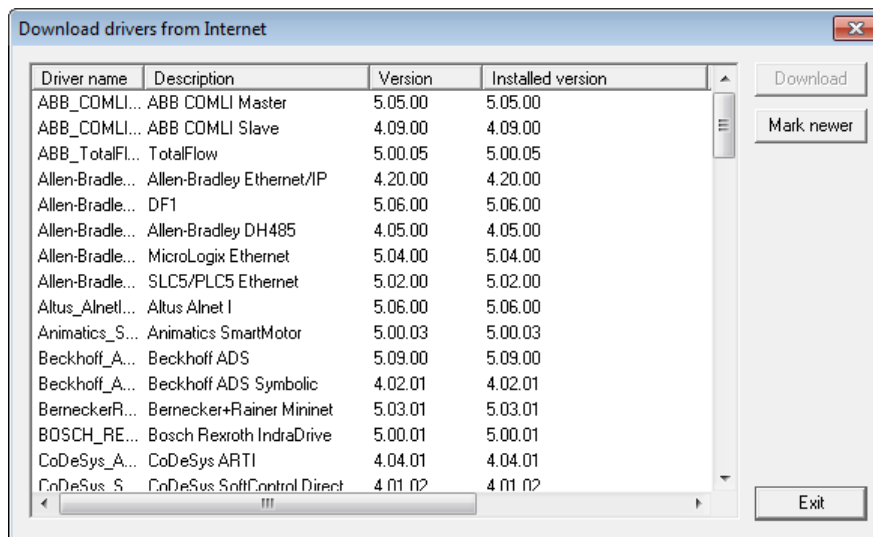

The list shows the version number for the available drivers and the version number for the installed drivers.

2. Select the driver(s) to install in iX Developer.
The command **Mark Newer** selects all drivers available in newer versions than the ones installed, including all drivers that are not installed.
3. Click **Download**.

Related information

[File Menu](#)

5.4.2 Updating Drivers from File

When updating drivers from file only one driver at the time is updated. This can for example be used to revert to an older driver.

To install a new driver from file:


1. Click on the top left button and select **Update Drivers /From File** to update available drivers to the latest version.
2. Browse to the folder where the driver files are located.
A list of all drivers that can be installed is now shown.
3. Select the driver to install in iX Developer.
Mark Newer selects the driver when there is a newer version than the currently installed.
4. Click **Install**.
5. Run as Administrator when restarting the iX Developer.

Related information

[File Menu](#)

5.5 Synchronizing the Controller Clock

In order to synchronize the controller clock with the iX Developer project, the system tags hour, minute, second, need to be added to the project from the Tags configuration page. These are then connected to addresses in the controller.

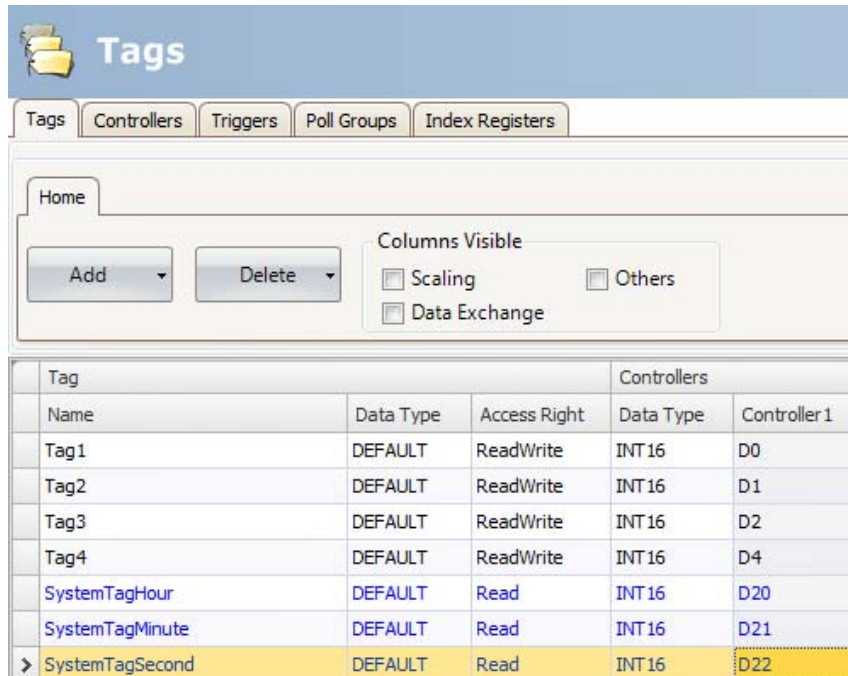

The screenshot shows the 'Tags' configuration page. At the top, there are tabs for 'Tags', 'Controllers', 'Triggers', 'Poll Groups', and 'Index Registers'. Below the tabs, there are 'Add' and 'Delete' buttons, and a 'Columns Visible' section with checkboxes for 'Scaling', 'Data Exchange', and 'Others'. The main part of the page is a table with the following data:

Tag			Controllers	
Name	Data Type	Access Right	Data Type	Controller 1
Tag1	DEFAULT	ReadWrite	INT 16	D0
Tag2	DEFAULT	ReadWrite	INT 16	D1
Tag3	DEFAULT	ReadWrite	INT 16	D2
Tag4	DEFAULT	ReadWrite	INT 16	D4
SystemTagHour	DEFAULT	Read	INT 16	D20
SystemTagMinute	DEFAULT	Read	INT 16	D21
> SystemTagSecond	DEFAULT	Read	INT 16	D22

When the value is changed in any of the system tags, they will be written to the controller.

Related information

[System Tags](#)

6 Web Server

The Web Server adds the possibility to use a server-side Application Programming Interface (API) to interact with a running project. The API operates over the HyperText Transfer Protocol (HTTP) and can be accessed from any compatible device. In addition, the web server can host web pages and related media to be consumed by web browsers.

The bundled Javascript Software Development Kit (SDK) makes it easy to build interactive web pages that utilize the API.

Login settings for the web server are available from Server group on the System ribbon tab.

6.1 Web Server Configuration

The web server can be configured for hosting web pages. It also provides a login form for authentication.

6.1.1 Web Site Configuration

For the web server to be able to host web pages, the content of the web site must be transferred using FTP to a folder named “WebSite” residing in the FTP root directory.

The FTP server must be enabled and the web content can only be transferred after the application has been deployed and started on the panel.

6.1.2 Login Form

The web server provides a default login form that is used for clients to authenticate. It is also possible to override the default and provide a custom web page that matches your overall design.

To override the login form, create an HTML file called “login.html” and place it in a folder named “Website” in the root of the FTP root directory.

This file will be used instead of the default when clients access the address “/login”.

The Javascript SDK provides tools for creating the form using a few conventions.

Note that this only applies if you have authentication enabled in the web server settings.

Authentication Script

Reference the authentication script

```
<script src='/assets/authentication.js' type='text/javascript'></script>
```

Username and Password Field

Mark the username and password field with the predefined id's “login.username” and “login.password”:

```
<input id="login.username" type="text" maxlength="20" required="true" />
<input id="login.password" type="password" maxlength="20" required="true" />
```

Login Button

Mark a login button with the predefined id “ix-login”. Any element can be used.

```
<button id="ix-login">LOGIN</button>
```

Invalid Credentials

Optionally add an element with the predefined id “ix-invalid-credentials” that will be shown if the login fails.

```
<span id="ix-invalid-credentials">Failed to login, try again.</span>
```

6.2 Javascript SDK

The JavaScript SDK provides a rich set of client-side functionality for accessing the server-side API calls.

6.2.1 Javascript SDK Overview

Javascript SDK makes it possible to build highly interactive web pages that uses tags defined in the project.

1. The first step to build an interactive web page is to reference the SDK by inserting the following script into the header of the HTML.

```
<script src='/assets/ix.js' type='text/javascript'></script>
```

Note:

The SDK is bundled with jQuery 1.7 (<http://jquery.com/>).

2. Next, the SDK needs to be initialized. In its simplest form the following lines need to be added after the reference to the SDK:

```
<script type="text/javascript">
  ix.setup({});
</script>
```

This will make it possible to use the defined tag metadata attributes to incorporate the project tags into the web page.

The following line will, for example, insert the value of Tag1 into the HTML document:

```
<span data-ix-tag="Tag1"></span>
```

Tag Value or Properties

To insert the current value of a tag or tag property into an HTML element, the **data-ix-tag** attribute can be used. The value of the attribute should be the name of the tag as defined in the project and the property of a tag. Separate the names with a dot “.”.

If no property is provided, the value of the tag is used.

```
1 | <span data-ix-tag="Tag1">Replaced with Tag1 value</span>
2 | <span data-ix-tag="Tag1.dataType">Replaced with the datatype of Tag1</span>
3 |
```

Formatting

Formatting of a tag value can be applied to a tag of numeric type or a datetime. The format is defined using the **data-ix-format** attribute.

```
1 | <span data-ix-tag="SystemTagDateTime" data-ix-format="Y-M-d" />
2 | <span data-ix-tag="NumericTag" data-ix-format="0.000" />
3 |
```

The following table describes the custom date and time format specifiers and displays a result string produced by each format specifier.

Tuesday, February 07, 2012 12:27:24 PM is used as input.

Tag value	Description	Result
d	The day of the month, from 01 through 31.	07
D	The abbreviated name of the day of the week (in english)	Tue
j	The day of the month, from 1 through 31	7
l	The full name of the day of the week	Tuesday
S	Ordinal number for the date of the month (eg -st, -nd, -rd, -th etc)	th
w	Day of the week as a number.	2
z	Day of the year	37
W	Week of the year	05
F	The full name of the month.	February
m	Gets the day of the month from 00 to 31	02
M	The abbreviated name of the month.	Feb
n	The month of the year 1 to 12	2
t	Number of days in the month	29
L	Is leap year, 1 if true, otherwise 0	1
Y	The year as a four-digit number.	2012
y	The year, from 00 to 99	12

Tag value	Description	Result
a	The AM/PM designator lower case.	pm
A	The AM/PM designator upper case.	PM
g	The hour, using a 12-hour clock from 1 to 12.	12
G	The hour, using a 24-hour clock from 0 to 23.	12
h	The hour, using a 12-hour clock from 01 to 12.	12
H	The hour, using a 24-hour clock from 00 to 23.	12
i	The minute, from 00 through 59	27
s	The second, from 00 through 59.	24
X	The milliseconds, from 000 through 999.	000
O	Hours offset from GMT, with a leading zero for a single-digit value.	+0100
Z	Timezone offset, in seconds	3600
q	Quarter	1

The following table describes the custom numeric format specifiers and displays sample output produced by each format specifier:

Tag Value	Description	Result	
		Value	Format
0	Digit	4	00 → 04
		4.5	0.00 → 4.50
		.1	$0.00 \times 10^{00} \rightarrow 1.00 \times 10^{-01}$
#	Digit, zero shows as absent	4	## → 4
.	Decimal separator or monetary decimal separator	4.5	0.00 → 4.50
E	Separates mantissa and exponent in scientific notation	5.55	$0.0 \times 10^{00} \rightarrow 5.6 \times 10^{00}$
		1000000	$0.0 \times 10^{00} \rightarrow 1.0 \times 10^{06}$
,	Grouping separator	1000	0,0 → 1,000
		1000	0,# → 1,000
;	Separates positive and negative subpatterns	-5	plus; minus → minus
		5	plus; minus → plus
		0	plus; minus; zero → zero
		-5	0; (0.0); 0.000 → (5.0)
[]	Custom subpatterns	700	[>500]###.##; [<1000]###; ##.# → 700.00
		400	[>500]medium; [>1000]###; ###.# → 400
		1001	[>2000]high; [>1000]normal; [>500]low → normal

Setting Tag Value

To set the value of a tag, two elements must be defined.

The first element has the **data-ix-setter** attribute on the position where the tag value can be entered.

The second element has the **data-ix-submitbutton** attribute used to submit the new tag value.

The **data-ix-submitbutton** attribute takes the tag names, separated by comma “,”, to be submitted when the button is clicked. To submit all tags an asterisk “*” can be used.

```

1 | <input type="number" data-ix-setter="Tag1" />
2 | <input type="button" data-ix-submitbutton="Tag1" />
3 |

```

iX-invalid Style

Basic validation is done on input values. If the value cannot be assigned to the Tag then the value will not be set. To indicate an invalid value the framework will set the CSS class “ix-invalid” on the element. This can then be used to provide the user with visual hints of the invalid state. For example, the following CSS snippet adds a red border around the input when the input is incorrect:

```
<style type="text/css">
  .ix-invalid {
    border: 1px solid red;
  }
</style>
```

Refresh Modes

To control how tag values are refreshed, the **data-ix-refresh** attribute can be used with elements defined with **data-ix-tag** or **data-ix-setter**.

It is recommended to use the least frequent interval that is required by your project.

```
1 <span data-ix-tag="Tag1" data-ix-refresh="onetime" />
2 <span data-ix-setter="Tag2" data-ix-refresh="none" />
3
```

Advanced

iX.setup

After loading the JavaScript SDK, call `iX.setup` to initialize the framework. This will wire the tag metadata attributes that you have defined in HTML and will start periodical polling if this is needed.

Parameters:

Name	Type	Description
options	Object	See the “Options” table below.

Options				
Property	Type	Description	Argument	De- fault
refreshInterval	Int	The refresh interval of tag values in ms. For performance reasons it is recommended not to use low values for this setting.	Optional	5000
refreshMode	String	Overrides the default refresh mode of tag values. Accepted modes are: none , onetime , interval .	Optional	one-time
refreshMode-Setter	String	Overrides the default refresh mode of tag setters. Accepted modes are: none , onetime , interval .	Optional	one-time

Example:

This example will set periodical refresh interval to 10 seconds, set the refresh mode of HTML elements marked with the **data-ix-tag** attribute to interval and set the refresh mode of HTML elements marked with the **data-ix-setter** attribute to refresh only once.

```
iX.setup({ refreshInterval: 10000, refreshMode:
  'interval', refreshModeSetter: 'onetime' });
```

iX.refreshElements

Refreshes the tag values of the provided elements manually. The attribute **data-ix-refreshbutton** can be used to achieve the same function.

Note:

Only an element that have been marked with a valid **data-ix-tag** or **data-ix-setter** can be refreshed. The value will be refreshed regardless of the refresh mode set on the element.

Parameters:

Name	Type	Description
elementIds	Array	A list of strings containing the HTML element ids. If not provided all tag elements are updated.

Example:

This example show how you programmatically can achieve the same behavior as marking an element with **data-ix-refreshbutton**. In the example, the HTML element with id "tag1Id" will be updated when the element with id

"refreshButton" is clicked. This example uses jQuery (bundled with iX.js) to bind to the click event of the "refreshButton"

In HTML:

```
<button id="refreshButton">Refresh</button>
<span id="tag1Id" data-ix-tag="Tag1"></span>
```

In Javascript:

```
iX.setup({});

$(document).ready(function() {
    $('#refreshButton').click(function() { iX.refreshElements(['tag1Id']); });
});
```

iX.refreshTags

Refreshes the tag values of the provided tag names manually.

Note:

Only tags used in conjunction with data-ix-tag or data-ix-setter or created by iX.createTag can be refreshed.

Parameters:

Name	Type	Description
tagName	String	(Optional) A list of strings containing the names of the tags to refresh. If not provided all defined tags are refreshed.

Example:

This example show how to programmatically refresh the tag values of "tag1" and "tag2". When refreshButton is clicked the "tag1" and "tag2" will be refreshed even if the refresh mode was set to 'none' when creating the tag.

```
iX.setup({});
iX.createTag('tag1', function() { alert('tag1 updated') }, 'none');
iX.createTag('tag2', function() { alert('tag2 updated') }, 'none');

...

$('#refreshButton').click(function() { iX.refreshTags(['tag1', 'tag2']) });
```

iX.createTag

Creates a representation of a server-side tag on the client-side.

Parameters:

Name	Type	Description
tagName	String	The name of the tag in the project to create a connection to.
valueRefreshedCallback	Function	Optional: Function that is called when the tag value has changed. The function is not called when the tag value is the same as last checked. Function may take two optional parameters. The first parameter is the tag that changed the value, the second parameter is the old value of the tag before it changed.
refreshMode	String	Optional: Overrides the default refresh mode of tag. Accepted modes are: none , onetime , interval . Note that the more frequent refreshMode is always used. For example, if the tag is created with onetime but an element defines data-ix-refreshmode="interval" for the same tag then the tag will have a refreshMode of interval .

Returns:

Type	Description
iX.Tag	An instance of iX.Tag. See Tag Class for a complete description.

Example:

This example show how to display a warning if the value of "tag1" exceeds 70. The example is using jQuery (bundled with iX.js) to hide and show the warning box.

```
iX.setup({});

function onTag1Updated(tag, oldProperties) {
  if(tag.value > 70)
    $('#warningBox').show();
  else
    $('#warningBox').hide();
};

iX.createTag('tag1', onTag1Updated, 'interval');
```

iX.getTag

Retrieves a tag by name.

Parameters:

Name	Type	Description
tagName	String	The name of the tag to retrieve.

Returns:

Type	Description
iX.Tag	An instance of iX.Tag. See Tag Class for a complete description.

Example:

This example shows how to retrieve an instance of a tag after it has been created. "tag1" and "tag1Again" will refer to the same tag instance.

```
iX.setup({});
var tag1 = iX.createTag('tag1', function() {}, 'interval');
var tag1Again = iX.getTag('tag1');
```

iX.commitTagValue

Commits any unsaved tag values that was changed using iX.Tag.setValue for the provided tag names.

Parameters:

Name	Type	Description
tagNames	Array	(Optional) A list of strings containing the names of the tags to commit. If not provided all defined tags are committed.

Example:

This example show how to commit changes to tag values on the server in a batch. Note that the value must match the data type of the tag on the server.

```
iX.setup({});
var tag1 = iX.createTag('tag1', function() {}, 'interval');
var tag2 = iX.createTag('tag2', function() {}, 'interval');
...
tag1.setValue(1234);
tag2.setValue(4567);
iX.commitTagValues(['tag1', 'tag2']);
```

Tag Class

iX.Tag is a class representing a Tag. The methods and properties of a Tag must be accessed through an instance of iX.Tag and not the class itself. Typically a Tag instance obtained using iX.createTag or iX.getTag methods.

iX.Tag Properties

Name	Type	Description
isDirty	Bool	Flag indicating if the local value has been changed.
tagProperties	Object	An object with data retrieved from the server. See tag metadata below. Note that these are only available after the first refresh. Also, only value is refreshed not all of the metadata.
value	Flexible	The value of the tag. The type of the value depends on the data type in the project. Never use this property to set the value.

Tag Properties:

Name	Type	Description
controllers	Array	An array of controller names that the tag is connected to.
description	String	The tag description, null if not defined.
dataType	String	The tag dataType , e.g int16 , datetime , default
initialValue	Flexible	The initial value of the tag, null if not defined.
readonly	Bool	True if the tag is read only, otherwise false
quality	String	Indicates the quality of the tag value: Unknown, Good, Bad

iX.Tag.setValue

Set the tag value manually. To commit the value to the server side call **iX.commit**. It's vital that the value that is set corresponds to the data type of the tag.

Parameter:

Name	Type	Description
newValue	Flexible	The new value. Must match the data type of the tag.

iX.Tag.subscribeToChange

Adds a callback that is called when the server-side value has changed.

Parameter:

Name	Type	Description
fn	Function	The callback to register

iX.Tag.unsubscribeToChange

Unsubscribe from changes.

Name	Type	Description
fn	Function	The same callback that was used with iX.Tag.subscribeToChange

iX.Tag.refresh

Refreshes this tag. It is recommended to refresh tags in batch (using **iX.refresh**) instead of refreshing individual tags.

iX.Tag.commit

Commit this tags value if the value has been changed. It is recommended to commit tags in batch (using **iX.commit**) instead of refreshing individual tags.

6.3 Web Service API

iX Developer provides a web service API.

6.3.1 RESTful Web Service API

The RESTful Web Service API is used for interacting with tags. The tags can be read or written to using the HTTP verbs **GET**, **PUT** and **POST**. **GET** to read tags, **PUT** to set the value of a tag or **POST** to perform batch operation.

6.3.2 General

Accepted Types

It is possible to negotiate which media type that will be returned as a representation of the resource being retrieved. Use the **Accept** header in the request to specify the desired media type. **text/html** and **application/json** media types are understood as response formats for tag related resources.

A client request providing an unsupported media type will be responded with the following message: "406 - Not understood".

6.3.3 REST API

Tags Resource

Lists tags available in the project.

Tags Resource	
Verbs:	GET
Uri:	/Tags

Tags Resource Example

```

1 Request: GET /Tags
2 Response:
3 200 OK
4 ["Tag1", "Tag2", "Tag3", "SystemTagDateTime", "Tag4"]
5

```

Tag Resource

Resource for interacting with individual tags. To perform multiple operations on tags it is recommended to use **TagBatch** resource instead.

Tag Resource	
Verbs:	GET, PUT
Uri:	/tags/:name
GET params:	Name: The name of the tag, e.g., Tag1 SystemTagDateTime
PUT params:	Name: The name of the tag, e.g., Tag1 SystemTagDateTime
	Value: The value to set the tag to, e.g., 12, "foo"

Tag Resource Example

```

1 Request: GET /tags
2 Response:
3 200 OK
4 ["Tag1", "Tag2", "Tag3", "SystemTagDateTime", "Tag4"]
5
6
7 Request: PUT /tags/Tag1
8 Content-type: application/json
9 {
10   name: "Tag1",
11   value: 1234
12 }
13 Response: 200 OK
14

```

TagBatch Resource

The **TagBatch** resource is a resource used to perform batch operations on tags.

TagBatch Resource	
Verbs:	POST
Uri:	/tagbatch

TagBatch Resource	
POST params:	includeMetadata: boolean indicating if only the tag value or the full tag metadata should be fetched
	getTags: List of tag names to return
	setTags: List name, value pairs representing new tag values.

TagBatch Resource Example

```

1  Request: PUT /tagbatch
2  Content-type: application/json
3
4  {
5      "includeTagMetadata":true
6      "getTags": ["Tag1","Tag2"],
7      "setTags": [
8          {
9              "name":"Tag3",
10             "value":45
11         },
12         {
13             "name":"Tag4",
14             "value":"foo"
15         }
16     ]
17 }
18
19 Response: 200 OK
20 {
21     "tags":
22     [{ "quality":"good",
23        "description":null,
24        "name":"Tag1",
25        "value":69,
26        "datatype":"int16",
27        "controllers":["Controller1"],
28        "initialValue":null,
29        "isOffline":false,
30        "readonly":false
31     },
32     {
33         "quality":"good",
34         "description":null,
35         "name":"Tag2",
36         "value":45.56456,
37         "datatype":"double",
38         "controllers":[],
39         "initialValue":45.56456,
40         "isOffline":false,
41         "readonly":false
42     }
43 ]
44 }
```

Note:

The returned value (`initialValue`) for tags of datetime type is presented in the ISO8601 format.

Example: "2008-09-22T14:01:54.9571247Z".

Dates are always returned in UTC, Coordinated Universal Time.

7 Objects

Static and dynamic objects that can be included in screens are available for selection from the Objects control group of the Home ribbon tab.



Not all objects are visible in the normal view, but are made available by scrolling. Clicking the expand button displays all the objects, categorized into groups.



An object can be created by clicking on it in the Objects group and then clicking on the screen, or by dragging it from the Objects group and dropping it on the screen. This creates the object with default size and appearance.

Dragging the object handles resizes it. Object appearance can be modified using the commands in the Format and Font control groups, but also by the controls on the Dynamics ribbon tab.

Settings for a selected object can be managed with the control groups on the General ribbon tab, and actions can be configured from the Actions ribbon tab.

An object style that is to be used frequently can be saved as an Object Variation, in order to immediately apply a predefined appearance to the object when creating it.


Related information

[Object Variations](#)

7.1 Blinking Objects

Some objects can be displayed as blinking objects. Blinking is enabled for each object individually using the Property Grid.

The Blink settings can be entered either from the **General** group under the **Dynamics** tab, or from the Property Grid, under **Animations**. In both cases selecting **Blink** opens the **Edit Blink Dynamics** dialog.

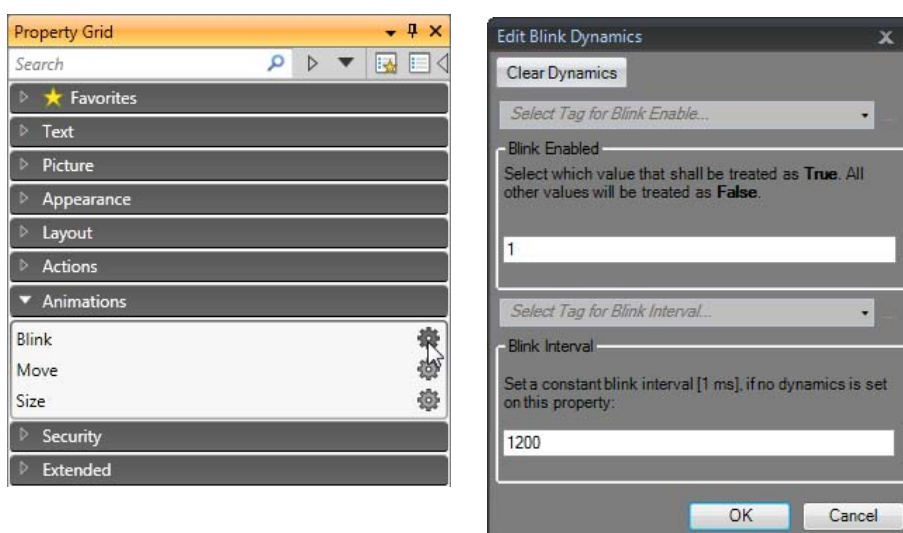

Parameter	Description
Blink Interval	<p>Constant blink intervals:</p> <p>Time in ms from when the object gets invisible one time until it gets invisible the next time. For operator panel projects, the minimum value is 400 ms, and it is recommended to use a blink interval of a multiple of 400 ms to ensure a harmonic blink experience (400 ms, 800 ms, 1200 ms, 1600 ms etc.). For PC, the minimum value is 200 ms. The default value is 1200 ms for all targets, and the maximum value is 10,000 ms for all targets.</p> <p>Blink intervals bound to a tag:</p>

Parameter	Description
	Select Tag for Blink Interval changes blink frequency based on the selected tag value.
Blink Enabled	Select Tag for Blink Enable makes it possible to enable and disable blinking depending on the selected tag value: When the tag value is equal to the given value (=True), blink is enabled. When the tag value is not equal to the given value (=False), blink is disabled.

Security has higher priority than blink, and an object hidden by security cannot be made visible through blink.

It is not recommended to use Blink on objects that should be used for user interaction.

Related information
General Group

7.1.1 Limitations for operator panel Targets

Blink is not supported for the following objects in operator panel targets:





Alarm Distributor Viewer	Alarm Viewer	Audit Trail Viewer
Check Box	Combo Box	Database Viewer
Group Box	List Box	Media Player
PDF Viewer	Progress Bar	Radio Button
Web Browser	-	-

Related information
General Group

7.2 Shapes

Static shapes such as Line, Rectangle and Poly Line can be used to draw background graphics. Tags can be linked to shapes under Dynamics, to change their appearance (e.g. color and position) depending on value changes of controller tags.

Points for an existing Poly Line object can be adjusted by selecting **Edit Points** from the context menu.

Ellipse 	Line 	Polyline 	Rectangle 
--	---	---	--

Note:

Bevel for Poly Line and Ellipse is only supported for projects designed for PC targets.

7.3 HMI Controls

Dynamic objects such as buttons, analog numerics, sliders, meters and trend viewers are linked to tags in order to create control and monitoring functions.

The tag associated with an object can be selected and changed from the Tag/Security group on the Home or General ribbon tabs, or from the context menu. Links to tags (controller tags, internal tags or system tags) are selected in the Tag drop-down list.












 




Objects containing text can be edited directly from the keyboard, either when just created, or when a single selection is done on the text area of the object.


 



It is also possible to use script code to control the text contents of buttons, texts or text boxes.

Note:

Use of braces around digits, such as '{0}', is not allowed in text objects. This will result in an error when opening the screen.

The following HMI controls are described:

<i>Action Menu Object</i> 	<i>Alarm Viewer Object</i> 	<i>Analog Numeric Object</i> 	<i>Animated GIF Object</i> 
<i>Animated Label Object</i> 	<i>Audit Trail Viewer Object</i> 	<i>Button Object</i> 	<i>Circular Meter Object</i> 
<i>Chart Object</i> 	<i>Database Viewer Object</i> 	<i>Digital Clock Object</i> 	<i>Linear Meter Object</i> 
<i>Multi Picture Object</i> 	<i>Picture Object</i> 	<i>Roller Panel Object</i> 	<i>Slider Object</i> 

<i>Tag Monitor Object</i> 	<i>Text Object</i> 	<i>Touch Combo Box Object</i> 	<i>Touch List Box Object</i> 
<i>Trend Viewer Object</i> 	-	-	-

7.3.1 Action Menu Object

The Action menu object is used to display multiple menu groups, each containing its own sets of actions which can be triggered in iX Runtime from the action menu object.

Settings for the Action Menu object are available from the General ribbon tab while the object is selected:

Settings Group

Parameter	Description
Edit Actions	Opens the Edit Actions dialog
View type	Choose between Bar, Expand and Tab
Item Width	Set the width of the items. This is only available for the Bar and Expand View types.
Item Height	Set the height of the items
Orientation	Set the orientation of the items. This is only available for the Bar View type.
Picture Width	Set the width of the pictures for the items
Picture Height	Set the height of the pictures for the items
ScrollBar Width	Set the width of the scroll bar.

Touch Settings Group

Parameter	Description
Scroll Sensitivity	Set the sensitivity of the scroll. Minimum value is 1, maximum value is 10.

Edit Actions Dialog

The Actions tab in the Edit Actions dialog contains the following properties:

Parameter	Description
Text	The text to be displayed for the item
Picture	The picture to be displayed for the item

Parameter	Description
Make Transparent	Set transparency on the item
Action	Configure the action when the item is clicked

The Menu Groups tab in the Edit Actions dialog contains the following properties:

Parameter	Description
Menu Group Name	The name of the menu group
Picture	The picture to be displayed for the menu group
Make Transparent	Set transparency on the menu group

Note:

Make sure not to use semi-transparent pictures in projects targeted for operator panel. Since these targets do not fully support opacity, semi-transparent pictures may turn out unclear.

Adding a New Action

In the **Edit Actions** dialog select the Actions tab. Click the **Add** button. A new item will be added and placed last in the list. To configure the actions for the item, click the “...” button in the Action column.

Adding a New Menu Group

In the **Edit Actions** dialog select the Menu Groups tab. Click the **Add** button. A new menu group will be added and placed last in the list. The menu group will be displayed in the Actions tab as a new menu group tab.

Action Menu Dynamics

It is also possible to set dynamics, i.e. tag dependent values for the Action Menu properties. These can be found in the Dynamics tab in the ribbon bar.

Related information
Dynamics Ribbon Tab

7.3.2 Alarm Viewer Object

The Alarm Viewer is used to display and manage alarm items, for example indication of out-of-bounds tag values. The viewer consists of a list area and a button area.

Related information
Alarm Management
Alarm Viewer

7.3.3 Analog Numeric Object

The Analog Numeric object displays a box with a numeric or alphanumeric value. The value can be connected to a tag.

Settings for the analog numeric object are available from the General ribbon tab while the object is selected:

Display Format Group

Parameter	Description
Type	Selection of Integer, Decimal, String, Hex or Binary display format
Number of Decimals	Maximum number of decimals to display in the object. Only available when Type = Decimal. The number of decimals will be represented by a “#” symbol on the analog numeric object.
Limit Characters to	Makes it possible to maximize the number of displayed characters. The number of characters will be represented by a “#” symbol on the analog numeric object.
Zero Fill	Fills empty character positions with zeros, to let the maximum number of characters always be displayed

Note:

The “**Limit Characters to**” function, in combination with the string format type is not supported for the Traditional Chinese, Simplified Chinese and Simplified Chinese (Compact) languages.

Prefix/Suffix Group

Parameter	Description
Prefix/Suffix	Text value that will precede/follow the object value

Tag/Security Group

Parameter	Description
Select Tag	Connection to a tag from the tags configuration page
Select Security Groups	Allows limiting access of the object based on security groups. If left empty, the object can be accessed by anyone.
Select Visibility	Configuration of visibility: Default: The visibility specified on the General tab of the Security Manager is used. Disabled: The object is disabled for users with insufficient access rights

Parameter	Description
	<p>Hidden: The object is invisible for users with insufficient access rights</p> <p>Normal: The object looks normal also for users with insufficient access rights</p>

Format Group

Parameter	Description
Auto Stretch Font	Resizes the font to fit the height of the object. Default setting for the analog numeric object.
Disable Operator Input	Disables input in runtime
Transparent	Makes the object transparent, i. e. makes the frame and background color invisible

Text Alignment Group

Parameter	Description
Horizontal / Vertical	Adjusts the object horizontally or vertically

Validation Group

Parameter	Description
On Input	Input values are validated, based on Lower Limit and Upper Limit, when the box is checked
On Display	Background color changes according to Other Colors on the Format tab if upper or lower limit are violated, when the box is checked
Lower Limit/Upper Limit	Minimum/maximum value that can be entered in runtime when On Input is checked, or that will change the background color of the object when On Display is checked

Note:

The font size of the analog numeric object is auto-sized when resizing the object frame by default, and is not adjusted in the Font control of the Home ribbon tab. Uncheck **Auto Stretch Font** in the Text group first, and then change the font size on the Home ribbon tab.

7.3.4 Animated GIF

The Animated GIF (Graphics Interchange Format) object allows including a moving graphic picture in the iX Developer project. Animated GIFs can be imported to the project by browsing the PC environment for graphic files. Imported animated GIFs are added to the Project Picture folder in the Component Library.

The Animated GIF can be connected to a tag which controls animation. When the value of the connected tag is 0, then animation is turned off and the picture is displayed static in its initial design. An Animated GIF not connected to a tag runs animated continuously.

Settings for the Animated GIF object are available from the General ribbon tab while the object is selected:

Settings Group

Parameter	Description
Change Picture	Opens a browse dialog for selection of picture
Reset Picture	Restores original height and width to picture
Stretch	Adapts height and width to the selection frame when resizing the picture
Transparent	Makes the object transparent, i.e. makes the frame and background color invisible

Note:

Make sure not to use semi-transparent pictures in projects targeted for operator panel. Since these targets do not fully support opacity, semi-transparent pictures may turn out unclear.

Tag/Security Group

Parameter	Description
Select Tag	Connection to a tag from the tags configuration page
Select Security Groups	Allows limiting access of the object based on security groups. If left empty, the object can be accessed by anyone.
Select Visibility	Configuration of visibility: Default: The visibility specified on the General tab of the Security Manager is used. Disabled: The object is disabled for users with insufficient access rights Hidden: The object is invisible for users with insufficient access rights Normal: The object looks normal also for users with insufficient access rights

7.3.5 Animated Label Object

The Animated Label object is used to display an animated text label in iX Runtime.

Settings for the Animated Label object are available from the General ribbon tab while the object is selected:

Note:

Using the animated label object creates a slightly higher load on the CPU.

Parameter	Description
Text	The text to be displayed in the animated label
Animated	If enabled, the text starts to animate
Animation speed	Set the speed for the animation. Minimum value is 1, maximum value is 32,767.
Animation Direction	Set the animation direction: From right to left From left to right From right to left to right From left to right to left From down to up From up to down From down to up to down From up to down to up

Animated Label Dynamics

It is possible to set dynamics, i.e. tag dependent values for the Animated Label properties. These can be found in the Dynamics tab in the ribbon bar.

Related information
Dynamics Ribbon Tab

7.3.6 Audit Trail Viewer Object

The Audit Trail Viewer displays information about operator changes that have been logged with the audit trail function.

Related information
Audit Trail
Audit Trail Viewer

7.3.7 Button Object

The Button tool draws a button with a text and/or picture. The button can be configured to perform a specific task in runtime via the Actions ribbon tab or using script. The text on the button object can also be set to depend directly on a tag value using the General control on the Dynamics ribbon tab. If a picture is used, the picture file is added to the Project Pictures folder in the Component Library.

Settings for the button object are available from the General ribbon tab while the object is selected:

Picture Group

Parameter	Description
Picture	Selects a picture to display on the button. Pictures from the Project Pictures folder is available for selection directly. It is also possible to browse the PC environment for a picture. Select No Picture to remove a previously selected picture. Checking the Multi Picture check box will make it possible to display different pictures based on the value of a connected tag according to section Configure Multi Pictures .
Multi Picture	Multi Picture or single picture displayed on button.
Transparent	Makes the picture transparent


Note:

Make sure not to use semi-transparent pictures in projects targeted for operator panel. Since these targets do not fully support opacity, semi-transparent pictures may turn out unclear.

Configure Multi Pictures

Different pictures can be displayed on the button based on the value of a connected tag, following the steps below:

1. Check the Multi Picture check box.
2. Click on the **Picture** control on the Picture group of the General tab.
3. Select a tag to control which picture to display.
4. Click **Add** to add pictures and configure start and end values for each picture. You can browse the PC for pictures, or select pictures from the current project.

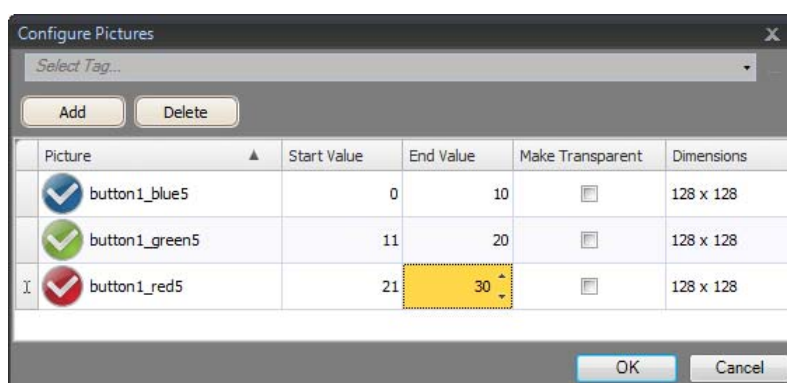

5. Click **OK**.

The picture on the button will now change according to the value of the selected tag. When the value is out of limits, no picture is displayed.

Picture Alignment Group

Parameter	Description
Vertical Alignment/ Horizontal Alignment	Set alignment for the picture

Clicking the small arrow in the lower right corner of the Picture Alignment group displays the picture properties with a number of additional picture settings.

Style Group

Parameter	Description
Style	Predefined graphical styles for the button
Appearance	The appearance of the button, including possibility to make the button rounded and settings for each corner of the button.

Additional predefined styles for this object are found in the **Object Variations** group.

Note:

When editing default button style properties, for example corner radius, appearance in runtime may sometimes differ from when designing the project in iX Developer.

Related information
Object Variations

Text Group

Parameter	Description
Text	Text displayed on the button
Multiline	Lets the text run over more than one line, using [Enter] . Confirm the text entry by pressing [Ctrl] + [Enter] .
Word Wrap	Wraps the text to fit the width of the button
Configure Texts	Links the displayed text to a tag. The Text field value is shown if the selected tag is not within the set limits

Text Alignment Group


Parameter	Description
Horizontal / Vertical	Adjusts the text on the button horizontally or vertically

Visibility Group

Parameter	Description
Transparent	Makes the object transparent

Creating a Button with Momentary Function

In order to create a button with a momentary function, you need to combine a **Set Tag** action for Mouse Down with a **Reset Tag** action for Mouse Up .

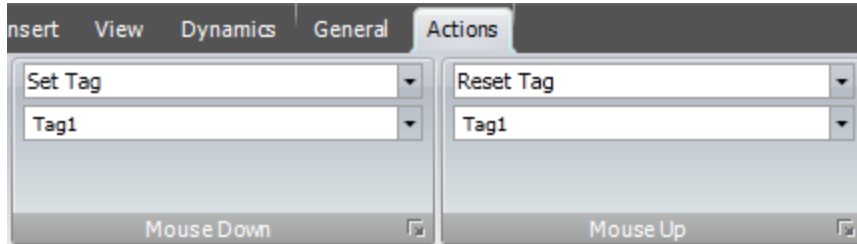


Related information
Actions Ribbon Tab
Script
Component Library

7.3.8 Circular Meter Object

The Circular Meter represents a numeric value, and displays the value of a connected tag.

Different styles can be used to change the graphical profile of the meter, and also if the meter is to be full, half or quarter.

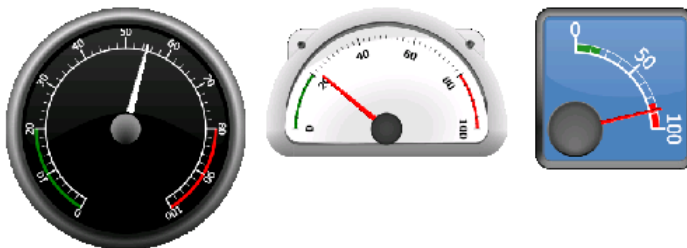

Circular meters in Black Full style, Chrome Half style and Vintage Quarter style

Settings for the meter object are available from the General ribbon tab while the object is selected:

Angular Settings Group

Parameter	Description
Start Angle / End Angle	Determines the placement of the scale on the meter. The angular value is based on a start (0 degrees) at three o'clock, in a counter clockwise direction from there. The Start Angle must differ from the End Angle.
Text Rotation	Select Parallel to let the numbers follow the outline of the meter, or None to display the numbers aligned horizontally.
Clockwise	Determines rotation orientation, clockwise or counter clockwise.

Region Settings Group

Parameter	Description
Low Region / Medium Region / High Region Min/Max	Define colors for up to 3 regions, and at which values to start and stop each region. Entering 0 for both minimum and maximum values displays no region color.

Value Scale Group

Parameter	Description
Min Value / Max Value	Start/end value of scale. These values can consist of one decimal digit.
Major Ticks	Number of labeled scale marks on the meter
Minor Ticks	Number of scale ticks between two adjacent major ticks

Style Group

Parameter	Description
Style	Predefined graphical styles for the meter. The smaller styles are intended in particular to allow full visibility in the smaller operator panels.
Appearance	The appearance of the meter; full, half or quarter

Additional predefined styles for this object are found in the **Object Variations** group.

Related information
Object Variations

Needle Settings Group


Parameter	Description
Analog Animation	Animation that creates a smooth movement of the needle at value change.
Oscillation	Animation of needle initially oscillating around the new value. The function is only available in combination with Analog Animation.
Needle Appearance	The style that the needle indicator is rendered to the display. This property is not available for PC projects.

When **Analog Animation** is selected, it is possible to activate **Shortest Path** in the property grid under **Appearance**. The setting affects the direction of the animated needle, resulting in a counter clockwise movement if this is the shortest path between two indicated values.

Note:

The Shortest Path property is not available for PC targets.

You can also use the thruster needle for circular meter objects.

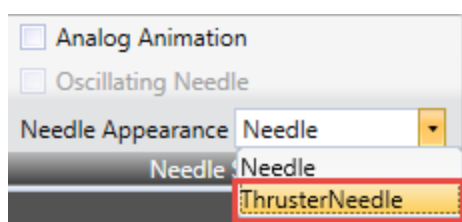

Note:

Using animation on the circular meter objects creates a higher load on the CPU. Therefore it is recommended to limit the use of the needle animation to only a few circular meters per screen, especially for the smaller panel models.

Tag/Security Group

Parameter	Description
Select Tag	Connection to a tag from the tags configuration page
Select Security Groups	Allows limiting access of the object based on security groups. If left empty, the object can be accessed by anyone.
Select Visibility	Configuration of visibility: Default: The visibility specified on the General tab of the Security Manager is used. Disabled: The object is disabled for users with insufficient access rights

Parameter	Description
	<p>Hidden: The object is invisible for users with insufficient access rights</p> <p>Normal: The object looks normal also for users with insufficient access rights</p>

Visibility Group

Parameter	Description
Transparent	Makes the object transparent
Scale	When unchecked, the scale color of the meter is made transparent. Scale color is set from Other Colors on the Format tab.

7.3.9 Chart Object

The chart object is used to display values of connected array tags.

Settings for the chart object are available from the General ribbon tab while the object is selected:

Chart Settings Group

Parameter	Description
Edit Series	Add, remove and edit the current series for this chart
Chart Types	Choose chart type. Available types are: Area Area Horizontal Bar Bar Join Donut Histogram Kagi Line Line Fast Line Horizontal Line Point Pie Points Radar
Header	Set the name that is displayed above the chart
Show Labels	If selected, then the chart will show labels adjacent to each plotted data item indicating its value. If not selected the labels will be hidden.
3D View	Set a 3D look and feel for the chart

X Axis Settings Group

Parameter	Description
Visible	Set the visibility of the X axis
Grid Visible	Set the visibility of the X axis grid lines.
Automatic	Automatically calculates the minimum and maximum X axis values. Overrides the Minimum and Maximum properties
Minimum	Set the minimum value of the X axis. If automatic is set, this value is ignored
Maximum	Set the maximum value of the X axis. If automatic is set, this value is ignored

Y1 Axis Settings Group

Parameter	Description
Visible	Set the visibility of the Y1 axis
Grid Visible	Set the visibility of the Y1 axis grid lines.
Automatic	Automatically calculates the minimum and maximum Y1 axis values. Overrides the Minimum and Maximum properties.
Minimum	Set the minimum value of the Y1 axis. If automatic is set, this value is ignored.
Maximum	Set the maximum value of the Y1 axis. If automatic is set, this value is ignored. When using charts with visible labels on curves the maximum value is extended to make room for label.

Y2 Axis Settings Group

Parameter	Description
Visible	Set the visibility of the Y2 axis
Grid Visible	Set the visibility of the Y2 axis grid lines.
Automatic	Automatically calculates the minimum and maximum Y2 axis values. Overrides the Minimum and Maximum properties.
Minimum	Set the minimum value of the Y2 axis. If automatic is set, this value is ignored.
Maximum	Set the maximum value of the Y2 axis. If automatic is set, this value is ignored. When using charts with visible labels on curves the maximum value is extended to make room for label.

Style Group

Parameter	Description
Style	Set the style of the chart

Visibility Group

Parameter	Description
Scale	Set the visibility of the scale
Transparent	Make the chart transparent
Header	Set the header visibility
Legend	Set the legend visibility

The Edit Series Dialog

Clicking the **Edit Series** control in the Chart Settings Group will open the Edit Series Dialog. The Edit Series Dialog contains the following settings:

Parameter	Description
Name	The name of the Series, as shown in the legend in the chart.
X Tag	The X Tag values. The tag must be an array tag. The number of elements shown will be the lowest common denominator of the X Tag array size and the Y Tag array size.
Y Tag	Optional: The Y Tag values for the chart. The tag must be an array tag. If this value is not chosen, the X Tag Values will still be visible and the Y Axis will be set automatically. The number of elements shown will be the lowest common denominator of the X Tag array size and the Y Tag array size.
Size	Optional: The number of elements in the tag arrays. This property overrides the sizes of the X Tag array size and Y Tag array size. If this value is not set, the lowest common denominator of the X Tags array size and the Y Tags array size will be chosen as size.
Labels	Set a label for each point in the chart. There is one label for each available tag value.
Color	Choose the color of the series. Applies to all chart types except Pie and Donut.
Colors	Select the colors to be used for the pie/donut graphic that will be generated for the series. Applies to the Pie and Donut chart types.
Thickness	Set the thickness of the series. This applies for the chart types Line, Line Fast, Line Horizontal and Line Point.
Axis Type	Select the Y Axis that this series will use.

Note:

Chart objects with large arrays where values are frequently changing may affect performance.

Related information
Array Tags

7.3.10 Database Viewer Object

The Database Viewer can be used to display database contents in runtime.

For operator panel projects, only databases included in the current project are available. For PC targets, it is possible to access databases from anywhere in the network environment.

Settings for the database viewer object are available from the General ribbon tab while the object is selected:

Settings Group

Parameter	Description
Show Controls	When the box is checked, the user is able to select database and database table in runtime
Database	Path to database to be loaded automatically in runtime ⁽¹⁾
Table Name	The table in the selected database to be loaded automatically in runtime ⁽¹⁾
Browse Data Table	Opens a browse dialog for selection of database and database table in design time. The path and table name will be added to the Database and Table Name fields.

⁽¹⁾ If the entered database or table does not exist or is not valid, an empty database viewer is displayed in runtime.

Note:

Simulation of the object on the development PC is supported only for PC targets.

Related information
Database

7.3.11 Digital Clock Object

The digital clock displays date, time and/or day of week.

The time zone is selected on the System ribbon tab and is transferred to the target when the project is downloaded to it. If no time zone is selected, the time zone that has been selected for the panel or PC will be retained.

The date and time display format (for example using AM/PM for time) is based on the operating system settings. For operator panel projects, this format may be altered by selecting another region on the System ribbon tab.

Note:

For PC projects the region settings need to be changed in the system account to take place.

Related information
Date, Time, and Region Group


Display Format Group

Parameter	Description
DateAndTime / Date / Time	Selection of date and time components
Show Day of Week	When checked, day of week is displayed
Show Seconds	When checked, seconds are displayed

7.3.12 Linear Meter Object

The Linear Meter represents a numeric value, and displays the value of a connected tag.

Different styles can be used to change the graphical profile of the meter, and also if the meter is to be horizontal or vertical.

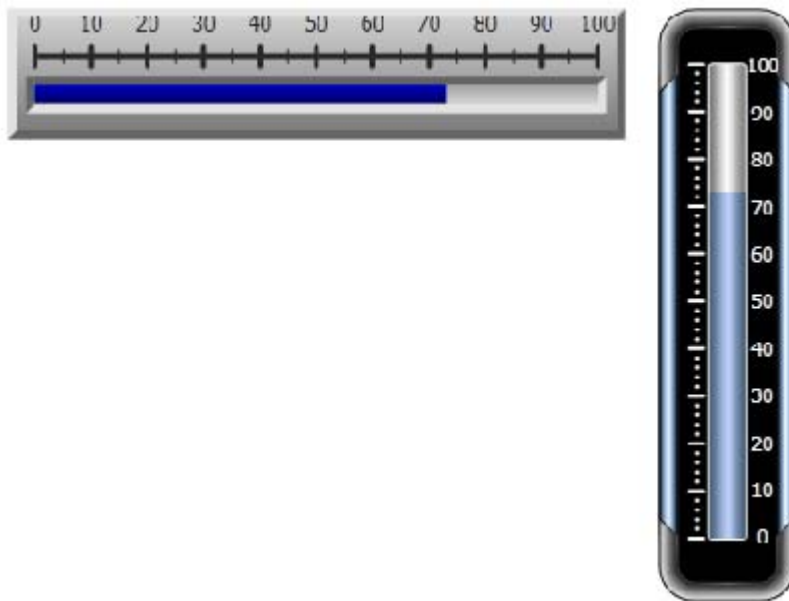

Linear meters in Classic Horizontal style and Eclipse Vertical style

Settings for the meter object are available from the General ribbon tab while the object is selected:

Value Scale Group

Parameter	Description
Min Value / Max Value	Start/end value of scale These values can consist of one decimal digit.
Major Ticks	Number of labeled scale marks on the meter
Minor Ticks	Number of scale ticks between two adjacent major ticks

Style Group

Parameter	Description
Style	Predefined graphical styles for the meter. The smaller styles are intended in particular to allow full visibility in the smaller operator panels.
Appearance	The appearance of the meter; horizontal or vertical

Tag/Security Group

Parameter	Description
Select Tag	Connection to a tag from the tags configuration page
Select Security Groups	Allows limiting access of the object based on security groups. If left empty, the object can be accessed by anyone.
Select Visibility	Configuration of visibility: Default: The visibility specified on the General tab of the Security Manager is used. Disabled: The object is disabled for users with insufficient access rights Hidden: The object is invisible for users with insufficient access rights Normal: The object looks normal also for users with insufficient access rights

Visibility Group

Parameter	Description
Transparent	Makes the object transparent; only indicator bar and scale will be visible
Scale	When unchecked, the scale color of the meter is made transparent. Scale color and indicator color are set from Other Colors on the Format tab.

7.3.13 Multi Picture Object

The Multi Picture object allows using a set of pictures as an object. The pictures change in runtime depending on intervals of a tag value.

Pictures can be imported to the project by browsing the hard disk for graphic files. Imported pictures are added to the Project Pictures folder in the Component Library.

Settings for the Multi Picture object are available from the General ribbon tab while the object is selected:

Settings Group

Parameter	Description
Configure Pictures	Configuration of start/end values of intervals and selection of pictures for each interval. Pictures can be selected from the Project Pictures folder or from the hard disk. Transparency can also be set. Original picture size is displayed. The Add/Delete buttons are used to add and remove items to/from the object.
Reset Picture	Restores original height and width to picture.
Stretch	Adapts height and width to the selection frame when resizing the picture.
Lock Aspect Ratio	Maintains the height/width ratio of the object.

Note:

Make sure not to use semi-transparent pictures in projects targeted for operator panels. Since these targets do not fully support opacity, semi-transparent pictures may turn out unclear.

Related information

[Component Library](#)

7.3.14 Picture Object

The Picture object allows using a picture as an object. Pictures can be imported to the project by browsing the PC environment for graphic files. Imported pictures are added to the Project Pictures folder in the Component Library.

The displayed picture can also be dynamic; depending of a set of pictures that have been linked to intervals in a tag value.

Settings for the picture object are available from the General ribbon tab while the object is selected:

Settings Group

Parameter	Description
Change Picture	Opens a browse dialog for selection of picture
Reset Picture	Restores original height and width to picture
Stretch	Adapts height and width to the selection frame when resizing the picture
Transparent	Makes the object transparent, i.e. makes the frame and background color invisible

Note:

Make sure not to use semi-transparent pictures in projects targeted for operator panels. Since these targets do not fully support opacity, semi-transparent pictures may turn out unclear.

Related information
Component Library

7.3.15 Roller Panel Object

The Roller Panel object is used to display predefined texts for certain tag values. Settings for the Roller Panel object are available from the General ribbon tab while the object is selected:

Settings Group

Parameter	Description
Title	Set the title for the Roller Panel
Title Visible	Determines if the title is visible or not
Loop Scroll	Determines if the values will loop around or not
Disable Operator Input	Determines if the Roller Panel is editable or not

Touch Settings Group

Parameter	Description
Scroll Sensitivity	Set the sensitivity of the scroll
Scroll Friction	Set the friction of the scroll

Text Group

Parameter	Description
Configure Texts	Opens the Configure Texts dialog

Configure Text Dialog

The Configure Texts dialog contains the following properties:

Parameter	Description
Text	The text to be displayed for the item
Start Value	The starting value for when this item should be selected
End Value	The ending value for when this item should be selected

Roller Panel Dynamics


It is also possible to set dynamics, i.e. tag dependent values for the Roller Panel properties. These can be found in the Dynamics tab in the ribbon bar.

Related information

[Dynamics Ribbon Tab](#)

7.3.16 Slider Object

The Slider can be used to adjust a numeric value. The slider sets a value to a connected tag. If the tag value changes for other reasons, the slider control handle will show the actual value in runtime.

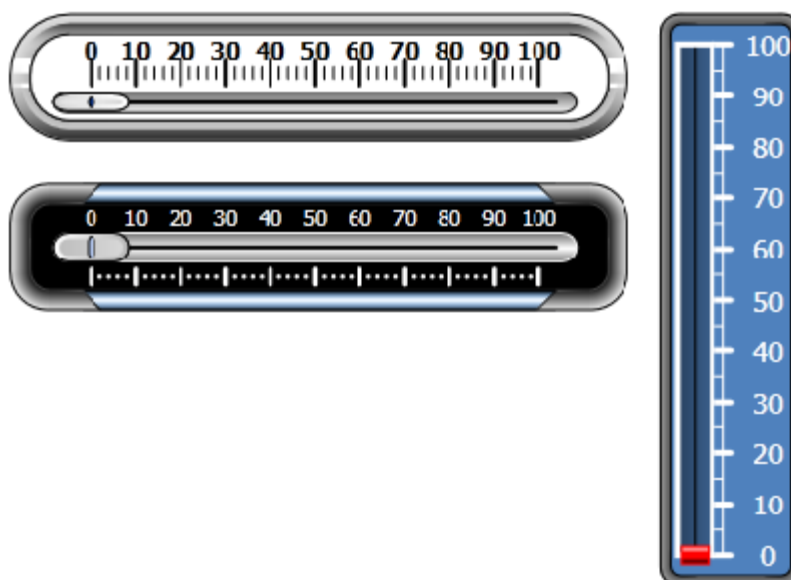

Sliders in Chrome and Eclipse Horizontal styles, and Vintage Vertical style

Settings for the slider object are available from the General ribbon tab while the object is selected:

Value Scale Group

Parameter	Description
Min Value/Max Value	Start/end value of scale These values can consist of one decimal digit.
Major Ticks	Number of labeled scale marks on the slider
Minor Ticks	Number of scale ticks between two adjacent major ticks

Style Group

Parameter	Description
Style	Predefined graphical styles for the slider. The smaller styles are intended in particular to allow full visibility in the smaller operator panels.
Appearance	The appearance of the slider; horizontal or vertical

Tag/Security Group

Parameter	Description
Select Tag	Connection to a tag from the tags configuration page
Select Security Groups	Allows limiting access of the object based on security groups. If left empty, the object can be accessed by anyone.
Select Visibility	Configuration of visibility: Default: The visibility specified on the General tab of the Security Manager is used. Disabled: The object is disabled for users with insufficient access rights Hidden: The object is invisible for users with insufficient access rights Normal: The object looks normal also for users with insufficient access rights

Visibility Group

Parameter	Description
Transparent	Makes the object transparent
Scale	When unchecked, the scale color of the slider is made transparent. Scale color and indicator color (color of the handle) are set from Other Colors on the Format tab.

7.3.17 Tag Monitor Object

The Tag Monitor object makes it possible to show and set the values of tags in the system. This is useful for making a system diagnosis.

Settings for the Tag Monitor object are available from the General ribbon tab while the object is selected:

Button Group

Parameter	Description
Del Selected	Delete the selected tag
Add	Add a tag
Clear	Delete all the tags

Display Settings Group

Parameter	Description
Configure columns	Opens a dialog where it is possible to configure the columns in the tag monitor object
Show Column Headers	Select if the column headers are to be shown in the tag monitor object

7.3.18 Text Object

The Text object is used to display read-only information for the operator. The displayed text can be static, or linked to intervals in a tag value that contain different strings. The text object can also be set to depend directly on a tag value using the General control on the Dynamics ribbon tab.

Settings for the text object are available from the General ribbon tab while the object is selected:

Text Group

Parameter	Description
Text	Text that the object displays
Multiline	Lets the text run over more than one line, using [Enter]. Confirm the text entry by pressing [Ctrl] + [Enter].
Word Wrap	Wraps the text to fit the width of the object. Not available if Autosize is selected.
Configure Texts	Links the displayed text to a tag. The Text field value is shown if the selected tag is not within the set limits.
Auto Stretch Font	Resizes the font to fit the height of the object. Not available if Autosize is selected.
Auto Size	Resizes the object according to the size of the default text string length and font size. Default setting for the text object.

Text Alignment Group

Parameter	Description
Horizontal / Vertical	Adjusts the text in the object horizontally or vertically. Not available if Autosize is selected.

7.3.19 Touch Combo Box Object

The Touch Combo Box object is used to create text selections from a drop-down list.

Settings for the Touch Combo Box object are available from the General ribbon tab while the object is selected:

Settings Group

Parameter	Description
Auto Size Item Height	The Touch Combo Box will ignore the Item Height value and size the values automatically
Item Height	Set the height of the individual items in the Touch Combo Box
ArrowBox Width	Set the width of the Arrow Box
ScrollBar Width	Set the width of the scroll bar

Text Group

Parameter	Description
Configure Texts	Opens the Configure Texts dialog

Configure Text Dialog

The Configure Texts dialog contains the following properties:

Parameter	Description
Text	The text to be displayed for the item
Start Value	The starting value for when this item should be selected
End Value	The ending value for when this item should be selected

Touch Settings Group

Parameter	Description
Scroll Sensitivity	Set the sensitivity of the scrolling

Touch Combo Box Dynamics

It is also possible to set dynamics, i.e. tag dependent values for the Touch Combo Box properties. These can be found in the Dynamics tab in the ribbon bar.

Related information
Dynamics Ribbon Tab

7.3.20 Touch List Box Object

The Touch List Box object is used to handle a list of predefined texts.

Settings for the Touch List Box object are available from the General ribbon tab while the object is selected:

Settings Group

Parameter	Description
Separator Visible	Show or hide a separator between the items in the Touch List Box
Item Height	Set the height of the individual items in the Touch List Box
ScrollBar Width	Set the width of the scroll bar

Touch Settings Group

Parameter	Description
Scroll Sensitivity	Set the sensitivity of the scrolling

Text Group

Parameter	Description
Configure Texts	Opens the Configure Texts dialog

Configure Texts Dialog

The Configure Texts dialog contains the following properties:

Parameter	Description
Text	The text to be displayed for the item
Start Value	The starting value for when this item should be selected
End Value	The ending value for when this item should be selected

Touch List Box dynamics

It is also possible to set dynamics, i.e. tag dependent values for the Touch List Box properties. These can be found in the Dynamics tab in the ribbon bar.

Related information
Dynamics Ribbon Tab

7.3.21 Trend Viewer Object

Trend viewers are used to display values of connected tags. Trend viewer curves represent tag values over time. A trend viewer object can show any number of trend viewer curves.




Note:

A large number of trend viewer pens and short sampling intervals may affect communication performance.

Related information
Trend Viewer
Curves Group
Communication Performance

7.4 Media Controls

The media controls are used to display media files, pdf files and web pages in runtime. The following media controls are described:

Media Player Object 	PDF Viewer Object 	Web Browser Object 
--	--	--

7.4.1 Media Player Object

Media files can be connected to the media player object, which allows selecting, starting and stopping the files in runtime. The table below shows the supported media formats for the various panels.

Panel	Supported Media Formats
X2 base iX TxA	No media player object
iX TxB iX TxC	.mpeg1, .wmv
X2 pro 4 X2 pro 7 X2 control 4/7 X2 marine 7 (including SC)	.mpeg1
X2 marine 7 HB (including SC) X2 marine 15 (including SC and HB) X2 pro 10/12/15/21 X2 control 10/12/15/21 X2 extreme 7/15 (including SL, SC and HP)	.mpeg1, .avi, .wmv, .mpeg4*.

* Only mpeg4 simple profile partial codec (included in WMV lib) is supported. More compressed/advanced codecs of mpeg4, for example AVC, is not supported.

Browse Folders Group

Parameter	Description
Project Files	Default option for browsing. The project files are listed in the Component Library. At least one of the folders has to be chosen.
External Memory Card	Select this option for browsing if project files are placed on an external memory card. At least one of the folders has to be chosen.

Settings Group

Parameter	Description
Media Source	Select a media file to add to the media player, from the project files folder or by browsing the PC

Note:

The object is not supported on X2 base targets. Simulation of the object on the development PC is supported only for PC targets.

Note:

Connecting a tag to a Media Player Object will cause the media player to try to play a media clip with a name that corresponds to the tag's value, ignoring the configured Media Source parameter.

Scripting to the Media Player Object

When scripting to the Media Player object, the name of the current media file has to be stated, for example:

```
MediaPlayer1.Source = "Bear.wmv";
```

Prior to running the script, the media file has to be added manually to the Project Files folder. When the script is executed, the file will be copied to the output directory.

Events for the media player can be used, for example:

```
MediaPlayer1.Play();
```

Related information
Component Library

7.4.2 PDF Viewer Object

PDF files can be displayed in runtime using the PDF viewer object. The added files are available from the Component Library.

Note:

PDF Viewer on X2 pro is not fully supported. There are some limitations for display of table of contents, headings, table text and scroll bar.

Browse Folders Group

Parameter	Description
Project Files	Default option for browsing. The project files are listed in the Component Library. At least one of the folders has to be chosen.
External Memory Card	Select this option for browsing if project files are placed on an external memory card. At least one of the folders has to be chosen.

Settings Group

Parameter	Description
PDF File	Select a PDF file to add to the PDF viewer, from the project files folder or by browsing the PC
Buttons	Select which buttons to make available in runtime

In an operator panel, all PDF files in the project files folder will be available for selection in runtime, if the Open button is checked.

Note:

When using a PDF viewer object in a popup screen, only the default style for the popup screen is supported.

Note:

The object is not supported on X2 base or X2 panels 4" and 7" (except for X2 marine 7 HB SC) targets. Simulation of the object on the development PC is supported only for PC targets.

Related information
Component Library
Popup Screen
Troubleshooting

7.4.3 Web Browser Object

Web pages can be displayed using the web browser. It is possible to set up the web browser with regular web browsing functionality, with selection of web addresses in a list or input via the virtual keyboard. It is also possible to allow showing certain defined web pages only, or a local HTM/HTML file.

If certain characters are displayed incorrectly in the web browser, it is because the panel does not support the font in that language.

The virtual keyboard in iX Developer is not used in the web browser object. For iX TxC panels and PC targets we recommend using the *Tablet PC Input Panel* in Windows (found under *Accessories > Tablet PC*). Otherwise we recommend using an external keyboard.

Note:

Microsoft Internet Explorer 9 or later is required.

Settings Group

Settings for the Web Browser object are available from the General ribbon tab while the Web Browser object is selected:

Parameter	Description
Address	The default web page of the web browser object.
Home	The web page that will be displayed when the Home button is pressed.
Favorites	Addition of web pages that will be available for selection from the drop-down address field in runtime.
Address Read Only	Checking the box disables entering text in the address field
Address Field	Unchecking the box removes the address field in runtime
Go Button	Unchecking the box removes the Go button in runtime
Home Button	Unchecking the box removes the Home button in runtime
Back Button/Forward Buttons	Unchecking the box removes the navigation buttons in runtime

Referring to a local HTM/HTML file can be useful for example when the operator panel is not connected to Internet. The local file — a .HTM- or .HTML-file — has to be located in the Project Files folder of the current project, and is addressed in the following format: “File://filename.html” where “filename.html” represents the actual file”, e.g. *File://ReadMe.html*.

Web Browser Limitations

The web browser object functionality is limited under some circumstances:

Function	Limitation description	PC targets	operator panel targets
Web browser object		Supported	Not supported on X2 base targets
Popup windows	Opening popup windows from the web browser in runtime	Not supported	Not supported
Web browser in a popup screen	Other styles than the default style for the popup screen	Not supported	Not supported
Simulation of the web browser	Simulation on the development PC	Supported	Not supported
Support of some web pages	Access of some web pages from within the web browser.	Supported	May not be supported. If the web browser does not behave as expected, it is recommended to use the standard Internet Explorer, available in the iX panel, instead. The standard Internet Explorer can be started using the Run action and executing the iesample.exe file.

Related information

[Popup Screen](#)

7.5 Miscellaneous Control Objects

The following controls are described:

[QR Code object](#)

7.5.1 QR Code object

The QR Code control object generates and draws a QR Code from regular text. The QR Code can either be generated from a constant string or a connected tag which regenerates the code whenever the tag value changes.


Settings for the QR Code control are available from the Property Grid tab while the object is selected, either from the screen or from the Object Browser tab.

QRCodeContent is the property which is used to generate a string to a QR Code image. The property can either be a static text or connected to a dynamic string tag.

How to setup a QR Code generated from a tag

Example:

In this example we are using an internal string tag with initial value configured. When the tag is changed in runtime, the QR Code image will be generated on the screen.

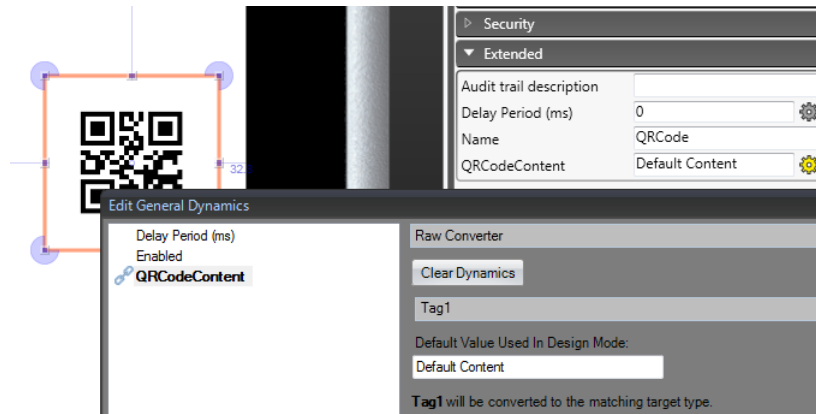

Example of QR Code generated from an internal tag. Tag value changes will automatically update the QR code image on the screen.

To configure the QR Code object to generate image from static text:

1. Place a QR Code object on the screen surface.
2. Edit the text in the QRCodeContent textbox in the Property Grid. The QR Code image (on the screen) will only be regenerated when the QRCodeContent text is changed.

To configure the QR Code object to dynamically generate image from a tag:

1. Configure an internal tag in the tag editor by setting the Data Type to STRING. For convenience, make sure that the tag has a suitable initial value.
2. Place a QR Code object on the screen surface.
3. Open up the Edit General Dynamics dialog by clicking on the gear button to the right side of the QRCodeContent textbox in the Property Grid.
4. Select Raw Converter. Select the tag from section 1 above.
5. Optionally, edit the Default value for design mode.

Note:

Creating a QR Code object without any content will create an empty object. This is shown in Runtime as an invisible QR Code object on a PC, and as a grey QR Code object on an operator panel, since operator panel targets do not fully support opacity.

Using QR Code in script

In cases where the QR Code image is to be generated from a script, use an internal tag binding as in the example above and write content data to the tag value in a script function.

7.6 Special Controls

The special controls are used to create attractive navigation facilities in runtime.

Navigation List Box Object 	Screen Carousel Object 
---	---

7.6.1 Navigation List Box Object

Screen navigation using the Navigation List Box object is performed via thumbnails, and scripting can be used for advanced functionality.

Note:

The object is supported only for iX TxC and PC targets.

General Group

Parameter	Description
Orientation	Select horizontal or vertical orientation for runtime scrolling.
Scroll Tolerance	Defines tolerance of pressing the touch screen (or scrolling with the cursor) slightly outside of a navigation list box item in runtime before the navigation is actually carried out.

Item Settings Group

Parameter	Description
Configure Items	Definition of items included in the navigation list box object; see below.
Height/Width	Size of the items in the navigation list box.
Margin	Margin between navigation list box items.
Border Width	Width of navigation list box item borders.
Corner Radius	Corner radius of navigation list box items.
Show Text	Selection of whether to show text below navigation list box items.

The individual items in the navigation list box object are handled by clicking **Configure Items**. Use the **Add** and **Delete** buttons to add and remove items to/from the navigation list box.

Parameter	Description
Picture	Selection of picture by browsing the PC environment or among the project files.
Screen	Selection of screen to navigate to.

Parameter	Description
Script Info	Optional text to serve as a reminder if scripts are used.
Text	Text displayed under each navigation list box item. Only visible if Show Text is checked under Item Settings.

Use the up and down arrows to facilitate reorganizing of navigation list box items.

Related information
Script

7.6.2 Screen Carousel Object

Screen navigation using the Screen Carousel object is performed via thumbnails in a 3D view. The screen carousel can be configured to rotate automatically, or actions can be configured to control screen carousel behavior.

Note:

The object is supported only for iX TxC and PC targets.

Note:

If the iX Developer system requirements for the graphic card are not fulfilled, the visualization of the object will have limitations. Hardware acceleration is required.

General Group

Parameter	Description
Number of Visible Items	Maximum number of visible items.
Scroll Duration (ms)	Time used for an item to move to the next position in the carousel.
Use Reflection	Adds a reflecting layout to the object.
Auto Scroll	Makes the object rotate automatically.

Item Settings Group

Parameter	Description
Configure Items	Definition of items included in the screen carousel object; see below.
Height/Width	Size of the items in the screen carousel.
Margin	Margin between screen carousel items.
Border Width	Width of screen carousel item borders.
Corner Radius	Corner radius of screen carousel items.
Show Text	Selection of whether to show text below screen carousel items.

The individual items in the screen carousel object are handled by clicking **Configure Items**. Use the **Add** and **Delete** buttons to add and remove items to/from the screen carousel.

Parameter	Description
Picture	Selection of picture by browsing the PC environment or among the project files.
Screen	Selection of screen to navigate to.
Script Info	Optional text to serve as a reminder if scripts are used.
Text	Text displayed under each screen carousel item. Only visible if Show Text is checked under Item Settings.

Use the up and down arrows to facilitate reorganizing of screen carousel items.

Related information
Actions Ribbon Tab

7.7 Debug Tools

Debug tools are used for troubleshooting and monitoring.

Alarm Distributor Viewer Object	-
---	---








7.7.1 Alarm Distributor Viewer Object

The Alarm Distributor Viewer is a debug tool, used to display information from the Alarm Distributor function.

Related information
Alarm Management
Alarm Distributor Viewer

7.8 Windows Controls

The following Windows controls are described:

Check Box Object 	Combo Box Object 	Group Box Object 	List Box Object 
Progress Bar Object 	Radio Button Object 	Text Box Object 	-

7.8.1 Check Box Object

The Check Box object controls a digital tag value. The connected tag gets the value 1 when the box is checked and the value 0 when the box is unchecked.

The appearance of the text can be adjusted in the Font group of the Home ribbon tab.

Note:

Changing font family is only supported for projects designed for iX TxC and PC targets.

Settings for the check box are available from the General ribbon tab while the object is selected:

Text Group

Parameter	Description
Text	Text that the object displays
Multiline	Lets the text run over more than one line, using [Enter] . Confirm the text entry by pressing [Ctrl] + [Enter] .
Word Wrap	Wraps the text to fit the width of the object. Not available if Autosize is selected.
Auto Stretch Font	Resizes the font to fit the height of the object. Not available if Autosize is selected.
Auto Size	Resizes the object according to the size of the default text string length and font size.

Text Alignment Group

Parameter	Description
Horizontal / Vertical	Adjusts the text in the text box horizontally or vertically. Not available if Autosize is selected.

7.8.2 Combo Box Object

A Combo Box can be used to create selections from a drop-down list. When a keyboard is connected to the operator panel it is also possible to make selections from the list by typing.

Settings for the combo box are available from the General ribbon tab while the object is selected:

Text Group

Click **Configure Texts** to enter texts for different values.

Select a tag, and then click **Add** until there are enough rows in the table. Enter texts and start values.

It is also possible to use script code to control the contents of a combo box.

Example

The following script code relies on the existence of a combo box (ComboBox1) and a set of predefined recipes (“Book” and “TV”).

```
void Screen1_Opened(System.Object sender, System.EventArgs e)
{
    ComboBox1.Items.Clear();
    ComboBox1.Items.Add("Book");
    ComboBox1.Items.Add("TV");
}

void ComboBox1_SelectionChanged(System.Object sender, System.EventArgs e)
{
    string selectedItem = ComboBox1.SelectedItem as string;
    Globals.Recipe1.LoadRecipe(selectedItem);
}
```

When the screen opens, the script clears the box and writes the recipe name strings in the box. Selection from the combo box triggers loading of a recipe.

Related information
Script
Recipe Management

7.8.3 Group Box Object

The Group Box is used to draw a labeled frame around a group of objects.

7.8.4 List Box Object

The List Box handles a list of predefined texts.

Text Group

Click **Configure Texts** to enter texts for different values.

Select a tag, and then click **Add** until there are enough rows in the table. Enter texts and start values.

It is also possible to use script code to control the contents of a list box.

Example

The following script code includes two objects on Screen1, a button (Button1) and a list box (ListBox1).

```

public partial class Screen1
{
    int count=0;
    void Button1_Click(System.Object sender, System.EventArgs e)
    {
        ListBox1.Items.Add("Count " + count.ToString());
        count++;
    }
}

```

When the button is clicked, the script is triggered and a string is written to the list box and the value of an internal counter (count) is incremented.

Related information

Script

7.8.5 Progress Bar Object

The Progress Bar displays a meter without numeric scaling, representing an analog value. The value can be connected to a tag.

The other properties, such as orientation, minimum and maximum values, and meter color (foreground property) are set in the Property grid.

Related information

PropertyGrid

7.8.6 Radio Button Object

A Radio Button controls the value of a connected digital tag.

The appearance of the text can be adjusted in the Font group of the Home ribbon tab.

Settings for the radio button are available from the General ribbon tab while the object is selected:

Text Group

Parameter	Description
Text	Text that the object displays
Multiline	Lets the text run over more than one line, using [Enter]. Confirm the text entry by pressing [Ctrl] + [Enter].
Word Wrap	Wraps the text to fit the width of the object. Not available if Autosize is selected.
Auto Stretch Font	Resizes the font to fit the height of the object. Not available if Autosize is selected.
Auto Size	Resizes the object according to the size of the default text string length and font size.

Text Alignment Group

Parameter	Description
Horizontal / Vertical	Adjusts the radio button text horizontally or vertically. Not available if Autosize is selected.

It is possible to use script code to make a group of radio buttons enable combined control of a tag value. Exactly one of the radio buttons is active (set to 1) at any time. The following example includes 3 radio buttons and a tag of int16 type.

```
public partial class Screen1
{
    void Screen1_Opened(System.Object sender, System.EventArgs e)
    {
        Globals.Tags.Tag1.ValueChange += Tag1_ValueChanged;
        SetRadioButtonState(Globals.Tags.Tag1.Value);
    }

    void Screen1_Closed(System.Object sender, System.EventArgs e)
    {
        Globals.Tags.Tag1.ValueChange -= Tag1_ValueChanged;
    }

    private void Tag1_ValueChanged(System.Object sender, System.EventArgs e)
    {
        SetRadioButtonState(Globals.Tags.Tag1.Value);
    }

    private void SetRadioButtonState(int Value)
    {
        RadioButton1.Checked = (Value == 1);
        RadioButton2.Checked = (Value == 2);
        RadioButton3.Checked = (Value == 3);
    }

    void RadioButton1_Click(System.Object sender, System.EventArgs e)
    {
        Globals.Tags.Tag1.Value = 1;
    }

    void RadioButton2_Click(System.Object sender, System.EventArgs e)
    {
        Globals.Tags.Tag1.Value = 2;
    }

    void RadioButton3_Click(System.Object sender, System.EventArgs e)
    {
        Globals.Tags.Tag1.Value = 3;
    }
}
```

Radio buttons are grouped based on which screen they belong to.

Related information
Script

7.8.7 Text Box Object

The Text Box is used to include a box with multiple rows of text.

By default, the text can be modified when clicking on the box in runtime. The entered text is not saved in runtime; when the screen changes the value will be reset. The text box can also be configured as read-only.

Settings for the text box object are available from the General ribbon tab while the object is selected:

Text Group

Parameter	Description
Text	Text that the object displays
Multiline	Lets the text run over more than one line, using [Enter]. Confirm the text entry by pressing [Ctrl] + [Enter].
Word Wrap	Wraps the text to fit the width of the object
Read Only	Disables input in runtime

Text Alignment Group

Parameter	Description
Horizontal / Vertical	Adjusts the radio button text horizontally or vertically

Visibility Group

Parameter	Description
Transparent	Makes the object transparent, i. e. everything but the text will be invisible

7.9 Additional Controls

iX Developer allows using and creating third party controls in order to enhance application functionality and additional customization. This section describes different technologies and includes configuration examples. Sample projects are available at the Beijer Electronics web site.

To understand and use all the information in this document, .Net development skills are required.

Caution:

Beijer Electronics only offers support for the examples described in this chapter.

Related information
Referenced Assemblies
Error Related to Third Party Controls

7.9.1 Target Platform

Different technologies are used for third party controls depending on the target platform for the iX Developer application. The target can be either PC or Windows CE.

PC

Two different technologies can be used for a PC:

- Standard Windows forms and GDI+
- WPF (Windows Presentation Foundation)

WPF uses vector graphics, and the appearance of the control is described in XAML. Since iX Developer is a WPF application, it is recommended to use WPF when developing customized controls or user controls for a PC. Controls developed in WPF can bind to a tag value in iX Developer, in opposite to Windows forms controls, that cannot be bound to tag values.

Windows CE Target

Windows CE only uses the .Net Compact Framework (a subset of the .Net Framework used on a PC), and does not support vector graphics (WPF). GDI+ is not supported on Windows CE target.

Limitations

Some of the limitations regarding third party controls are listed below:

- Control Designers (a designer class that can extend design time support) are currently not supported.
- Type Converters in a separate design dll are not supported.
- Complex property editing in the property grid is not supported. All complex properties have to be set up in script.
- .Net Compact Framework controls can include design dll and so called AssmetaData dll to handle attributes that are not supported in Windows CE. Currently this is not supported by iX Developer. Because of this, it is important to always test the code on the target platform.
- The Script Editor allows scripting against properties and methods that are not supported in Windows CE. Because of this, it is important to always test the code on the target platform.

7.9.2 Adding Controls to the iX Developer Toolbox

Third party controls can be added to the Objects toolbox in iX Developer, following the steps below:

Caution:

Beijer Electronics only offers limited support for thirdparty controls.


1. Select the **Objects** group on the **Home** ribbon tab, and fully expand the Objects toolbox by clicking the lower right arrow.



2. Click **Add Control**.



3. Select controls to add among the default controls, or click **Browse** to add customized controls.

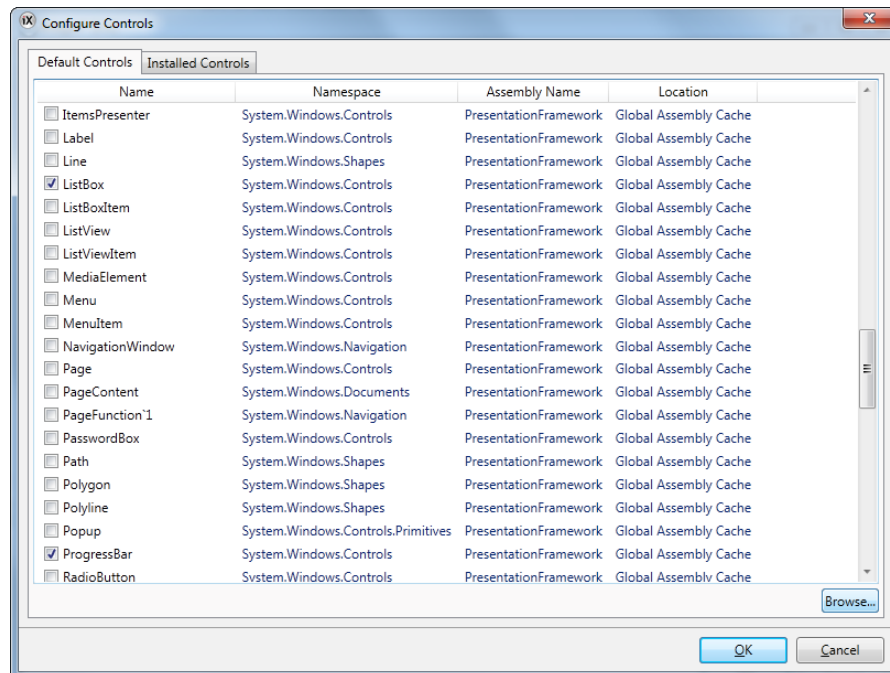

Note:

Additional controls are possible to use "as is" in iX Developer but are not officially supported by Beijer Electronics. iX Developer users are responsible for the use and functionality of all Additional controls.

4. Click **OK**.

The added controls are now available under **Additional Controls** in the Objects toolbox.

7.9.3 Default Controls and Installed Controls

Default controls include controls added by the user and the .Net 4 controls installed with the .Net Framework.

Installed controls include all controls that are installed in the GAC (Global Assembly Cache) on your computer.

Note:

Third party controls that are used in a project are not copied to the project folder. This means that it is not possible to open a project with third party controls on another development PC without installing the controls. But the application will work in runtime on another target, since references are copied to the output folder when building the project.

7.10 WPF Controls

WPF (Windows Presentation Foundation) uses vector graphics, and the appearance of the control is described in XAML. Since iX Developer is a WPF application, it is recommended to use WPF when developing customized controls or user controls for a PC. Controls developed in WPF can bind to a tag value in iX Developer.

User controls and custom controls are supported in WPF.

7.10.1 WPF User Controls

A WPF user control can be described as a composition of different user interface controls. Creating a WPF user control is similar to creating a window:

- You have a XAML file and C# class file for a user control.
- The class file extends the user control class, adding additional behavior and properties.
- The XAML file encapsulates the composing controls; styles, templates, animations and whatever necessary for “Look & Feel”.

7.10.2 WPF Custom Controls

WPF custom controls are more flexible, but are more complicated than a user control, and require a profound understanding of the WPF user interface model.

- A number of certain user interface controls, such as button, progress bar or speedometer has to be extended.
- The appearance of the custom control has to be defined in XAML, as the custom control itself has no look.

Most of the controls in iX Developer are custom controls, which makes it possible to restyle them to various different layouts without changing the code files; just the XAML.




A rounded meter in different styles

7.10.3 Creating a WPF User Control with Tag Connection

The following example describes how to create a WPF user control that can be connected to a tag.

The complete code is included at the end of the example.

1. Start Visual Studio to create a new project, and select **WPF User Control Library**.

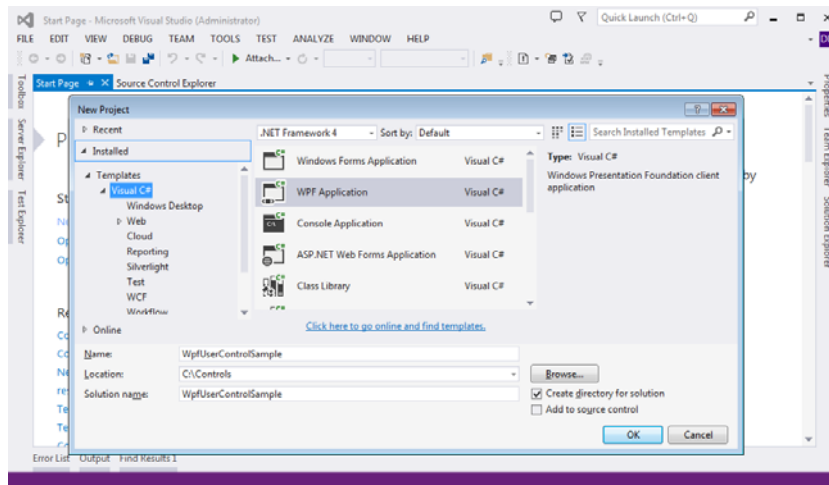

2. Add [DefaultProperty("Value")] to the class, to define which property the tag should set when the value is set.
3. Add a dependency property with same name as the attribute above: static readonly DependencyProperty ValueProperty;
4. Add a static constructor and register to the dependency property.
5. Create a Value property of type object.
6. Open the tab of the .xaml file.
7. Add a TextBox to the user control.
8. Set the name of your control.
9. Add a binding to the TextProperty and bind to the Value Property.

```
<UserControl x:Class="WpfUserControlSample.SampleUserControl"
    xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
    xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml"
    xmlns:mc="http://schemas.openxmlformats.org/markup-compatibility/2006"
    xmlns:d="http://schemas.microsoft.com/expression/blend/2008"
    mc:Ignorable="d"
    x:Name="userControl1"
    d:DesignHeight="177" d:DesignWidth="275">
    <TextBox Text="{Binding Value, ElementName=SampleUserControl, FallbackValue=0}"
    Name="textBlock1" Background="#FFB7E9" TextAlignment="Center" />
</UserControl>
```

10. Remember to change ElementName to the name of your control.
11. Compile and test by adding the control to the iX Developer toolbox.

Note:

When an update is made, the existing control must be updated under
C:\Users\Public\Documents\Beijer Electronics AB\iX Developer\Thirdparty\

Example Code

```

using System;
using System.Collections.Generic;
using System.Windows.Controls;
using System.Windows;
using System.ComponentModel;

namespace WpfUserControlSample
{
    /// <summary>
    /// Interaction logic for UserControlSample.xaml
    /// </summary>
    [DefaultProperty("Value")]
    public partial class SampleUserControl : UserControl
    {
        public static readonly DependencyProperty ValueProperty;
        static SampleUserControl()
        {
            FrameworkPropertyMetadata frameworkPropertyMetadata = new
            FrameworkPropertyMetadata("0", FrameworkPropertyMetadataOptions.Journal |
            FrameworkPropertyMetadataOptions.BindsTwoWayByDefault);

            ValueProperty = DependencyProperty.Register("Value", typeof(object),
            typeof(SampleUserControl), frameworkPropertyMetadata);
        }
        public SampleUserControl()
        {
            InitializeComponent();
        }
        public object Value
        {
            get { return GetValue(ValueProperty); }
            set { SetValue(ValueProperty, value); }
        }
    }
}

```


7.10.4 Creating a Windows Forms User Control for a PC Target

The following example describes how to create a Windows Forms user control designated for a PC target.

Note:

Windows Forms control objects are placed on top of WPF control objects in PC targets.

1. Start Visual Studio to create a new project, and select **Windows Forms Control Library**.

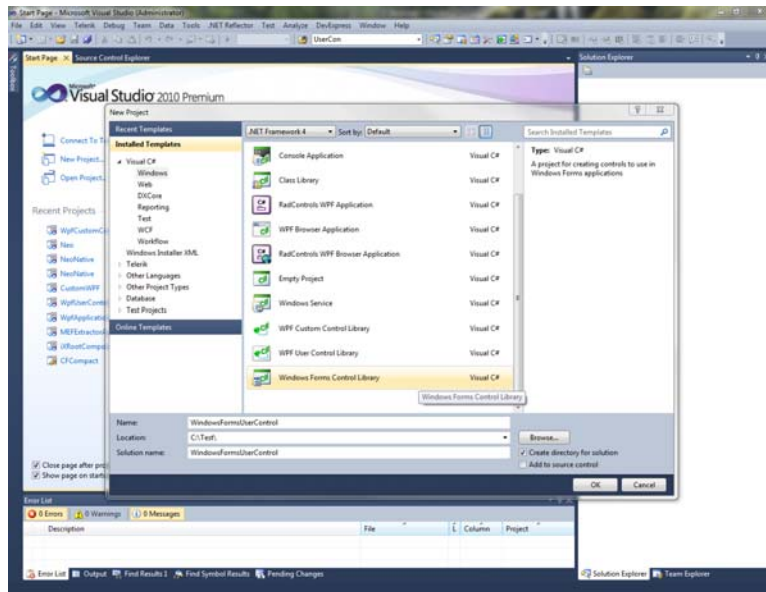

2. Add a TextBox and a Button to the design surface.
3. Add Event Handler for Button click.
4. Add Event Handler for TextBox lost focus.

5. Add a Value Property and INotifyPropertyChanged implementation:

```
public partial class SampleUserControl : UserControl,
INotifyPropertyChanged
{
    public SampleUserControl()
    {
        InitializeComponent();
    }

    public object Value
    {
        get { return textBox1.Text; }
        set
        {
            if (value != null)
            {
                textBox1.Text = value.ToString();
            }
            FirePropertyChanged("Value");
        }
    }

    private void OnButtonClick(object sender, EventArgs e)
    {
        Value = "0";
    }

    private void OnLostFocus(object sender, EventArgs e)
    {
        Value = textBox1.Text;
    }

    public event PropertyChangedEventHandler PropertyChanged;
    public virtual void FirePropertyChanged(string propertyName)
    {
        PropertyChangedEventHandler handler = PropertyChanged;
        if (handler != null)
        {
            handler(null/*this*/, new
                PropertyChangedEventArgs(propertyName));
        }
    }
}
```

6. Use the following code to connect the control to a tag value in iX Developer:

```
public partial class Screen1
{
    void Screen1_Opened(System.Object sender, System.EventArgs e)
    {
        // Hook up value change for a tag
        Globals.Tags.Tag1.ValueChange += OnTagValueChanged;
        // Hook up Property Change on the User Control
        SampleUserControl1.PropertyChanged +=
        OnUserControlValueChanged;
        // Set initial value
        SampleUserControl1.Value = Globals.Tags.Tag1.Value;
    }

    private void OnTagValueChanged(object sender,
    Neo.ApplicationFramework.Interfaces.Events.ValueChangedEventArgs
    e)
    {
        SampleCEUserControl1.Value = e.Value;
    }

    private void OnUserControlValueChanged(object sender,
    System.ComponentModel.PropertyChangedEventArgs e)
    {
        Globals.Tags.Tag1.Value = new
        VariantValue(SampleCEUserControl1.Value);
    }

    void Screen1_Closing(System.Object sender,
    System.ComponentModel.CancelEventArgs e)
    {
        // Always remember to unhook the event handlers, otherwise a
        //memory leak is generated
        Globals.Tags.Tag1.ValueChange -= OnTagValueChanged;
        SampleUserControl1.PropertyChanged -=
        OnUserControlValueChanged;
    }
}
```

The code shows how the value is set on the user control when the tag changes its value, and how the tag value is changed when the user control changes its value.


7.10.5 Creating a Windows Forms User Control for a CE Target

The following example describes how to create a Windows Forms user control designated for an operator panel target (excluding iX TxC).


Note:

Windows Forms control objects are placed on top of control objects created with the iX Developer software.

1. Start Visual Studio 2005 or 2008 to create a new Smart Device Project.

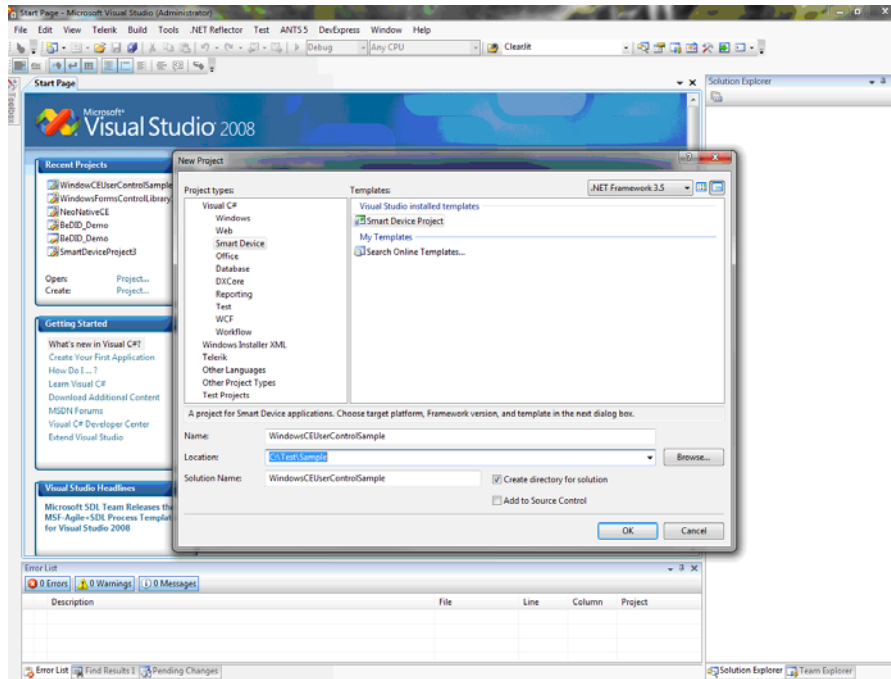

2. Select **Windows CE** for Target platform.
3. Select **Control Library**.

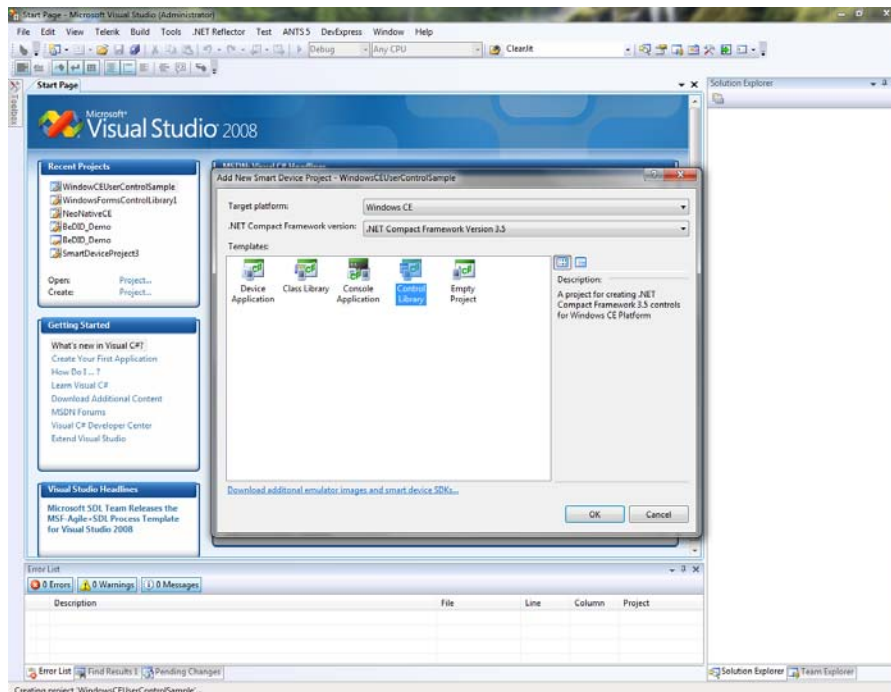

4. Use the same code as in the *Creating a Windows Forms User Control for a PC Target* example.

Note:

Always test your code on the target platform, as properties/methods currently not supported may be included in the code. See [Limitations](#) for details.

8 Ribbon Tabs

Each of the ribbon tabs holds a set of one or more groups. Each group holds a set of one or more controls that are used to manage screens and functions in a project.



The behavior of the ribbon tabs can be configured to be context dependent using the **Options** button in the File menu.

Double-click on any of the ribbon tab headings to collapse the ribbon area. A double-click on a ribbon tab, when the ribbon is collapsed, brings back the original style. This can also be changed from the context menu of the Quick Access toolbar. Tooltips are displayed for all controls on the ribbon tabs. The tooltip offers a brief description of the selected control.

iX Developer contains the following ribbon tabs:

Home Ribbon Tab
Project Ribbon Tab
System Ribbon Tab
Insert Ribbon Tab
View Ribbon Tab
Dynamics Ribbon Tab
General Ribbon Tab
Actions Ribbon Tab

Related information

Options
Quick Access Toolbar

8.1 Home Ribbon Tab


The Home ribbon tab contains groups of controls for editing screens in the project:

Clipboard Group
Screen Group
Objects Group
Font Group
Format Group

<i>Tag/Security Group</i>
<i>Name Group</i>

8.1.1 Clipboard Group

The Clipboard group contains the paste, cut, copy and format painter controls.

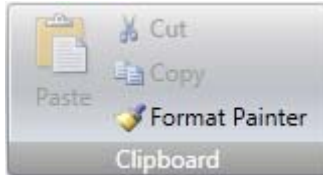

Cut

Cuts the selection to the clipboard. Also available from the keyboard with [Ctrl] + x or from the context menu.

Copy

Copies the selection to the clipboard. Also available from the keyboard with [Ctrl] + c or from the context menu.

Paste

Copies the clipboard to the current screen. Also available from the keyboard with [Ctrl] + v or from the context menu.

Note:

Text from a compatible source, e.g. clipboard text, will be converted to a Text Box object when pasted into a screen.

Format Painter

The Format Painter control is used to copy formatting from one object to another. This is useful when creating a uniform appearance for objects.

To apply formatting to another object:

1. Click on an object with the desired format and font properties. Click on the **Format Painter** control. The mouse pointer changes to a paintbrush.
2. Click on the object to format.

The format properties from the first object is applied to the selected object.

Format and font properties can be copied between objects of different types, for example from a rectangle to an HMI control.

Note:

Modification to an object using the **Other Colors** control is not applied when using the Format Painter.

Related information

[Other Colors](#)

8.1.2 Screen Group

The Screen control group contains the add screen, background screen and delete screen. Screens can also be added and deleted from other controls, such as the Navigation Manager and the context menu of the Project Explorer.



Add Screen

The **Add Screen** command creates a new empty screen that opens for editing. Clicking the lower part of the Add Screen button shows a selection of screen templates that are available for selection.

Delete Screen

The **Delete Screen** command removes the current screen from the project, and also disconnects any associations from other screens to the removed screen.

Note:

A deleted screen cannot be restored with the [Undo](#) command.

Background Screen

Any screen can be used as background to the current screen.

All objects in a background screen will work as designed in the project application. Objects in a background screen must be edited in the screen that they reside in. Objects in a background screen will be dimmed in the current screen in the development environment.

Related information

[Screens](#)[Language Management](#)

8.1.3 Objects Group

The Objects control group contains static and dynamic objects that can be added to a screen.

Related information

[Objects](#)

8.1.4 Object Variations


For many of the objects it is possible to apply a preset style, using the **Object Variations** feature. For the Button object and the Circular Meter object there is a large number of different styles available as default, whereas for most other objects it is possible to save user-defined styles.



To display the **Object Variations** menu, click on one of the objects in the **Objects** menu. The **Object Variations** menu appears to the right of the **Objects** menu, provided that there are some styles available for the selected object.

To add user-defined styles in the **Object Variations** menu:

1. Select an object to start from.
2. Modify the object, using the tools under the **Home** ribbon tab or the **Property Grid**.
3. Select the designed object and right-click to open the context menu.
4. Select **Save Variations** to save the modification.

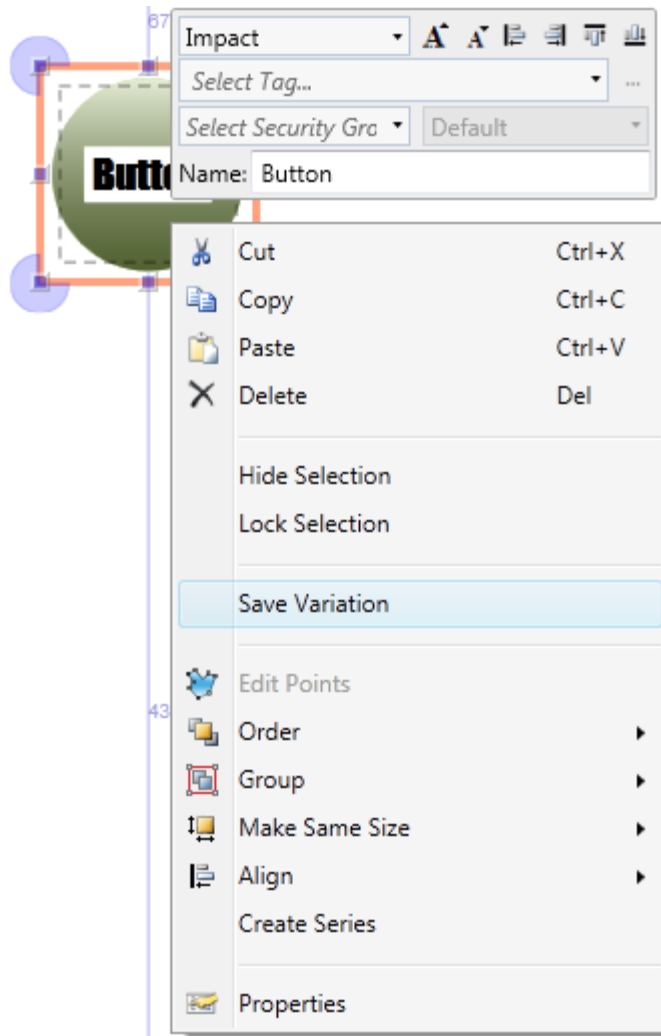

The new variation will appear in the **Object Variations** menu when clicking on the object type it originated from.

Objects supporting Save Variation			
Rectangle	Ellipse	Analog Numeric	Button
Text	Linear Meter	Slider	Circular Meter
Trend Viewer	Chart	Action Menu	Animated Label
Digital Clock	Alarm Viewer	-	-

The object properties are shown in the **Property Grid**. When saving the variation the following properties are saved (when applicable):

Variations saved (where applicable)			
Color	Font	Rotation	Size
Visibility	Security groups required	Audit trail description	Delay Mouse/ Touch Input
Visibility on access denied	Opacity	Horizontal and vertical alignment	Picture horizontal and vertical alignment

In addition to the general properties listed above, a number of object specific properties are saved:

Object	Property
Action Menu Object	View type Orientation
Alarm Viewer Object	Button position
Analog Numeric Object	Limit number of characters Number of characters Number of decimals Prefix Suffix
Animated Label Object	Animation direction View type
Chart Object	Chart type 3D view Show header Show legend Show scale
Digital Clock Object	Display format Show seconds
Linear Meter Object	Orientation Scale Transparency
Slider Object	Orientation Scale Transparency
Text Object	Horizontal alignment Vertical alignment
Trend Viewer Object	Major value ticks Minor value ticks
Rectangle	Radius Effects

Note:

Features only supported in PC environment might not work on other platforms.

Related information
Objects

8.1.5 Font Group

All fonts available in the development PC are available for selection when designing the project. All fonts used in the project are included when downloading the project to the target.

Note:

For PC and iX TxC non-standard fonts are not transferred or installed to the target. Install non-standard fonts manually on the target.


Note:

The number of fonts needs to be considered when calculating the total size of a project.

Note:

The default font Tahoma does not support Chinese characters in operator panel projects in runtime. The font has to be changed to a font that supports Chinese characters, e.g. MS Song. Keep in mind that some fonts require a lot of project memory.

The **Font** group is used to change text style. The text style is defined for the currently selected object.

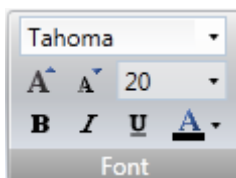

Font and Font Size

Select font from the drop-down list. Use the increase/decrease font size buttons or set a specific font size.

Note:


Objects, for which **Auto Stretch Font** is selected, will not be affected by these settings. The font size will be autosized when resizing the object height.

Style and Color

An italic, underlined or bold style can be selected for the text. The style stays regular if all the boxes are left unchecked. Use the Font Color drop-down list to set the color of the text.

8.1.6 Format Group

The Format group controls the color and position of a selected object. Predefined quick styles offer selection of uniform appearance for different objects. Selection of multiple objects makes it possible to easily affect more than one object at the same time.

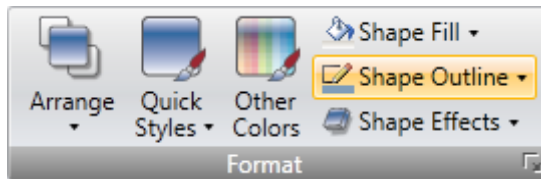


Clicking the small arrow in the lower right corner of the Format group displays the shadow, fill and outline properties with a number of additional format settings.

It is possible to use the Format Painter (in the Clipboard group) to copy color and font properties from one object and paste it to another object.

Related information
Selecting Multiple Objects

Arrange

The Arrange control can be used to order, group, resize, align and distribute screen objects.

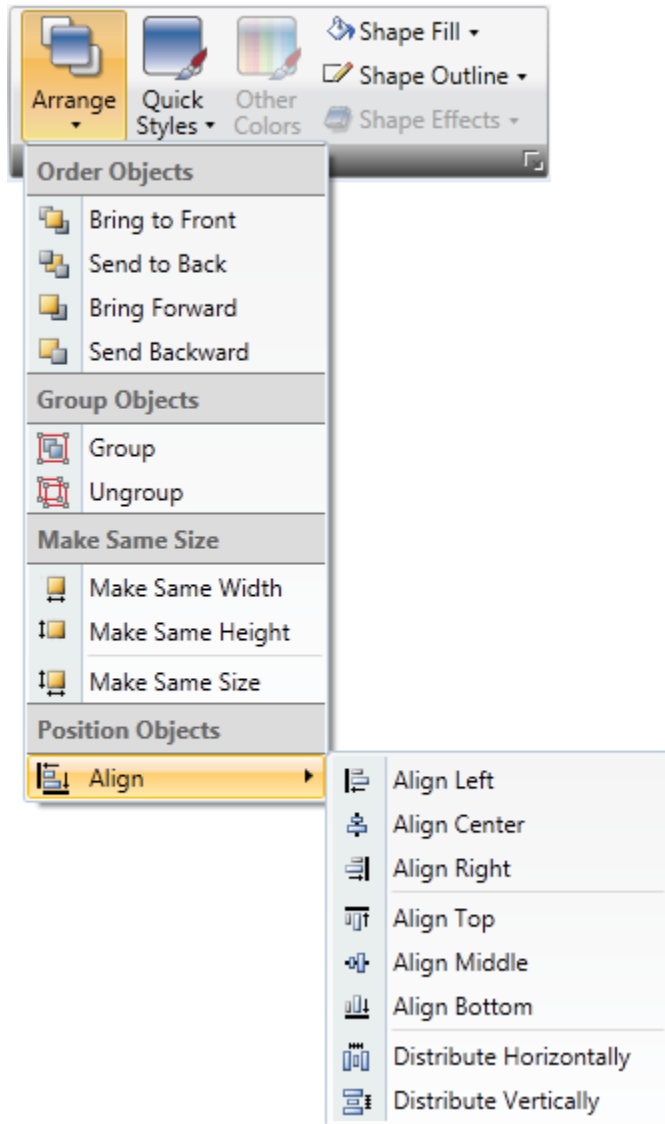

Order Objects

The commands in the Order Objects group are used to send objects to the front or back of each other.

Command	Description
Bring to Front	Positions the selected object on top of any overlapping objects
Send to Back	Positions the selected object behind any overlapping objects
Bring Forward	Makes the selected object swap place with the nearest overlapping object
Send Backward	Makes the selected object swap place with the nearest obscured object

Note:

The Object Browser offers an easy way of arranging objects to the front or back of each other.

Related information
Object Browser

Group Objects

The **Group Objects** commands are used to manage selections of multiple objects. A grouped object is moved and treated as one object with respect to formatting and resizing, and can also be stored in the Component Library for reuse.

Any selection of objects on the screen can be grouped.

When multiple objects are selected, one object is the primary selection. This is shown with an orange frame, while other objects in the group have blue frames. Click on any object in the group to change this to the primary selection.

A grouped object can be resolved into individual objects using the **Ungroup** command. A property that was given to the group will be kept by each of the object, provided that the property is applicable.

Make Same Size

The **Make Same Size** commands are used to adjust the size of a group of selected objects. The size will be determined by the *primary selection* (the guide object).

Position Objects

The **Position Objects** commands can be used to align and distribute multiple objects neatly. Objects can be aligned vertically and horizontally using the primary selection for the group as guide object. Objects can be aligned with respect to their center (center/ middle) or their edges (top/bottom/right/left).

Related information
Component Library
Snap Objects to Other Objects
Grid

Quick Styles

The **Quick Styles** control contains a number of preset visual object color schemes that can be applied to screen objects.

The predefined graphical styles make it possible to achieve a uniform appearance on items like meters and trend viewers. An object that has a style applied can be further customized, for example with font settings.

It is also possible to customize the predefined styles to styles of your own preference. The quick styles are not specific to the current project. They will be available for all iX Developer projects.

Note:

Controls in the Style group on the General tab can be used to reshape objects such as meter, slider and trend viewer to predefined styles. These styles are not the same as the quick styles.

Related information
Font Group

Other Colors

Color settings for special properties of an object, for example scale color for a meter or out-of-range validation of an analog numeric object, are available from the **Other Colors** control.

Shape Fill

The **Shape Fill** control is used to alter the fill color and gradient of the selected shape. A preview of the colors in the Shape Fill selection window is displayed directly on the object on the screen as the pointer hovers over the different colors.

Shape Outline

The **Shape Outline** control is used to alter the outline color and outline width of the selected shape.

Shape Effects

Shape Effects makes it possible to add bevel style and shadow effects.

Note:

Bevel in combination with fill color "no fill" is only supported for iX TxC and PC targets. The bevel will not be visible in runtime on other operator panel targets.

8.1.7 Tag/Security Group

Connection to controller tags as well as object access (based on security groups) and visibility are configured from the **Tag/Security** group.



Tag/Security group without and with selections

Parameter	Description
Select Tag	Connection to a tag from the tags configuration page. Tags may also be added directly, but will remain internal until connected to a controller tag. Click ... to configure expressions.
Select Security Groups	Allows limiting access of the object based on security groups. If left empty, the object can be accessed by anyone.
Select Visibility	Configuration of visibility: Default: The visibility specified on the General tab of the Security Manager is used Disabled: The object is disabled for users with insufficient access rights Hidden: The object is invisible for users with insufficient access rights Normal: The object looks normal also for users with insufficient access rights

Note:

When access rights are not fulfilled, showing an access denied message or opening a login dialog can be configured using the security function.

Related information
Expressions
Adding Tags during Editing
Security Management

8.1.8 Name Group

All objects and screens are automatically named when they are created. The name is displayed and can be edited in the Name group. Screen names can also be edited in the Project Explorer.

The name of an object is a symbolic identifier and is an alphanumeric string, beginning with a letter. Name strings can contain letters (a-z, A-Z), numbers (0-9), and underscore ('_') characters.

**Note:**

Renaming objects and screens included in scripts will cause the scripts not to function.

Related information
Project Explorer
Invalid Names

8.1.9 Design Language Group

Current Language

Current language is the language that is being used at the particular moment that the project is designed. If multiple languages are not used in the project, only **Default** is available.

8.2 Project Ribbon Tab

The Project ribbon tab contains a number of project related functions, divided into the following groups:

Run Group
Transfer Group
Project Group

8.2.1 Run Group

The Run group enables validation, rebuilding, simulation and debugging of the project.



Build

The build control validates the script code and compiles the current project. Recompiling the project using the Build control will result in only the changes being made to project to be recompiled. To fully recompile the project, instead use the Rebuild control.

Rebuild

The rebuild control validates the script code and recompiles the complete project.

Run

A test of the project can be executed directly on the PC. Clicking **Run** will perform a validation and start a simulation, if the project can be built. If errors are found during validation, an error message will be displayed.

During simulation, the project will communicate directly with the configured controllers, provided that the controllers are correctly connected to the development environment.

If there are unused tags in the project, the **Run**, **Build**, and **Rebuild** commands will result in a notification about this. The **CheckForUnusedTags** function can be disabled or enabled under **Options** in the **File** menu.

Note:

If project build fails, check that the absolute path to the project, including its components, does not exceed 260 characters.

Note:

Projects must be stored on the local hard drive for iX Developer to be able to run or simulate them.

Simulate

It is also possible to test and run the application on the development PC without connection to the selected controller, by clicking **Simulate**. If the project is valid, the simulation is started.

Debug

The **Debug** command will allow the user to debug scripts in a real *c#* debugger with the possibility to set breakpoints etc. User preferences for the script debugger may be entered under **Options**, available from the **File** menu.

Note:

Debugging of a CE project requires Visual Studio 2008 SP1.

Related information
Output
Database
Options
Removing Unused Tags

8.2.2 Transfer Group

The Transfer group enables download to operator panel, upload database and export to folder functions.




Note:

Time zone, region or daylight saving settings will not be transferred if these settings have been changed manually in the panel.

Download

The Download control sends the project to an operator panel or a PC with an iX Runtime installation, in the network environment.

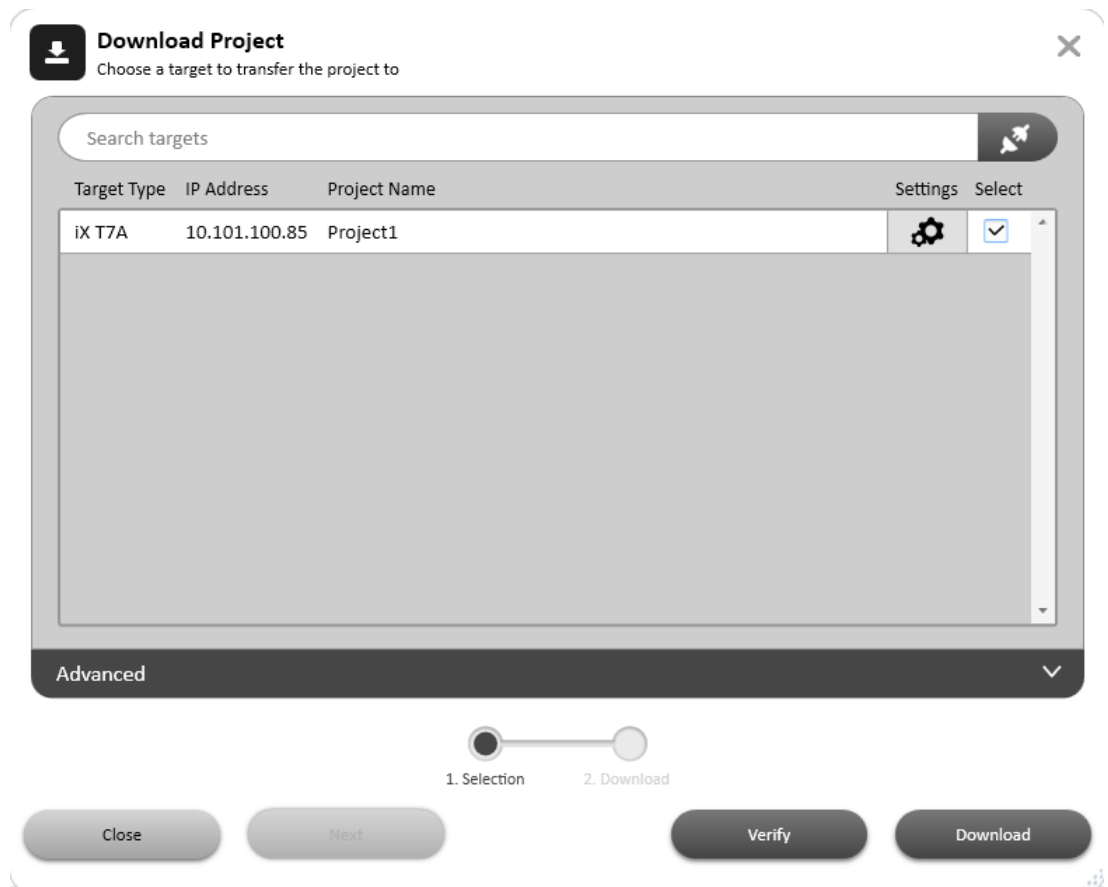

Do the following:


1. Choose a target type to transfer the project to.
2. Start the project transfer.
3. Click the “**Download all source code (for later upload)**” check box to compress the project and save it as a ZIP file on target.
4. Click the “**Password protected**” check box and enter a password to protect the ZIP file.
5. Click the “**Copy downloaded project to Memory Card**” check box to copy the downloaded project and the targets IP settings to the memory card. When project is copied to memory card, it can be used for restoring the project.

The verify function enables the user to check if a target platform configuration is identical to the project configuration.


Note:

An automatic check is done for mismatch between the iX Developer version and the target system versions. All version parameters are considered. If the target is indicated as being incompatible with the version of the iX Developer that hosts the project, please update the target with the latest iX Runtime and system program versions.

The log can be shown/hidden by clicking on the expand collapse button on the transfer client. Each log entry will be colored based on the type of the log entry. For example, green (for success messages), red (for failure/error/exception messages) or black (for all other type of messages). When an exception happens or when the download fails, the log status will be a link. Click on the link to automatically expand the log section and point to the first exception occurred. If the transfer fails, click the retry button to retry the project transfer.

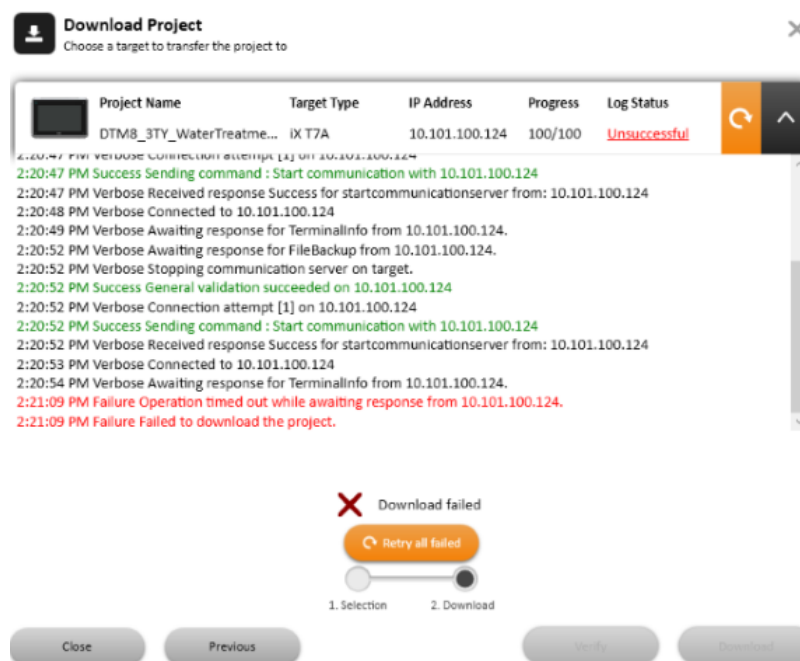

If the target for the download contains newer files or files that don't exist in the project, a dialog will appear prompting for which files to be kept, overwritten or deleted.

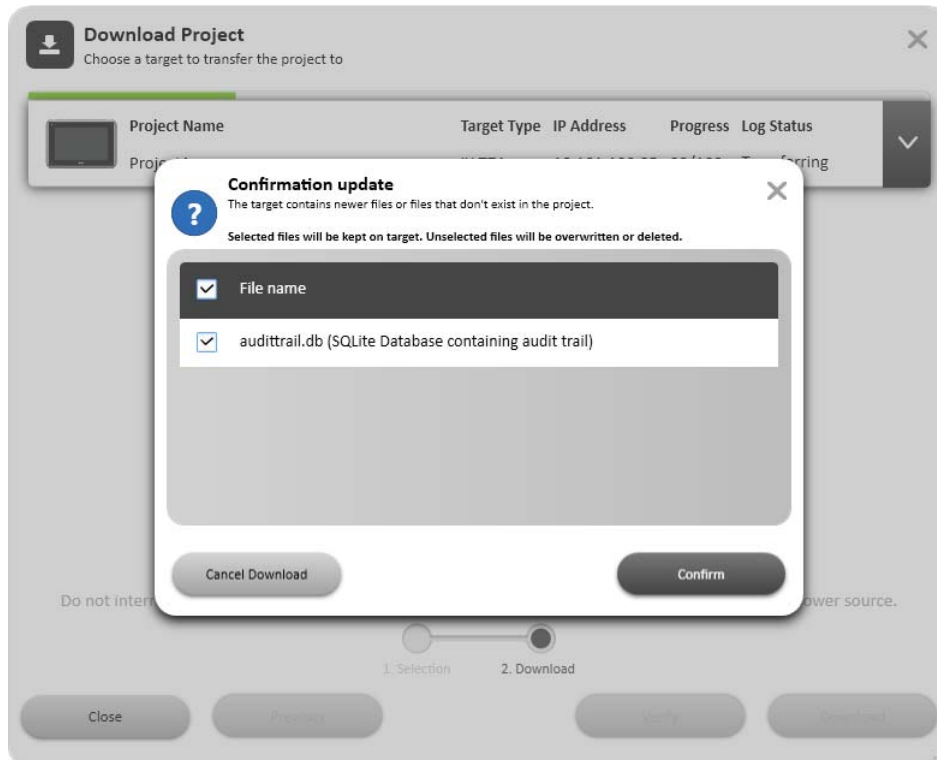

If the same project is to be downloaded to a panel again, the original datalogger in the panel will be replaced if any settings have been changed in the datalogger since the last download. A single project can be downloaded to many panels at the same time.

Note:

Downloading a project built by an earlier version of iX Developer (downgrading) might result in data loss.

Once a transfer is completed, the log for the transfer will by default be saved in the product installation folder under the 'Transfer Logs' folder. There will be one log file per device per transfer. The name of the file will be in the format: [TimeStamp]_[IPAddress]_[TargetType]_[TransferType].log

Related information

Downloading a Project to an operator panel or a PC with an iX Runtime installation

1. Connect the operator panel to the development PC via an Ethernet connection.
2. Click **Download**.

3. The download dialog opens and all panels connected in the network are listed with information about IP address and panel type. Select the panel to download to in the list.
4. Check that the IP address is correct and click **Download**.
 - a. Optional: Click the “**Include compressed project**” check box to compress the project and save it as a ZIP file.
 - b. Optional: Click the “**Password protected**” check box and enter a password to protect the ZIP file.
 - c. Optional: Click the “**Copy downloaded project to Memory card**” check box to enable SD card backup of operator panel project and settings.

The panel responds to a download request by stopping any current project. The panel displays that it is ready for project download. When the download is completed, the new project automatically starts running.

The project folder is located at the following path. Only for PC targets!
 %public%\Documents\Beijer Electronics AB\iX Developer Runtime\Project.

The panel settings can be controlled from the Service menu in the panel.

Note:

It is necessary to open TCP port 9999 and UDP port 9999 in the firewall for the runtime PC application.

Note:

Do not attempt to use the **Download** command if a project opened with the .exe file is open. This might fail to close the project and the transfer will not be completed.

Note:

If Chinese or Korean languages are to be used in the operator panel, then firewalls in Windows must be configured to allow **TransferClient.exe** full access on all ports, otherwise project transfer might fail.

Related information
Starting an iX Runtime project on a PC

Downloading a Project to an operator panel or a PC with an iX Runtime installation Using FTP

A project can be loaded to the panel via FTP. To be able to load a project remotely an external storage device (SD card or USB stick) must be attached, and a configuration file named ProjectCopy.config must be present in the root directory of the storage device.

Set up the configuration file as follows. Use # for parameters to be ignored.

Parameter	Description
automatic	the download of the project automatically starts, without any dialogs, when a project file is loaded to the storage device and the panel is rebooted
path "\Storage Card\Project3"	the path to the project, if multiple projects are stored on the storage device. SD cards use the path \StorageCard\ and devices attached to USB use \HardDisk\
applyipsettings	applies saved IP settings
deletesource	deletes the source file from the storage device after the download
deleteconfigfile	deletes the configuration file after the download. If the configuration file is left on the storage device it is initiated each time the panel is rebooted.

Note:

This is only supported in the latest released images.

Example:

In the following example, without displaying any dialogs, the project found in the folder Project_5 located on the USB stick is loaded, the project is deleted from the USB stick, and the configuration file is deleted. The IP-settings are not updated.

- automatic
- path "\HardDisk\Project_5"
- #applyipsettings
- deletesource
- deleteconfigfile

Upload Database

The Upload Database command will collect the database from an operator panel in the network environment to a file on the development PC. The panel will pause during the upload, and will be started automatically afterwards.

The database may only be collected from a panel running the same project (i.e. a project with the same name and of the same size) as the current iX Developer project.


Collecting a Database from an operator panel

1. Connect the operator panel to the development PC via an Ethernet connection.
2. Click **Upload Database**.
3. The Upload Database dialog opens and all panels connected in the network are listed with information about IP address and panel type. Select the panel to collect from in the list.
4. Check that the IP address is correct and click **Back Up**.
5. Select location of the saved database.

Export

Exports the project to a folder which is selected by the user.

When exporting the project, the user might be prompted whether the panel IP settings should be set. If yes, the **Target Settings** dialog is opened.

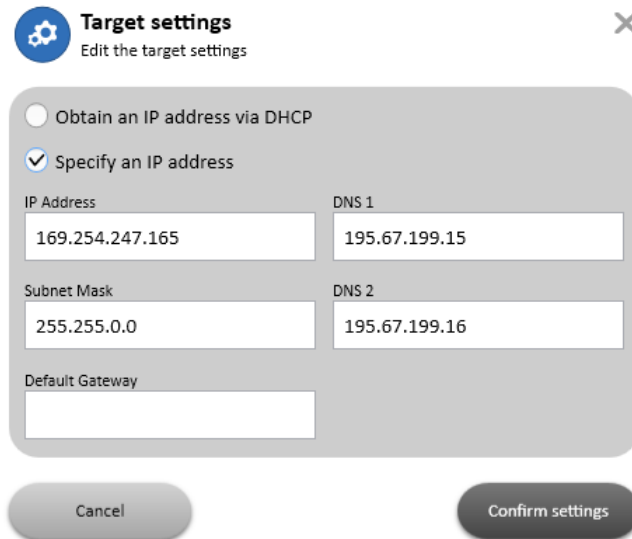

The image shows a 'Target settings' dialog box with a gear icon and a close button (X). The dialog contains two radio buttons: 'Obtain an IP address via DHCP' (unselected) and 'Specify an IP address' (selected). Below the radio buttons are four text input fields: 'IP Address' (169.254.247.165), 'Subnet Mask' (255.255.0.0), 'DNS 1' (195.67.199.15), and 'DNS 2' (195.67.199.16). There is also an empty 'Default Gateway' field. At the bottom are 'Cancel' and 'Confirm settings' buttons.

Assigning IP settings is not supported on PC or iX TxC.

Exporting a Project to an operator panel or a PC with iX Runtime Installation

A project can be exported to an operator panel or a PC with an iX Runtime installation via the **Export** command. The project can be exported to a USB stick or, on the condition that a network connection is configured, directly to a folder in the runtime PC.

The project in the runtime PC is started by running the .exe file located in the project folder.

There will also be a **TransferClient.exe** file, which is a standalone application for downloading the exported project to a target. Executing the **TransferClient.exe** file will open the **Download** dialog. It is possible to view a log for the export by clicking the **Log** button on the **Download** dialog.

Note:

It is not recommended to handle further project transfers from a PC already used as a target for export. If additional transfers are to be done, then keep using the same export method for all.

Related information
Download
Starting an iX Runtime project on a PC

Starting an iX Runtime project on a PC

The different methods of transfer will have an impact on how the projects are started and stopped in the runtime PC. It is recommended to keep to one of the selected transfer methods to avoid problems.

When a project has been transferred to a PC using the **Download** command, the project normally starts automatically when the computer is started. However if the project is stopped and needs to be restarted, this should be done via the **Target Control Service** in Windows. This will ensure that the status of the project is fully recognized for all functions that depend on this.

To manually open or close a project in iX Runtime for a PC target, go to the **Services** tab in **Windows Task Manager**. Click on the item **Target Control Service** and the available commands are shown on the top left of the list. Double-clicking the **Target Control Service** item opens a dialog box that displays **Service Status** along with other additional settings. Start or stop the project from here.

A running project will then be visible when entering the iX Developer **Download** dialog.

Note:


If a runtime PC project is started using the project .exe file, the Target Control Service will not recognize that the project is running. This will lead to problems using the iX Developer transfer functions.

A project that has been transferred using the **Export** command must be started by opening the .exe-file in the project folder. A running project is not detected by any of the transfer or service status dialogs in the runtime PC. This means that it is up to the user to keep track of the status.

8.2.3 Project Group

The project target, as well as name and title, are available for editing in the Project Group. The project title is displayed in the title bar in runtime by default. Leaving the title empty displays the screen name/screen title only in runtime.

The **Project Group** also contains the **Back Up Project** command, a **Project Settings** control and the possibility to refer to other assemblies using the **Referenced Assemblies** control.

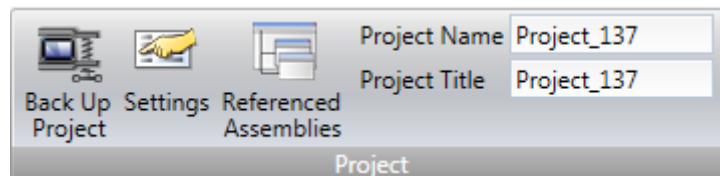

Related information
Back Up Project
Settings
Referenced Assemblies

Back Up Project

The project source files can be compressed into a Zip file using the **Back Up Project** command. The Zip file can be saved to a USB stick or, on the condition that a network connection is configured, directly to a folder in the runtime PC.

Parameter	Description
Path to Zip file	Browse to the location to save the Zip file.
Password protected	Optional password protection of the Zip file.

Related information
Opening a Project

Settings

Properties such as application behavior in runtime, system font, and settings for mouse and keyboard can be edited by clicking **Settings** in the Project group.


Related information
Deployment
Display/Target
Mouse/Touch Input Delay
System Dialogs
Virtual Keyboard
Screen Name and Screen Title
Memory Card

Database

iX Developer projects use SQLite databases. Upgraded/converted projects will by default be changed to SQLite. When converting from SQL CE to SQLite, some custom queries might need to be updated manually.

Parameter	Description
Back up database at startup	When using this option a backup is created at startup if the integrity check of the database succeeds. If the integrity check fails the previous backup is used. The drawback is that the databases use twice the space on disk and the startup time gets longer. If there is no backup available and the database has become corrupt, then the corrupt database is replaced by a new empty database.
Max size (MB)	When the database exceeds this size, the system tag Database Max Size Exceeded will be set. By pointing the mouse at the lower right part of the desktop area, a window will popup and show the memory usage of different activities. This will give you a hint about what would be a suitable value for the Max size (MB) setting.
Database Location	This setting can be used to determine whether the Database(s) should be stored and actively read/written against on the Hard disk of the panel or the SD Card. If the location is changed in the settings the Databases(s) will also be moved from the previous location on the panel to the newly chosen location ensuring the pre-existing history/data in the Database(s) remains intact. For more information go to Memory Card .

Deployment

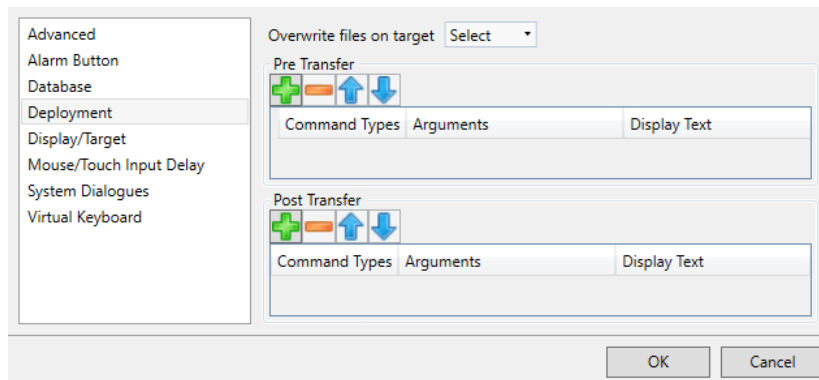

Parameter	Description
Overwrite Files on Target	This setting can be used to determine the default behavior when transferring projects and the transfer finds critical files already present on the target.
Pre Transfer	Add commands to be executed before the file transfer. Only available for standard PC targets.
Post Transfer	Add commands to be executed after the file transfer. Only available for standard PC targets.

Related information
Pre Transfer
Post Transfer

Pre Transfer

The following commands can be executed before the file transfer:

Command	Description
Reboot	Reboots the target. Possible arguments: True and False . Using True , the target tries to start any project present. The argument False , or no argument, prevents the target from starting the project automatically.
Wait	Pauses the execution of the commands. This can be useful if the user runs commands that takes time for the target to recover from. Possible arguments: a number, indicating how many whole seconds to wait.
Run	Starts any given process. The first argument must always be the path to the executable to be run. Keep it inside quotes if it contains spaces. Other arguments: /p: or -p: are parameters for the process to start. The parameters must be inside quotes and separated by spaces. /noshell or -noshell means that the process should be run outside of the command shell. /wd: or -wd: means working directory for the process to run. If left empty defaults to active projects directory. The parameters must be inside quotes. /wait: or -wait: means that the TargetControlService should wait until the process has exited before continuing. If the process does not exit by itself, this argument should be left out.

It is possible to use the following **macros** in conjunction with the **Run** commands:

Macro	Description
\$projectpath\$	Replaced by target project folder. If the user has downloaded an executable together with the project and wants to run it, this macro represents the destination folder. Example: " \$projectpath\$\\dbbackup.exe " /p:"backup.bak" -noshell -wait This runs the dbbackup.exe with the startup argument backup.bak , it runs outside the command shell due to -noshell , and the transfer does not continue until the process has exited due to -wait .
\$startproject\$	Registers and starts the project. The transfer continues.
\$finished\$	Tells the system that the transfer is finished and closes connections. The project does not start. Should only be used in Post Transfer.

Note:

Only available for iX TxC and PC targets.

Post Transfer

The same commands and macros as for the Pre Transfer can be used, but are executed after the file transfer.


Note:

Only available for PC.

Related information

[Pre Transfer](#)

Display/Target

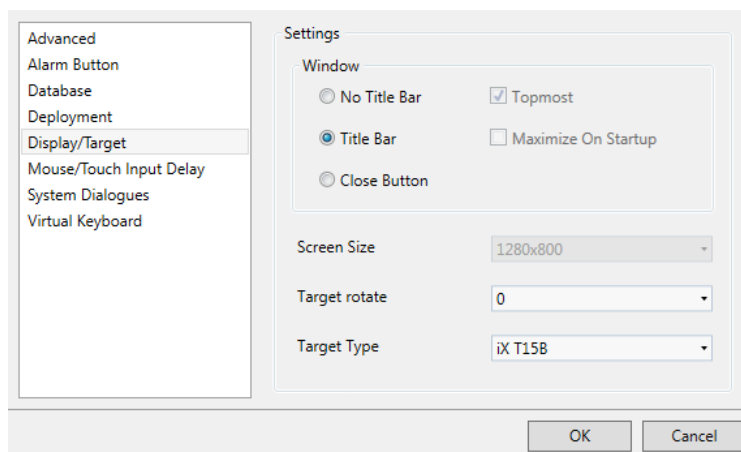

Parameter	Description
No Title Bar ⁽¹⁾	Displays the project without title bar in runtime.
Title Bar	Displays the project with its title and a set of minimize, maximize and close buttons in the title bar.
Close Button	Displays the project with its title and a close button in the title bar.
Topmost	Makes the project the topmost application in runtime. Only available for iX TxC and PC targets.
Maximize On Startup	Makes the project maximized in runtime. Only available for PC targets.
Screen Size	Screen resolution. Only available for PC targets.
Use wide scrollbars	Enlarges scroll bars on the panel to make them easier to operate with a touch screen. This is a global setting which affects all applications on the panel. Only available on iX TxC targets.
Panel Rotate	Displays selected rotation. It is possible to change the rotation of the panel and panel content by 0, 90, 180 or 270 degrees. Not supported on panels with 4" sensor on iX TxC.
Panel Type	Displays selected target. It is possible to select another target.

⁽¹⁾ No Title Bar can not be used for popup screens.

Related information

[Changing Project Target](#)

Changing Project Target

When changing to another target, you can select to automatically resize objects to the new target size. Different scale factors are used horizontally and vertically, to optimize conversion to and from wide screen targets. In this case, the aspect ratio of objects changes.

The serial ports settings will also be reset to default values if ports differ in possible configuration.

Note:

An object might be wrongly positioned after conversion. When this happens you must change the position of the object manually.

The following items are resized with the same factor when having selected automatic resizing:

Item
Graphical objects
Popup screens
Font ⁽¹⁾
Dynamics size and move

⁽¹⁾A minimum scaled font of 10 pixels ensures readability in the smaller operator panels.

Not all objects and styles are supported for all project targets. When changing to another project target, objects and styles that are not supported in the new target are deleted and are possible to restore. Removed objects are logged, and displayed in a window after the transformation. The log may be saved to file. Build files are always cleaned and project saved after transformation.


Note:

Changing back to the previous target does not restore removed objects.

Mouse/Touch Input Delay

It is possible to configure delay of mouse and touch screen input in runtime. The delay used is either global and affects all objects for which **Delay Mouse/Touch Input** is selected, but with no specific delay configured, or can be set individually on each object. The Property grid is used to enable and configure delay of mouse and touch screen input for individual objects.

To revert to the global setting, enter 0 as Delay Period.

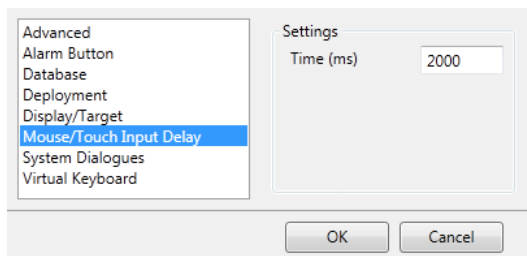

Related information

[Property Grid](#)

Advanced

Parameter	Description
Set default value on all new screens to cache	When this is checked, all the new screens created in the project will have the value for Cached (under general settings for the screen) as checked by default. When this is unchecked, all the new screens will have the Cached option set to false. As before, this is not applicable to start screen and popup screens. Start screen will always be

Parameter	Description
	cache enabled and popup screens will always be cache disabled.
Set all to cache	Clicking this button will set the value of Cached for all the existing screens to true (except the start screen and popup screens).
Remove all cache	Clicking this button will set the value of Cached for all the existing screens to false (except the start screen and popup screens).
Enable FTP friendly names	Clicking the Enable FTP Friendly Names checkbox you will get report names of the following format (without quotes): "ReportTemplateName_yyyy-mm-dd_hh:ss.extension". All spaces () are replaced with underscores (_) and all dots (.) (except for the dot that signifies the extension) are replaced with dashes (-). If you leave the checkbox unchecked the names will be generated in the same format as before.
Memory management	Set garbage collection mode (Workstation and Server) for the runtime project. By default the workstation mode will be selected. Workstation mode is suitable for single core/processor targets. Server mode is suitable for multi core/processor targets. For a single core processor, even if the Server mode is selected, in effect the target will be run with Workstation mode for garbage collection.
Enable Watch Dog	If enabled, a timer will be started in the panel when starting a project. If the project does not start within the configured time, it tries to restart the project in the panel. It will retry for a maximum of 3 times. The default value for the configured time is 120 seconds.
OPC UA Structured Tags	Enable/disable OPC UA Structured Tags in a project via this setting. This is a limited functionality feature and the link to the document describing limitations can be found below the setting. By default, OPC UA Structured Tags will be disabled for the project.

Note:

Memory management option is only available for iX TxC panels and PC targets.

Enable FTP Friendly Names

The Enable FTP Friendly Names checkbox controls the names of the following file producing actions:

- Any reports generated through the Generate Report action. The default names for reports are :**ReportTemplateName yyyy.mm.dd hh:mm:ss.extension**. The extension is either .xls or .pdf (based on what is supported).

- Any exported data logger files generated through the Database Export action with a Data logger selected. The subfolder name "**Data Loggers**" will be renamed to "**Data_Loggers**"
- Any exported Alarm Server files generated through the Database Export action with an Alarm Server selected. The subfolder name "**Alarm Server**" will be renamed to "**Alarm_Server**"

Note:

The same rules will apply for exporting Recipes, Audit Trails and performing a Print Screen.

System Dialogs

Parameter	Description
Font	Select a system font that is used as the default font.
Font Size	Use the increase/decrease font size buttons or set a specific default font size.

Virtual Keyboard

Parameter	Description
Enable Virtual Keyboard	Select whether a virtual keyboard is to be displayed when alphanumerical input is needed.
Keyboard Layout	The following layouts are available for the virtual keyboard: Arabic, French, German, Hebrew, Italian, Korean, Russian, Simplified Chinese (Compact), Simplified Chinese, Spanish, Swedish, Traditional Chinese, US

The virtual keyboard that is displayed in runtime depends on settings made for the Multiple Languages function. If only the default language is used, the project settings (above) are used.

Note:

Asian keyboard layouts do not work in PC projects.

Related information


[Language Management](#)

Referenced Assemblies

The Referenced Assemblies command makes it possible to refer to your own or third-party .Net assemblies (.dll). Their methods and properties are made available when scripting and are included by the name completion function, in the same way as for built-in components.

1. Click on **Referenced Assemblies**.
2. Click **Add**.
3. Browse to the desired dll file in your PC environment and click **Open**.

The methods and properties of the added dll file are now available for scripting.

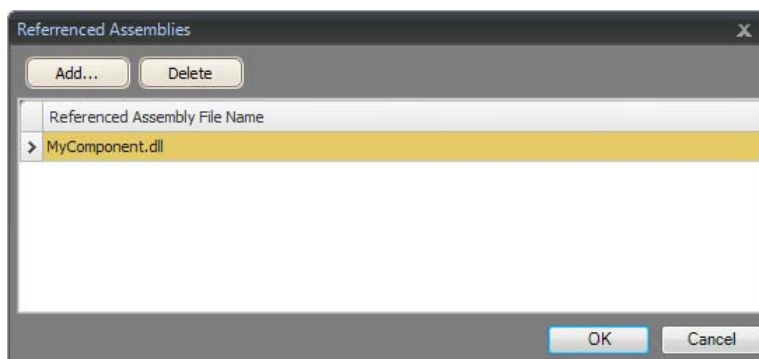

When referencing your own third-party assembly (.dll file) make sure not to have two files with the same fully qualified assembly name in the same folder:

Example:

You have the files "**locomp.Instrumentation.CF2005.Ultra.dll**" and "**locomp.Instrumentation.CF2005.Ultra.WindowsCE.asmmeta.dll**" in the same folder. Both have the same fully qualified assembly name (but different file names). Trying to add a control from the first assembly seems to work. However when the application uses namespaces in the XAML to locate the correct assembly it picks one of them, and it might be either of them. If it is the wrong assembly you get a message saying that there is an error in the XAML.

Note:

When importing third-party assemblies for use on a X2 pro, it is important that the supplier supports running the code on Windows Embedded Compact 2013 and that the assembly targets compact framework 3.5.

8.2.4 Command Window in Transfer Client

The Transfer Client command line tool is a cross platform tool developed to transfer project to panels. This tool is distributed along with iX Developer.

Prerequisites	Description
.Net Core 2.0 Runtime or greater.	The Transfer client command line tool is built based on .Net Standard 2.0. Hence .Net Core 2.0 Runtime or greater must be installed on the machine from where the project is transferred from.

Usage

The tool includes a package with the exported iX Developer project. An *TransferClientCLI.dll* will be present in the folder where iX Developer project is exported. If the transfer of project has to be done on a different machine, the entire exported project folder needs to be copied to the machine from where the transfer need to be done.

1. Open command prompt in the exported project folder.
2. Type in the following command: **dotnet TransferClientCLI.dll [args]**

Argument	Description
-h or --help	Displays the information on the usage of the application.
[ipAddress1] [ipAddress2] ... [ipAddressN]	The list of IP addresses the project needs.

Example:

- To display the help: `dotnet TransferClientCLI.dll --help` or `dotnet TransferClientCLI.dll -h`
- To transfer the project to a panel with IP address 192.168.98.1: `dotnet TransferClientCLI.dll 192.168.98.1`
- To transfer the project to multiple panels with IP addresses 192.168.98.25, 192.168.98.50: `dotnet TransferClientCLI.dll 192.168.98.25 192.168.98.50`

The logs for the transfer will be placed in a folder called **TransferLogs** which reside the exported project folder.

Limitations

This is a non-interactive command line tool for Transfer Client. Hence there will be no confirmation dialogs or warning dialogs during the transfer. All files and databases will be overwritten during transfer.


8.3 System Ribbon Tab

The System ribbon tab controls system settings. These settings are divided into the following groups:

<i>Date, Time, and Region Group</i>
<i>Buzzer Group</i>
<i>Backlight Group</i>
<i>Serial Ports Group</i>
<i>Servers Group</i>
<i>Output Devices Group</i>
<i>Service Menu Group</i>

8.3.1 Date, Time, and Region Group

National settings are made in the Date, Time and Region group.

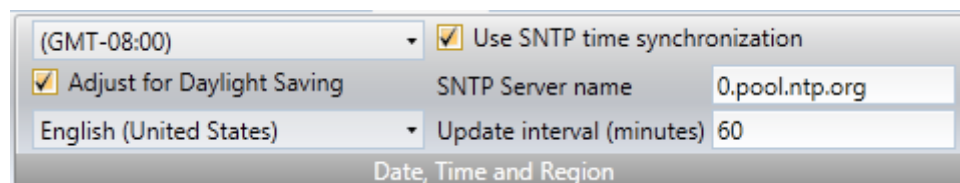


Select time zone, whether to adjust for daylight saving, and region. If no time zone is selected, the time zone that has been selected for the panel or PC will be retained.

Note:

After changing the Adjust for Daylight Saving setting, the operator panel must reboot for the changes to take effect.

If `EnableTimeSync` is set to true SNTP time synchronization will be enabled by default on creation of new projects. The default server name used is `time.windows.com`.

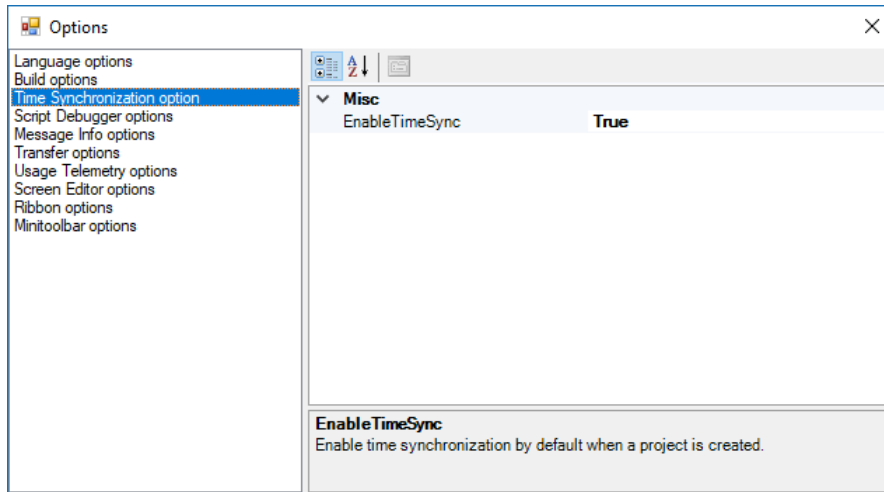

Note:

It is recommended to use SNTP time synchronization with 'time.windows.com' server while using cloud compatible panels. A build warning for projects created against cloud compatible panels will be generated if SNTP time sync is not enabled or if it is enabled and not synchronized with the recommended server. A warning message will also be shown when changing these settings for the cloud compatible panels.

Choose SNTP time synchronization if the panel clock is to be synchronized against an external SNTP (Simple Network Time Protocol) server. Enter the name of the SNTP server and the time interval for the synchronization.

The date and time display format (for example using AM/PM for time) is based on the operating system settings. For operator panel projects, this format may be altered by selecting another region.

For a PC the regional settings for date and time display need to be changed in the system account to be carried out correctly.

1. Go to the **Control Panel** and select **Clock, Language and Region**, then **Region and Language**.
 2. Make the regional settings in the dialog box under the **Formats** tab.
 3. Then go to the **Administrative** tab and click **Copy settings**.
 4. In the dialog box that appears, check **Copy current settings to: Welcome screen and system accounts**, and click **OK**.
 5. Reboot the system to apply the new settings.
-

Note:

iX TxC targets only:


If the regional settings are changed only for the user account without copying them to the system account, the new settings will not be applied when downloading a project, even after a reboot.

8.3.2 Buzzer Group



Select whether to let a key beep sound when making keyboard input in runtime. Only available when an operator panel is selected as target.

8.3.3 Backlight Group

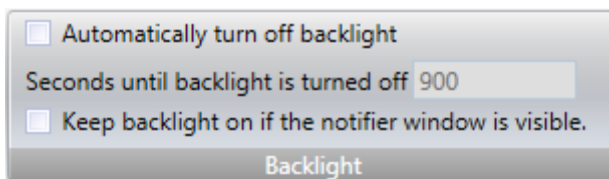

Select to automatically turn off the backlight after a certain number of seconds, and whether to keep the backlight on if a notifier window (e.g. alarm indicator or communication error message) is visible.


Backlight settings are supported only for operator panel targets. For other targets, the Microsoft Windows screen saver may be used.

8.3.4 Serial Ports Group

For each of the COM ports, select if it is to be configured as an RS232, RS422 or RS485 port. Only available when an operator panel is selected as target.

The number of available ports and possible configuration differ depending on selected target.

For example, on X2 base, iX TxB, iX TxC, and IPC four COM ports can be configured:

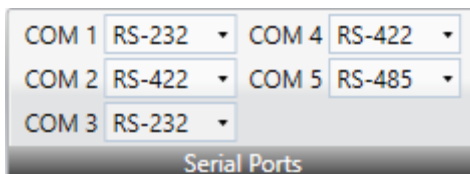

Note:

When running 2xRS485 (COM2 & COM3) the serial ports are switched. COM2 runs on COM B(2) and COM3 runs on COM A(1).

8.3.5 Servers Group

The Servers group contains the FTP, Web Server, OPC UA Server and Remote Access commands. The FTP and Remote Access commands are only available when an operator panel is selected as target.

It is highly recommended to set a password when enabling a server, especially when it is exposed to the internet. To get high security on the password, it must include upper and lowercase letters, numbers and special characters.



FTP

When enabled, it is possible to upload/download files to/from the operator panel provided that there is an FTP client program in the development PC, e.g. Internet Explorer, Windows Commander or some other standard FTP program.

It is possible to set up access to the FTP server with login requirements and/or as anonymous. An anonymous user has read-only access rights. A user that logs in with the correct user name and password gets read/write access rights.

It is possible to allow access to an SD card or a USB stick used in the target. If multiple USB sticks are used in the target, only the first one can be accessed.

FTP is only available when an operator panel is selected as target. The functionality is not supported by iX TxC and PC.

Username and password is only supported in Western European languages.

Remote Access

The Remote Access function makes it possible to access, reflect and control an operator panel from a PC by using the free VNC client program Remote Access Viewer together with the built-in VNC server in the operator panel.

It is possible to set up Remote Access with a view only password and/or a full access password. The view only password allows reflecting the panel remotely; the full access password allows also control of maneuverable objects in the panel.

The maximum length of the password is eight characters according to the VNC standard.

Only one VNC client can connect to the VNC server.

Only available when an operator panel is selected as target.

To protect secrecy when entering a password via Remote Access Viewer, it is recommended to use the PC keyboard. Otherwise it is possible that the cursor on the remote operator panel displays which keys are pressed on the alphanumeric keyboard.

When a panel is remotely controlled, it will beep as if it was touched.

For more information about Remote Access, refer to the documentation for Remote Access and Remote Access Viewer.

Web Server

Enables the possibility to host project files for a web client.

Parameter	Description
Enable Web Server	Click this check box to enable the web server.
Port	Enter a server port number.
Enable forms authentication	Click this check box to enable forms authentication and enter user name and password. The password can be any alphanumeric string. The passwords minimum length is four characters and the maximum length is 20 characters.

Related information

[Web Server](#)

OPC UA Server

Enables the possibility to publish tags with an OPC UA Server.


The screenshot shows a dialog box titled "OPC UA Server" with a "Settings" section. The settings are as follows:

- Enable OPC UA Server:
- Port: 4840
- Allow anonymous login:
- User name:
- Password:
- Password strength: none
- Expose tag names as OPC UA node identifier:
- Tag visibility: Customized
- Tag default visibility: Off

Buttons: OK, Cancel

Parameter	Description
Enable OPC UA Server	Click this check box to enable the OPC UA server.
Port	Enter a server port number.
Allow anonymous login	Click this check box to enable anonymous login. For a secured login enter user name and password and leave the check box unchecked.
Expose tag names as OPC UA node identifier	Click this check box to enable the use of tags names instead of a unique number in the published OPC UA node identifier of each tag. Switching this setting or changing tags names with this setting active will require updating previous integrations using OPC UA since the Node Identifier to address the tags will change.
Tag visibility	Available options: - All tags visible - No tags visible - Customized
Tag default visibility	Determines the initial visibility value for new tags. This option is only available when Tag visibility is set to Customized .

The **Tags** editor displays the **fVisible** column when the **Tag visibility** option is set to **Customized**.

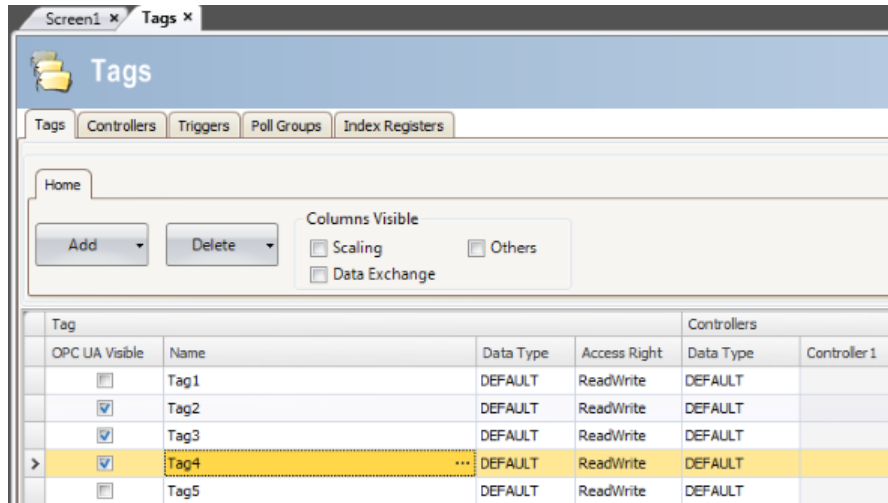

Address space

All tags, except array tags, defined in project will be shown.

The tags will be put in a folder named Tags in Namespace TagProvider on the server.

The NodeClass of all tags will be Variable.

All tag values will be published scaled with the offset and gain of the tag.

Tag Properties Mapping

Parameter	Description
Tag property	UA Server Attribute
Name	DisplayName / BrowseName
Data Type	DataType
Access Right	AccessLevel / UserAccessLevel
Description	Description
Poll Group Interval	MinimumSamplingInterval

Note:

Data type BIT is not supported by OPC UA. Tags of this type will be handled as INT16 type in the server. For best result, use BOOL type instead.

Certificate

A certificate will be auto generated and self-signed when the server first starts up.

The certificate will be valid for 20 years.

The certificate contains no IP address since this could change after the certificate has been generated.

Limitations

Limitation	Description
Discovery	Not supported
Encoding / Transport	Only UA TCP Binary
User authentication	Only user name / password Only one account
Security	No encryption support
Sessions	The maximum number of sessions the server can create is 20. Sessions are terminated after 20 minutes of inactivity (timer is reset if the server is restarted).

Related information

[OPC UA Client](#)

8.3.6 Output Devices Group


Printer devices can be set up by clicking the Settings control in the Output Devices group.



Printer Device

USB Printer Connection

When printing from a iX TxC/PC, the default printer in Windows will always be used if **USB** is selected as **Printer Connector**.

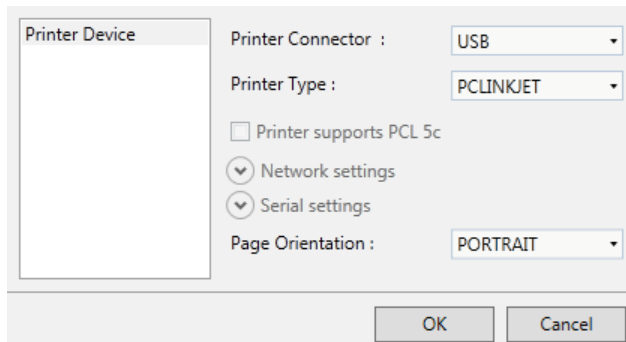

Parameter	Description
Printer Connector	Select USB
Printer Type	Select printer type. Selection possibilities: PCLINKJET and PCLLASERJET.
Printer supports PCL 5c	Click this check box if the printer supports the PCL 5c color printer protocol. This option is only available if the printer type is set to PCLLASERJET.
Network settings	Not available
Serial settings	Not available
Page Orientation	Portrait or landscape orientation of the printout

Ethernet Printer Connection

When printing from a iX TxC/PC, the default printer in Windows will always be used if **ETHERNET** is selected as **Printer Connector**.

The screenshot shows a printer configuration window with the following settings:

- Printer Device:** (Empty list box)
- Printer Connector:** ETHERNET (dropdown)
- Printer Type:** PCLINKJET (dropdown)
- Printer supports PCL 5c
- Network settings:** (Expanded)
 - Printer name / Path : (text input)
 - User Name : (text input)
 - Password : (text input)
- Serial settings:** (Collapsed)
- Page Orientation:** PORTRAIT (dropdown)

Buttons: OK, Cancel

Parameter	Description
Printer Connector	Select Ethernet
Printer Type	Select printer type. Selection possibilities: PCLINKJET and PCLLASERJET.
Printer supports PCL 5c	Click this check box if the printer supports the PCL 5c color printer protocol. This option is only available if the printer type is set to PCLLASERJET.
Network settings	Enter Printer name / path Enter user name Enter password
Serial settings	Not available
Page Orientation	Portrait or landscape orientation of the printout

Serial Printer Connection

When printing from a iX Tx C/PC, the data will be sent out on the selected COM port if **SERIAL** is selected as **Printer Connector**.

The screenshot shows a configuration window for a serial printer. On the left is a 'Printer Device' list. The main area contains the following settings:

- Printer Connector :** SERIAL (dropdown)
- Printer Type :** PCLINKJET (dropdown)
- Printer supports PCL 5c
- Network settings
- Serial settings
 - Port Name :** COM1 (dropdown)
 - Baud Rate :** 19200 (dropdown)
 - Data Bits :** 8 (dropdown)
 - Parity :** None (dropdown)
 - Stop Bits :** One (dropdown)
 - Hand Shake :** XON/XOFF CTS/RTS
 - New Line Character :** None CR/LF
 - CR
 - LF
 - Page Length (lines):** 0 (text input)
 - Page width (characters):** 0 (text input)
 - Code page :** 850 (text input)
 - Page Orientation :** PORTRAIT (dropdown)

Buttons for 'OK' and 'Cancel' are located at the bottom right.

Parameter	Description
Printer Connector	Select Serial
Printer Type	Not available
Printer supports PCL 5c	Not available
Network settings	Not available
Serial Settings	Port Name: Select which COM-port the printer is connected to
	Baud Rate: Select the baud rate for transmission of data.
	Data Bits: Select the number of data bits in each character.
	Parity: Set the parity bit. The parity bit in each character can be set to none , odd, even, mark or space.
	Stop Bits: Select the number of stop bits to be sent at the end of every character. Selection possibilities: None, One, Two or TwoPointFive.
	Hand Shake: Select which handshaking protocol to be used. Selection possibilities: XON/XOFF, CTS/RTS.

Parameter	Description
	New Line Character: Select end of line character. Selection possibilities: None, CR/LF, CR or LF.
Serial Settings	Page Length (lines): Select the number of lines to be printed out before form feed. Form feed will not take place if the page length is set to 0.
	Page Width (characters): Set the page width specified as the maximum characters in a single line of text.
	Code page: The code page consists of a table of values that describes the character set for a particular language. The default code page in iX Developer is 850.
Page Orientation	Not available

Printouts via operator panel

When printing to a serial printer from an operator panel, the printer must support IBM character set (850).

When printing to a USB printer from an operator panel, the printer must support PCL levels according to the table below:

Printer type	PCL level requirement
Color laser printer	USB + PCL 5c
Monochrome laser printer	USB + PCL 5e
Color ink-jet printer	USB + PCL 3e

When printing via Ethernet from an operator panel, the network printer must be a shared resource in the Windows network.

Connecting a printer via Ethernet requires that a PC is connected between the operator panel and the printer.

Printing to a color laser printer via Ethernet is not supported for operator panels.

PCL 6 is not supported at all on operator panels.

8.3.7 Service Menu Group

The Service Menu group provides a possibility to protect the service menu with a pin code.



Parameter	Description
Pincode	Enter a PIN code for the service menu. No pincode enables the service menu for all users. Only numbers (0-9) are allowed.


Related information

8.4 Insert Ribbon Tab

The Functions group, available from the Insert ribbon tab, contains functions and screen that can be added to the project.

[Functions Group](#)

8.4.1 Functions Group

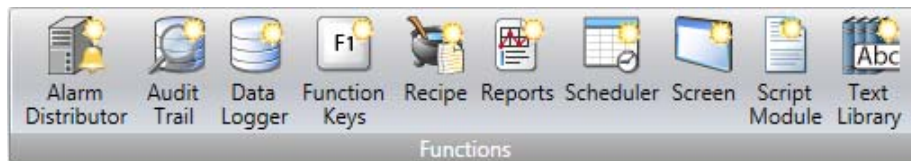

All added components are available from Project Explorer folders. The Project Explorer already includes alarm server, multiple languages, security functions and tags. All functions are managed through their configuration pages.

Parameter	Description
Text Library	With the text library function, text tables can be created, where values are linked to texts.
Data Logger	Data can be logged and saved to a database on time intervals or depending on changed values.
Alarm Distributor	Alarms can be distributed between operator panels, with notification via printer, SMS or e-mail using the alarm distributor.
Script	A script module can be included to program features not covered by included functions and actions, or to be used to share functionality among functions.
Recipe Management	Several recipes can be inserted in the project. Each recipe function handles a pre-defined set of recipe items.
Function Keys	Function keys for operator panels as well as for the regular PC keyboard can be configured.
Scheduler	A scheduler can be used to control events in the process at special times.
Audit Trail	The Audit Trail function enables tracking of operator actions.
Reports	The reports function allows adding Excel report templates to the project.
Screens	The Screen control adds new screens to the current project.

Related information


[Project Explorer](#)[Configuration Pages](#)

8.5 View Ribbon Tab

The Windows group, available from the View ribbon tab, contains controls to toggle visibility of the tool windows:

[Windows Group](#)

8.5.1 Windows Group

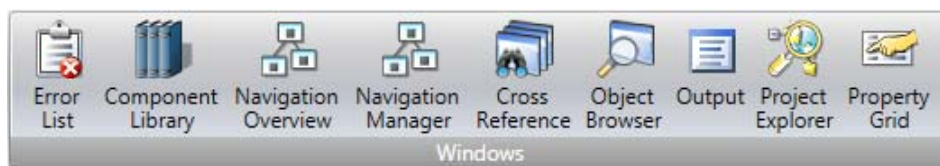

The tool controls in the Windows group are highlighted when active.

Tool window	Description	Default Position
Project Explorer	Shows all screens and components included in the application	Docked to the left part of the application window
Output	Displays detailed information concerning the project validation and build	Docks to the lower part of the application window
Cross Reference	Provides an overview of where a specific tag is used	Docks to the right part of the application window
Error List	Displays information about problems and errors detected during build	Docks to the lower part of the application window
Navigation Overview	Provides an overview of all screens included in the project, with zooming facilities.	Floating window
Navigation Manager	Manages screens and screen navigation	Desktop area
Property Grid	Shows detailed properties of a selected screen or object	Docks to the right part of the application window as a tab
Object Browser	Displays an overview of all objects in the current screen and enables setting visibility and locking objects easily, as well as placing objects in front or back of each other.	Floating window
Component Library	Contains predefined as well as user-defined graphical components	Docks to the right part of the application window as a tab

8.6 Dynamics Ribbon Tab

The Dynamics ribbon tab includes the following groups:

Layout Group
Color Group
General Group

The controls on the Dynamics tab are used to change the properties of an object depending on a changed tag value.



A lock icon resembling a chain indicates that a specific dynamic setting is made for the selected object.

If, for example, dynamic fill settings are made, it is not possible to make fill settings for the object from the Format group on the Home tab.

Note:

Security has higher priority than dynamics.


Visibility has higher priority than blink.

Note:

Scripting to a property for which Dynamics has been configured disables the dynamic settings.

To release an object from a dynamic control, click the control with the lock icon and click **Clear Dynamics** in the appearing dialog.

8.6.1 Layout Group

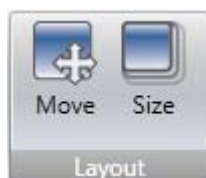

Move

The Move control in the Position group changes an object's position, based on a tag value.

Position coordinates on the screen are given in pixels of the screen resolution. The position 0,0 corresponds to the upper left corner of the screen.

To move an object vertically when a tag value changes:


1. Draw and position the object at the start position. Keep the object selected.
2. Click on **Move** on the Dynamics tab to open the Move Dynamics Editor.
3. Select the tag to control the movement.
4. Enter a start and end value for the tag.

Start and end positions are suggested based on the current start position. A ghost object will appear at the suggested finish position. A guide line that connects the center of the original object with the ghost object appears.

5. Move the ghost object in the screen to its final position.

The coordinates for the object is updated. An animation of the move appears on the screen. Coordinate values can also be updated directly in the numerical fields (End Top, End Left). The coordinates for start and finish will limit the movement of the object irrespective if the tag value is outside its start and end value.

6. Click **OK** to save and close the Move Dynamics Editor.

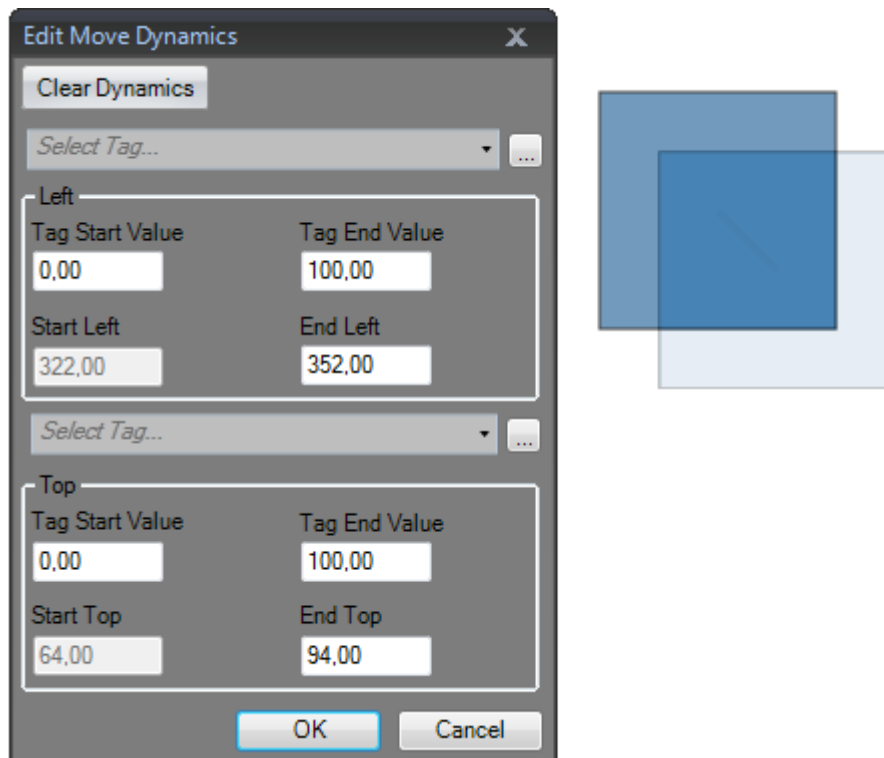

When Position or Size dynamics is applied, moving or resizing of the object will be disabled. A lock icon resembling a chain in the upper left corner of the object (when selected) indicates that the object has a dynamic control applied and that it cannot be moved or resized.

Size

The Size control in the Size group changes an object's size, based on a tag value.

Dynamic resizing of external picture files may result in a resolution loss if the picture is enlarged to a size larger than what is used elsewhere in the current project.

Width and height of an object are given in pixels of the screen resolution.

To resize the width of an object when a tag value changes:

1. Draw and size the object at its start size. Keep the object selected.
2. Click on **Size** on the Dynamics tab to open the Resize Dynamics Editor.
3. Select the tag to control the resizing.
4. Fill in the values that for start and finish. Size is given in screen resolution pixels.

Start size is suggested based on the current start size. A finish size is suggested as a fixed increase of the start size horizontally and vertically. A ghost object will appear with the finish size.

The object can only be resized from left to right and top to bottom.

5. Resize the ghost object in the screen to its final size.

The coordinates for the object is updated. An animation of the resizing appears on the screen. Coordinate values can also be updated directly in the numerical fields (End Width, End Height). The coordinates for start and finish will limit the size of the object irrespective if the tag value is outside its start and end value.

6. Click **OK** to save and close the Resize Dynamics Editor.

When Position or Size dynamics is applied, moving or resizing of the object will be disabled. A lock icon resembling a chain in the upper left corner of the object (when selected) indicates that the object has a dynamic control applied and that it cannot be moved or resized.


8.6.2 Color Group

The Fill and Outline controls in the Color group change an object's fill color or outline (border) color, based on a tag value.



To alter the fill color of an object when a tag value changes:

1. Draw the object. Keep the object selected.
2. Click on **Fill** on the Dynamics tab to open the Color Dynamics Editor.
3. Select the tag that is to control the color.
4. Fill in values to trigger color change.
5. Select color and gradient from the color menu.
6. Click **OK** to save and close the Color Dynamics Editor.

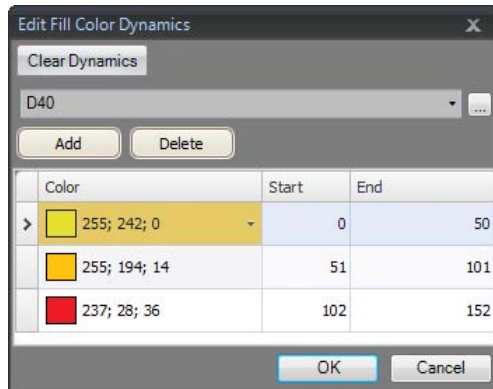

8.6.3 General Group



Visibility

The Visible control in the Visibility group determines if an object is to be displayed in the screen or not, based on a tag value.

To hide an object when a tag value changes:

1. Draw the object. Keep the object selected.
2. Click on **Visible** on the Dynamics tab.
3. Select the tag that is to control visibility. The object will be visible on the screen at a certain tag value.


The selected value will be treated as True (visible). All other values will be treated as False (invisible).

Blink

It is possible to select a tag to enable blinking depending on the tag's current value.

The selected value will be treated as True (blink enabled). All other values will be treated as False (blink disabled).

The blink interval can be set dynamically or constantly.

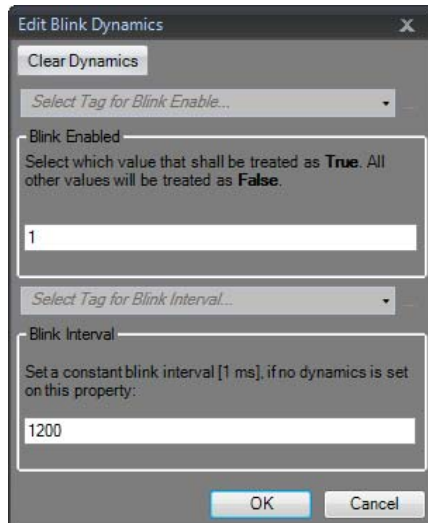**Note:**

Security has higher priority than dynamics.
 Visibility has higher priority than blink.

Related information
Blinking Objects

General

The general control offers a possibility to alter the properties of objects in iX Runtime.


Converter Operators

Converter operators are used to alter the properties of the objects. The converter operators can be selected from the **Edit general dynamics** dialog.

Parameter	Description
Bool Converter	Converts 0 to false and all other values to true.
Color Converter	Converts value intervals to specified colors.
Linear Converter	Converts values according to the linear equation.
Raw Converter	Converts the value to a new value matching the target type.
Text Library Group converter	Converts a value to a text.

Edit General Dynamics

The **Edit general dynamics** dialog contains different properties depending on which object is selected. The dialog is accessed by clicking the **General** control on the **General** group.

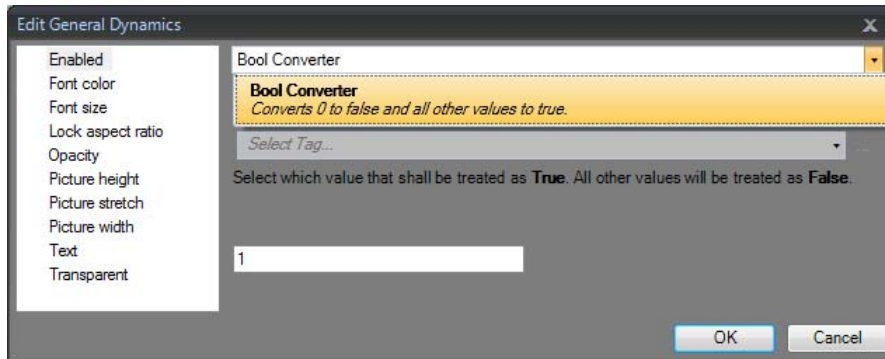

Parameter	Converter	Object	Description
3D View	· bool	Chart	Set a 3D look and feel for the chart
Acknowledge all	· bool	Alarm viewer	Set visibility for the Acknowledge All button.
Acknowledge selected	· bool	Alarm viewer	Set visibility for the Acknowledge Selected button.
Address	· raw · text library group	Web browser	Change the default URL.
Alternate background color	· color interval	Animated label	Set background color.
Alternate foreground color	· color interval	Animated label	Set foreground color.
Animation speed	· linear	Animated label	Set animation speed.
Auto-size	· bool		Resize the object according to the size of the default text string length and font size.
Button color	· color interval	Alarm viewer	Set the button color
Button height	· raw · linear	Alarm viewer	Set the height of the buttons.
Button width	· raw · linear	Alarm viewer	Alter the width of the buttons.
Clear	· bool	Alarm viewer	Set visibility for the Clear button.
Clockwise	· bool	Circular meter	Set the rotation orientation.

Parameter	Converter	Object	Description
Column header color	· color interval		Set the column header background color.
End angle	· raw · linear	Circular meter	Set the end angle.
PDF-file	· raw · text library group	PDF viewer	Select PDF file to add to the PDF viewer.
Filter	· bool	Alarm viewer	Set visibility for the filter button.
Font color	· color interval		Set font color in for instance the text object.
Font size	· raw · linear		Set font size in for instance the text object.
Group background	· color interval	Action menu	Set the group background color.
Group foreground	· color interval	Action menu	Set the group foreground color.
Header	· raw · text library group	Chart	Set the header.
High Region Color	· color interval	Circular meter	Set the high region color.
High Region Max	· raw · linear	Circular meter	Set the maximum value of the high region indicator.
High Region Min	· raw · linear	Circular meter	Set the minimum value of the high region indicator.
Indicator color	· color interval		Set the indicator color in for instance the circular meter object.
Info	· bool	Alarm viewer	Set visibility for the info button.
Active	· bool	Chart	Activate or stop the data input.
Enabled	· bool		Enable or disable an object.
Show header	· bool	Chart	Set visibility for the header.
Show legend	· bool	Chart	Set visibility for the legend.
Read only	· bool		Control whether for instance an analog numeric object editable or not.

Parameter	Converter	Object	Description
Auto-scale X-axis	· bool	Chart	Used with the chart object to toggle whether iX Runtime automatically should calculate the minimum and maximum X Axis values or not.
Show X-axis grid	· bool	Chart	Set visibility for the X Axis grid.
Show X-axis	· bool	Chart	Set visibility for the X Axis.
Auto-scale Y1-axis	· bool	Chart	Used with the chart object to toggle whether iX Runtime automatically should calculate the minimum and maximum Y1 Axis values or not.
Show Y1-axis grid	· bool	Chart	Set visibility for the Y1 Axis grid.
Show Y1-axis	· bool	Chart	Set visibility for the Y1 Axis.
Auto-scale Y2-axis	· bool	Chart	The bool converter can be used with the chart object to toggle whether iX Runtime automatically should calculate the minimum and maximum Y2 Axis values or not.
Show Y2-axis grid	· bool	Chart	Set visibility for the Y2 Axis grid.
Show Y2-axis	· bool	Chart	Set visibility for the Y2 Axis.
Lock aspect ratio	· bool	Multi picture	Used with the multi picture object to toggle the height/width ratio of the object.
Low region color	· color interval	Circular meter	Set the low region color.
Low region max	· raw · linear	Circular meter	Set the maximum value of the low region indicator.
Low region min	· raw · linear	Circular meter	Set the minimum value of the low region indicator.
Major ticks	· raw · linear		Set the number of labeled time marks in for instance the linear meter object.
Maximum	· raw · linear		Set the end value of the scale in for instance the linear meter object.
Major value tics	· raw · linear	Trend viewer	Set the number of labeled scale marks on the scale.

Parameter	Converter	Object	Description
Max value	· raw · linear	Trend viewer	Set the end value of the scale.
Min value	· raw · linear	Trend viewer	Set the start value of the scale.
Minor value ticks	· raw · linear	Trend viewer	Set the number of scale ticks between two adjacent major ticks on the scale.
Medium region color	· color interval	Circular meter	Set the medium region color.
Medium region max	· raw · linear	Circular meter	Set the maximum value of the medium region indicator.
Medium region min	· raw · linear	Circular meter	Set the minimum value of the medium region indicator.
Minimum	· raw · linear		Set the start value of the scale in for instance the linear meter object.
Minor ticks	· raw · linear		Set the number of scale ticks between two adjacent major ticks.
Lower limit	· raw · linear	Analog numeric	Set the minimum value that can be entered.
Opacity	· raw · linear		Set the opacity of for instance the PDF viewer object.
Outline thickness	· raw · linear		Set the outline thickness of for instance the rectangle object.
Picture height	· raw · linear	Button	Set picture height.
Picture name	· raw · text library group	Picture	Set the picture shown in the picture object.
Picture stretch	· bool	Button	Stretch a picture.
Picture width	· raw · linear	Button	Set the picture width.
Play/Pause	· bool	Alarm viewer	Set visibility for the pause button.
Prefix	· raw · text library group	Analog numeric	Set a prefix to the digits entered.

Parameter	Converter	Object	Description
Radius X	· raw · linear	Rectangle	Set the radius of the X axis in the rectangle object.
Radius Y	· raw · linear	Rectangle	Set the radius of the Y axis.
Scale color	· color interval	Circular meter	Set the scale color.
Scale	· bool	Circular meter	Set visibility for the scale.
Selected background	· color interval	Action menu	Set the background color of the selected action.
Selected foreground	· color interval	Action menu	Set the foreground color of the selected action.
Selected group background	· color interval	Action menu	Set the background color of the selected menu group.
Selected group foreground	· color interval	Action menu	Set the foreground color of the selected menu group.
Separator color	· color interval		Set the separator color.
Source	· raw · text library group	Media player	Set the source file.
Start angle	· raw · linear	Circular meter	Set the start angle.
Stretch	· bool		Adjust the height and width to the selection frame in for instance the picture object.
Suffix	· raw · text library group	Analog numeric	Set a suffix to the digits entered in the analog numeric object.
Text	· raw · text library group		Set the text shown in for instance the text object.
Title	· raw · text library group	Roller panel	Set the title.
Title background color	· color interval	Roller panel	Set the title background color.
Title foreground color	· color interval	Roller panel	Set the title foreground color.
Transparent	· bool		Set the transparency of for instance the button object.
Upper limit	· raw · linear	Analog numeric	Set the maximum value that can be entered.
Value	· raw · linear	Progress bar	Set the value.

Parameter	Converter	Object	Description
X1	· raw · linear	Line	Set the X1 pixel coordinates
X2	· raw · linear	Line	Set the X2 pixel coordinates
X3	· raw · linear	Line	Set the X3 pixel coordinates
X4	· raw · linear	Line	Set the X4 pixel coordinates
X-axis grid color	· color interval	Chart	Set the grid color of the X axis.
X-axis max value	· raw · linear	Chart	Set the maximum value of the X axis.
X-axis min value	· raw · linear	Chart	Set the minimum value of the X axis
Y1-axis grid color	· color interval	Chart	Set the grid color of the Y1 axis.
Y1-axis max value	· raw · linear	Chart	Set the maximum value of the Y1 axis.
Y1-axis min value	· raw · linear	Chart	Set the minimum value of the Y1 axis.
Y2-axis grid color	· color interval	Chart	Set the grid color of the Y2 axis.
Y2-axis max value	· raw · linear	Chart	Set the maximum value of the Y2 axis.
Y2-axis min value	· raw · linear	Chart	Set the minimum value of the Y2 axis.

Related information
Text Library

8.7 General Ribbon Tab

The General ribbon tab contains different property groups and controls for different objects. Appearance can be modified for graphical shapes and objects. Scale settings can be made for meters and trend viewers. Additional settings can be made for some objects.

The Tag/Security group is available also on the Home ribbon tab.

The general properties are described separately for each object.

Related information
HMI Controls in the Objects group
Media Controls in the Objects group


Related information
Special Controls in the Objects group
Windows Controls in the Objects group
Tag/Security Group on the Home Ribbon Tab

8.8 Actions Ribbon Tab

Actions can be triggered in various ways, for example by clicking a button. The Actions tab controls are used to define actions for objects. Alternatively, a script can be used to trigger an action.

An action is something that is performed, for example closing a screen. An action trigger is the act that generates an action, for example clicking a button.

The Actions ribbon tab contains different control groups for different objects.

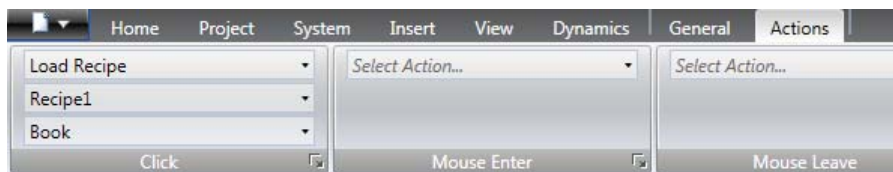

A Click action configured for a button

Note:

It is not recommended to use multiple trigger methods, as this may lead to undesired behavior. It is recommended either to use a script or to program actions with the controls in the Actions tab. For example, avoid using [Click Action Trigger](#) in combination with [Mouse Button Action Triggers](#).

Related information
Script

8.8.1 Click Action Trigger

Most objects can be assigned click actions, that will be executed when the object is clicked in runtime.


8.8.2 Mouse Button Action Triggers

The Mouse Down and Mouse Up action triggers can be used to create two-step actions when clicking with the left mouse button on an object.

Parameter	Description
Mouse Down	A Mouse Down action will be performed when the left mouse button is pressed down on the object in runtime.
Mouse Up	A Mouse Up action will be performed when the left mouse button is released from the object in runtime.

Parameter	Description
Mouse Enter	A Mouse Enter action will be performed when the cursor enters the boundaries of an object in runtime.
Mouse Leave	A Mouse Leave action will be performed when the cursor leaves the boundaries of an object in runtime.

The object boundaries are not adapted to the visible outline of the shape for any target types except for PC and iX TxC. Instead the active area of the object is extended to a rectangular box. This will result in a mouse action as soon as the mouse pointer is placed inside the rectangular bounding box of the object:

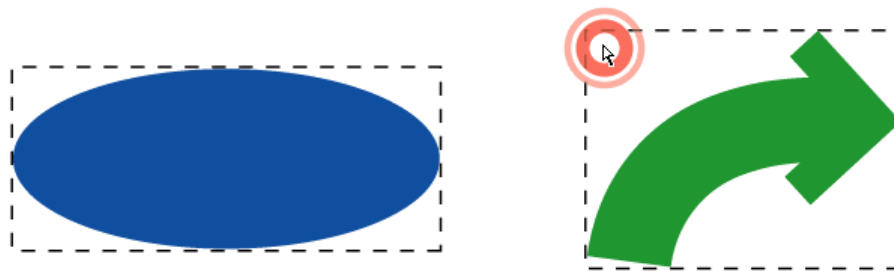

8.8.3 Function Key Action Triggers

The Key Down and Key Up action triggers can be used to create two-step actions for function keys.

Parameter	Description
Key Down	A Key Down action will be performed when a function key is pressed in runtime.
Key Up	A Key Up action will be performed when a function key is released in runtime.

8.8.4 Value Changed Action Triggers

Parameter	Description
Input Value Changed	The Input Value Changed action will be performed when a value is entered by the operator.
Value Changed	The Value Changed action will be performed when the value of the object has changed.

8.8.5 Tags Action Triggers

Parameter	Description
Value Changed (tag will always be active)	The tag will always be active.
Value Changed (tag will be polled as needed)	The event will only trigger if the tag is active. The tag can be deactivated if it is not in use by anything else. When the tag is deactivated the event will remain idle until the tag is activated.

8.8.6 Focus Action Triggers

Parameter	Description
Got Focus	The Got Focus action will be performed when the object is selected.
Lost Focus	The Lost Focus action will be performed when the object is no longer selected.

8.8.7 Navigation Action Triggers

Parameter	Description
Navigated	The Navigated action will be performed when having navigated to the address entered in the address field of the Web browser object.
Navigating	The Navigating action will be performed when having entered, but not reached, an address in the address field of the Web browser object.

8.8.8 Data Logger Action Triggers

The `LogItemValueChanged` and `LogValuesUpdated` are available for the Data Logger.

8.8.9 Alarm Server Action Triggers

Alarm server actions can be configured for the entire alarm server, for alarm groups or for individual alarm items. The actions will be activated upon alarm status changes.

Related information
Alarm Server Events and Actions
Actions and Events for Alarm Items and Alarm Groups

8.8.10 Action Groups

Actions are divided into action groups.

Action group	Action	Description
Screen	Close Screen	Closes the current screen If triggered from a tag in a popup screen, this will close both the popup and the parent screen.
	Print Screen	Prints the current screen on printer or to a .PNG file. Selecting Print to file enables the following options: Project files folder: The file will be saved in a folder named "Project Files" in the projects execution path. Browse: A save dialog will be shown in runtime. (PC only). Path: The file will be saved to a specified path. (PC only). If the Enable FTP Friendly Names functionality has been enabled in the Advanced Project Settings, any spaces and dots in the filename will be replaced according to Enable FTP Friendly Names .
	Show Next Screen	Shows next screen
	Show Previous Screen	Returns to previous screen
	Show Screen	Shows the specified screen. If the screen is a popup the position of the screen can be defined by entering (X, Y) coordinates.
	Show Start Screen	Shows the screen set to Startup screen
	Address Book	Open Address Book
Alarm Distributor Server	Open Print Settings	Modifies alarm distributor print settings
	Open Routes Configuration	Modifies routes for the distributed alarm server
Alarm Viewer ⁽¹⁾	Acknowledge All Alarms	Acknowledges all alarms in all Alarm Viewers
	Acknowledge Selected Alarm	Acknowledges the selected alarm in the Alarm Viewer
	Alarm Info	Performs the action configured for the Alarm event info requested in the Alarm Server. The action is performed on the selected Alarm Viewer.
	Clear All Alarms	Remove all alarms in all Alarm Viewers
	Filter Alarms	Shows the filter configuration dialog for the selected Alarm Viewer
	Pause Viewer	Starts and pauses the selected Alarm Viewer

Action group	Action	Description
	Enable/Disable selected Alarm	Toggles the enable status of the selected alarm in the viewer
	Manage Alarms	Manage enable status of alarms in a popup window
Chart	Pan Down	Pans down in selected chart
	Pan Left	Pans left in selected chart
	Pan Right	Pans right in selected chart
	Pan Up	Pans up in selected chart
	Reset View	Resets any panning and zoom in selected chart
	Zoom In	Zooms into selected chart
	Zoom Out	Zooms out of selected chart
Database	Back Up Databases	Backup one or many databases
	Restore databases	Restore one or many databases
	Database Cleanup	Removes empty space and runs a defragmentation of the database. This reduces the database size and optimizes performance.
	Database Export	Exports selected database in csv format
Datalogger	Clear Datalogger	Clears the specified datalogger
	Log Once	Makes the specified datalogger log once
	Start Logging	Enables the specified datalogger
	Stop Logging	Disables the specified datalogger
Output Devices	Email Configuration	Shows the e-mail configuration page. This action is used for <i>Alarm Distributor</i> purposes.
	Printer Configuration	Shows the printer configuration page.
	SMS Configuration	Shows the SMS configuration page. This action is used for <i>Alarm Distributor</i> purposes.
Recipe	Delete Recipe	Deletes recipe
	End Offline Recipe Editing	Sets the tags in the specified recipe in online mode.
	Export Recipe	Exports a recipe to a .CSV file If the Enable FTP Friendly Names functionality has been enabled in the Advanced Project Settings, any spaces and dots in the filename will be replaced according to <i>Enable FTP Friendly Names</i> .
	Import Recipe	Imports a recipe from a .CSV file
	Load Recipe	Loads recipe
	Save Recipe	Saves recipe

Action group	Action	Description
	Start Offline Recipe Editing	Sets the tags in the specified recipe in offline mode.
Reporting	Generate Report	<p>Generates a report file that can be output to a printer or saved as an Excel file.</p> <p>If multiple reports are to be generated, then these actions should be queued up and not run in parallel since this operation can consume a considerable amount of memory.</p> <p>Selecting "File" enables the following options:</p> <p>Project files folder: The file will be saved in a subfolder named "Reports" in the "Project Files" folder.</p> <p>Browse: A save dialog will be shown in runtime. (PC only).</p> <p>Path: The file will be saved to a specified path. (PC only).</p> <p>If the Enable FTP Friendly Names functionality has been enabled in the Advanced Project Settings, any spaces and dots in the filename will be replaced according to Enable FTP Friendly Names.</p>
Security	Export User Accounts	Exports user data to a location that the operator states
	Import User Accounts	Imports user data from a location that the user states
	Login	Displays a login dialog
	Logout	Logs out the current user
	Show Users Dialog	Displays a dialog where users can be added, edited or removed
Tag	Clear Non-Volatile Values	Clears all stored values for tags marked as non-volatile
	Decrement Analog ⁽²⁾	Decrements tag value
	Increment Analog ⁽²⁾	Increments tag value
	Reset Tag ⁽²⁾	Resets tag to 0
	Set Analog ⁽²⁾	Sets tag to the specified value
	Set String ⁽²⁾	Sets tag to the specified string
	Set Tag ⁽²⁾	Sets tag to 1
	Toggle Tag ⁽²⁾	Toggles tag between 0 and 1

Action group	Action	Description
Trend Viewer	Show Trend Viewer Legend	Displays the legend tool in the selected trend viewer, with a possibility to show and hide curves and to display values of a specific trend viewer sample.
	Trend Viewer History	<p>The Trend Viewer History action includes the following choices (all applicable to the selected trend viewer):</p> <p>On: Shows trend history from when the action was triggered (including offset settings made using trend viewer dynamics).</p> <p>Off: Returns to showing real time trend viewer data.</p> <p>Toggle: Allows entering and terminating history mode using the same object (for example a button).</p> <p>Show Dialog: Lets the user select a period of time, for which to show trend viewer history.</p>
Other	Change Active Controllers	Defines which controllers are to be active, OPC UA and OPC Classic controllers requires a restart of the project for changes to take effect. The controller's IsActive property can be changed by script e.g. <code>Globals.Controller1.IsActive = true;</code> , this is not supported for OPC UA and OPC Classic controllers. The controllers ID property (Optional short name for controller) can be read in script.
	Run Script	Executes a script method saved in a script module.
	Close Application	Closes the runtime application.
	Copy Debug Log to USB Memory	Copies the debug log to a USB memory.
	Disable Debug Logger	Disables the debug logger.
	Enable Debug Logger	Enables the debug logger.
	Run	Starts an external application
	Scroll Left	Scrolls the screen carousel object left
	Scroll Right	Scrolls the screen carousel object right
	Set Date and Time	Allows changing date and time in the operator panel
Set Language	Sets the language in the operator panel to the selected language	


Action group	Action	Description
	Set Time Zone, Region and Daylight Saving	Allows changing time zone, region and daylight saving settings in the operator panel
	Show Backlight Settings	<p>Allows changing backlight settings in the operator panel</p> <p>When approaching 0% backlight, changes in brightness level may no longer be noticeable in the panel.</p> <p>Complete dimming (to 0%) is only possible to achieve with the marine panel types, such as iX T7AM and iX T15BM .</p> <p>If a panel is restarted, the backlight settings will only be saved if the system tag SystemTagBacklightBrightnessLevel is used in the project and set to non-volatile.</p>
	Show IP Settings	Shows the IP settings in the operator panel

(1) All Alarm Viewer actions must be associated with an Alarm Viewer in the same screen as the object with the action configured. This also applies to actions that affect all Alarms.

(2) This action can be used with [Aliases](#).

8.8.11 Script Action

Script actions are used to execute script methods in script modules, triggered by actions. Script modules in the project can be selected, and for each script module all methods are listed along with their exposed parameters. Static methods are not supported.

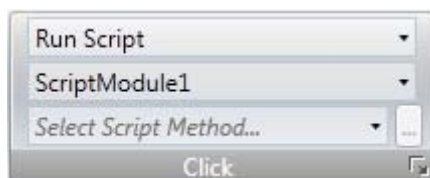

To apply a script to a selected object:

1. Go to the Actions group and select the appropriate action trigger.
2. Select action **Run Script** under **Other**.
3. Select one of the scripts from Script Modules.
4. This results in a list of available script methods for that specific script module. Select script method.
5. The parameters for the script appears in a dialog with information about the parameter name and type. Complete the settings by entering a tag or a fixed value for each parameter, and click OK.

Name	Type	Constant value	Tag
FileName	string	Select value...	System_Scree ▾
FromPath	string	c:\logs ×	Select Tag... ▾
ToPath	string	Select value...	TargetFolder ▾

You can either set a constant value or a tag from where the value should be retrieved. If there is no tag defined a valid constant value has to be defined.

OK Cancel

The script action will now be executed when the object is triggered.

Note:


Script actions will have precedence over other script code for an object.

Related information

[Script](#)


8.8.12 Multiple Actions

Multiple actions can be configured by clicking small arrow in the lower right corner of any action group.

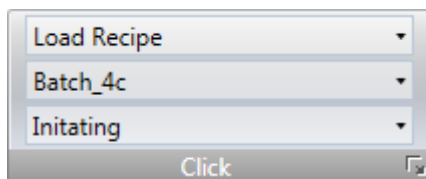

Note the small arrow in the lower right corner

The properties window allows configuring and sorting additional actions. The actions available depend of which object is selected in the screen prior to selecting the Actions ribbon tab.

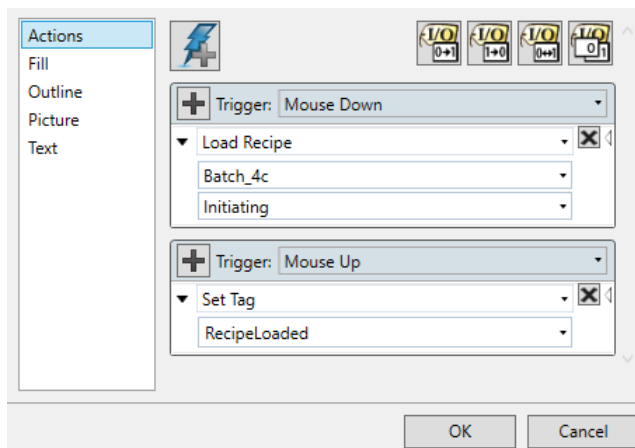

After configuring multiple actions, this is indicated for the action group on the Actions tab.



9 Trend Viewer

This section describes the trend viewer object. Trend Viewers are used to present chronological data from controller tags. The curves in a trend viewer can have different sources of data.

The source of data can be a log item for a data logger. The values of the tag connected to the log item is then stored in the projects database.

The source can also be a Tag. The trend viewer curve then only shows real-time values and is stored in a RAM cache.

When changing the system time in the panel to a later time, then data will be logged with the new time. In the trend viewer there will be a straight line between the last point logged for the old time and the first point logged for the new time.

If the power to the panel is cut or if there is a communication error, then there will be a gap in the trend viewer curve for the time period where no signal was received.

Related information
Database
Database Export

9.1 Defining Trend Viewer Objects

It is possible to define several independent trend viewer objects, in the same screen or in different screens. The number of trend viewer curves is limited only by the available amount of memory in the panel.

Note:

 
A large number of trend viewer pens and short sampling intervals may affect communication performance.

Related information
Communication Performance

9.1.1 Adding a Trend Viewer Object

A trend viewer object is added to a screen from the Objects group on the Home ribbon tab.

Settings for the trend viewer object are available from the General ribbon tab while the trend viewer object is selected:



Curves Group

Trend viewer curves are defined using the **Edit Curves** control.

Parameter	Description
Add	Adds a new curve to the trend viewer object
Remove	Removes the selected curve from the trend viewer object
Name	The symbolic name of the curve. This name is shown if a Trend Viewer Legend is used.
Tag	The tag to present values for
Log Item	The item to be logged
Expression	Expression on a curve is evaluated and applied when the curve is drawn. If the expression value when the tag is logged or cached is of interest, the expression on the log item or the tag can be used. See section Expressions
Color	The color of the curve
Thickness	Line thickness
Minimum Value Tag	A tag that dynamically sets what value on the curve that corresponds to the minimum value of the Y axis. This property will scale the curve when the value of the tag is different from the minimum value of the Y axis (optional).
Maximum Value Tag	The tag that dynamically sets what value on the curve that corresponds to the maximum value of the Y axis. This property will scale the curve when the value of the tag is different from the maximum value of the Y axis (optional)

Dynamics Group

Several trend viewer properties can be made dynamic, i. e. dependent on tag values. This may be useful, for example, when wanting to present trend viewer values of different formats in the same trend viewer object.

If dynamic trend viewer properties are used, the corresponding property settings made in the Value Scale group for the trend viewer object are ignored.

Parameter	Description
Value Scale Min / Value Scale Max	Minimum/maximum value of the Y-scale. The design mode value is used only for increased understanding in design time when tag values do not affect the minimum and maximum values.
Time Span	The time span of the X-axis in seconds.
Time Offset in History Mode	Makes it possible to use an offset to step back in history mode. The start value is when history mode was entered. The unit is seconds.

If the **Time Span** value is increased, the trend viewer will initially display only the previous number of entries (that was displayed before the increased time span). It will not collect older data for display. Only when the additional time added onto the time span has elapsed, the cache will be filled with data and a full curve is displayed.

Value Scale Group

The value scale group controls the vertical scale (y-axis). If dynamic trend viewer properties are used, the settings made for these properties in the value scale group will be ignored.

Parameter	Description
Min Value/Max Value	Start/end value of scale
Major Ticks	Number of labeled scale marks on the scale
Minor Ticks	Number of scale ticks between two adjacent major ticks

Time Scale Group

Parameter	Description
Time Range	Visible time span for a trend viewer in Hour:Minute:Second format. Allowed values range from 00:00:00 to 23:59:59.
Major Ticks	Number of labeled time marks. This property will be ignored in <i>Historical Mode in Trend Viewer</i> .

Style Group

Parameter	Description
Style	Predefined graphical styles for the trend viewer

Visibility Group

Parameter	Description
Scale	When unchecked, the scale color of the trend is made transparent. Scale color is set from Other Colors in the Format group on the Home ribbon tab.
Grid	When unchecked, the grid color of the trend viewer is made transparent. Grid color is set from Other Colors in the Format group on the Home ribbon tab.


Time Range Cached

In the field **Time Range Cached** the initial buffer size can be set. The default buffer size is zero.

9.1.2 Trend Viewer Legend

In runtime, it is possible to display a trend viewer legend tool using the Show Trend Viewer Legend action. The trend viewer legend tool is a floating window that displays the name and color of the curves in the current trend viewer object. Curves can be made invisible by clicking the visibility icon.

Use the needle directly in the trend viewer to select a specific occasion. The values of all curves at the current position are displayed in the trend viewer legend tool.

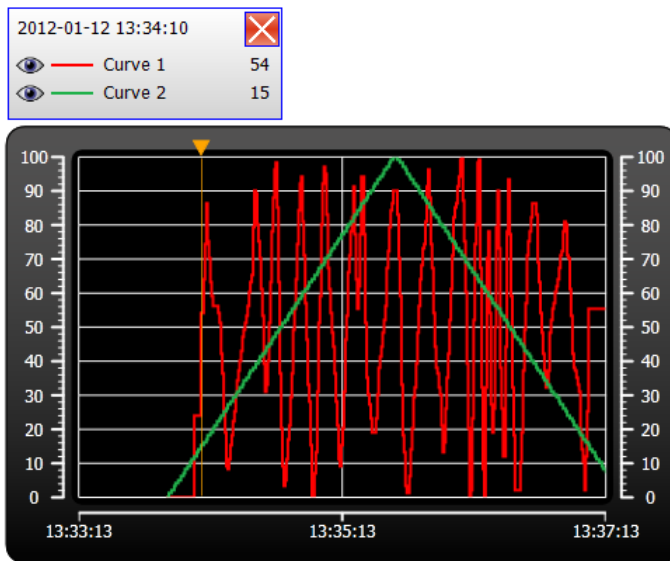


9.2 Historical Mode in Trend Viewer

To be able to show historical data in a trend viewer, the curves need to be connected to log items from a data logger.

To show trend viewer history, it is necessary to define trend actions to show and close the historical trend viewer. These actions can for example be programmed as button click actions. It is also possible to let the user select a time period.

Major ticks settings for time axis will be ignored in historical trend viewers. In historical trend viewers the date and time will be viewed at start and end time. The text “history” is visible in the middle of the time axis.

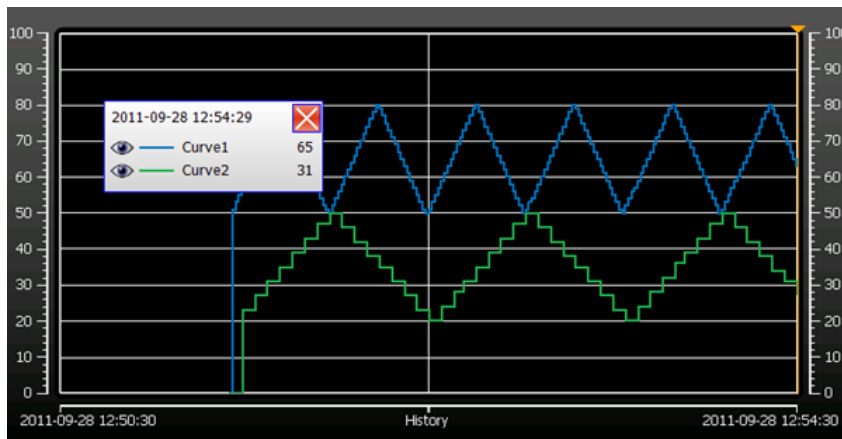

Related information

[Performance in the operator panel](#)

[Database](#)

[Click Action Trigger](#)

10 Data Logger

Data can be logged and saved in the iX Developer database.

Any number of tags can be connected to a data logger, and data values irrespective of type can be logged. A project can have multiple data loggers with different sampling alternatives.

If you want to open a database file to inspect logged data, then you need to install an appropriate third party database viewer tool.

Logged data can also be viewed in the trend viewer object by selecting a LogItem for a curve in the Edit Curves dialog.

If iX Runtime is restarted at some point during the data logging, an additional empty row is added in the Data Logger table in order to clearly visualize the interruption in the Trend Viewer.

Note:

Logging of data consumes system resources and memory. To save memory, it is preferable that all LogItems that should be logged with the same sampling intervals are placed in the same data logger.

Any individual data logger database can be exported in csv format using the **Database Export** action. It is recommended to use the database export method rather than the backup method.

Related information
Database
Database Export
Adding a Trend Viewer Object

10.1 Data Logging Strategies

Logging of data can be made at time intervals or based on changed tag values.

Logging of data can be made either by collecting all samples at every log event, or by collecting only changed values. Collecting only changed values saves memory and improves performance.

10.1.1 Logging Based on Time Interval

To collect data that changes frequently, logging data based on time interval is recommended.

10.1.2 Logging Based on Changed Tag Value

To control sampling of data by other means than regular time interval, you have to set up a separate tag to be used as a trigger. When the value of the trigger tag changes the log item is logged.

10.1.3 Maximizing the Lifetime of the Storage Media


The storage media in the iX panel is based on Flash SSD (Solid State Drive). Flash SSD has no moving or mechanical parts, which gives high and reliable performance. The Flash SSD can handle data very fast and efficiently and the data is controlled by the drive manufacturers' confidential algorithm. As the algorithm is intellectual property it is not possible to calculate the lifetime, the drive manufacturers only publish the numbers of reads and writes.

Best practice is to minimize number of writes to maximize the lifetime of the Flash SSD. Follow the advice below to reduce the risk of premature wear out (before the estimated lifetime). A non working Flash SSD stops the panel from operating.

- Do not log values with higher accuracy than needed. For example, avoid logging of floating point values.
- Reduce high fluctuating values by using the hysteresis functionality in the connected controller.
- Collect values with high fluctuating values in the same logger and do not mix with stable values. Collect slow changing values in other loggers.
- Do not log with higher refresh rate than needed.
- Disable logging completely when information is not needed, for example when the machine is not running.
- Use default setting **Log changes only** in the property setting of the logger.
- Keep the log size to a minimum, as few rows as needed.
- Avoid extensive file writing when controlling storage via script.

10.2 Adding a Data Logger

A data logger can be added to the project from the Insert ribbon tab. The data logger configuration pages are used to set up which values to log.

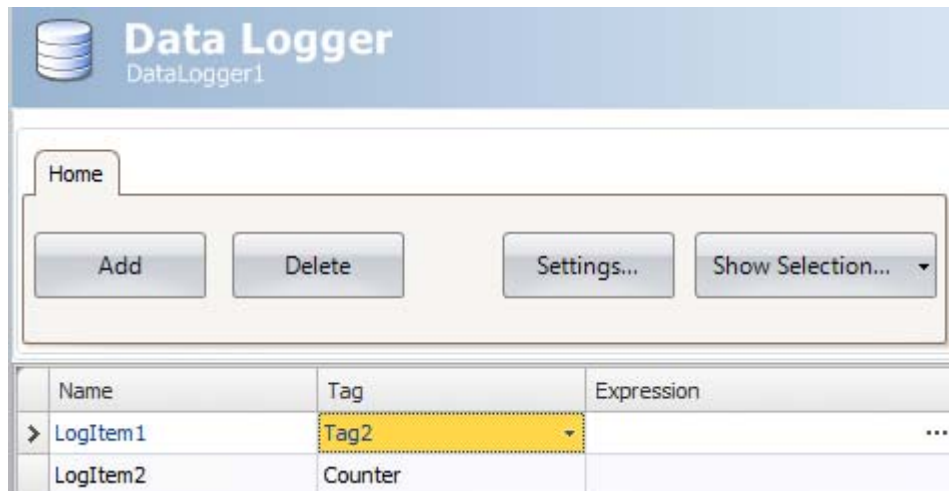

Parameter	Description
Name	Symbolic name for the logged tag
Tag	Tag to log
Expression	See section Expressions

Clicking the **Settings** button accesses the Data Logger settings.

Note:

Data Logger items cannot be called "Time" or "Id" because these names are reserved.

Related information

[General Settings](#)

[Actions](#)

10.2.1 General Settings

Parameter	Description
Log with interval	To collect data that changes frequently, use the Log with interval of option, and define time interval in seconds. Minimum interval is 1 second.
Log on tag event	To control sampling of data by other means than regular time interval, select the Log on tag event option, and select the tag to use as trigger. Data will be sampled when the tag value changes.
Log changes only	By logging changes only saves memory. The option Log changes only can be combined with either the " Log with interval of " or the " Log on object event " option. Data will only be logged if the value differs from the last logged value.
Max number of logged rows	The maximum number of tag values to save in the database. When the number of collected items becomes larger than the set value, the oldest item will be overwritten. The value must be within the size of the available amount of memory in the operator panel in runtime.

Related information

[Database](#)

[Click Action Trigger](#)

10.2.2 Actions

Event	Description
Log item Value changed	When a value of an particular log item has changed
Log values updated	When any log value is updated

11 Scheduler

A scheduler is used to control tags in relation to the real-time clock. This function is used to control events in the process, for example starting and stopping motors, at specific predefined calendar times.


11.1 Scheduler Set Up

The scheduler configuration pages are used to set up scheduler jobs, which can include a set of tags with associated start and stop times.

11.1.1 Adding a Scheduler

A scheduler can be added to the project from the Insert ribbon tab.

The scheduler configuration page will open in the desktop when a scheduler function is created or selected.

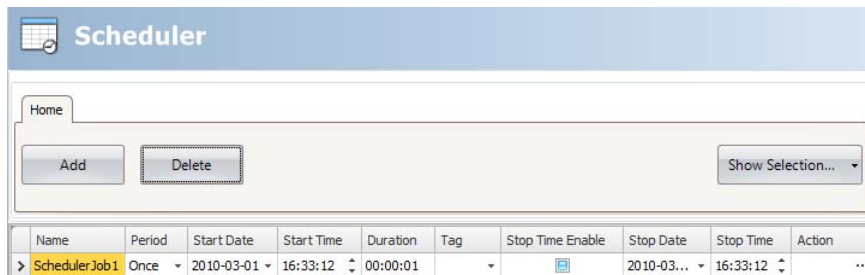

Parameter	Description
Name	A symbolic name for the scheduled event.
Period	Set to Once (default) or to a regular interval (every minute, hour, day, week, month or year).
Start Date/Start Time	The date and time for the first scheduled event.
Duration	The length of the event.
Tag	A digital tag, which is set to 1 during the specified interval.
Stop Time Enable	When checked, Stop Date and Stop Time can be used to determine the end of the event.
Stop Date/Stop Time	The end date and time of the event. Also resets the defined Tag to 0. Used when Stop Time Enable is checked.
Action	Click the button to configure an action to be performed when the scheduled event is activated/deactivated.

Note:

Make sure not to use the same trigger tag for two different schedulers. When the first scheduler is finished, its trigger tag is reset, and the second scheduler will not be triggered.

12 Reports

The report generator allows generating Excel reports based on an Microsoft Excel made report template.

The generated report can be output to a printer or saved as an Excel file or a simplified PDF file.

12.1 Reports Template Set up

The tag data to be displayed in the report file are set up in the template file using “placeholders”.

The placeholders acts as substitute for the actual tag data that is to be inserted when the report is generated in iX Runtime.

To add a placeholder, enter the following text inside a cell in the Excel report template:

```
<#Tag(TagName)>
```

Replace “TagName” with the actual name of the tag to be displayed.

When the template file is complete it needs to be added to the iX Developer project.

Note:

The tag placeholders can only be used in the cells of the Excel template file, they can not be used in, for example, Microsoft Excel WordArt texts.

12.1.1 Limitations

- Microsoft Excel xlsx format is not supported by the report generator.
- Microsoft Excel xls format only supports 65536 rows. If more data is stored in the report, information may be lost.
- Reports containing charts and pictures can not be printed from a panel target.
- The report generation is not an instant process. It may elapse a shorter period of time between the first sampled tag and the last sampled tag, depending on the number of tags to process.
- The PDF conversion cannot convert diagrams.
- The PDF conversion do not support simplified Chinese or Korean.
- If the content of an excel-cell is large enough to overflow the document, generating a PDF file will trim the data exceeding the page width.

Only the following excel features are supported:

- Text in the following fonts: Helvetica, Times New Roman, Courier, Arial, Verdana, Symbol and Zapf Dingbats
- Text size
- Text styles: italic, bold, underscore
- Bitmap images
- Cell borders
- Cell background color
- Print scale (File->Print->Settings)
- Page Header/Footer

12.1.2 Database Driven Reports

To be able to create database driven reports, the report template must be prepared as described in these instructions:

Note:

Queries have to be written in a language supported by the selected database. See [Database](#) for more information.

Configuration Sheet

The configuration sheet is a repository where configurations on the Microsoft Excel report template can be made. This sheet is not visible in the generated report.

1. Create a new worksheet in the report template. Name the sheet <#Config>.
2. Row 10, and all rows below, in column A and B can be used to configure the SQL queries. Enter the SQL query in column B. Use the corresponding cell in column A to enter a name for the query. The name is used to refer to the query in the report template.

Enter the SQL queries in the following format:

SQL(DatabaseName; SQL query)

Example: SQL(General; SELECT * FROM DataLogger1)

There are two available databases: General and Audit Trail.

Present the Database Data in the Report

The data retrieved from the SQL database, using the queries in the configuration sheet, can be presented in the report using “named ranges” in Microsoft Excel.

A named range is created in Microsoft Excel by following these steps:

1. Select the cells to be included in a named range.
2. Click the **Define name** command from the **Insert** menu. (In Excel 2007, go to the **Formulas** tab and choose **Name Manager**).
3. Enter a name for the range. The name must be entered in the following format:
“__QueryName__”.
Replace “QueryName” with the name that you have chosen for your SQL query.

To present the data in the report, enter the following syntax into the cells included in the named range:

<#QueryName.DatabaseColumnName>

Replace the “DatabaseColumnName” entry with the actual name of the table in the SQL database that you wish to present in the report.

Note:

It is possible to use the named range cells in Microsoft Excel charts and functions. To be able to use the named range in functions, an empty row must be inserted under the named range cells. This empty row must also be included in the function.

Related information

[Adding a Report](#)

12.2 Reports Set Up

The reports configuration page are available from the Insert ribbon tab.

Related information


[Insert Ribbon Tab](#)

12.3 Adding a Report

Add a Microsoft Excel report template by pressing **Add** in the reports configuration page. In the appearing Add report dialog, type in or browse to the location of the Excel template file.

If any changes are made to a report template after it has been uploaded to the project, the template has to be uploaded again.

The template files being added to the project must have unique file names.

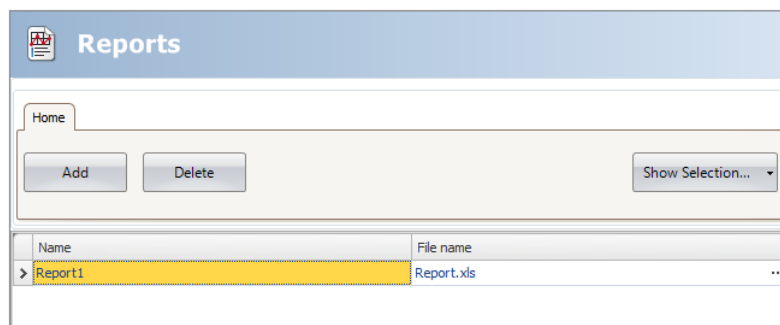

Parameter	Description
Name	A symbolic name for the report.
File name	The name of the Microsoft Excel report template.

The **Show Selection/Show All** button can be used to set up a filter of displayed items.

Related information

[Performance in the operator panel](#)

[Filtering Items](#)

[Configuration Pages](#)

[Action Groups](#)

[Output Devices Group](#)

13 Recipe Management

Recipes make it possible for a set of tags to be saved in the operator panel to be downloaded at later time. The operator can download a saved recipe to the controller, which will start working with the new values. Recipe libraries consisting of recipes with different sets of parameters can be created, allowing reuse of large sets of parameters.

Recipes can be created during the design of the project or from the operator panel.

Recipe data is stored in the operator panel database. Recipe handling functions such as loading, storing, copying and deleting recipes are handled with actions.

Recipe data is not stored in a database during the design of the project. The recipe data is transferred to the target, and the database on the target is updated, if needed, at first startup of project which then might take longer time than normal.

This makes it possible to change a recipe without deleting any existing recipes when transferring the project to the target. The same applies for data loggers, changing the configuration of one data logger doesn't affect the other data loggers and recipes.

Related information
Database
Actions Ribbon Tab

13.1 Recipe Setup


Recipes consist of a set of recipe tags and of recipe data (values).

13.1.1 Adding a Recipe Manager

The recipe function is added to the project from the Insert ribbon tab. The recipe configuration pages are used to manage tag sets and values via the Tag Configuration tab and the Runtime Data tab.

Tag Configuration Tab


First add tags to be used by the recipe function from the tags configuration page. Then define a set of recipe items on the Tag Configuration tab of the Recipe function, and connect them to the tags you defined. The data type is already set in the configuration of the tags.

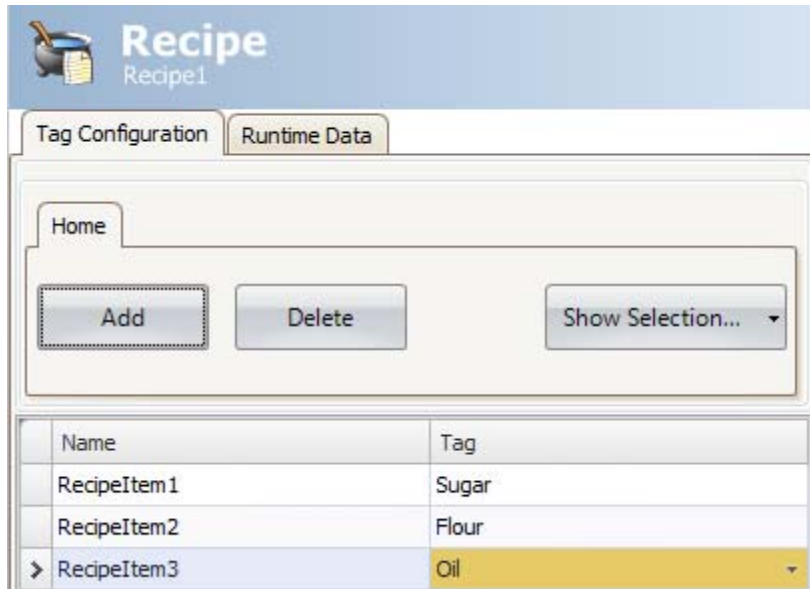

Runtime Data Tab

The actual recipes are created under the Runtime Data tab. Give the recipe a title, and type a value for each recipe item. A recipe can include a maximum of 256 items.

The recipe name has to be an alphanumeric string, beginning with a letter. Name strings can contain letters (a-z, A-Z), numbers (0-9), and underscore ('_') characters. Some system device names such as COM1 and AUX are invalid.

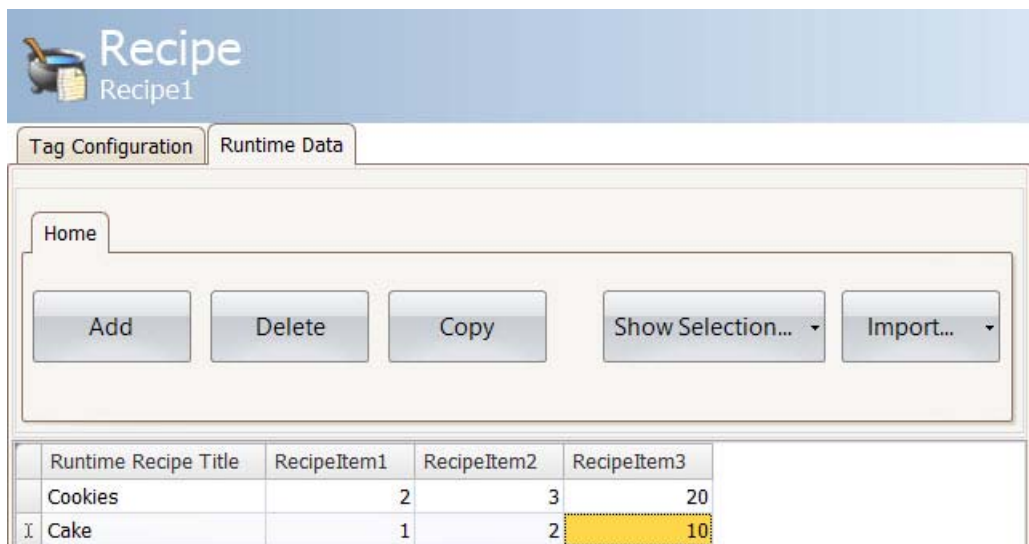

Related information

[Invalid Names](#)

13.2 Recipe Management in iX Design Time

You can import and export runtime recipes in iX design time. This has previously only been possible in runtime in the panel.

13.2.1 Recipe Import

Click on the Import button on the Runtime Data tab and then the arrow to expand (figure 1) or simply right-click the recipe (figure 2).

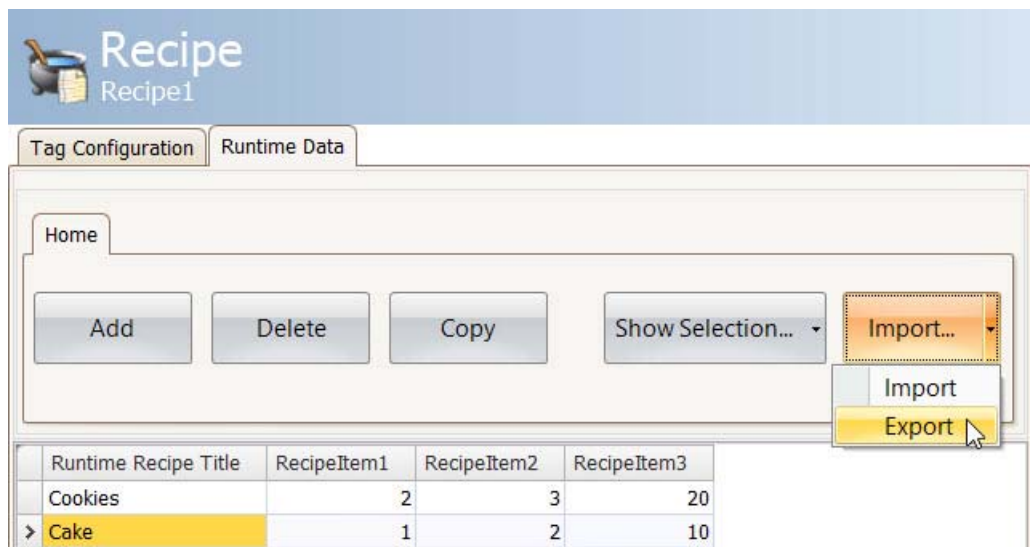


Figure 1.

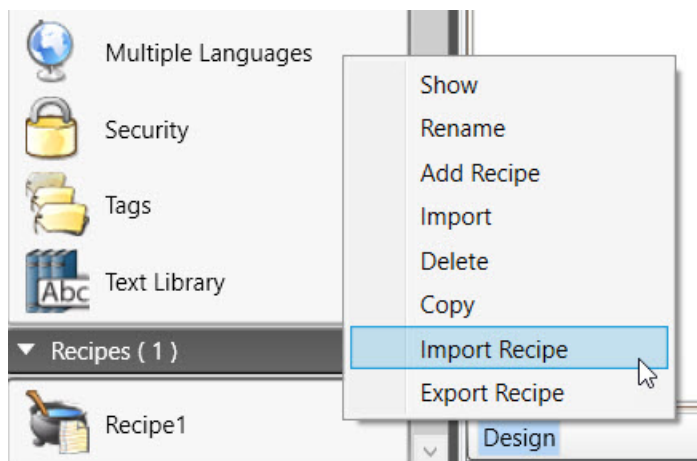


Figure 2.

To import the recipe, the default settings are: Recipe Runtime Data, Comma and Rename (see figure 3).

Refer to the Conversion Guide for information about legacy recipe import.

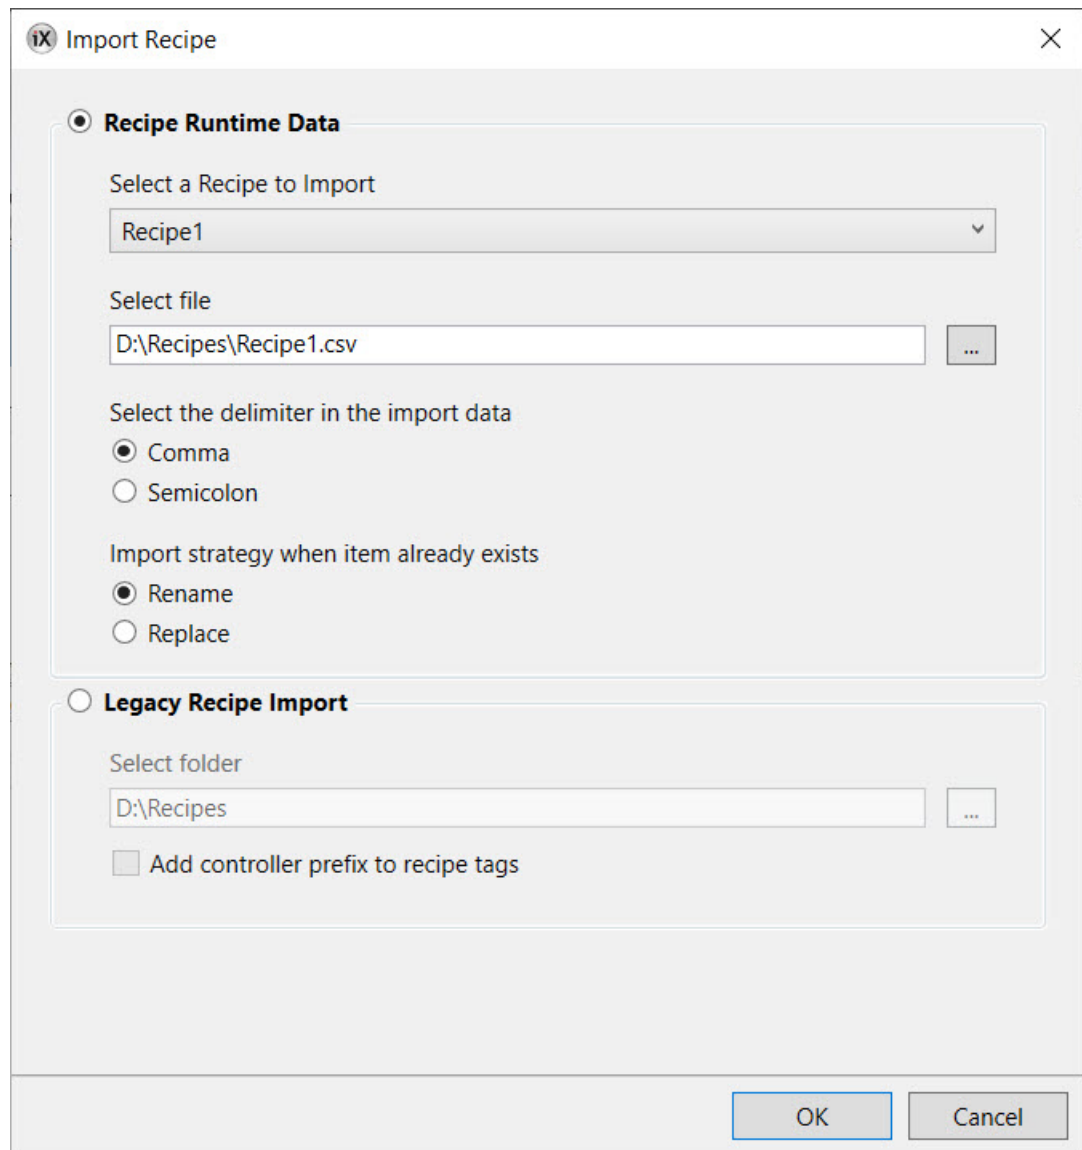


Figure 3.

13.2.2 Recipe Export

Click on the Import button on the Runtime Data tab and then the arrow to expand (figure 1) or simply right-click the recipe (figure 2).

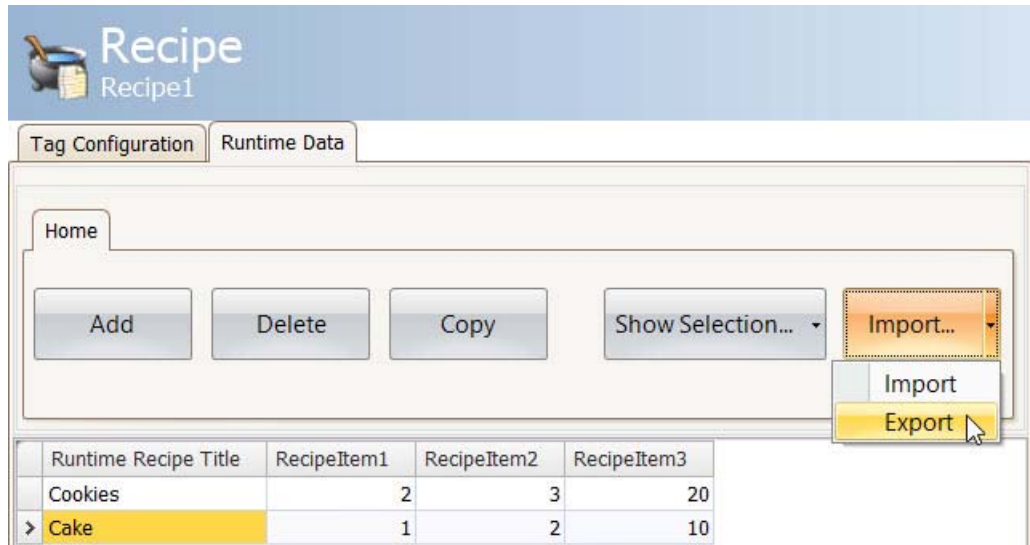


Figure 1.

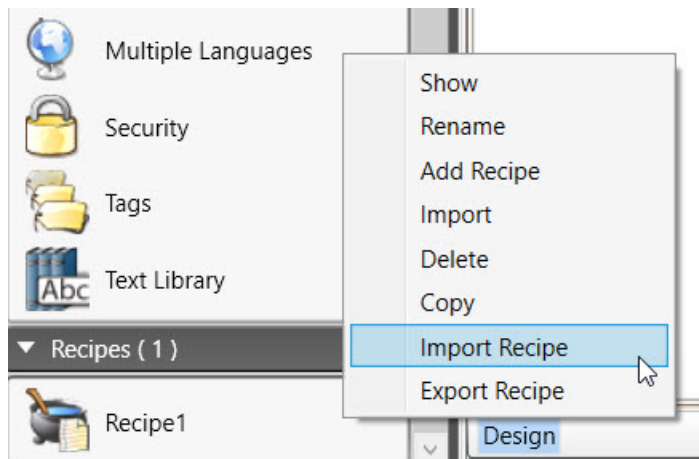


Figure 2.

To export the recipe the setting shall be Comma as delimiter (figure 3). This exports the runtime recipe to csv in iX.

Figure 3.

Note:

If a user wants to export a recipe csv file and modify it in Excel then the format of the csv file must match the csv format Excel uses. The format Excel uses depends on which region settings the user has in the OS. OS settings can be found at Control -> Region -> Additional settings.

So in iX when exporting/importing recipes from/to iX, the default delimiter is set to be the one used by the OS settings to make it work smoothly with Excel's export/import functions of csv files. If the user chooses to change the delimiter and edit the exported data in Excel, then the recipe file cannot be imported back into iX reliably.

13.3 Recipes in the iX panel


Some recipe actions can be performed by the operator in runtime.

13.3.1 Loading Recipes

Recipes can be transferred to the controller using a **Load recipe** action when the operator panel is running. This means that the recipe values are transferred to the controller. A list of available recipes is displayed when the **Load recipe** action is activated. Select a recipe in the list and press [Enter] to make the controller run with the downloaded values.


13.3.2 Saving Recipes

The **Save recipe** action can be used when the operator panel is running. Tags defined on the Tag Configuration tab are included in the recipe. Corresponding tag values are stored in the selected recipe file when **Save recipe** is performed. It is possible to define an explicit recipe, that will be overwritten if it already exists when performing the Save Recipe action.

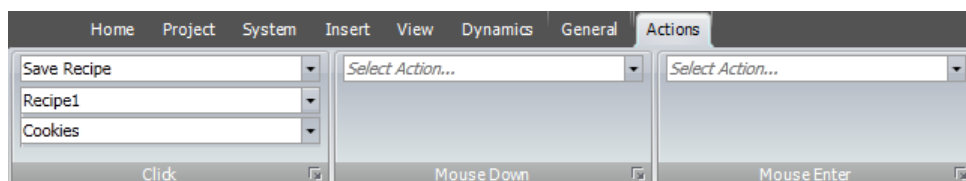

13.3.3 Creating Recipes in the iX panel

The Save recipe action is also used to create recipes in runtime. Instead of defining an explicit recipe to overwrite, the recipe data field is left open. In this case, the operator will be prompted to save the recipe with any name, or to overwrite an existing recipe.

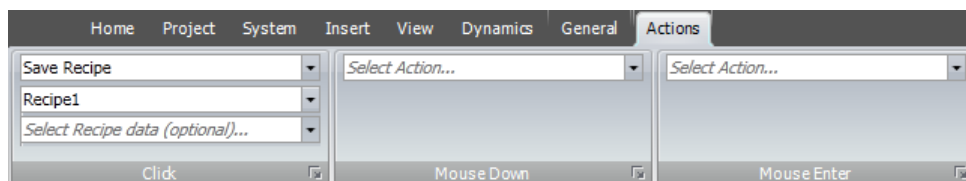

13.3.4 Editing Recipes Offline

It is possible to edit existing recipes in the panel without transferring values to the controller, by setting the recipe tags in offline mode. Recipe tags in offline mode will not receive any data from the controller, and no values will be written to the controller.

In offline mode, the Load recipe and Save recipe actions will not affect values in the controller.

Internal tags may be used for recipes, but will not be affected by offline mode.

Actions are used to start and end offline mode:

Action	Description
Start offline recipe editing	Sets the tags in the specified recipe in offline mode. A notification message is shown.
End offline recipe editing	Sets the tags in the specified recipe in online mode, and the tags are updated from the controller.

A notification message is displayed during offline mode.

Example

1. Click **Recipe** on the Insert ribbon tab.
The Recipe configuration page opens in the desktop area.
2. Add recipe tags on the **Tag Configuration** tab of the Recipe configuration page and connect them to controller tags.
3. Add a recipe on the **Runtime Data** tab.
4. Create a screen with four buttons.
5. Connect two of the buttons to the **Load Recipe** and **Save Recipe** actions. Select the recipe title from the Runtime Data tab for **Recipe Data**.
6. Connect the other two buttons to the **Start offline recipe editing** and **End offline recipe editing** actions.
7. Run the project and test the functionality:
 - a. Click **Start offline recipe editing**.
The tags are set in offline mode.
 - b. Click **Load recipe**.
The tags are filled with data from the recipe.
 - c. Change the data.
 - d. Click **Save recipe**.
The data in the tags is written to the recipe.
 - e. Click **End offline recipe editing**.
The tags are set in online mode and the values are updated with data from the controller.

13.4 Recipe Export


A recipe can be exported as a .csv file and saved to a USB stick, an external memory card or to the project files folder. The export is configured through the “**Export Recipe**” action available from the Recipe action group.



Note:

Recipe export is not supported during project simulation.

13.4.1 Recipe Export from an Operator Panel Target

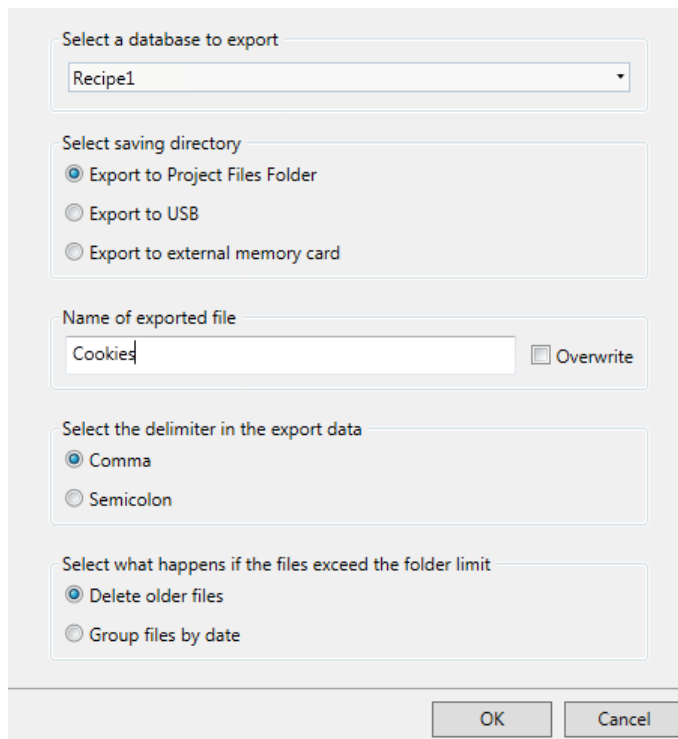

The screenshot shows a dialog box for exporting a recipe. It contains the following sections:


- Select a database to export:** A dropdown menu with "Recipe1" selected.
- Select saving directory:** Three radio buttons: "Export to Project Files Folder" (selected), "Export to USB", and "Export to external memory card".
- Name of exported file:** A text input field containing "Cookies" and an "Overwrite" checkbox.
- Select the delimiter in the export data:** Two radio buttons: "Comma" (selected) and "Semicolon".
- Select what happens if the files exceed the folder limit:** Two radio buttons: "Delete older files" (selected) and "Group files by date".

At the bottom right, there are "OK" and "Cancel" buttons.

It is possible to select **Export to the Project Files Folder**, **Export to USB**, or **Export to external memory card**, and also to set another name of the export file.

It is also possible to select the requested delimiter in the .csv file (comma or semicolon).

13.4.2 Recipe Export from a PC Target

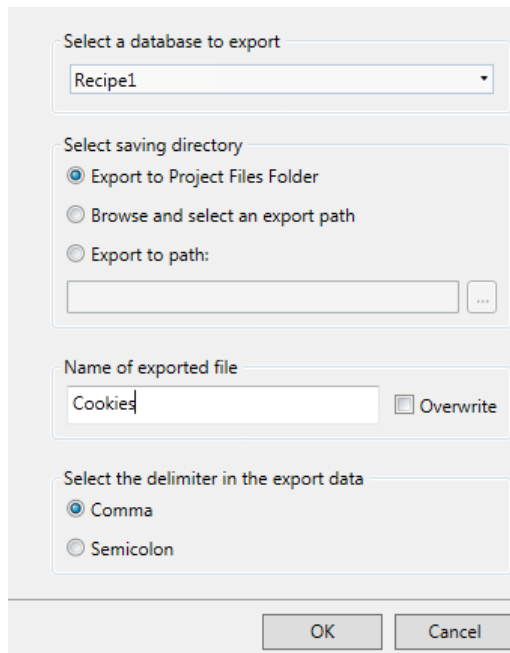

It is possible to select **Browse and Select an export path**, **Export to Path** or the **Export to Project Files folder**, and also setting another name of the export file.

The **Browse and Select an export path** option allows browsing for desired export destination in runtime. This may be useful if available folders in runtime are unknown when designing the project.

Select the **Export to Path** option when you want to set the path when designing the project. If the pre-defined path is not valid in runtime, the operator may browse the PC environment by clicking a browse button.

It is also possible to select the requested delimiter in the .csv file (comma or semicolon).

13.5 Recipe Import


A recipe that previously has been exported as a .csv file, can be imported back into recipe database. The import is configured through the “**Import Recipe**” action available from the Recipe Action group.



Note:

Recipe import is not supported during project simulation.

13.5.1 Recipe Import to an Operator Panel Target

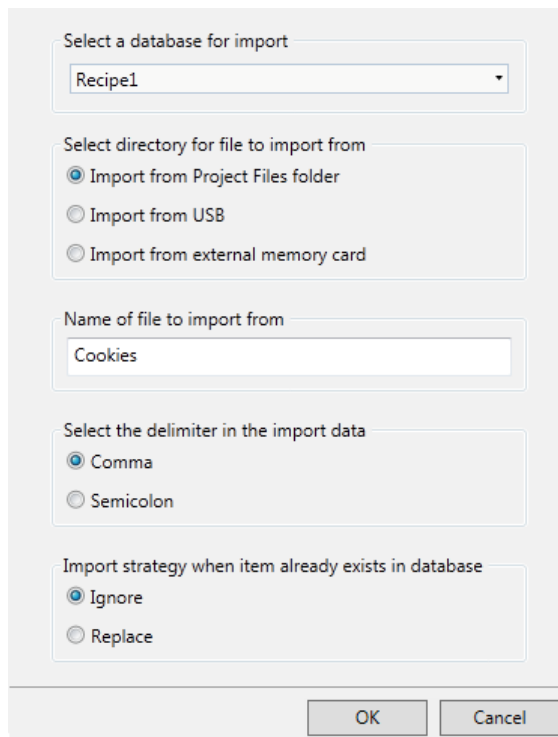

The screenshot shows a dialog box for importing a recipe. It contains the following fields and options:

- Select a database for import:** A dropdown menu with "Recipe1" selected.
- Select directory for file to import from:** Three radio button options: "Import from Project Files folder" (selected), "Import from USB", and "Import from external memory card".
- Name of file to import from:** A text input field containing "Cookies".
- Select the delimiter in the import data:** Two radio button options: "Comma" (selected) and "Semicolon".
- Import strategy when item already exists in database:** Two radio button options: "Ignore" (selected) and "Replace".


At the bottom right, there are two buttons: "OK" and "Cancel".

It is possible to import the csv file using the **Import from USB**, **Import from external memory card** or the **Import from Project Files folder** selections and also setting the name of the import file.

It is also possible to select the requested delimiter in the .csv file (comma or semicolon).

It can be selected whether to ignore the new data or replace the old data, if the recipe data already exists.

13.5.2 Recipe Import to a PC Target

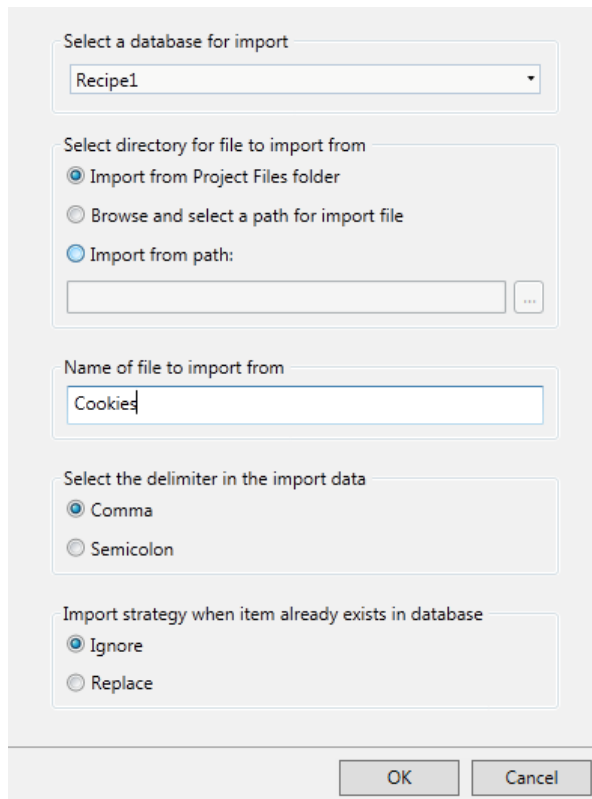

The screenshot shows a dialog box for importing a recipe. It has several sections:

- Select a database for import:** A dropdown menu with "Recipe1" selected.
- Select directory for file to import from:** Three radio buttons: "Import from Project Files folder" (selected), "Browse and select a path for import file", and "Import from path:". Below "Import from path:" is a text box and a browse button ("...").
- Name of file to import from:** A text box containing "Cookies".
- Select the delimiter in the import data:** Two radio buttons: "Comma" (selected) and "Semicolon".
- Import strategy when item already exists in database:** Two radio buttons: "Ignore" (selected) and "Replace".

At the bottom right are "OK" and "Cancel" buttons.

It is possible to select **Browse and Select a path for import file**, **Import from path** or **Import from Project Files folder**, and also setting the name of the import file.

The **Browse and Select a path for import file** option allows browsing for desired import destination in runtime. This may be useful if available folders in runtime are unknown when designing the project.

Select the **Import from path** option when you want to set the path when designing the project.

It is also possible to select the requested delimiter in the .csv file (comma or semicolon).

It can be selected whether to ignore the new data or replace the old data, if the recipes already exists.

14 Function Keys

Function keys can be configured to run actions or to run scripts.

14.1 Definitions

A standard PC keyboard has 12 function keys, F1 - F12.

A function key can be configured to affect only a particular screen or to be global. Global function keys behave identically for all screens. A global definition can always be accessed when the operator panel is running, provided that the current screen does not have a screen definition for that function key. Screen function keys have higher priority than global function keys. Function keys included in background screens have lower priority than screen function keys, but higher priority than global function keys.

For touch panel and PC targets, the Function keys function is added via the **Insert** ribbon tab, and allows configuration of up to 24 function keys (even if the connected keyboard does not support more than 12 function keys).

Related information
SecurityManagement


14.2 Configuring Function Keys

Function keys can be configured to run actions or to run scripts.


14.2.1 Function Key Actions

To define function key actions:


1. Click on **Function Keys** in the Project Explorer to open the function keys configuration page.
2. Select **Global** or **Screen**.
3. Select the function key to be defined.

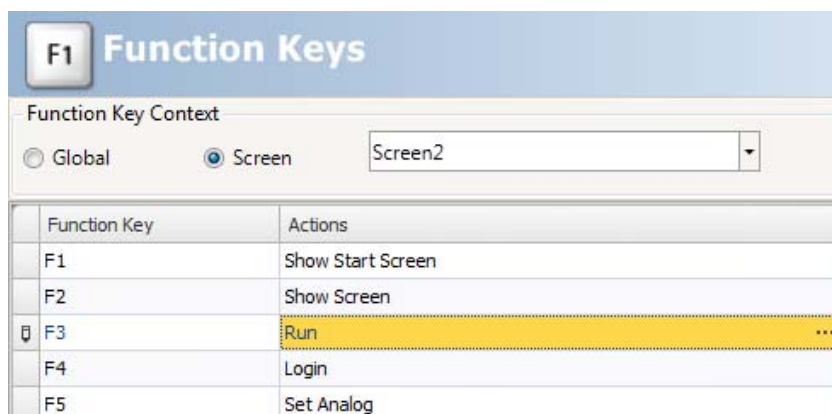

- Click on the button next to the action to display the actions editor. Define the action to be performed when the function key is pressed or released.

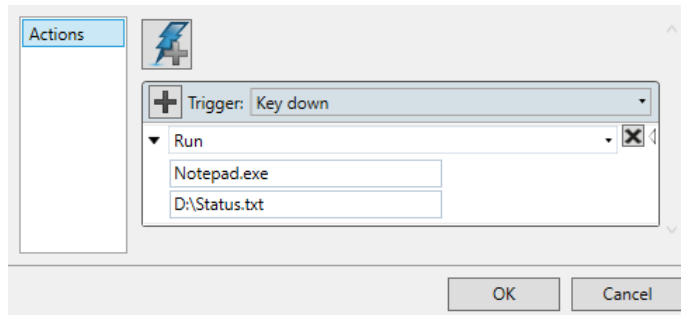

- In the column **Security groups required** it is possible to specify security group accessibility for the function key.

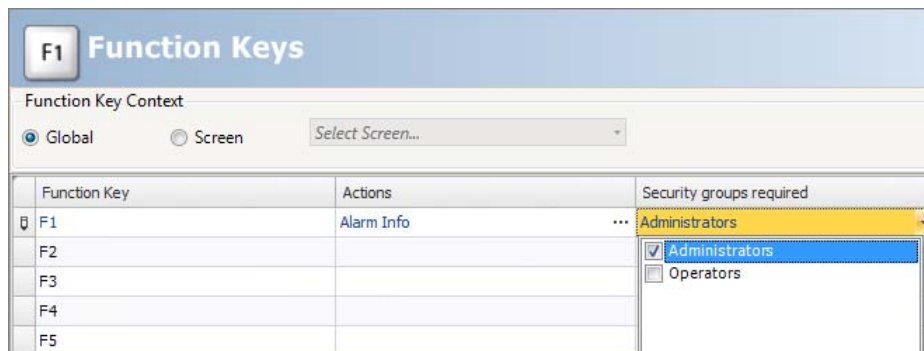

Multiple actions can be configured for a function key.

It is only possible to activate two tags connected to function keys at the same time. This means that if more than two function keys are pressed at the same time, only the first two will be activated.

Should further function key actions be needed in addition to those available for the panel in question, this could be solved by adding buttons or other objects on screen, connecting these to the desired actions.

For a keypad, the function is carried out by navigating to the object and pressing Enter.

Note:

The function keys will be disabled if the backlight of the panel is disabled.

Related information
Function Key Action Triggers
Multiple Actions

14.2.2 Function Key Scripts

To define a script for a function key:

1. Click on **Function Keys** in the Project Explorer to open the function keys configuration page.
2. Select the function key to be defined.
3. Select script view mode by clicking **Script** in the lower part of the desktop area.
4. Click on the desired button node. Double-click on the **KeyDown** node. Edit the script code to be performed.

Example:

The following C# code sets up function key F12 to perform an acknowledge of all alarms:


```
public partial class FunctionKeys
{
    void F12_KeyDown(System.Object sender, System.EventArgs e)
    {
        Globals.AlarmServer.Acknowledge();
    }
}
```

Related information

[Script](#)

14.2.3 Momentary Function

In order to configure a function key with a momentary function, you need to combine a **Set Tag** action for **Key Down** with a **Reset Tag** action for **Key Up**.

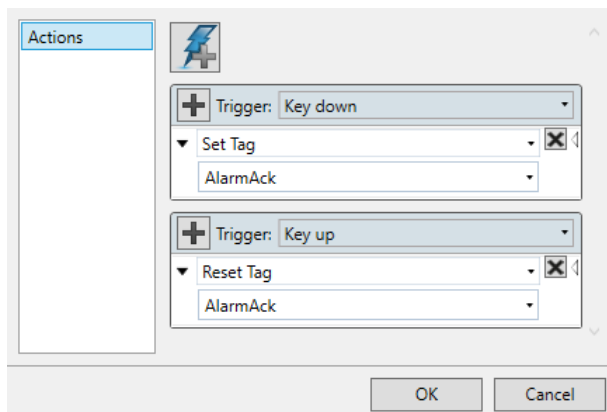

Change of Screen During Momentary Execution

There are a few special cases to be aware of when, during execution of the momentary function, another screen is opened that contains settings for the function key in use.

Then, dependent on the **Function Key Context** settings, **Global** or **Screen (local)**, there will be different outcomes:

- **Case 1:** A local function key is pressed.
A change to another screen occurs.
Result: The up action for the local key is executed. No new down or up actions are executed on the second screen as long as the key is pressed.
- **Case 2:** A global function key is pressed.
A change to another screen occurs, in which there is no local setting for the same key.
Result: Nothing happens at screen change. The up action for the global key is executed when the key is released.
- **Case 3:** A global function key is pressed.
A change to another screen occurs, in which there is a local setting for the same key.
Result: The up action for the global key is executed. No new down or up actions are executed on the second screen as long as the key is pressed.

Note:

A Screen (local) function key command has priority over a Global function key command.

15 Alarm Management

An alarm is used to call attention to an event that requires immediate action. An alarm is set when a certain condition is met. An alarm condition is designed as a logical evaluation of a tag value. Alarms can be divided into groups to create an order of priority.

Alarm notification can be made in the following ways:

Alarm Indicator
Alarm Viewer
Distribution via SMS, e-mail or printer via the Alarm Distributor

The alarm server database can be exported in csv format using the **Database Export** action.

Related information
Database Export

15.1 Alarm Conditions

Alarms can assume the following conditions:

Alarm condition	Description
Active	The alarm condition is met, and the alarm is not acknowledged
Inactive	The alarm has returned to normal condition, but has not been acknowledged
Acknowledged	The alarm condition is still met, but the alarm is acknowledged
Normal	The alarm has returned to normal condition and has been acknowledged

15.2 Alarm Server


The alarm server function is predefined in the Project Explorer. Clicking on it opens the alarm server configuration pages in the desktop.

General alarm server properties are available by clicking the **Settings** button.



The Properties window is divided into General, Alarm Distribution and Actions.

15.2.1 General Settings

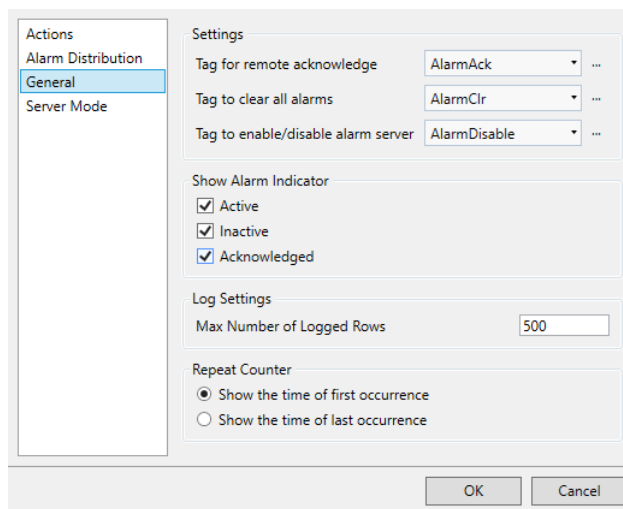

Settings

Some alarm server functions are based on changed tag values:

Alarm function	Description
Remote acknowledge	Performs remote acknowledge of all current alarms when the tag value is 1
Clear alarms	Removes all alarms from the alarm server when the tag value is 1
Enable/disable alarms	Enables the alarm server when the tag value is 1

Show Alarm Indicator

Select for which alarm statuses the alarm indicator is to be displayed.

Log Settings

Parameter	Description
Max Number of Logged Rows	The maximum number of alarms to save in the database. If the number of collected items becomes larger than the set value, the oldest item will be deleted. The value must be within the size of the available amount of memory in the operator panel in runtime.

Repeat Counter

To avoid that an alarm that is triggered repeatedly results in multiple entries in the alarm list, **Repeat Count** can be used. The current alarm will then only appear once in the alarm list, and number of times the alarm is triggered will be included in the alarm text. For display in the Alarm Viewer and for logging, select whether to show the time of the first or last occurrence of the alarm.

15.2.2 Alarm Server Events and Actions

Actions can be configured for the entire alarm server. One or multiple actions can be configured when a particular alarm server event occurs.

Select **Actions** in the Alarm Server properties page to configure actions for the alarm server.

Actions for the following alarm server events can be configured:

Alarm Acknowledge

The specified actions are triggered once for every alarm that is acknowledged.

Alarm Active

The specified actions are triggered once for every alarm that becomes active.

Alarm Deleted

The specified actions are triggered once when the **Clear** button in the Alarm Viewer is pressed, if at least one alarm is deleted.

Alarm Event Info Requested

The specified actions for the selected alarm are triggered when the **Info** button in the Alarm Viewer is pressed.

The actions are applied for the individual alarm first. If no action is specified for the alarm, the actions are applied for the group. If no action is specified for the group, the actions are applied for the alarm server.

Alarm Inactive

The specified actions are triggered once for each alarm, for which the alarm condition is no longer met.

Alarm Normal

The specified actions are triggered once for each acknowledged alarm, for which the alarm condition is no longer met.

Active Alarms Deleted

New alarms replace old alarms when the number of logged rows exceeds the maximum value. When this occurs, the "Active alarms deleted" event will be fired, if any of those replaced alarms are active.

Alarms Changed

This event is intended primarily for scripting, in order to avoid performance loss that may occur when many alarms change status at once. Alarms Changed includes status changes based on Alarm Acknowledge, Alarm Active, Alarm Normal and Alarm Inactive, but not Alarm Deleted.

The specified actions are triggered once when the status of several alarms change at one occasion. A collection of alarms is returned.

Alarms Deleted

This event is intended primarily for scripting, in order to avoid performance loss that may occur when many alarms are deleted at once, by pressing the **Clear** button in the Alarm Viewer.

The specified actions are triggered once when a number of alarms are deleted at one occasion. A collection of alarms is returned.

Any Acknowledged

The specified actions are triggered based on alarm logic: when the alarm server toggles between containing acknowledged alarms or not.

Any Active

The specified actions are triggered based on alarm logic: when the alarm server toggles between containing active alarms or not.

Any Inactive

The specified actions are triggered based on alarm logic: when the alarm server toggles between containing inactive alarms or not.

15.2.3 Alarm Distribution Settings

To enable sending alarms to printer, or via SMS or e-mail, the Alarm Distributor is used. In addition to the settings below, the **Enable Distribution** option for the alarm groups or alarm items also has to be checked.

Parameter	Description
Internal/External	Selection of internal or external alarm distributor
IP Number Server	The IP address of the external alarm distributor
Queue Length	The number of alarms to be kept in queue for the external alarm distributor. When the queue is full, no more alarms will be added to the queue.
Port Number	The port number of the external alarm distributor

Related information
Alarm Distributor
Alarm Groups
Alarm Items

15.3 Alarm Indicator

As long as there are active alarms in the alarm server, the alarm indicator notify window will be displayed, regardless of which screen is active. The color shows the current alarm status, and can be configured for each of the alarm groups. The indicator starts in the upper left corner of the screen in runtime, but can be moved to any position on the monitor in runtime.

The appearance of the alarm indicator depends on the current alarm status. It will show the most severe status of the alarms in the list. The Alarm Indicator disappears when all alarms have been acknowledged, and all alarms have returned to inactive status.

Select **General** settings in alarm server properties page to decide for which alarm statuses to show the alarm indicator.

Alarm condition	Description	Default alarm indication
Active	The alarm condition is met, and the alarm is not acknowledged	Flashing red
Inactive	The alarm has returned to normal condition, but has not been acknowledged	Flashing green

Alarm condition	Description	Default alarm indication
Acknowledged	The alarm condition is met, and the alarm is acknowledged	Flashing green
Normal	The alarm has returned to normal condition, and has been acknowledged	-

Related information
General Settings

15.4 Alarm Items

Alarm items are added from the Alarm Items tab of the alarm server configuration pages.

Click **Add** to define a new alarm.

AlarmItems							
🔍	Name	Text	Tag	Expression	Condition	Trigger Value	History
	AlarmItem0	SliderMaxValue	MeterAndSlider		GreaterThan	90	<input checked="" type="checkbox"/>
>	AlarmItem1	Overflow ...	BoolAlarmTag ▾	...	EqualTo ▾	1	<input checked="" type="checkbox"/>

Acknowledge Required	Remote Acknowledge	Remote Ack Expression	Enable Distribution	Repeat Count	Action
<input checked="" type="checkbox"/>			<input type="checkbox"/>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	▾	...	<input type="checkbox"/>	<input type="checkbox"/>	Show Screen ...

Parameter	Description
Name	Symbolic name for the alarm item that will show in an Alarm Viewer.
Text	An optional alarm text that will be shown in the Alarm Viewer. Parts of the text can be made dynamic by clicking ... The dynamic text can also be linked to a Text Library.
Tag	The tag (digital or analog), which generates the alarm when it assumes the specified status.
Expression	See section Expressions
Condition	<p>Equal to/Not equal to: The alarm is set when the value of the tag is equal/not equal to the value specified in the Trigger Value field.</p> <p>Greater than/Less than: The alarm is set when the value of the tag is greater/less than the value specified in the Trigger Value field.</p> <p>Equal to greater than/Equal to less than: The alarm is set when the value of the tag is equal to or greater/less than the value specified in the Trigger Value field.</p> <p>Rising/Falling Edge: The alarm is set when the specified tag goes to one/zero.</p>

Parameter	Description
Trigger Value	Numeric value to trigger alarm with when: <tag value> <condition> <trigger value> = true.
History	Specifies when the alarm is to be removed from the alarm list. Checking this box means that the alarm will remain in the list until the list is full. Leaving it unchecked means that the alarm will be removed from the list when it is acknowledged and no longer active. If Acknowledge Required is not checked, the alarm will be removed from the list as soon as it is no longer active.
Acknowledge Required	Indicates whether the alarm is to be acknowledged or not. Checking the box means that the alarm must be acknowledged, leaving it unchecked means that the alarm returns to normal directly when the alarm status becomes inactive.
Remote Acknowledge	A digital tag that acknowledges all the alarm when set to 1
Remote Ack Expression	See section Expressions
Enable Distribution	Enables distribution of the alarm via printer/SMS/e-mail. Only available if alarm distribution is enabled for the alarm server. If the Enable Distribution option for the alarm group is checked, distribution of individual alarms in the group are automatically enabled.
Repeat Count	To avoid that an alarm that is triggered repeatedly results in multiple entries in the alarm list, Repeat Count can be used. The current alarm will then only appear once in the alarm list, and the number of times the alarm is triggered will be included in the alarm text. It is also possible to show a Count column in the Alarm Viewer. The active time can be shown either for the first time or for the last time the alarm occurred.
Action	Makes it possible to configure one or multiple actions when a particular alarm event occurs for the current alarm.

Note:

An alarm condition is triggered by a fixed value. The trigger value defined for an analog alarm tag cannot be controlled from a register. It is not supported to trigger alarms on intervals.

Related information
Actions and Events for Alarm Items and Alarm Groups

15.4.1 Exporting and Importing Alarm Items

Alarm items can be exported and imported using the **Import/Export** button in the Alarms configuration page. The procedure is similar to exporting and importing tags.

Related information
Importing and Exporting Tags
Tag Import Example





15.5 Alarm Groups



Alarms can be divided into groups, for example to indicate the priority of the alarms. One alarm group is defined by default.

Color attributes can be individually set for each alarm group. Alarms can be sorted by group in the Alarm Viewer.

15.5.1 Defining Alarm Groups

Alarm groups are added from the **Alarm Groups** tab of the alarm server configuration pages.

Name	Text	Active Background	Active Foreground	Inactive Background	Inactive Foreground
> Default	Default	 191; 19; 41	 Black	 241; 204; 71	 Black

Acknowledge Background	Acknowledge Foreground	Remote Acknowledge	Remote Ack Expression	Enable Distribution	Action
 67; 127; 70	 Black			<input type="checkbox"/>	...

Parameter	Description
Name	An optional name for the alarm group.
Text	An optional text for the alarm group.
Colors	Select foreground and background color for each alarm status
Remote Acknowledge	A digital tag that acknowledges all the alarms in the group when set to 1
Remote Ack Expression	See section Expressions
Enable Distribution	Enables distribution of the alarms in the group via printer/SMS/e-mail. Only available if alarm distribution is enabled for the alarm server.
Action	Makes it possible to configure one or multiple actions when a particular alarm event occurs for the current alarm group.

Note:

Alarm Filters will revert to default settings if the filtered **Alarm Group** is renamed.

Related information
Actions and Events for Alarm Items and Alarm Groups

15.6 Actions and Events for Alarm Items and Alarm Groups

Actions can be configured for individual alarms or for alarm groups. One or multiple actions can be configured when a particular alarm event occurs for the current alarm or alarm group.

Actions for individual alarms are configured from the **Action** column for the alarm on the **Alarm Items** tab.

Actions for alarm groups are configured from the **Action** column for the alarm group on the **Alarm Groups** tab.

15.6.1 Actions and Events

Actions for the following alarm events and alarm group events can be configured:

Alarm Acknowledge

The specified actions will be triggered when the selected alarm/an alarm in the selected alarm group is acknowledged.

Alarm Active

The specified actions will be triggered when the selected alarm/an alarm in the selected alarm group becomes active.

Alarm Event Info Requested

The specified actions are triggered when the Info button in the Alarm Viewer is pressed.


These actions are applied for the individual alarm first. If no action is specified for the alarm, the actions are applied for the group. If no action is specified for the group, the actions are applied for the alarm server.

Alarm Inactive

The specified actions are triggered when the alarm/an alarm in the selected alarm group becomes inactive.

15.6.2 Example

The following picture shows two actions configured for when the current alarm goes active, and another action for when the operator presses the **Info** button in runtime.

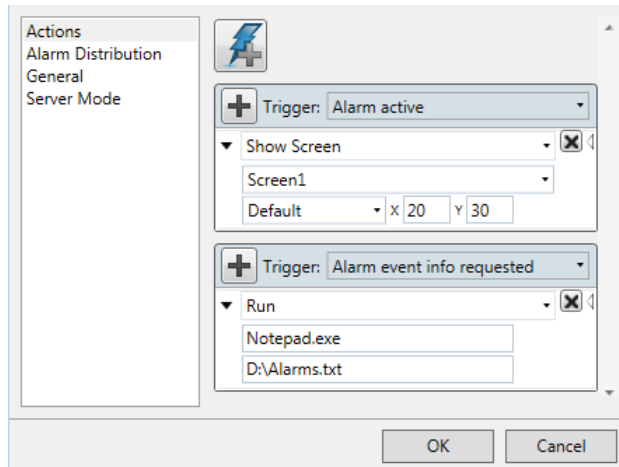

15.7 Remote Alarm Server

The alarm server in the iX Developer project can operate as a stand-alone alarm server, processing alarms and showing these in the Alarm Viewer and alarm indicator. Alternatively, the alarm server can distribute alarms to clients. Each alarm server can function as alarm server and/or alarm client. The remote alarm server functionality is set up via properties.

15.7.1 Remote Alarm Server Limitations

Most functions work exactly the same regardless if a local or remote alarm server is used, but there are a few limitations:

- In projects where multiple languages are used, switching language in the alarm server results in using the current language for all new alarm texts. Alarms distributed before the language was switched in the server will remain in the previous language in the client.
- Pressing the Info button in the Alarm Viewer in runtime does not result in any actions for a remote alarm, unless the same project is used for the server and the client. The script event AlarmInfoRequested can be used instead.
- Unless the same project is used for the server and the client, filtering (pressing the Filter button in the alarm viewer) can only be made in runtime for remote alarms, since the remote server may include e.g. alarm groups that are different from the project in which the alarm viewer was configured.

15.7.2 Remote Alarm Server Properties

The following properties, located in the **Server Mode** group under the **Settings** button, need to be set up for the remote alarm server:

Property	Description
Maximum number of alarm events to distribute	The number of events to distribute to the clients. The number of distributed alarms affects performance.
Server Mode	The alarm server can assume the following modes: Disabled: The alarm server is disabled and no alarms are processed Local: The alarm server processes alarms of its own. Remote: Alarms are distributed to remote clients. Both: The alarm server processes alarms of its own and also distributes them to remote clients
Server Port	Any available port. The port needs to correspond to the port setting for the remote alarm client.


The screenshot shows a configuration window with a sidebar on the left containing 'Actions', 'Alarm Distribution', 'General', and 'Server Mode' (which is highlighted). The main area contains three settings: 'Server Mode' with a dropdown menu set to 'Remote', 'Max number of alarm events to distribute' with a text input field containing '100', and 'Server Port' with a text input field containing '1000'. At the bottom right, there are 'OK' and 'Cancel' buttons.

15.7.3 Remote Alarm Client

The properties for the remote alarm client are set by adding the Alarm Viewer object, found in the Objects group under the Home tab.

The settings are done in the Property Grid under **Extended**.

Property	Description
Server address	The IP address of the remote alarm server.
Server port	Any available port. The port needs to correspond to the port setting for the remote alarm server.

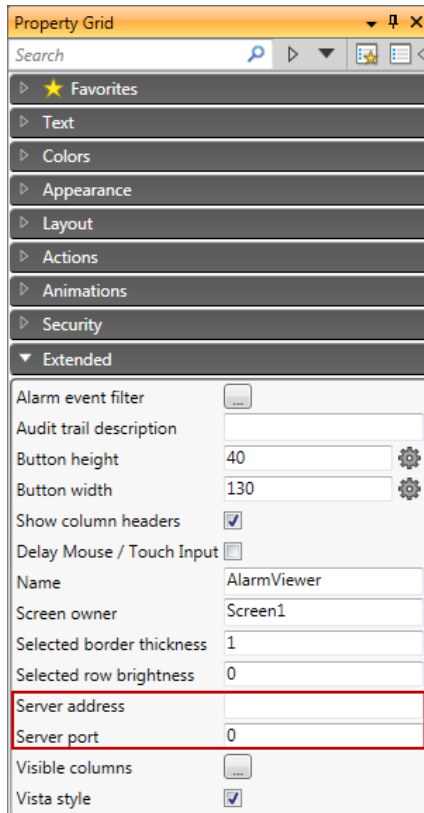

15.8 Alarm Distributor

The Alarm Distributor makes it possible to send alarm notification via printer, SMS or e-mail. The function can be enabled internally in a project, or in another operator panel that acts as a server towards several connected clients. Regardless of acting as server or client, distributed alarms are saved temporarily in the local project database to ensure that information is not lost in case of e.g. interrupted power. After receiving alarms from a client, the server will send a confirmation to the client. The alarms will then be removed from the client's database.

The Alarm Distributor must be created before actions related to it are created.

15.8.1 Alarm Distribution Roles

Using Internal Alarm Distribution Server Functions (Acting as Client and Server)

The following actions are required for using distributed alarm functions in the current project:

Action	Component	Location
Activating distribution of alarms in the project	Alarm Distribution Server	Insert ribbon tab
Enabling internal distribution of alarms	Alarm Server	Settings button/ Alarm Distribution properties

Action	Component	Location
Enabling distribution of alarm groups or individual alarms	Alarm Server	Alarm Groups or Alarm Items tab
Configuration of alarm distribution routes	Alarm Distribution Server	Receivers, Alarm Filter and Scheduler tabs
Configuration of alarm distribution devices	Alarm Distribution Server	Configure Distribution Devices button (e-mail, printer and/or SMS)

Using External Alarm Distribution Server Functions (Acting as Client)

The following actions are required for using distributed alarm functions in another operator panel/PC project:

Action	Component	Location
Activating distribution of alarms in the project	Alarm Distribution Server	Insert ribbon tab
Enabling external distribution of alarms	Alarm Server	Settings button/ Alarm Distribution properties
Enabling distribution of alarm groups or individual alarms	Alarm Server	Alarm Groups or Alarm Items tab

Collecting Alarms for Distribution (Acting as Server)

The following actions are required for using distributed alarm functions in another operator panel/PC project:


Action	Component	Location
Activating distribution of alarms in the project	Alarm Distribution Server	Insert ribbon tab
Configuration of alarm distribution routes	Alarm Distribution Server	Receivers, Alarm Filter and Scheduler tabs
Configuration of alarm distribution devices	Alarm Distribution Server	Configure Distribution Devices button (e-mail, TCP server, printer and/or SMS)

15.8.2 Adding an Alarm Distributor

The Alarm Distributor can be added to the project from the Insert ribbon tab. The configuration pages are opened in the desktop area.

Route

A route defines a number of filtering rules for distribution of alarms. Multiple routes makes it possible to send different kinds of notifications to various receivers.

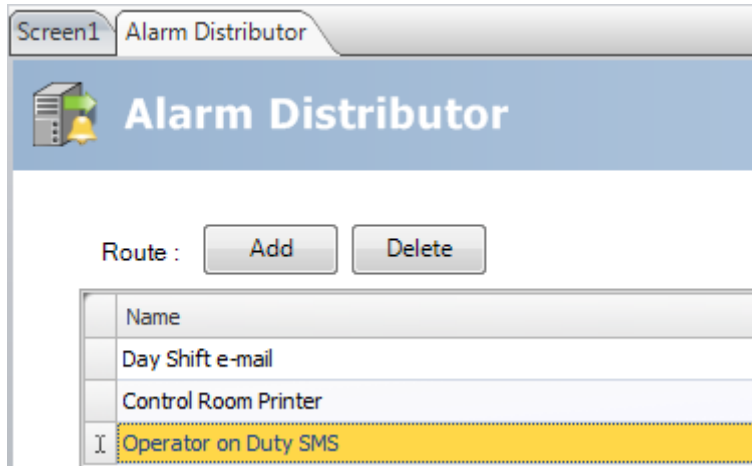


Receivers Tab

The receivers of distributed alarms for each route are set up on the **Receivers** tab.

Address Book

Click on the **Address Book** button to enter names, e-mail addresses and/or phone numbers of the persons that are to be available for selection for distributed alarm messages.

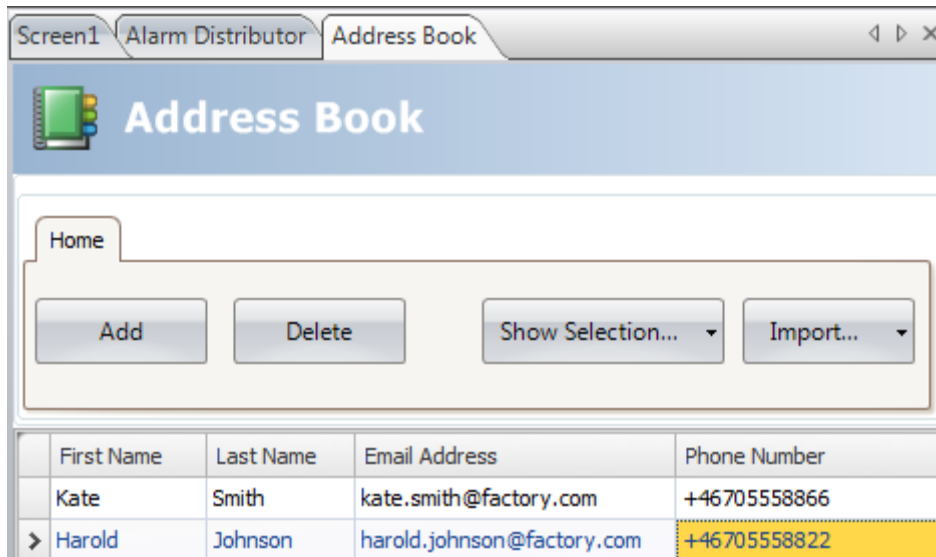


The **Show Selection/Show All** button can be used to set up a filter of displayed items.

The contents of the address book can be exported as a .csv file, and then be imported again after modification using the **Import/Export** button.


Related information
Filtering Items

Receiver Selection

Click on the **Receiver Selection** button to set up receivers of each alarm distribution route; via e-mail, SMS and/or printer.

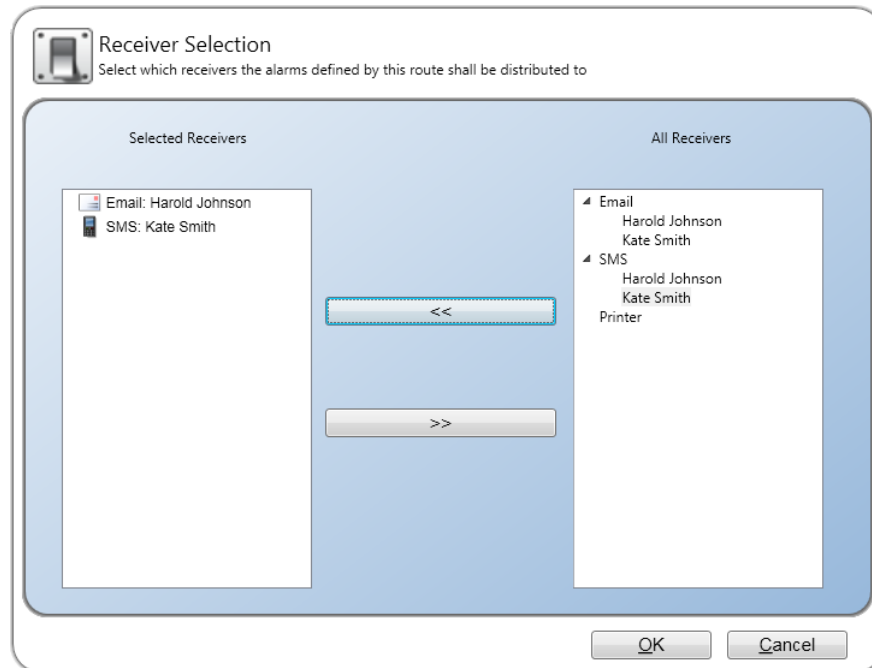

The selected receivers are displayed under **Receivers**.

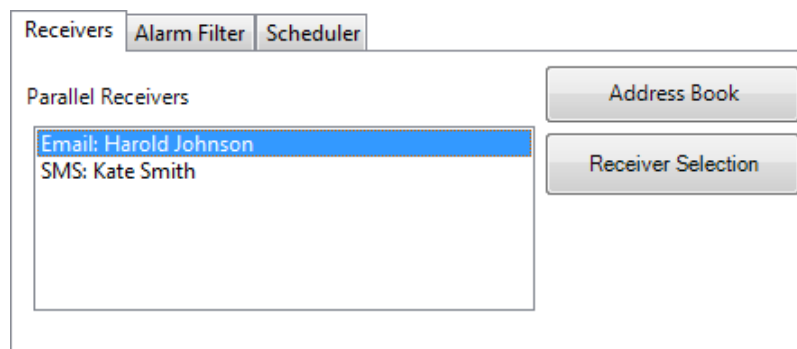

Alarm Filter Tab

Filtering of each alarm distribution route can be configured on the **Alarm Filter** tab. The filtering operates using “and” logic, i.e. the alarm will only be distributed

if all conditions are fulfilled. An empty string does not generate a filter condition (acts as a “wild card”).

Receivers
Alarm Filter
Scheduler

Alarm String Filters

Alarm Name:

Alarm Group:

Alarm Text:

Note: The filter criterias above correspond to the properties for a received alarm item from the client. The filter string shall be expressed using Regular Expressions. If all alarms shall pass a filter string the string shall be empty.

Alarm Status(es) to distribute

Active Inactive

Acknowledged Normal

Parameter	Description
Alarm Name	The alarm item to distribute.
Alarm Group	The alarm group of which alarm items are to be distributed.
Alarm Text	All alarms including this text will be distributed.
Alarm Status(es) to distribute	Selection of alarm to be distributed, based on alarm status. At least one status must be selected.

Scheduler Tab

Scheduling of each alarm distribution route can be configured on the Scheduler tab. Only alarms that occur between the start and stop times will be distributed.

Receivers Alarm Filter Scheduler

Add Delete

	Period	Day	Start Time	Stop Time	Name
I	Weekly	Tuesday	13:40:00	13:50:00	Tuesday 13:40:00 to 1...

Parameter	Description
Period	Select daily or weekly alarm distribution
Day	Select weekday, if Weekly was selected for Period
Start Time/Stop Time	Select start and stop time of the alarm distribution
Name	The name is automatically filled in based on start and stop time, and cannot be edited

15.8.3 Configure Distribution Devices

Click the **Configure Distribution Devices** button to set up the different devices.

Related information
Modifying Alarm Distribution Settings in Runtime

Alarm Variables

Variables collected from the alarm server definitions can be included in distributed alarm information. Variables are enclosed by curly brackets; for example “Alarm text: {3}”. The following variables can be used:

Number	Variable	Description
0	State	The current state of the alarm
1	StateTime	The time the alarm entered the current state
2	AlarmId	A unique alarm ID
3	AlarmText	Alarm item text
4	AlarmItemDisplay-Name	Alarm item name
5	Count	The number of times the alarm has occurred
6	ActiveTime	The time the alarm became active
7	InactiveTime	The time the alarm became inactive

Number	Variable	Description
8	NormalTime	The time the alarm became normal
9	AcknowledgeTime	The time the alarm was acknowledged
10	AlarmGroupName	Alarm group name
11	AlarmGroupText	Alarm group text

E-mail Device

Email Device
 Print Settings
 SMS Device
 TCP Server

From Name :

From Email Address :

SMTP Server Name/IP :

Port :

Encryption Mode :

Advanced Encryption :

Code page :

Authentication Mode :

User Name :

Password :

Distribution

Retry Sending : (times)

Time Interval : (seconds)

Define the format of the alarm text to send. You can include the value of an alarm variable by replacing the corresponding value (see the list below) in curly braces, such as: State is {0}

Subject :

Body :

{0}=State, {1}=StateTime, {2}=AlarmId, {3}=AlarmText, {4}=AlarmItemDisplayName, {5}=Count, {6}=ActiveTime, {7}=InactiveTime, {8}=NormalTime, {9}=AcknowledgeTime, {10}=AlarmGroupName, {11}=AlarmGroupText

Parameter	Description
From Name	The name of the sender of the e-mail
From E-mail Address	The e-mail address of the sender of the e-mail
SMTP Server Name/IP	The name or IP address of the SMTP server for sending e-mail
Port	The port number of the e-mail server
Encryption Mode	Select None , ImplicitSSL , or ExplicitSSL
Advanced Encryption	Clear the check box to use only RSA encryption. Select the check box to use advanced encryption, like DSS, DHE and DH ⁽¹⁾ .

Parameter	Description
Code Page	The code page consists of a table of values that describes the character set for a particular language. The default code page in IX Developer is 65001 (UTF-8).
Authentication Mode	Select None or Authenticated Login
User Name/Password	User name and password if Authenticated Login was selected
Retry Sending	Number of retries if the e-mail cannot be delivered
Time Interval	Number of seconds between retries
Subject	The e-mail subject; <i>Alarm Variables</i> can be used
Body	The e-mail body; <i>Alarm Variables</i> can be used

(1) Note that using **Advanced Encryption** has a negative effect on the performance on CE targets.

Printer Device

Parameter	Description
Buffer settings	Set up the printers buffer settings
Text Font Size	The font size of the text to be printed
Body	The body of the printout; <i>Alarm Variables</i> can be used

Related information

[Output Devices Group](#)

SMS Device

To be able to send alarms via SMS, you have to purchase an SMS Gateway Service.

Parameter	Description
Basic URL for web SMS	The URL configuration string according to the SMS Gateway Service supplier that must include two variables: {0} for telephone number and {1} for SMS body
Retry Sending	Number of retries if the SMS cannot be delivered
Time Interval	Number of seconds between retries
Body	The SMS body; <i>Alarm Variables</i> can be used

TCP Server

Define the TCP server port. This must correspond to the port defined for the **Alarm Distribution** settings for the alarm server.

15.9 Alarm Distributor Viewer

The Alarm Distributor Viewer is a debug tool, used for test and verification of the alarm distribution setup.

Clicking the **Settings** button in runtime makes it possible to edit the address book and make settings for alarm distribution.

Related information

[Modifying Alarm Distribution Settings in Runtime](#)

15.10 Alarm Viewer

The Alarm Viewer can be used to show more detailed alarm information than the alarm indicator. Alarms presented in the Alarm Viewer presents alarm texts from the alarm server. The alarm list shows the latest alarms. It is arranged in alarm group order.

The default design of the alarm viewer depends on the size of the selected operator panel target, in order to allow full visibility and usability of the alarm viewer in the smaller operator panels.

The Alarm Viewer can also be shown as a Manage Alarm popup screen.

Settings such as font and button width are available in the Property grid.

The colors of the Alarm Viewer object can be set from the Property grid. The colors of the different alarm statuses are set in the Alarm Server settings.

Note:

Some of the color effects require that **Vista Style** is activated under **Extended** in the property grid (default setting).

State	Active Time	Text
Active	2017-03-16 12:25	Alarm 0 Group 1
Active	2017-03-16 12:25	Alarm 1 Group 1
Active	2017-03-16 12:25	Alarm 2 Group 1
Active	2017-03-16 12:25	Alarm 3 Group 1
Active	2017-03-16 12:25	Alarm 1 Group 2
Acknowledge	2017-03-16 12:25	Alarm 2 Group 2
Active	2017-03-16 12:25	Alarm 3 Group 2
Acknowledge	2017-03-16 12:25	Alarm 4 Group 2

Ack Selected

Ack All

Clear

Enable Selected

Manage Alarms

Active: 6 Inactive: 0 Ack: 2 Normal: 0 Disabled: 2 [8 / 8]

Alarm Viewer PC target

Enabled	Text	Alarm Name	Alarm Group	Enabled	Last Disabled
<input type="checkbox"/>	Alarm 1, Group 1	Alarm1_1	Group_1	6/12/2017 3:47:17 PM	6/12/2017 3:47:17 PM
<input type="checkbox"/>	Alarm 2, Group 1	Alarm1_2	Group_1	6/12/2017 3:50:18 PM	6/12/2017 3:50:18 PM
<input checked="" type="checkbox"/>	Alarm 1, Group 2	Alarm2_1	Group_2	6/12/2017 3:50:19 PM	6/12/2017 3:47:21 PM
<input checked="" type="checkbox"/>	Alarm 2, Group 2	Alarm2_2	Group_2	6/12/2017 3:50:19 PM	6/12/2017 3:47:21 PM

Disabled Alarms: 2/4

Manage Alarm popup window

Settings for the Alarm Viewer are available from the **General** ribbon tab while the object is selected:

15.10.1 Buttons Group

Parameter	Description
Position	Controls to which of the borders the buttons will line up
Acknowledge Selected	Acknowledges the selected alarm in the Alarm Viewer

Parameter	Description
Acknowledge All	Acknowledges all alarms in all Alarm Viewers
Clear	Removes all alarms in all Alarm Viewers
Filter ⁽¹⁾	Shows the filter configuration dialog for the selected Alarm Viewer
Info	Performs the action set by Alarm Event Info Requested
Play/Pause	Starts and pauses the selected Alarm Viewer
Enable Context Menu	Shows Alarm Viewer commands in context menu in run-time
Enable/Disable Selected Alarm	Toggles the enable status of the selected alarm in the viewer
Manage Alarms	Manage enable status of alarms in a popup window

⁽¹⁾Not supported in keyboard operated panels

15.10.2 Display Settings Group

Parameter	Description
Configure Columns	Selection and configuration of columns to display in run-time
Filter Settings	Filter alarm statuses to display in runtime
Max Number of Rows	The maximum number of alarms to display. If the number of alarms does not fit in the object in runtime, scroll bars will be made available. If the number of alarms exceeds the maximum number, the oldest item will be deleted.
Show Column Headers	Shows/hides the alarm viewers column headers
Show Summary	Shows status information in the bottom of the Alarm Viewer

15.10.3 Alarm Viewer Commands

In addition to using the Alarm Viewer buttons, the same functions are available using actions.

Related information
Script
PropertyGrid

15.11 Alarm Management in Runtime

Alarm notification can be made in the following ways:

Alarm Indicator
Alarm Viewer
Distribution via SMS, e-mail or printer via the Alarm Distributor

15.11.1 Alarm Acknowledgement

An alarm can be acknowledged in the following ways:

- right-clicking on the alarm line and selecting **Acknowledge**
- selecting the alarm line and pressing on the **Acknowledge Selected** button
- pressing the **Acknowledge All** button to acknowledge all current alarms
- script actions

Inactive alarms that have been acknowledged can be removed from the list by pressing the **Clear** button.

15.11.2 Sorting

Pressing on the column heading in runtime sorts the alarm list by that column. This pauses the Alarm Viewer.

15.11.3 Filtering

Pressing the Filter button in the Alarm Viewer opens a dialog that allows the user to enter a filtering profile to control which alarms to display in the alarm list. The Filter button, when clicked, only show the panels whose target type matches the projects panel type.

Filtering can be made based on any combination of the following conditions:

- Alarm group: The first column in the filter window shows the alarm group name. Check the Enable box to show alarms from the group.
- Alarm status: Displays alarms with the status corresponding to the checked status values.

Note:

Alarm Filters will revert to default settings if the filtered **Alarm Group** is renamed.

15.11.4 Play/Pause Button

The Alarm Viewer window can be paused from being updated with incoming alarms using the Play/Pause button. This allows the operator to inspect and sort the list without interference from any incoming alarms. The list also pauses when an alarm is selected.


The alarm list starts updating again when

- the Play button is pressed
- the operator changes screen and returns to the same screen (or goes to another screen showing the Alarm Viewer)
- after a 5 minute time-out

15.11.5 Info Button

Pressing the Info button in the Alarm Viewer triggers the action specified in the **Alarm Event Info Requested** group on the **Actions** tab, when an item in the alarm server is selected.

Any action in the list can be selected.

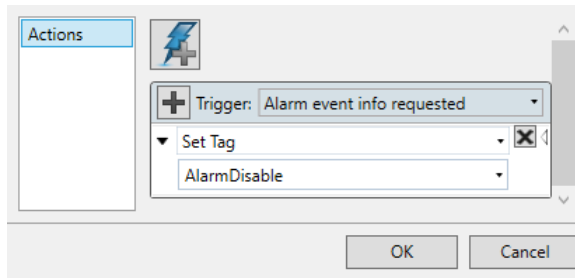

This action will be applied for the individual alarm first. If no action is specified for the alarm, the action will be applied for the group. If no action is specified for the group, the action will be applied for the alarm server.

Related information
Alarm Groups
Alarm Conditions
Alarm Event Info Requested

15.11.6 Modifying Alarm Distribution Settings in Runtime

It is possible to configure actions, or to use the Alarm Distribution Viewer to modify the address book and alarm distribution settings in runtime.

Note:

If the Alarm Distribution Viewer or alarm distribution actions are used in runtime, it is possible that alarm distribution settings have been modified. Next time you download a project to the operator panel, you will get a notification, and selection to overwrite panel settings or not.

Related information
Address Book Action Groups
Output Devices Action Groups

15.11.7 Enable/Disable Selected Alarm

If an alarm for some reason is continuously going on and off, and to avoid that the Alarm Server will be filled with irrelevant alarms, alarms can be disabled (and enabled) in the Alarm Viewer.

When disabled, the alarm is added to the disabled list with a time stamp. The main alarm page shows the number disabled alarms under the list of alarms.

State	Active Time	Text
Active	2017-03-16 12:25	Alarm 0 Group 1
Active	2017-03-16 12:25	Alarm 1 Group 1
Active	2017-03-16 12:25	Alarm 2 Group 1
Active	2017-03-16 12:25	Alarm 3 Group 1
Active	2017-03-16 12:25	Alarm 1 Group 2
Acknowledge	2017-03-16 12:25	Alarm 2 Group 2
Active	2017-03-16 12:25	Alarm 3 Group 2
Acknowledge	2017-03-16 12:25	Alarm 4 Group 2

Ack Selected

Ack All

Clear

Enable Selected

Manage Alarms

Active: 6 Inactive: 0 Ack: 2 Normal: 0 Disabled: 2 [8 / 8]

Time stamps of disabled or enabled alarms are persistent for reboots. Disabled alarms at reboot are disabled when restarted, until enabled in the Alarm Viewer again.

Note:

Multi-select functionality is only available on PC.

Note:

Enable/Disable Alarm functionality is not available during remote Alarm Handling (when a Server address has been assigned).

15.11.8 Manage Alarms

It is possible to manage enable status of alarms in a popup window by enabling the Manage Alarms function.

The scripts/actions are connected to the Alarm Viewer object. The actions are located under the Alarm Viewer.

All relevant properties like font, size, colors are copied from the Alarm Viewer when the Manage Alarms popup is opened. It is not possible to set properties individually for the Manage Alarms screen.


Filter and group functions are available when disabling/enabling alarms. Select and Enable/Disable only affects filtered alarms.

Note:

Multi-select functionality is only available on PC.

Note:

Manage Alarm functionality is not available during remote Alarm Handling (when a Server address has been assigned).

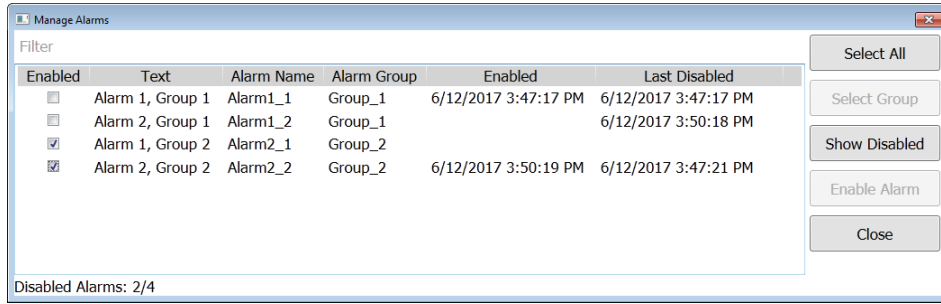

Example of filtering on "Group 2" in Manage Alarms popup window.

16 Security Management

Using security groups and passwords in the operator panel makes it possible to create a security system for the project. Operators can easily be assigned different authorizations in the project to restrict access to objects and functions. Security group information and passwords are stored in the project database.

It is not necessary to use this function if unrestricted access is acceptable. The security function is a predefined component of the Project Explorer.

16.1 General Security Settings

General settings for the security function are available by clicking on **Security** in the Project Explorer, selecting the **Users** tab and clicking the **Settings** button.

Parameter	Description
Select action on access denied	When a user's access rights are not sufficient to e.g. modify an object or carry out an action, it is possible to display an access denied message or opening a login dialog. Selecting None performs no action.
Select visibility	When a user with insufficient access rights tries to affect an object, it is possible to specify visibility for those objects: Disabled: Only users with sufficient access rights can affect the object. The object is visible, but disabled, for users with insufficient access rights. Hidden: Only users with sufficient access rights can see the object. The object is invisible for users with insufficient access rights Normal: Only users with sufficient access rights can affect the object. The object looks normal for users with insufficient access rights
Automatic logout	Checking the box makes it possible to log out users automatically after a certain number of minutes of inactivity. After an automatic logout is executed, a screen jump to the start screen will be performed, if access to the active screen is not granted.

Note:

The automatic logout will not be carried out if a communication error (COMerror) is active in the panel. After removing the communication error from the panel, the automatic logout will be performed within the specified time, calculated from when the communication was reestablished.

16.1.1 Password Rules Properties

Allows setting a minimum number of characters for passwords.

Related information


[Logging In and Logging Out](#)

16.2 Security Groups

Security groups are defined on the **Groups** tab of the security configuration page. When objects and screens have been set up with restricted access, the current user must belong to a specific security group in order to control or see the object or screen.

16.2.1 Creating Security Groups


A new security group in a project is defined by clicking on **Security** in the Project Explorer, selecting the **Groups** tab and clicking **Add**.

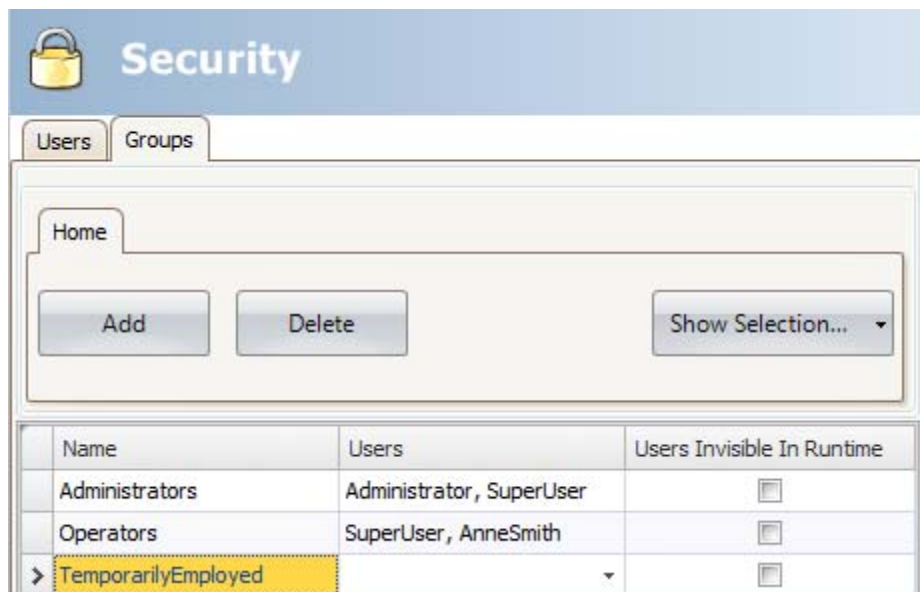

Parameter	Description
Name	Any alphanumeric string, beginning with a letter (a-z, A-Z)
Users	Selection of users defined on the Users tab to be included in the group
Users Invisible in Runtime	When the box is checked, the users in the current group will not be available for selection from the Login dialog in runtime. It will still be possible to type in the user name and password to login. operator panel targets only: In order to enable the possibility to manually enter a user name and password, it is necessary to click the "Login" header on the Login dialog in runtime. Doing so and then clicking on the User —field will present the user with a keyboard on which a user name can be entered.

16.3 Users

Users and passwords for login are defined on the **Users** tab of the security configuration page.

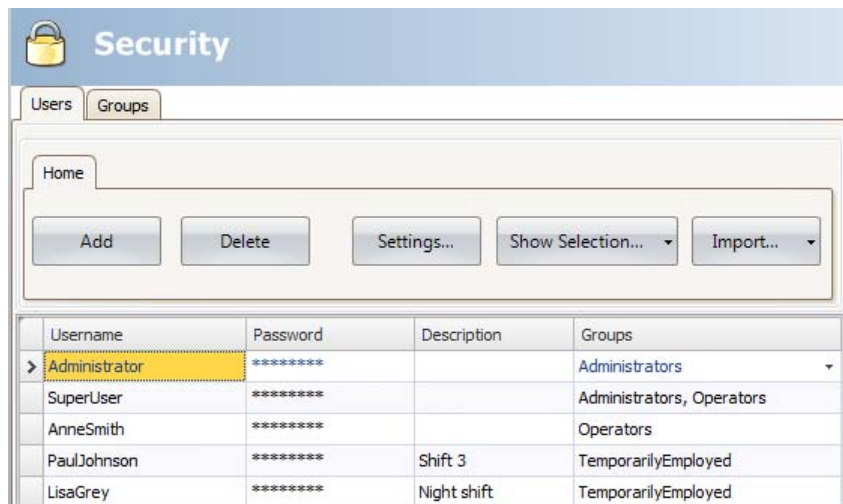


Parameter	Description
Name	Any alphanumeric string, beginning with a letter (a-z, A-Z)
Password	Any alphanumeric string; minimum length according to Password Rules properties. The password is converted to asterisks as you leave the password input cell.
Description	An optional description of the user
Groups	Selection of security groups for the user

It is also possible to add users and change passwords directly in a running project, using the **Show Users Dialog** action.

16.3.1 Logging In and Logging Out

The login dialog can be displayed in runtime by, for example, clicking a button, for which the **Login** action has been specified. It is possible to change password from the login dialog.

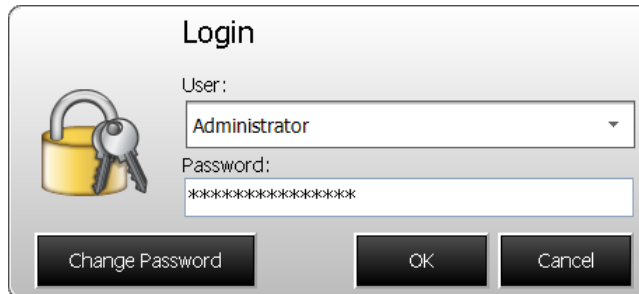

The login dialog lists all users that have been configured for the current project, except for users in groups for which **Users Invisible in Runtime** was selected.

It is also possible to configure a general behavior that brings up the login dialog any time a user tries to affect an object that is not within the current user's access rights. This behavior is configured from the Properties window for the Security function, and selecting **ShowLoginDialog** for action on access denied.

The **Logout** action is used to perform a logout.

Users may also be logged out automatically after a certain number of minutes of inactivity by configuring **Automatic logout** in the **Properties** window for the Security function.

Note:

After logging out, the function **Show Previous Screen** for function keys and touch keys will be ignored. This is a security feature to prevent unauthorized persons from accessing screens protected by passwords.

Related information
General Security Settings
Actions Ribbon Tab

16.4 Object Security and Visibility

Object access can be restricted to a certain security group. Each security group contains a set of users and each user has an individual password. To be able to control an object with a security setting, the user must belong to the defined security group, and has to login.

Object security is controlled by selecting the object, and then opening the Tag/Security group of the Home or General ribbon tabs.

When no security is set for an object, the object will be available to everyone, i.e. login will not be requested.

Note:

Security has higher priority than dynamics.
It is not possible to set security on function keys.

The visibility and behavior settings specified in the security manager will be used when a security group is set but no explicit visibility is specified. The following options can be set:

Visibility	Description
Default	The object looks normal and is visible for anyone.
Disabled	Only users in the selected security groups can affect the object. The object is visible but disabled and greyed out, for users with insufficient access rights.
Hidden	Only users in the selected security groups can see the object. The object is invisible for users with insufficient access rights.
Normal	Only users in the selected security groups can affect the object. The object looks normal for users with insufficient access rights.

Related information
Tag/Security Group
Function Keys
Screen Security

16.5 Cyber Security Best Practice

It is recommended to configure network firewalls to restrict access to the panel. For more information, contact your IT administrator. Some procedures, for example updating Image, requires access to panel and is then specified in the corresponding instructions in the reference manual.

Caution:

Any security measures described in this manual, for example, for user access, password security, network security, firewalls, virus protection, etc., represent possible steps that a user of iX Developer, iX Developer and Runtime may want to consider based on a risk assessment for a particular application and installation. This risk assessment, as well as a proper implementation, configuration, installation, operation, administration, and maintenance of all relevant security related equipment, software and procedures are the responsibility of the user of the iX Developer.

Caution:

It is the responsibility of the user of the iX Developer to deploy the product appropriate, including procedures/policies regarding organizational measures with required precautions and measures to ensure iX Developer functionality.

16.5.1 Web Server Security

The web server is disabled by default. It can be enabled on request using the Enable Web server option available in iX Developer. For more information on accessing the Enable Web server option in iX Developer and general handling of web server in controller, refer to iX Developer Web server configuration for more information.

The web server provides a login form, that is used for clients to authenticate, by default. Refer to section Login Form for more information. Replace this with a password that conforms with your organization's security policy at the first possible opportunity. See your organization security policy for setting a password, refer to customer password security configuration.

Caution:

If the default password is not replaced, the system will be susceptible to unauthorized access.

The password can be any alphanumeric string. The passwords minimum length is four characters and the maximum length is 20 characters.

16.5.2 FTP Server Security

The FTP Server Security is disabled by default. When enabled, it is possible to upload/download files to/from the operator panel provided that there is an FTP client program in the development PC, e.g. Internet Explorer, Windows Commander or some other standard FTP program.

It is possible to set up access to the FTP server with login requirements and/or as anonymous. An anonymous user has read-only access rights. A user that logs in with the correct user name and password gets read/write access rights. Refer to Section [Servers Group](#) for more information.

16.5.3 Remote Server Security

The Remote Access function is disabled by default. The Remote Access function makes it possible to access, reflect and control an operator panel from a PC by using the free VNC client program Remote Access Viewer together with the built-in VNC server in the operator panel.

It is possible to set up Remote Access with a view only password and/or a full access password. The view only password allows reflecting the panel remotely; the full access password allows also control of maneuverable objects in the panel.

Only one VNC client can connect to the VNC server.

Only available when an operator panel is selected as target.

Caution:

To protect secrecy when entering a password via Remote Access Viewer, it is recommended to use the PC keyboard. Otherwise it is possible that the cursor on the remote operator panel displays which keys are pressed on the alphanumeric keyboard. Refer to Section [Servers Group](#) for more information.

16.5.4 OPC UA Security

The OPC UA Server is disabled by default. When enabled by the Enable OPC UA Server option available in iX panel it is possible to publish tags with an OPC UA Server.

A certificate will be auto generated and self-signed when the server first starts up. The certificate will be valid for 20 years. The certificate contains no IP address since this could change after the certificate has been generated.

Note:

When a Project is re-downloaded to a panel containing an OPC UA certificate, the user can choose to keep the pki folder (containing the OPC UA certificate). Otherwise, the certificate is deleted and a new one is created.

Limitations	
Discovery	Not supported
Encoding/Transport	Only UATCP Binary
User authentication	Only user name/password. Only one account.
Security	No encryption support.

Refer to Section [Servers Group](#) for more information.

16.5.5 Project Transfer Security

Selecting Back Up Project compresses the project and saves it as a ZIP file. The user will be prompted for a path where to save the ZIP file and will also be offered the possibility to password protect the ZIP file.

Upload: Starts the transfer of the ZIP file from the selected target. The user will be prompted for a path where to decompress the ZIP file. If the ZIP file is password protected, the user must enter the password to be able to upload and decompress the ZIP file. Upload is not supported for all panels. If greyed out, please update to latest “System program”.

Verify: The verify function enables the user to check if a target platform configuration is identical to the project configuration. Verify is not supported for all panels. If greyed out, please update to latest “System program”.

16.5.6 Email (Alarm distributor)

User name and password protected if Authenticated Login is selected. Refer to Section Configure Distribution Devices in Reference manual for more information.

16.5.7 Ethernet Printer Devices

User name and password protected if Authenticated Login is selected. Refer to Section Output Devices Group in Reference manual for more information.

16.5.8 Password Settings

Password protection for Remote Access, Web server, OPC UA Server, FTP server is set in design time when creating projects. Any changes to passwords has to be done to the project in design time and the project has to be re-downloaded.

Password protection for Define Security User and Alarm Distributor Security is set in runtime, but can be set in design time as well. Default setting is set to “No password” when enabling a function.

Caution:

It is highly recommended to set a password when enabling a new function, especially when it is exposed to the internet.

To get high security, the password must include upper and lowercase letters, numbers and special characters.

16.5.9 Define Security Users

Using security groups and passwords in the operator panel makes it possible to create a security system for the project. Operators can easily be assigned different authorizations in the project to restrict access to objects and functions.

Security group information and passwords are stored in the project. Security level is set per user group. The security groups are set in design time, and only the members of a security group can be modified in runtime. Refer to Section [Security Management](#) for more information.

When a user with insufficient access rights tries to affect an object, it is possible to specify visibility for those objects:

Disabled: Only users with sufficient access rights can affect the object. The object is visible, but disabled, for users with insufficient access rights.

Hidden: Only users with sufficient access rights can see the object. The object is invisible for users with insufficient access rights.

Normal: Only users with sufficient access rights can affect the object. The object looks normal for users with insufficient access rights.

It is recommended to use visibility Hidden for sensitive functions only visible for example service engineers. Refer to Section [Security Management](#) for more information.

Note:

Security users created in design time is not possible to remove in runtime.

16.5.10 Service Menu Password Setting

Enter a pin code for the service menu. No pin code enables the service menu for all users. Only numbers (0–9) are allowed. Refer to Section [Service Menu Group](#) for more information.

16.5.11 Audit Trail

The Audit Trail function makes it possible to track operator actions. When enabling the Audit trail function to a project, select which actions to log. No actions are set in the default setting. Refer to Section [Audit Trail](#) for more information.

The following actions that can be logged, are specified in the table below:

Show unit conversion dialog	Acknowledge All Alarms	Acknowledge Selected Alarm	Alarm Info
Clear all Alarms	Filter Alarms	Pause Viewer	Enable/Disable Alarms
Zoom In	Zoom Out	Pan Down	Pan Up
Pan Right	Pan Left	Trend Viewer History	Show Backlight Settings
Set Date and Time	Set Time Zone, Region and Daylight Saving	Copy Debug Log To USB Memory	Disable Debug Logger
Enable Debug Logger	Show IP Settings	Print Screen	Close Application
Run	Show Next Screen	Show Previous Screen	Show Start Screen
Back Up databases	Restore databases	—	Database Cleanup
Database Export	Decrement Analog	Increment Analog	Reset Tag
Set Analog	Set String	Set Tag	Toggle Tag
Open Address Book	Open Print Settings	Open Routes Configurations	—
Clear Data Logger	Log Once	Start logging	Stop logging
Email Configuration	Set Language	Change Active Controllers	Clear Non-volatile Values
Printer Configuration	Delete Recipe	Load Recipe	End Offline Recipe Editing
Export Recipe	Import Recipe	Save Recipe	Start Offline Recipe Editing
Generate Report	Show Screen	Close screen	Run Script
Login	Export User Accounts	Import User Accounts	Logout
Show User Dialog	SMS Configuration	Storage device detection	—

16.5.12 Antivirus program

It is recommended to have a antivirus program installed on your PC.

Note:

iX Developer has been tested with the following antivirus software:

- McAfee Virusscan Enterprise
- Symantec Endpoint Protection

16.6 Physical Security

Physical security considerations elaborate measures that shall be in place to prevent unauthorized access via physical channels into the system. Measures can be security guards, locks, limitations in access to the equipment and similar.

iX Developer runtime is supported both on virtual and on physical machines. There is the possibility that removable assets/communication lines can be used in both these systems.

Caution:

The user shall implement necessary physical precautions to prevent unauthorized access to the system and to removable assets/communication lines.

iX Developer uses different modules for power supply, communication, IO's and CPU. These modules can be replaced with spare parts if needed

16.7 Open Ports

Communication drivers uses either dynamic ports or static ports and both are opened for communication. It is not always a fixed port that opens, this differs from driver to driver. Refer to specific driver help file.

Type	Description (Port)	Open by default
TCP	FTP (21)	Only on X2 base ¹⁾
TCP	SSH (22)	No
TCP	HTTP (80)	No ¹⁾
TCP	DCOM (135)	Yes
TCP	OPC UA (Default 4840)	No ¹⁾
TCP	Remote access viewer (Default 5800)	No ¹⁾
TCP	Remote access viewer (Default 5900)	No ¹⁾
TCP	Alarm distributor, send Email. (Depends on the server)	No ¹⁾
UDP	Project Transfer (9999)	Yes
UDP	Netbios (137)	Yes
UDP	Netbios (138)	Yes
TCP	Transfer download (9999)	No ²⁾

Type	Description (Port)	Open by default
TCP	Alarm server (Default 1000)	No ¹
TCP/UDP	HASP (1947)	Yes ²
TCP	MCER (6510)	Yes ³
UDP	IPv6 Support (3544)	Yes ³
UDP	IPsec (4500/500)	Yes ³

¹) Opened by configuring iX Developer. ²) Opened by the iX Runtime installer. ³) Opened depending on the target type and image version.

16.8 Client ports

The iX Developer can use the ports, presented in the table below, when acting as a client to a server.

Type	Description (Port)
TCP	DHCP (135)
TCP	DNS (135)
TCP	WINS (135)

17 Language Management

iX Developer supports multilingual applications. Translation of texts and system texts can be performed directly in the application, or via export to a text file to be translated in other software. The file is imported to the application after translation.

The application language can be changed in runtime, for example based on a tag value.


17.1 Setting Up Multiple Languages

The multiple languages function is included in the application by default and is located in the Functions folder in the Project Explorer.

The multiple languages configuration pages consist of the Texts, System Texts and Languages tabs.

17.1.1 Adding Languages

1. Click on the **Multiple Languages** function to open its configuration pages.
2. Select the **Languages** tab.
3. Add languages by selecting them from the drop-down list.

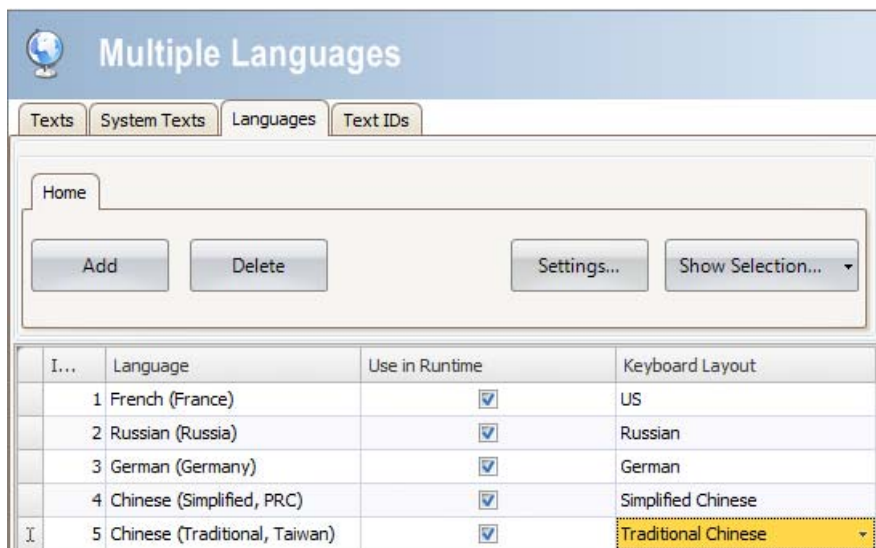

The **Use in Runtime** setting makes the language available in runtime. Under **Keyboard Layout**, it is possible to select different layouts for the virtual keyboard, used for alphanumeric input in runtime.

Note:

The size of the virtual keyboards vary between languages.

Examples of keyboard sizes (the values are approximative)

- Arabic: 18 MB
- Chinese - simplified: 12 MB
- Chinese - traditional: 36 MB
- Hebrew: 6 MB
- Korean: 21 MB
- Latin alphabets: 0.1 MB.

Each added language is assigned an index number. Index number 0 is reserved for the default language (the language that the application was first created in).

The **Add** and **Delete** buttons can be used to add and delete languages.

The **Settings** button allows connecting the language to a tag. This makes it possible to change the project language based on a changed value.

Use the **Show Selection/Show All** button if you want to filter the languages in the current view.

Note:

If scripting is done against texts which are mentioned in the **Multiple Languages**, the value mentioned by scripting can be overridden by the text value in the Multi Language Server.

If the user tries to change the text value through scripting, there is a risk of it being overridden by the values mentioned in the **Texts** tab in the **Multiple Languages** screen.

If the user want the value mentioned through the script to have priority, the entry for those texts in the **Text** column in the **Texts** tab should be left empty. Make sure to add all multi lingual alternatives in the script.

Designer	Object	Property	Text	Afrikaan...	Albanian...
Screen1	Text2	Text	OPC UA CLIENT		
Screen1	Button	Text	INC 1, 1 times via script		
Screen1	Button1	Text			
Screen1	AnalogNumeric	Prefix			
Screen1	AnalogNumeric	Suffix			
Screen1	AnalogNumeric2	Prefix			
Screen1	AnalogNumeric2	Suffix			
Screen1	AnalogNumeric3	Prefix			
Screen1	AnalogNumeric3	Suffix			

Related information

[Virtual Keyboard](#)

[Filtering Items](#)


17.2 System Texts

System texts belong to functions (e.g. alarm server or security), to the system (e.g. time zone) and to objects (e.g. buttons or sliders), excluding text that the developer has entered.

Select the **System Texts** tab in the Multiple Languages configuration pages to edit system texts.

Several pre-installed translations of the system texts are available for selection:

- English
- German
- French
- Brazilian Portuguese
- Chinese, traditional
- Chinese, simplified

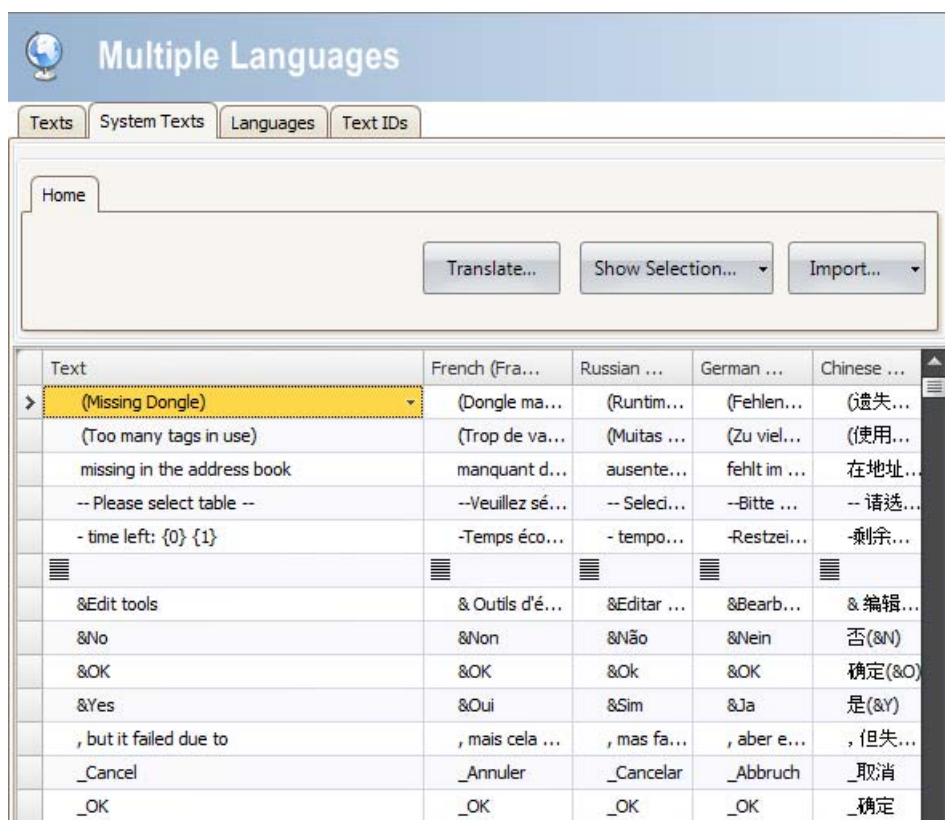

Use the **Show Selection/Show All** button if you want to filter the current view.

The **Import/Export** button can be used to export a system language to a text file for translation, and then import the language after translation.


Note:

Regional expressions for time, date, and weekdays are by default equal to the settings in the system account, but can to some extent be changed in the Date, Time and Region Group under the System Ribbon tab.

Related information
Filtering Items
Exporting Languages
Importing Languages
Date, Time, and Region Group

17.3 User Texts

Texts that have been added to objects by the developer are available from the **Texts** tab in the Multiple Languages configuration pages. The texts in the default language can be edited as well.

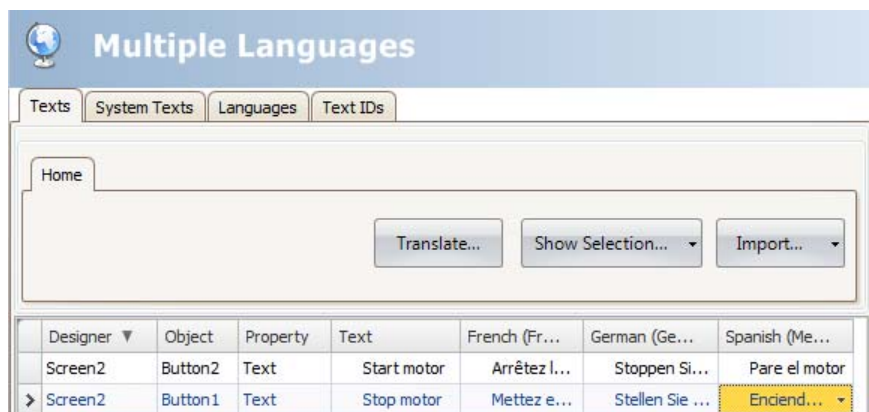

Use the **Show Selection/Show All** button if you want to filter the current view.

The **Import/Export** button can be used to export a system language to a text file for translation, and then import the language after translation.

Note:


When an object is connected to a text in the Text library, the object's internal denomination (that is not displayed in runtime) will be presented in grey color in the Texts list, to indicate that editing the text will not affect the runtime project.

Related information
Filtering Items
Exporting Languages
Importing Languages
Text Library

17.4 Text ID

The **Text ID** function is available from the **Text IDs** tab on the **Multiple Languages** configuration page.

To enable the **Text ID** function, check the “**Text IDs enabled**” check box on the **Text IDs** tab.

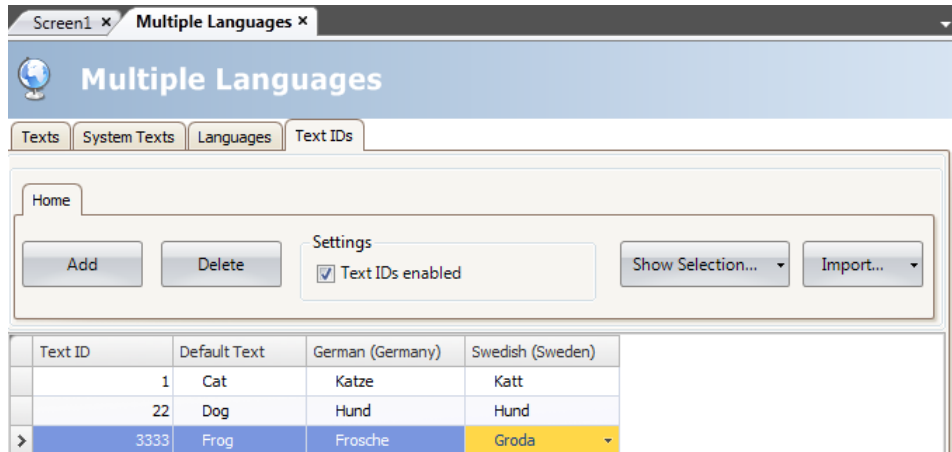

The **Text IDs** tab consist of the following columns: **Text ID**, **Default Text** and one column for each language. The text in the column **Default Text** corresponds to the default language used in iX Developer.

Clicking **Add** adds a row with a **Text ID** that is equal to the highest existing **Text ID** plus 1.

Use the **Show Selection/Show All** button if you want to filter the current view.

The **Import/Export** button can be used to export a system language to a text file for translation, and then import the language after translation.

Related information
Screen Group
Filtering Items
Exporting Languages
Importing Languages

17.4.1 Text ID Browser

If the **Text ID** function is enabled, all text box controls in iX Developer, including texts used in iX Runtime, will be replaced with the **Text ID browser** control.


The **Text IDs** are accessed from a popup list by clicking the combo box arrow next to the **Text ID browser** control.

The **Text ID browser** consists of two tabs, one for using **Text ID** and one for using **Dynamic Text ID**.

- If the requested **Text ID** text is known in iX Developer, the **Text ID** tab should be used.
- If the requested **Text ID** text is to be decided dynamically in runtime, then the **Dynamic Text ID** tab should be used.

Text ID

The popup list consist of the following columns: **Text ID**, **Default Text** and one column for each language. Right-clicking the column header opens up a context menu that lists all available columns. The context menu offers a possibility to configure which columns to be displayed in the popup list.

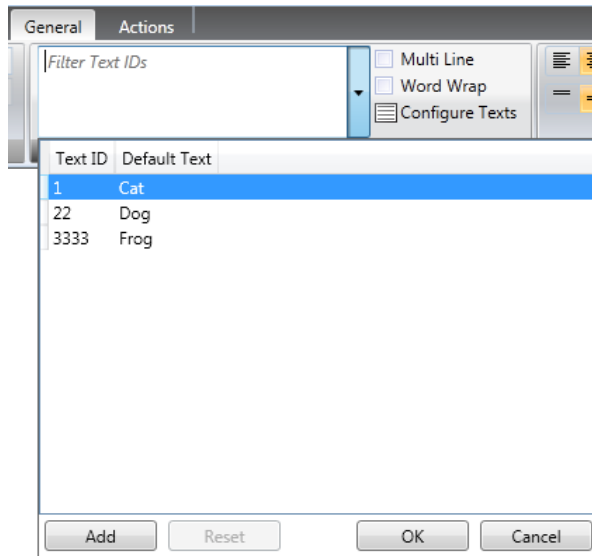


Parameter	Description
Add	Adds a row with a Text ID that equals to the highest existing Text ID plus 1
Reset	Removes the Text ID connection and the text falls back to the previously unconnected text
OK	Connects the object text to the selected Text ID
Cancel	Closes the popup list. No changes are made.

When an object is connected to a **Text ID**, the displayed text in the **Text ID browser** control will be presented in the following manner:

“**Text ID – Text**”

Text corresponds to the default language used in iX Developer.

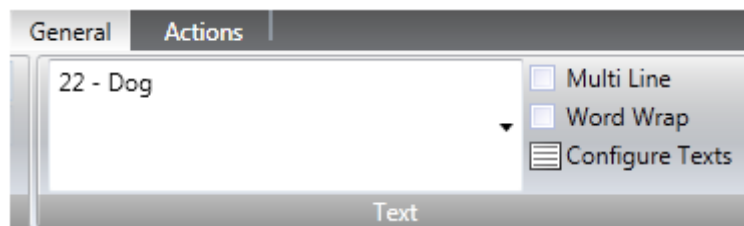


When opening the popup list, the text field acts as a filter for the popup list.

The object itself will only show the corresponding text, without **Text ID**, which is disabled for editing.

When the language in iX Developer or in iX Runtime is changed, a text connected to a **Text ID** will be updated to the corresponding text entered in the **Text IDs** tab.

Dynamic Text ID

The **Dynamic Text ID** tab consist of two tabs — **Tags** and **Aliases** — and acts as a normal tag/alias selector.

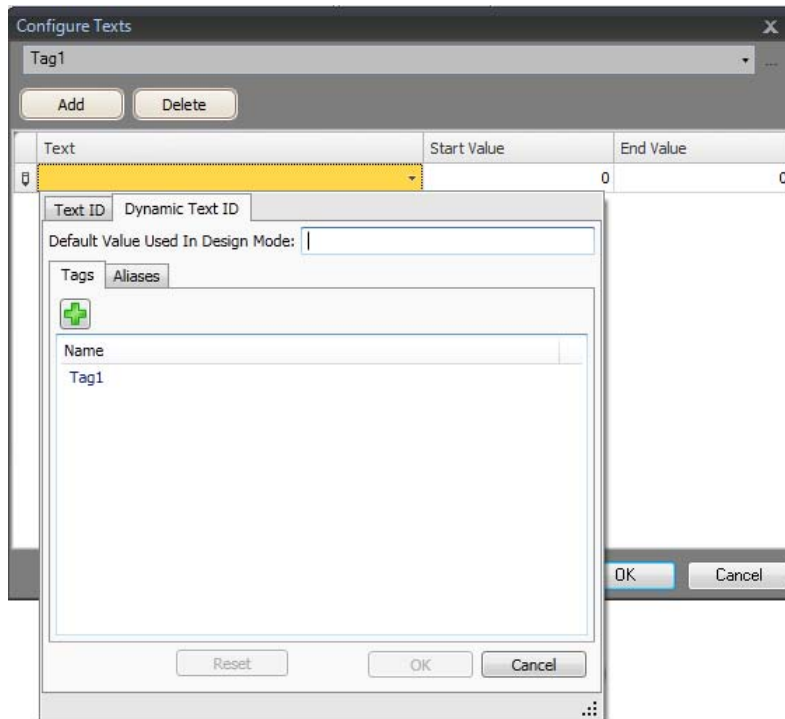

In addition, it is also possible for the graphical components to set a **Default Value Used in Design Mode**. This value will be displayed in the object in design time, but not be used in runtime.

Parameter	Description
Add	Adds a tag/alias
Reset	Removes the Dynamic Text ID connection and the text falls back to the previously unconnected text
OK	Connects the object text to the selected tag/alias
Cancel	Closes the popup list. No changes are made.

When an object is connected to a tag, the displayed text in the **Text ID browser control** will be presented as “**TagName**”, where **TagName** is the name of the tag.

When an object is connected to an alias, the displayed text in the **Text ID browser control** will be presented as “**#AliasName**”, where **AliasName** is the name of the alias.

When configured, the tag value in runtime represents the key (Text ID) to the Text ID table. The displayed text is the corresponding translation for current language for the given key (Text ID). If the tag value is not found as a key in the Text ID table, an empty text is displayed.

17.5 Automatic Translation


iX Developer includes a translation tool that uses Microsoft Translator (www.microsoft.com/translator) or Google Translate (translate.google.com) to offer quick translations of user-defined texts or system texts. Due to license

requirements, an account at at least one of the translation providers to get the required keys.

Note:

Automatic translations provide limited functionality; especially combination of words or words with synonyms may be returned as incorrect translations.

The translation tool is available by clicking **Translate** on the Texts or System Texts tabs of the Multiple Languages configuration pages. Each language is translated separately.

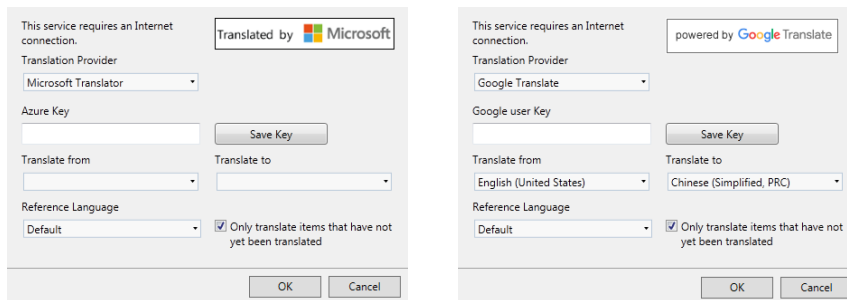

Parameter	Description
Translation Provider	Select translation provider among available providers.
Microsoft Translator Azure Key	Enter your Azure Key. To gain access to the Microsoft Translator service, sign up for an account on Microsoft Azure and add a subscription to the Microsoft Translator API.
Google user Key	Type a Public API Access Sever key. You need to create a Google Developers account and use the product Google Translate API to get the key.
Save Key	Saves the Microsoft Translator Id and Client Secret or the Google user Key in your user profile on the development PC.
Translatate from	Selection of source language for the translation operation; the default language (reference language) or one of the languages that have been added to the project.
Translate to	Selection of target language for the translation operation.
Reference Language	Select reference language; i.e. the language in which the project was created.
Only translate items that have not yet been translated	Clear the check box to replace also already translated items in the project.

Note:

Since the translation tool accesses online translation providers, the translation operation may sometimes be paused or delayed due to an excess of online users.

17.6 Exporting Languages

Languages can be exported to a text file for e.g. translation.

1. Select **Export** from the **Import/Export** button.
2. Specify format, location, delimiter (for text file format) and language selection, and click **OK**.

Specify a location for the exported file, and the languages to be exported.

The screenshot shows a dialog box with the following fields:

- Format:** Excel file
- Path:** D:\doc\Translations.xls
- Delimiter:** Comma
- Languages:**
 - Spanish (Mexico)
 - French (France)

Buttons: OK, Cancel

Parameter	Description
Format	Select format of the exported file; text file or Excel file.
Path	Browse to the location for the exported file
Delimiter	If Text file format was selected, select delimiter from the drop-down list; comma, semicolon, space or tab
Languages	Select which languages to export

The exported file will also include the default language.

Note:

To display certain characters (such as Chinese or Arabic) correctly in Excel select Unicode (UTF-8) in the Excel import dialog.

17.7 Importing Languages

After translation or other editing, the updated language file can be imported to the project again.

1. Select **Import** from the **Import/Export** button.
2. Specify location and language selection, and click **OK**.

Specify a location for the import file, and the languages to be imported.

Parameter	Description
Format	Select format of the file to import; text file or Excel file.
Path	Browse to the location of the file to import
Languages	Select which languages to import
Import Strategy	Selecting Key performs the import according to the Designer and Object columns in the multiple languages configuration page. Reference Text performs the import according to the Text column. If you have changed the texts of the default language after exporting the languages, it is recommended to select Key .

The imported file will also include the default language.

Note:

Make sure to make a backup copy of the project before importing languages, in case there are mismatches between the existing and the imported languages.

18 Audit Trail

The Audit Trail function makes it possible to track operator actions.

The Audit Trail database can be exported in csv format using the **Database Export** action. It is recommended to use the database export method rather than the backup method.

Related information
Database Export

18.1 Logging Strategies

To meet FDA (Food and Drug Administration) demands, it is possible to log actions in a strict manner. FDA logging implies that no log entries will ever be overwritten. If the size of the audit trail database is close to being exceeded (approximately 80% of the limit), a notification window will be displayed, where the user is warned, and demanded to export the data.

Alternatively, the size of the Audit Trail database can be increased. If the limit of the database is exceeded, the logging is terminated and the operator panel will be blocked for any further operator actions. This is indicated by an error message.

With circular buffering, the oldest log entry is overwritten when the database is full. No warning message is displayed when reaching the limit of the database.

The database can be exported using an action, regardless of logging strategy.

The log entries are saved in the Audit Trail database, and the information can be displayed using the Audit Trail Viewer.

18.2 Using the Audit Trail Function

The function is enabled by selecting **Audit Trail** from the **Insert** ribbon tab. The configuration page opens in the desktop area. All actions available for logging are listed. It is possible to log all or only some actions. It is also possible to log tag changes only (without logging actions).




Parameter	Description
Log All/Log None	Click the buttons to quickly select all or no actions from the list
Logging strategy	Select FDA or Cyclic Buffering
Max size of database	The maximum size of the Audit Trail database

Value change on tags, performed by user actions, can be logged by selecting **Log to Audit Trail** in the tags configuration page. This option is enabled only if the audit trail function is activated in the project.

Related information
Others in Adding Tags section

18.2.1 Audit Trail Description

It is possible to add a description for each object that is logged to the Audit Trail database using the Property Grid.

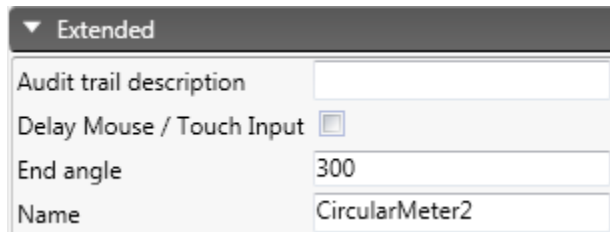


The description will be saved to the **Description** column of the Audit Trail database, and is limited to 255 characters.

18.3 Audit Trail Viewer

The Audit Trail Viewer is selected from the **Objects** group on the Home ribbon tab. It displays the information from the Audit Trail database.

Selecting **Configure Columns** on the **General** tab when the Audit Trail Viewer object is selected makes it possible to choose and configure columns to display in runtime.

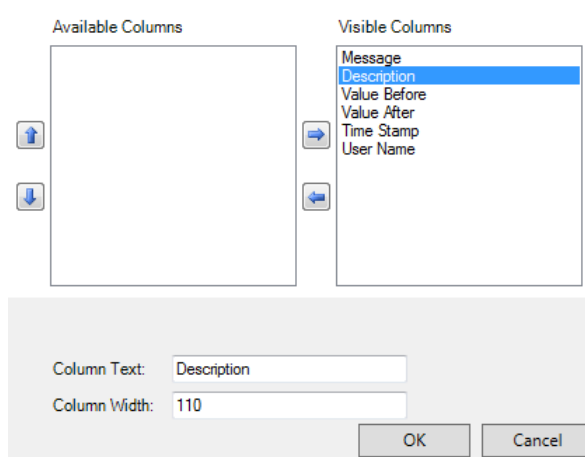


18.4 Audit Trail Export

An audit trail database can be exported as a .csv file and saved to a USB stick, an external memory card or to the project files folder. The export is configured through the **Database Export** action available from the **Database** action group.

Note:

The export will not delete the audit trail log from the project.

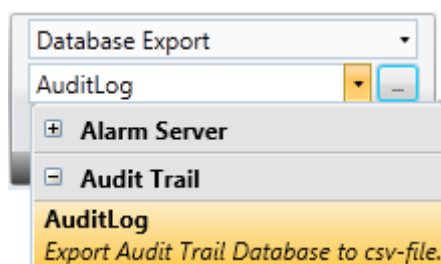

Related information

[Action Groups](#)

18.4.1 Audit Trail Export from an iX panel Target


It is possible to select **export to USB**, **export to external memory card** or **export to the Project Files folder**, and also setting another name of the export file.

It is also possible to select the requested delimiter in the .csv file (comma or semicolon).

In CE platform, the maximum number of files which can be stored in a folder is 900 files. The Section **Select what happens if the files exceed the folder limit** set the action for when the number of files in a folder has exceeded the limit. The default value is **Delete older files**.

Select what happens if the files exceed the folder limit:	
Delete older files	When the folder limit is reached, it will delete first 10% of the files ordered by date.
Group files by date	This will put the exported files into folders with name same as that of the current date. If the files in the current folder exceeds, it will create a new folder with name as current date with a number suffix (e.g.: 20170309, 20170309_1, 20170309_2, etc.)

18.4.2 Audit Trail Export from a PC

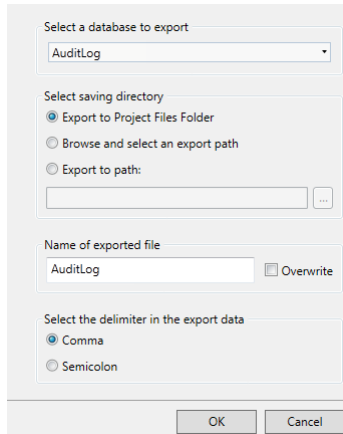

The screenshot shows a dialog box titled "Audit Trail Export" with the following fields and options:

- Select a database to export:** A dropdown menu with "AuditLog" selected.
- Select saving directory:** Three radio button options: "Export to Project Files Folder" (selected), "Browse and select an export path", and "Export to path:". Below the "Export to path:" option is an empty text box with a browse button (...).
- Name of exported file:** A text box containing "AuditLog" and an "Overwrite" checkbox.
- Select the delimiter in the export data:** Two radio button options: "Comma" (selected) and "Semicolon".

At the bottom of the dialog are "OK" and "Cancel" buttons.

It is possible to select **Browse and Select an export path**, **Export to Path** or the **Export to Project Files folder**, and also setting another name of the export file.

The **Browse and Select an export path** option allows browsing for desired export destination in runtime. This may be useful if available folders in runtime are unknown when designing the project.


Select the **Export to Path** option when you want to set the path when designing the project. If the pre-defined path is not valid in runtime, the operator may browse the PC environment by clicking a browse button.

It is also possible to select the requested delimiter in the .csv file (comma or semicolon).

19 Text Library

With the text library function, text tables can be created, where values are linked to texts. The text library function can be used for presentation of each sequence step in sequence control. Another possible application is to present error codes, where an analog signal generates error codes connected to texts in a text library. The function can also be used to give analog values specific values, depending on the selected texts.

The text library function is activated by selecting it from the **Insert** ribbon tab.

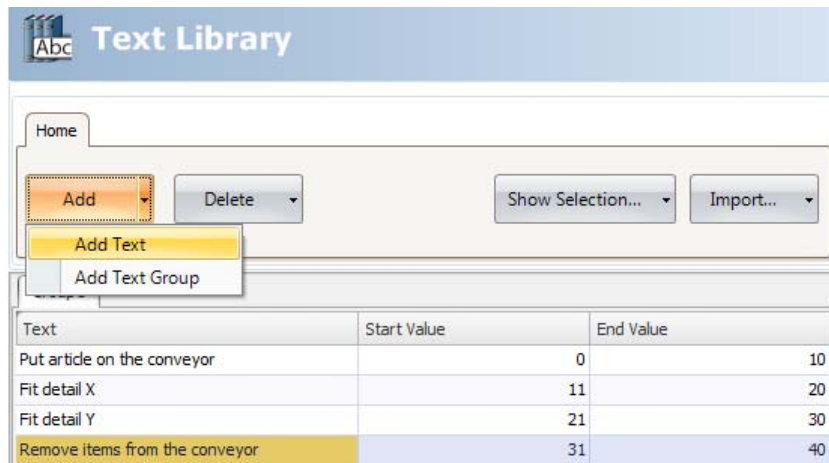

Texts and groups can be added from the **Add** button.

It is also possible to add start and end values for each message, that makes the text in the connected object change depending on the value of the tag.

Note:

The **Start Value** and **End Value** can only be given as integers. This could result in problems updating the text when the input value is entered with decimals, especially if the input value jumps in and out of the given range. If this is the case, use the **Configure Text** function instead. This is available under the **General** tab when the object is selected.

Note:

A default text that has been entered in **Configure Text** will not be presented outside a range that has been defined in the **Text Library**. In this case, use **Configure Text** to define all text presentations for the object.


Related information

[HMI Controls](#)

19.1 Connecting Objects to Text Library Texts

Perform the following steps to connect an object to a text library text:

1. Select the object on the screen.
2. Click on **General** on the Dynamics tab.
3. Select the **Text** property, and select **Text Library Group Converter**.
4. Browse to the tag and select the text library group.

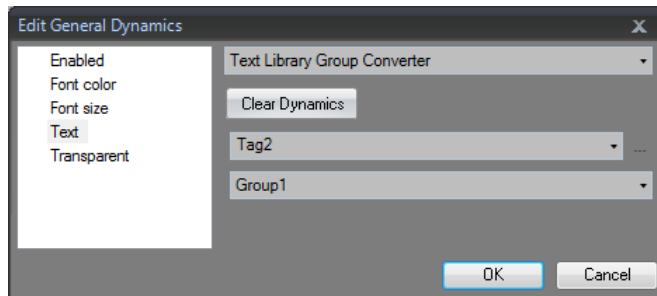

The object will now present the texts from the text library instead of the value.

19.2 Exporting and Importing Text Library Texts

The texts in the text library can be exported and imported using the **Import/Export** button in the Text library configuration page. The procedure is similar to exporting and importing tags.

Related information
Importing and Exporting Tags
Tag Import Example

20 Database Export

Some databases in the project can be exported as a .csv file to a USB stick, an external memory card or to the project files folder. The following databases are available for csv export: alarm server, audit trail, and data logger.


Database export is not supported during project simulation.

Tip:

To display certain characters (such as Chinese or Arabic) correctly in Excel, import the csv file as text, and set the file origin to **Unicode (UTF-8)**.

20.1 Setting up Database Export

The export is triggered via an action, **Database Export**, in the **Database** group.

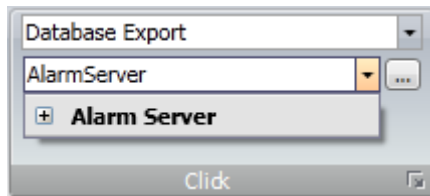

Individual database tables may be selected for export by clicking the + sign.

The default properties for the database export is exporting the database to the project files folder with the name as given in the project.

Note:

To facilitate exporting multiple databases at once, configuring multiple actions is recommended.

Clicking the ... button next to the selected database opens a dialog from which the default database export properties may be altered.

20.1.1 Database Export from operator panel Target

It is possible to select export to USB stick or external memory card, and also setting another name of the export file. Leaving the **Overwrite** box unchecked adds date and time to the export file name, thus avoiding overwriting an existing export file.

Note:

For Database Export from an iX TxC panel, see the instructions for Database Export from PC Target.

Note:

External Memory Card and USB are not available on PC or iX TxC. If an operator panel project is converted to a PC project, then this selection is cleared.

In operator panels, the maximum number of files which can be stored in a folder is 900 files. The Section **Select what happens if the files exceed the folder limit** set the action for when the number of files in a folder has exceeded the limit. The default value is **Delete older files**.

Select what happens if the files exceed the folder limit:	
Delete older files	When the folder limit is reached, it will delete the oldest file before exporting a new file.
Group files by date	This will put the exported files into folders with name same as that of the current date. If the files in the current folder exceeds, it will create a new folder with name as current date with a number suffix (e.g.: 20170309, 20170309_1, 20170309_2, etc.)

Note:

Recipe Database Export does not support the folder limit actions.

20.1.2 Database Export from PC

It is possible to set another name of the export file. Leaving the **Overwrite** box unchecked adds date and time to the export file name, thus avoiding overwriting an existing export file.

The **Browse and Select an Export Path** option allows browsing for desired export destination in runtime. This may be useful if available folders in runtime are unknown when designing the project.

Select the **Export to Path** option when you want to set the path when designing the project. If the pre-defined path is not valid in runtime, the operator may browse the PC environment by clicking a browse button.

Note:


Exporting to a specific path is not supported on operator panel targets. If a PC project is converted to an operator panel project, then this selection is cleared.

Related information
Actions Ribbon Tab
Simulate
Multiple Actions

21 Backup Databases (Action)

Backup Databases is an action that allows the ability to make duplicate copies of project database files. To do a backup of your database, do the following:

 1. Attach the backup databases action to an object.
2. Click the **Configure** button.




Note:

The default value is **internal database backup**.


3. Select which database, **Database**, **Audit Trail** or **Non-volatile database**, to be included in the backup process.

Note:

If the chosen folder is restricted to administrators, the OS might store your file in the %LOCALAPPDATA%\VirtualStore folder instead.

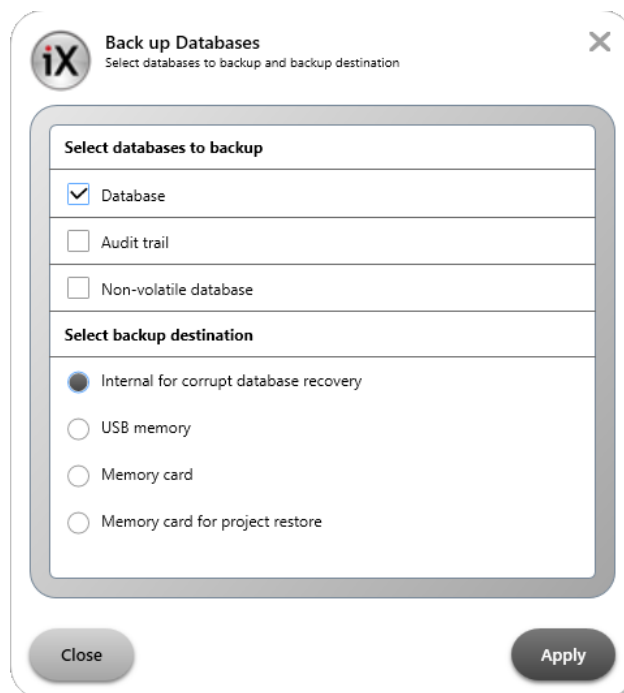

Design time Backup Database dialog window for panel environments.

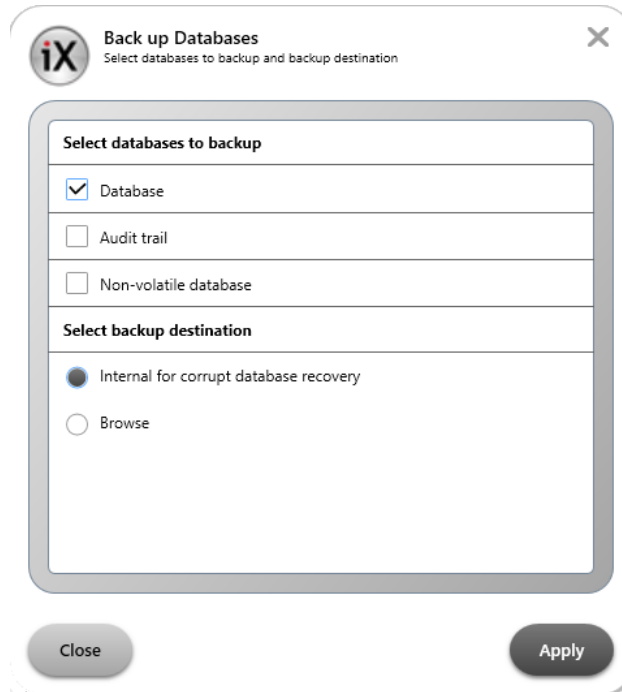

Design time Backup Database dialog window for PC environments.

Note:

At least one database or more must be selected in addition to the backup destination.

Note:

If the chosen folder is restricted to administrators, the OS might store your file in the %LOCALAPPDATA%\VirtualStore folder instead.

In runtime, on a PC or operator panel, once the backup action is invoked, a message is shown indicating that the PC or operator panels databases are being backed-up.


22 Restore Databases (Action)

Restore Databases is an action that allows the ability to restore specified project database files.

Note:

Simulation of CE targets restore is not supported.

 1. Attach the backup databases action to an object.
2. Click the **Configure** button.



3. Select which database, **Database** or **Non-volatile database**, that should be restored.


Note:

At least one of the two databases must be selected.




Design time Restore Database dialog window for PC environments

- Select the relevant backup locations in a file browser dialog to retrieve the to be restored database files.

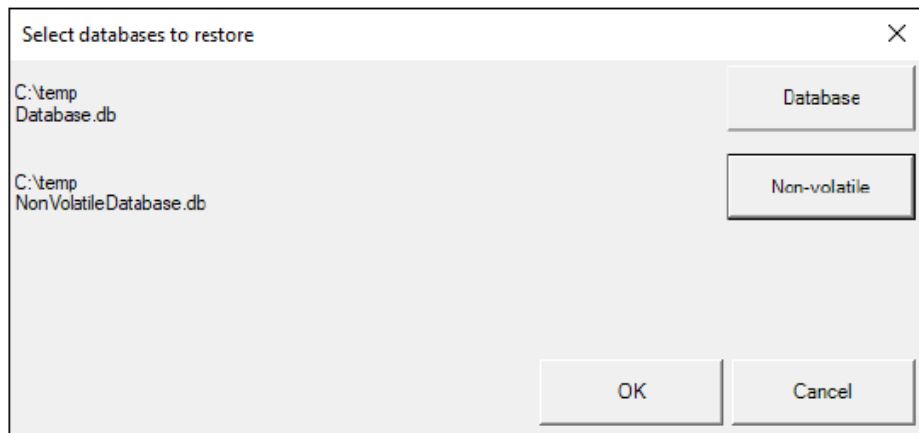

Run time Restore Database dialog window for PC environments

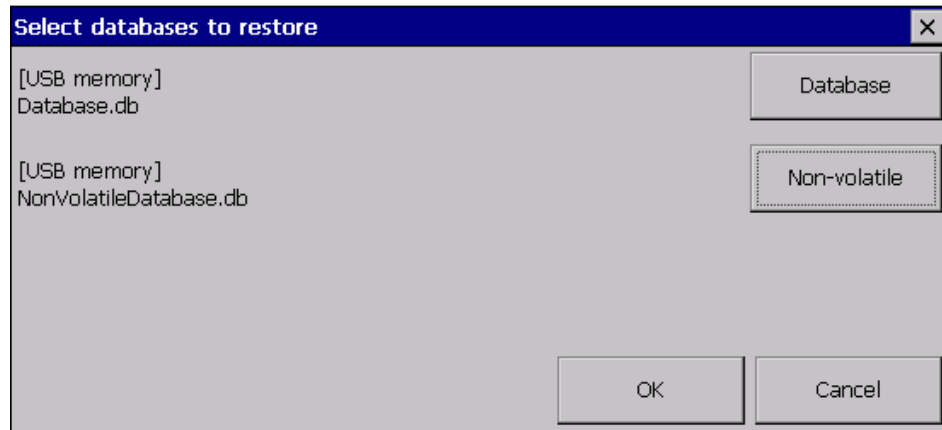

Run time Restore Database dialog window for panel environments.

- Click **OK**.

Upon restart, several validations, project integrity checks and database schema comparisons on the to-be restored databases are performed. If the validations fail in any way, the database restoration process is canceled without any databases being restored and subsequently the normal runtime environment is brought back up. If the validation process is successful, then the existing selected database(s) are overwritten and then the normal runtime environment is brought back up.

23 Database Cleanup

The **Database Cleanup** action can result in reduced database size and better database performance. The following are some scenarios where this action could be used:

- When a large amount of data is deleted from the database file it leaves behind empty space. This means the database file might be larger than necessary. Running the **Database Cleanup** action reclaims this space and reduces the size of the database file.
- Frequent inserts, updates, and deletes can cause the database file to become fragmented, where data for a single table or index is scattered around the database file. Running the **Database Cleanup** action ensures that each table and index is stored continuously within the database file. Having indexes in order improves performance.

Note:

The **Database Cleanup** action works by copying the contents of the database into a temporary database file and then overwriting the original with the contents of the temporary file. When overwriting the original, a rollback journal or write-ahead log WAL file is used just as it would be for any other database transaction. This means that when performing a **Database Cleanup** action on a database, as much as twice the size of the original database file is required in free disk space.

Note:

The **Database Cleanup** action will fail if there is an open transaction, or if there are one or more active SQL statements when it is run.

Example:

Before performing an export of a project the project size could be shrunk. This is done by first using the **Clear Datalogger** action, and then the **Database Cleanup** action.

Example:

If an unusually big amount of database transactions has been performed, a **Database Cleanup** could help boost database performance.

24 Multiple Controllers

It is possible to use multiple drivers with one operator panel. This means that the operator panel can communicate with different controllers simultaneously. The controllers can be connected to the serial ports on the operator panel and via the Ethernet port.

Note:

If the same tag is connected to addresses in more than one active controller, there is no way to control from which controller the value is read in runtime.

24.1 Adding a Controller

Click on **Tags** in the Project Explorer, select the **Controller** tab and click **Add** to add a new controller in the current project, and select which controller model and driver that is to be used.

Tags are added and controller is selected on the Tags tab.

Tag			Controllers	
Name	Data Type	Access Right	DemoController	ControllerB
Tag1	INT 16	ReadWrite	D0	
Counter	INT 16	ReadWrite	C0	
Tag2	INT 16	ReadWrite	D1	
Weight	INT 16	ReadWrite	D10	
Length	INT 16	ReadWrite	D11	
Width	INT 16	ReadWrite	D12	
Motor1_temp	INT 16	ReadWrite	D20	
Motor2_temp	INT 16	ReadWrite		40006
Motor1_status	BIT	ReadWrite	M3	
> Motor2_status	BIT	ReadWrite		00002


Related information

[Adding a Controller](#)

24.1.1 Addressing


Addressing of the tags in the controllers is carried out according to the help file for each driver.

When assigning a tag to an object, all tags, regardless of controller connection, are available for selection.

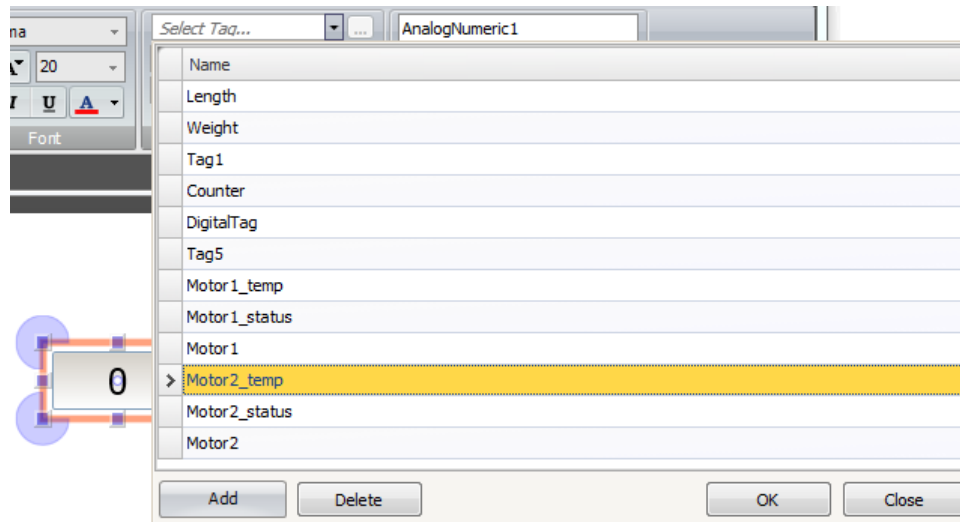


24.1.2 Examples


The following examples show configurations where multiple drivers are used in the operator panel.

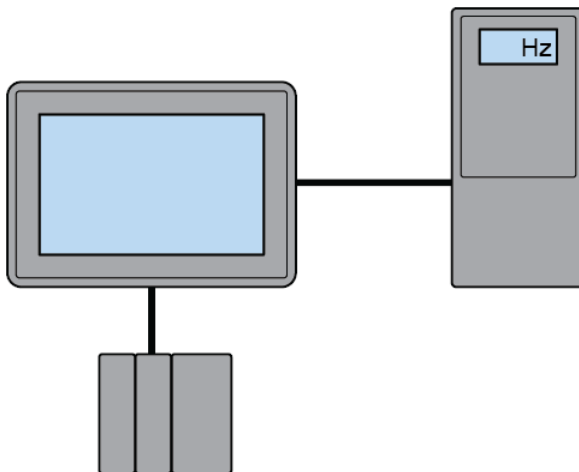

The operator panel communicating with one controller and one frequency converter.

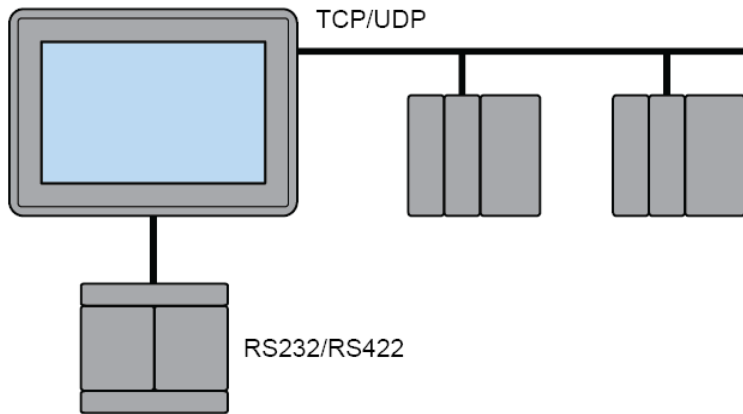

The operator panel communicating in series with one controller via Ethernet and with controllers of another make.

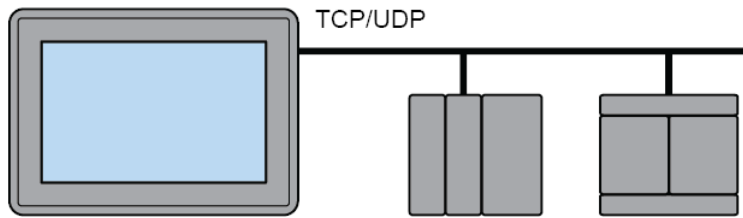

The operator panel communicating with two controllers of different makes via Ethernet.


25 Configuration settings for BoX 2

BoX2 does not have any displays. BoX2 is a series of IoT gateways with the possibility to add optional smart functions:

- Share data between PLCs of different brands.
- Create IoT solutions to store and access data in the cloud (not for BoX2 base).
- Integrate local CODESYSControl.
- Add smart functions using C# scripting.

Note:

It is not possible to convert a Display panel project to a BoX2 project.

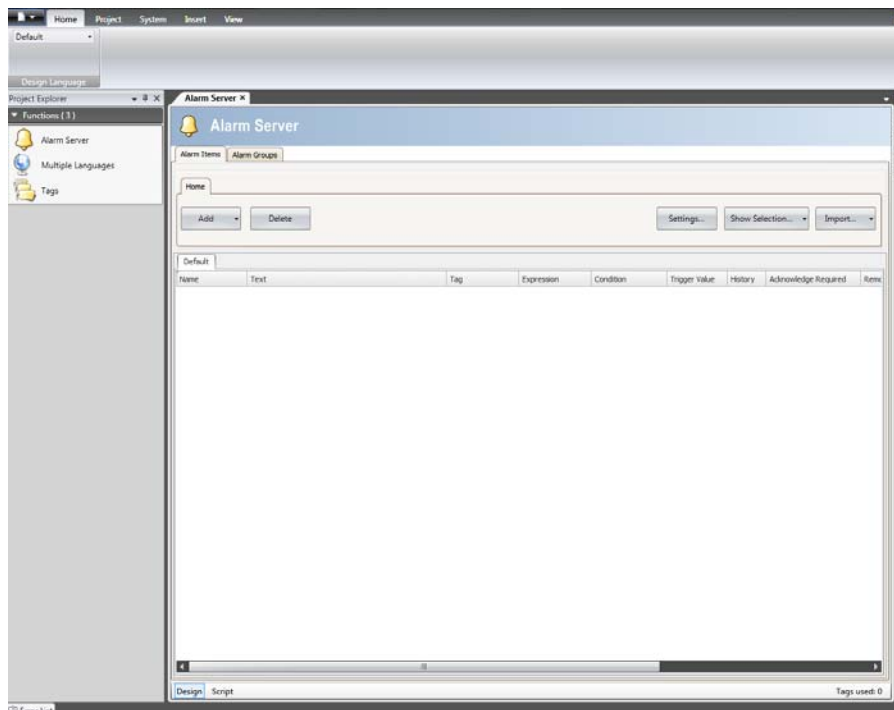

Excluded funtions for BoX2:

- Security
- Audit trail
- Text Libraries
- VNC (Remote access)
- Zoom in/out
- Recipe

Unavailable ribbon items:

- Clipboard
- Screen
- Objects
- Font
- Format

- Tag /security
- Name

Unavailable system tags:

- RemoteAlarmServerConnectionErrorsTagInfo
- NumberOfDisabledAlarmsTagInfo
- CurrentScreenNameTagInfo
- ScreenUpdateTimeTagInfo
- CurrentScreenIDTagInfo
- NewScreenIDTagInfo
- LatestLoadedRecipeNameTagInfo
- PowerLedBlueIntensityTagInfo
- PowerLedRedIntensityTagInfo
- PowerLedGreenIntensityTagInfo
- PowerLedBlinkFrequencyTagInfo
- MaxScreenCacheMemoryLoadPercentTagInfo
- CurrentUserTagInfo
- BacklightBrightnessLevelTagInfo

25.1 Enable Diagnostic page

The diagnostics page shows diagnostic values from the BoX2 panel. The diagnostic values include internal temperature, available RAM, used storage, connection and database errors and other system related markers. The diagnostic page can be viewed after the project is loaded to the panel.

1. Open **Web server** configuration from **System** ribbon tab. Set values needed to access web server and enable web server for the project.

Note:

The URL for the diagnostics page should include the assigned port number.

The screenshot shows a 'Web Server Settings' dialog box. On the left is a tab labeled 'Web Server Settings'. The main area is titled 'Settings' and contains the following configuration options:

- Enable Web Server:** A checked checkbox.
- Port:** A text input field containing the value '80'.
- Enable forms authentication:** A checked checkbox.
- User Name:** A text input field containing the value 'webuser'.
- Password:** A text input field containing the value 'fGsgj#h36jfdp'.
- Password strength:** A dropdown menu set to 'very strong'.

At the bottom of the dialog are two buttons: 'OK' and 'Cancel'.



2. Add system tags, used on the page, manually to the project. If the system tag is missing, '-' will be displayed on the page.

Note:

The following system tags are available:

- Communication Errors (count) (*SystemTagCommunicationErrorMessage*)
 - Communication Error Message (*SystemTagCommunicationErrorMessage*)
 - Database Error Active (*SystemTagStorageErrorActive*)
 - Database Error Message (*SystemTagStorageErrorMessage*)
 - Database Max Size Exceeded (*SystemTagStorageMaxSizeExceeded*)
 - Current Date and Time (*SystemTagDateTime*)
 - Debug Logging Enabled (*SystemTagDebugLoggingEnabled*)
-

3. Select **Functions - Tags - Add - Add System Tag...** Select and add needed tags in System tags dialog.

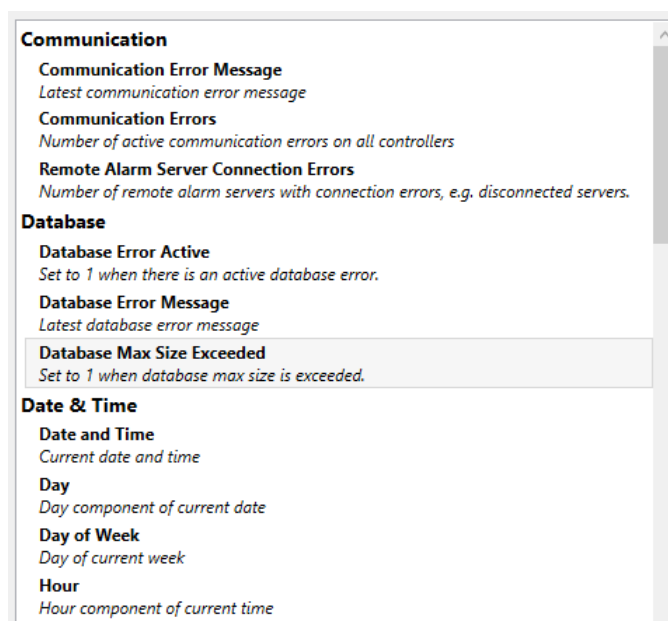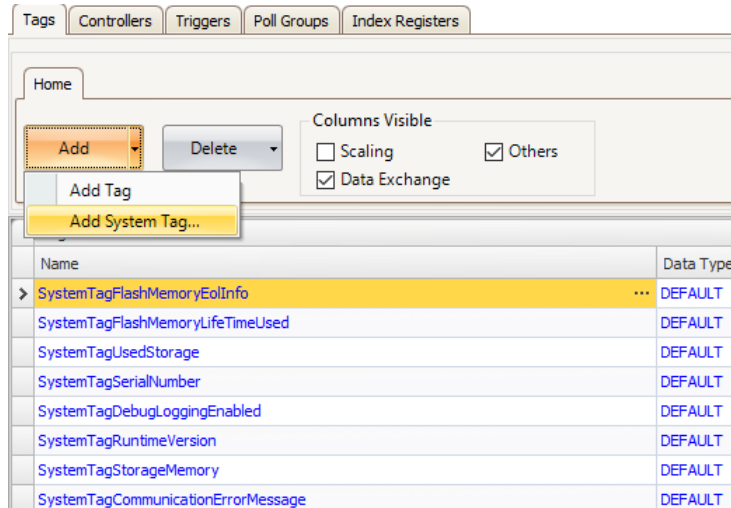

4. Deploy by either upload files via FTP or copy into the ProjectFiles folder. Diagnostics page files are installed with iX Developer installation and reside in 'iX Developer 2.40 SP6\Bin\DiagnosticsPage'.
 - a. Enable FTP server for the project.
 - b. Download the project to the panel through **Project - Download**.
 - c. Connect to the panel. Use FTP settings specified in the project with the help of any FTP client.
 - d. Create a new folder 'diagnostics' in the 'Website' folder and copy diagnostics page files into it.

25.2 LED

Box2 has three LED lights; Red, Purple and Blue.

Red

State	Description
Constant on	The light signals that the boot process is working. For example, when updating image.
Every 2 seconds on/off	Update mode.
Fast flashing	Remove the USB / SD card. The panel will restart automatically.

Purple

State	Description
Constant on	Booting up.
Every 0.5 seconds on/off	The unit is on standby and no iX project is running.

Blue

State	Description
Every 0.5 seconds on/off	The iX project is running.

26 Troubleshooting

This section describes tools to use in case of unexpected behavior in iX Developer.

26.1 Project Build Failure

If project build fails, check that the absolute path to the project, including its components, does not exceed 260 characters.

26.2 Back Up Project Issues

Make sure that project that is fetched using the Back Up command is identical to the current iX Developer project; i.e. has the same name and is of the same size.

Related information
Upload Database

26.3 Invalid Names

If using system device names when naming objects such as controllers, screens, recipe managers, data loggers and script modules, an error message will be displayed, stating that this is an invalid name. Examples of system device names: AUX, COM1, CON, LPT3, NUL, PRN, Time, Id.

Related information
Name Group

26.4 Expression Cannot Be Found

If an error indicating that an expression cannot be found is generated at project validation, make sure that objects inserted from the Component library uses global expressions only.

Related information
Using Expressions

26.5 Performance Issue Related to Graphics Card

When designing iX Developer projects, the CPU load may suddenly increase when performing actions such as moving objects on the screen or hovering over buttons, depending on which graphics card is used.

This problem may be solved by turning off the hardware acceleration of the graphics card. In Windows this is done under the advanced display settings on the **Troubleshooting** tab.

Note:

Should you experience problems with the graphic rendering, make sure the latest graphical driver is used. If the latest graphical driver is used and rendering issues still occur, upgrade to a better graphics card.

Related information

[System Requirements and Limitations](#)

26.6 Error Related to Third Party Controls

When opening a project including third party controls, the third party controls have to be included in the iX Developer third party control folder. Otherwise the project may terminate, or unexpected error messages may be displayed.

When referencing third-party assemblies (.dll files), make sure not to place two files with the same fully qualified assembly name in the same folder, otherwise errors may occur.

26.7 Performance Issue When Navigating in Script Tree View

If you are working with a large iX Developer project, especially a project with many tags and alarms, you may find that navigating the script tree view is slow.

The performance can be improved by saving the project.

Related information

[Script](#)



Head office

Beijer Electronics AB

Box 426

201 24 Malmö, Sweden

www.beijerelectronics.com / +46 40 358600