

## Error motor P0207

Error no.	Meaning	Reaction	Troubleshooting
96	Short-circuit temperature sensor (Tm <= -30 °C)	adjustable	Remove the short-circuit in the temperature sensor
97	Temperature sensor - motor not connected (Tm > +300 °C)	adjustable	Remove open circuit in the temperature sensor circuit
98	Motor overtemperature	IS	Remove motor over temperature by cooling down and/or reducing the load
99	Error $I^2t > 100\%$	IS	Leave drive in inhibited status until $I^2t$ -actual value decreases under 100%
100	Power unit maximal current > motor maximal current	adjustable	Set power unit maximal current P1241 lower than motor maximal current P0069
101	reserved Not assigned = 0		
102	Collective error finding notch position	IS	see ▶Error finding notch position P0237◀ on page 133 (= 3. level)
103 to 111	reserved Not assigned = 0		

## Error Encoder1 P0208

Error no.	Meaning	Reaction	Troubleshooting
112	Communication error (HIPERFACE®-Specification)	IS	see encoder 1 (HIPERFACE® P0234 (= 3rd level))
113	reserved		
114	Error at overwriting of encoder position information	IS	Execute the command again. If the error occurs again, contact Baumüller Nürnberg GmbH.
115	Cable break encoder 1	IS	Remove the cable break in the encoder cable of encoder 1 or check the assignment of the encoder cable
116	Overspeed encoder 1	IS	Check the allowable rotational speed for encoder 1
117	Amplitude limit exceeded	IS	Use another encoder
118	Encoder type unknown	IS	Check if the correct encoder is connected or use another encoder
119	Invalid data field for motor data	IS	Use another encoder
120	Incorrect motor data	IS	Use another encoder
121	Saving error of motor data	IS	Use another encoder
122	Motor data write-protected. (is not valid for BM motors)	IS	Use another encoder
123	Field angle error	IS	Check the shielding of the encoder cable
124	Encoder without temperature measuring	adjustable	Use an encoder module with temperature measuring
125	Memory capacity in the encoder for electronic type plate too small	adjustable	Use another encoder with a greater memory
126 to 127	reserved not assigned = 0		

## Error encoder 2 P0209

Error no.	Meaning	Reaction	Troubleshooting
128	Communication error (HIPERFACE®-Specification)	IS	see encoder 2 (HIPERFACE® P0235 (= 3rd level))
129	reserved		
130	Error at overwriting of Encoder position information	IS	Execute the command again. If the error occurs again, contact Baumüller Nürnberg GmbH.
131	Cable break encoder 2	IS	Remove the cable break in the encoder cable of encoder 1 or check the assignment of the encoder cable
132	Overspeed encoder 2	IS	Check the allowable rotational speed for encoder 2
133	Amplitude limit exceeded	IS	Use another encoder
134	Encoder type unknown	IS	Check if the correct encoder is connected or use another encoder
135	Invalid data field for motor data	IS	Use another encoder
136	Incorrect motor data	IS	Use another encoder
137	Saving error of motor data	IS	Use another encoder
138	Motor data write-protected. (is not valid for BM motors)	IS	Use another encoder
139	Field angle error	IS	Check the shielding of the encoder cable
140	Encoder without temperature measuring	adjustable	Use an encoder module with temperature measuring
141	Memory capacity in the encoder for electronic type plate too small	adjustable	Use another encoder with a greater memory
142 to 143	reserved not assigned = 0		

## Error encoder manager P0210

Error no.	Meaning	Reaction	Troubleshooting
144	Absolute position of encoder 1 unknown	IS	Use another encoder
145	Absolute position of encoder 2 unknown	IS	Use another encoder
146	Encoder module 1 is missing	IS	Check, if the right encoder is connected to module position A
147	Encoder module 2 is missing	IS	Check, if the right encoder is connected to module position B
148	Encoder module for measured value storage is missing	IS	Install the encoder module
149	At resolver no measured value storage possible	IS	Use a SinCos- or incremental encoder
150	Triggering not possible, because no incremental encoder	IS	Use for this option an incremental encoder
151	Digital I/o-module is missing	IS	Install the digital I/O-Module
152	Incremental encoder emulation module is necessary and is missing	IS	Install the incremental encoder-emulation module
153	Encoder module 1 is necessary for incremental encoder emulation and is missing	IS	Install the encoder module to slot A
154	Encoder module 2 is necessary for incremental encoder emulation and is missing	IS	Install encoder module to slot B
155	Initialization error of the incremental encoder-emulation module	IS	Restart system
156	Incremental encoder-emulation module (HW) signals error	IS	Restart system, if error message recur change the module
157	Error incremental encoder emulation module	IS	Use for this option an incremental encoder
158	SSI encoder emulation module is missing	IS	Install the SSI-encoder-emulation module
159	Error in setpoint source encoder 1 or 2	IS	See encoder error message