

# GP4000 Series Hardware Manual



---

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Pro-face nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information that is contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Pro-face.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Pro-face software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2011 Digital Electronics Corporation. All rights reserved.

# Table of Contents




	<b>Safety Information</b> .....	<b>5</b>
	<b>About the Book</b> .....	<b>9</b>
<b>Chapter 1</b>	<b>Overview</b> .....	<b>11</b>
	GP unit Package Contents .....	12
	Certifications and Standards .....	13
	GP Series of Panels .....	15
<b>Chapter 2</b>	<b>Device Connectivity</b> .....	<b>17</b>
	System Design .....	18
	Accessories .....	27
<b>Chapter 3</b>	<b>Parts Identification and Functions</b> .....	<b>31</b>
	Parts Identification and Functions .....	31
<b>Chapter 4</b>	<b>Specifications</b> .....	<b>43</b>
4.1	GP-4200 Series .....	44
	Electrical Specifications .....	45
	Environmental Specifications .....	46
	Structural Specifications .....	47
	Display Specifications .....	49
	Memory, Clock, and Touch Panel .....	50
	Interface Specifications .....	52
	Specifications of Serial Interface COM1 .....	53
	Specifications of Serial Interface COM2 .....	57
	Dimensions .....	58
4.2	GP-4300 Series .....	64
	Electrical Specifications .....	65
	Environmental Specifications .....	66
	Structural Specifications .....	67
	Display Specifications .....	69
	Memory, Clock, and Touch Panel .....	70
	Interface Specifications .....	72
	Specifications of Serial Interface COM1 .....	73
	Specifications of Serial Interface COM2 .....	75
	Dimensions .....	77
4.3	GP-4400 Series .....	82
	Electrical Specifications .....	83
	Environmental Specifications .....	84
	Structural Specifications .....	85
	Display Specifications .....	87
	Memory, Clock, and Touch Panel .....	88
	Interface Specifications .....	89
	Specifications of Serial Interface COM1 .....	90
	Specifications of Serial Interface COM2 .....	92
	Dimensions .....	93

---

4.4	GP-4500 Series . . . . .	97
	Electrical Specifications . . . . .	98
	Environmental Specifications . . . . .	99
	Structural Specifications . . . . .	100
	Display Specifications . . . . .	102
	Memory, Clock, and Touch Panel . . . . .	103
	Interface Specifications . . . . .	104
	Specifications of Serial Interface COM1 . . . . .	105
	Specifications of Serial Interface COM2 . . . . .	107
	Dimensions . . . . .	109
4.5	GP-4600 Series . . . . .	117
	Electrical Specifications . . . . .	118
	Environmental Specifications . . . . .	119
	Structural Specifications . . . . .	120
	Display Specifications . . . . .	122
	Memory, Clock, and Touch Panel . . . . .	123
	Interface Specifications . . . . .	124
	Specifications of Serial Interface COM1 . . . . .	125
	Specifications of Serial Interface COM2 . . . . .	127
	Dimensions . . . . .	129
<b>Chapter 5</b>	<b>Installation and Wiring . . . . .</b>	<b>135</b>
5.1	Installation . . . . .	136
	Installation Procedures . . . . .	136
5.2	Wiring Principles . . . . .	141
	Connecting the AC Power Cord . . . . .	142
	Connecting the DC Power Cord . . . . .	144
	Connecting the Power Supply . . . . .	147
	Grounding . . . . .	149
5.3	SD Card Insertion/Removal . . . . .	150
	Introduction . . . . .	151
	Inserting the SD Card . . . . .	152
	Before Removing the SD Card . . . . .	154
	Removing the SD Card . . . . .	155
	SD Card Data Backup . . . . .	156
5.4	USB Cable Clamp . . . . .	157
	USB Cable Clamp for USB (Type A) . . . . .	158
	USB Holder for USB (mini-B) . . . . .	160
<b>Chapter 6</b>	<b>Maintenance . . . . .</b>	<b>163</b>
	Regular Cleaning . . . . .	164
	Replacing the Installation Gasket . . . . .	165
	Periodic Check Points . . . . .	167
	Replacing the Primary Battery . . . . .	168

## Safety Information

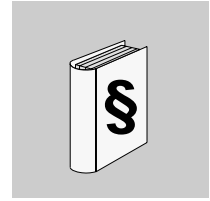

### Important Information

#### NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger safety label indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **DANGER**

**DANGER** indicates an imminently hazardous situation which, if not avoided, **will result in death or serious injury**.

### **WARNING**

**WARNING** indicates a potentially hazardous situation which, if not avoided, **can result in death or serious injury**.

### **CAUTION**

**CAUTION** indicates a potentially hazardous situation which, if not avoided, **can result in minor or moderate injury**.

### **NOTICE**

**NOTICE** is used to address practices not related to physical injury.

---

## PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Pro-face for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

## Model Name Format

The following describes the format of model names.

PFXGP4 \* 0 \* \* \* \* \*

A B C D E F

Digit	Possible Values	Description
A	2	GP-4200 Series (3.5-inch, 320 x 240 dots (QVGA))
	3	GP-4300 Series (5.7-inch, 320 x 240 dots (QVGA))
	4	GP-4400 Series (7.5-inch, 640 x 480 dots (VGA)) (7.0-inch, 800 x 480 dots (WVGA))
	5	GP-4500 Series (10.4-inch, 640 x 480 dots (VGA))
	6	GP-4600 Series (12.1-inch, 800 x 600 dots (SVGA))
B	01	RS-232C and RS-422/RS-485 are available. On GP-4201T, either RS-232C or RS-422/485 is available.
	03	RS-232C and RS-485 (isolation) are available. On GP-4203T, one serial interface – RS-485 (isolation) – is available.
C	T	TFT color LCD
	W	Wide TFT color LCD
D	A	Analog Touch Panel
	M	Matrix Touch Panel
E	A	AC type power supply
	D	DC type power supply
F	W	GP-4201TW/GP-4301TW/GP-4401WW/GP-4501TW
	C	Coating model
	WC	Coating model of GP-4201TW/GP-4301TW/GP-4401WW/GP-4501TW

## GP4000 Series Model Names

Thank you for purchasing Pro-face's GP4000 Series unit (hereafter referred to as the "GP unit").

Series		Model Name	Model	
GP4000 Series	GP-4100 Series *1	GP-4104	GP4104G1D	
			GP4104W1D	
		GP-4105	GP4105G1D	
			GP4105W1D	
		GP-4106	GP4106G1D	
			GP4106W1D	
		GP-4107	GP4107G1D	
			GP4107W1D	
		GP-4200 Series	GP-4201T	PFXGP4201TAD
			GP-4201TM (Modular Type) *2	PFXGM4201TAD
			GP-4201TW	PFXGP4201TADW
			GP-4203T	PFXGP4203TAD
	GP-4300 Series	GP-4301T	PFXGP4301TAD	
			PFXGP4301TADC	
		GP-4301TM (Modular Type) *2	PFXGM4301TAD	
		GP-4301TW	PFXGP4301TADW	
	GP-4303T	PFXGP4303TAD		
		PFXGP4303TADC		
	GP-4400 Series	GP-4401T	PFXGP4401TAD	
		GP-4401WW	PFXGP4401WADW	
	GP-4500 Series	GP-4501T (Analog Touch Panel)	PFXGP4501TAA	
			PFXGP4501TAAC	
			PFXGP4501TAD	
			PFXGP4501TADC	
		GP-4501T (Matrix Touch Panel)	PFXGP4501TMA	
			PFXGP4501TMD	
	GP-4501TW	PFXGP4501TADW		
	GP-4503T	PFXGP4503TAD		
	GP-4600 Series	GP-4601T (Analog Touch Panel)	PFXGP4601TAA	
			PFXGP4601TAAC	
			PFXGP4601TAD	
		PFXGP4601TADC		
GP-4601T (Matrix Touch Panel)	PFXGP4601TMD			
	PFXGP4601TMA			
GP-4603T	PFXGP4603TAD			

\*1 Please see "GP-4100 Series Hardware Manual" for details.

\*2 Please see "GP-4201TM/4301TM Hardware Manual" for details.

---


**Global Code**

A global code is assigned to every Pro-face product as a universal model number. For more information on product models and their matching global codes, please refer to the following URL.

<http://www.pro-face.com/product/globalcode.html>



## About the Book

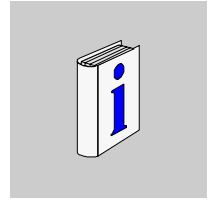

### At a Glance

#### Document Scope

This document describes how to use the GP unit.

#### Validity Note

This document is valid for the GP unit with GP-Pro EX version 3.0 or later.

The technical characteristics of the device(s) described in this manual also appear online at <http://www.pro-face.com/otasuke/>.

The characteristics presented in this manual should be the same as those that appear online. In line with our policy of constant improvement we may revise content over time to improve clarity and accuracy. In the event that you see a difference between the manual and online information, use the online information as your reference.

#### Related Documents

Title of Documentation
GP-Pro EX Reference Manual
GP-Pro EX Maintenance/Troubleshooting Manual
GP-Pro EX Device/PLC Connection Manual


You can download these technical publications and other technical information from our website "Otasuke Pro!" at <http://www.pro-face.com/otasuke/>.

#### Product Related Information

<b>⚠ WARNING</b>
<p><b>UNINTENDED EQUIPMENT OPERATION</b></p> <p>The application of this product requires expertise in the design and programming of control systems. Only persons with such expertise should be allowed to program, install, alter, and apply this product.</p> <p>Follow all local and national safety standards.</p> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p>

---

# Overview

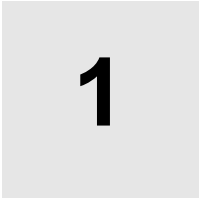

---

## Overview

This chapter describes the GP unit panels and general topics such as package contents and standards.

## What Is in This Chapter?


This chapter contains the following topics:

Topic	Page
GP unit Package Contents	12
Certifications and Standards	13
GP Series of Panels	15

## GP unit Package Contents

### Overview

Verify all items listed here are present in your package:

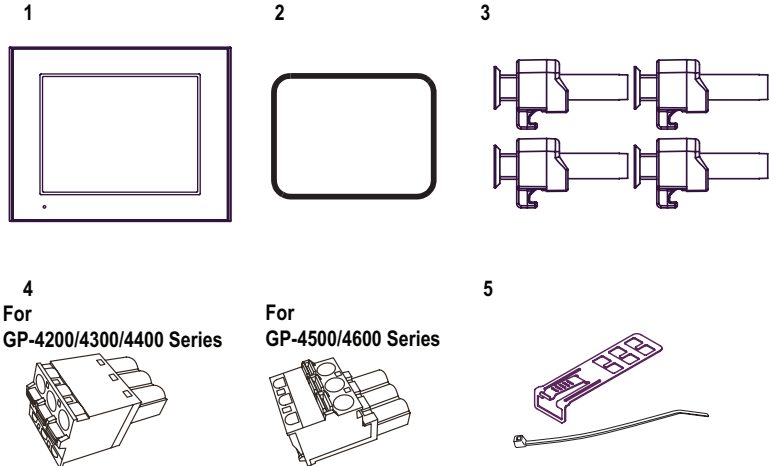

- 1 GP unit: 1
- 2 Installation gasket: 1 (attached to the GP unit)
- 3 Installation fasteners: 4 per set
- 4 DC power connector: 1<sup>\*1</sup>
- 5 USB cable clamp Type A: 1 set (1 clip and 1 tie)
- 6 GP4000 Series Installation Guide: 1
- 7 Warning/Caution information: 1

This unit has been carefully packed with special attention to quality. However, should you find anything damaged or missing, please contact your local distributor.

<sup>\*1</sup> You can use the DC power connector for GP-4200/4300/4400 series to supply power to GP-4500/4600 series. However the reverse is not possible. You cannot use the power connector for GP-4500/4600 series on GP-4200/4300/4400 series.

## Certifications and Standards

### Introduction

Pro-face submitted this product for independent testing and qualification by third-party listing agencies. These agencies have certified this product as meeting the following standards.

### Agency Certifications

The GP unit is certified by the Underwriters Laboratory according to:

- UL 508 and CSA C22.2 n°142 for Industrial Control Equipment

### Hazardous Substances

The GP unit is designed for compliance with:

- WEEE, Directive 2002/96/EC
- RoHS, Directive 2002/95/EC
- RoHS China, Standard SJ/T 11363-2006

### CE Markings

This product conforms to the necessary requirements of the following Directives for applying the CE label:

- 2006/95/EC Low Voltage Directive
- 2004/108/EC EMC Directive

This conformity is based on compliance with EN61000-6-4, EN61000-6-2 (DC model, AC model)

This conformity is based on compliance with EN60950-1 (AC model)

## **WARNING**

### **RISK OF EXPLOSION IN HAZARDOUS LOCATIONS**

- Verify that the power, input and output (I/O) wiring are in accordance with Class I, Division 2 wiring methods.
- Do not substitute components that may impair compliance to Class I, Division 2.
- Do not connect or disconnect equipment unless power has been switched off or the area is known to be non-hazardous.
- Securely lock externally connected units and each interface before turning on the power supply.
- Do not use, connect, or disconnect USB (mini-B) cable connections in hazardous locations. USB (mini-B) interface is for temporary connection only during maintenance and setup.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<b>⚠ WARNING</b>
<p><b>RISK OF EXPLOSION IN HAZARDOUS LOCATIONS</b></p> <ul style="list-style-type: none"> <li>● Do not disconnect while circuit is live or unless the area is known to be free of ignitable concentrations.</li> <li>● Potential electrostatic charging hazard: wipe the front panel of the terminal with a damp cloth before turning ON.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p>

**KC Markings**

사용자안내문

기종별	사 용 자 안 내 문
A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

## GP Series of Panels

### Critical systems, alarms and handling Requirements

Critical alarm indicators and system functions require independent and redundant protection hardware and/or mechanical interlocks.

When you cycle power, wait at least 10 seconds before restoring the power to the GP unit after it has been turned off. Switching the power OFF and ON quickly can damage the GP unit.

In the event the screen cannot be properly read, for example, if the backlight is not functioning, it may be difficult or impossible to identify a function. Functions that may present a hazard if not immediately executed, such as a fuel shut-off, must be provided independently of the GP unit. The machine's control system design must take into account the possibility of the backlight no longer functioning and the operator being unable to control the machine or making mistakes in the control of the machine.

### WARNING

#### LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.
- Each implementation of this equipment must be individually and thoroughly tested for proper operation before being placed into service.
- The machine control system design must take into account the possibility of the backlight no longer functioning and the operator being unable to control the machine, or making errors in the control of the machine.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems" or their equivalent governing your particular location.

### WARNING

#### UNINTENDED EQUIPMENT OPERATION

- Do not use this equipment as the only means of control for critical system functions such as motor start/stop or power control.
- Do not use this equipment as the only notification device for critical alarms, such as device overheating or overcurrent.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Handling the LCD panel

The following characteristics are specific to the LCD panel and are considered normal behavior:

- LCD screen may show unevenness in the brightness of certain images or may appear different when seen from outside the specified viewing angle. Extended shadows, or crosstalk may also appear on the sides of screen images.
- LCD screen pixels may contain black and white colored spots and color display may seem to have changed.
- When the same image is displayed on the screen for a long period, an afterimage may appear when the image is changed.

**NOTE:** Change the screen image periodically and try not to display the same image for a long period of time.

 <b>CAUTION</b>
<b>SERIOUS EYE AND SKIN INJURY</b> The liquid in the LCD panel contains an irritant: <ul style="list-style-type: none"><li>● Avoid direct skin contact with the liquid.</li><li>● Wear gloves when you handle a broken or leaking unit.</li><li>● Do not use sharp objects or tools in the vicinity of the LCD touch panel.</li><li>● Handle the LCD panel carefully to prevent puncture, bursting, or cracking of the panel material.</li></ul> <b>Failure to follow these instructions can result in injury or equipment damage.</b>



If the panel is damaged and any liquid comes in contact with your skin, immediately rinse the area with running water for at least 15 minutes. If the liquid gets in your eyes, immediately rinse your eyes with running water for at least 15 minutes and consult a doctor.



---

# Device Connectivity

# 2

---

## Introduction

This chapter presents the equipment you can connect to the GP unit.

## What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
System Design	18
Accessories	27

## System Design


### Introduction

The following diagrams represent equipment you can connect to the GP unit.

	COM1	COM2
GP-4201T	RS-232C or RS-422/RS-485 (see page 19)	–
GP-4201TW	RS-232C (see page 19)	RS-422/RS-485 (see page 23)
GP-4203T	RS-485 (isolation) (see page 22)	–
GP-4301T	RS-232C (see page 19)	RS-422/RS-485 (see page 23)
GP-4301TW	RS-232C (see page 19)	RS-422/RS-485 (see page 23)
GP-4303T	RS-232C (see page 19)	RS-485 (isolation) (see page 24)
GP-4401T	RS-232C (see page 19)	RS-422/RS-485 (see page 23)
GP-4401WW	RS-232C (see page 19)	RS-422/RS-485 (see page 23)
GP-4501T	RS-232C (see page 19)	RS-422/RS-485 (see page 23)
GP-4501TW	RS-232C (see page 19)	RS-422/RS-485 (see page 23)
GP-4503T	RS-232C (see page 19)	RS-485 (isolation) (see page 24)
GP-4601T	RS-232C (see page 19)	RS-422/RS-485 (see page 23)
GP-4603T	RS-232C (see page 19)	RS-485 (isolation) (see page 24)

**RUN Mode Peripherals - COM1: RS-232C**

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

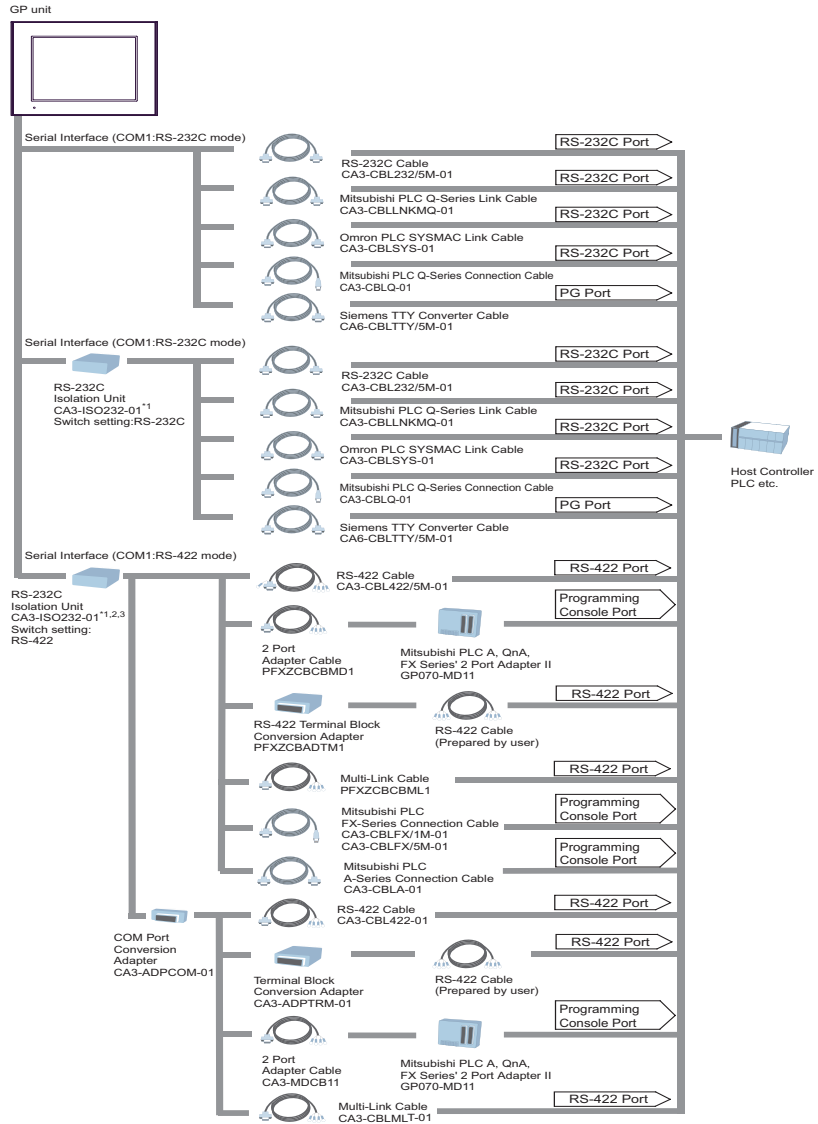


\*1 When connecting the CA3-ISO232-01, the COM port's pin 9 setting should be VCC. You can define COM port settings in GP-Pro EX or in the GP unit's offline menu.


\*2 The RS-232C Isolation Unit does not correspond to RS-422/485 (2 wire) communication.

\*3 The RS-232C Isolation Unit does not correspond to Serial Multilink communication.

## RUN Mode Peripherals - COM1: RS-232C or RS-422/RS-485

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

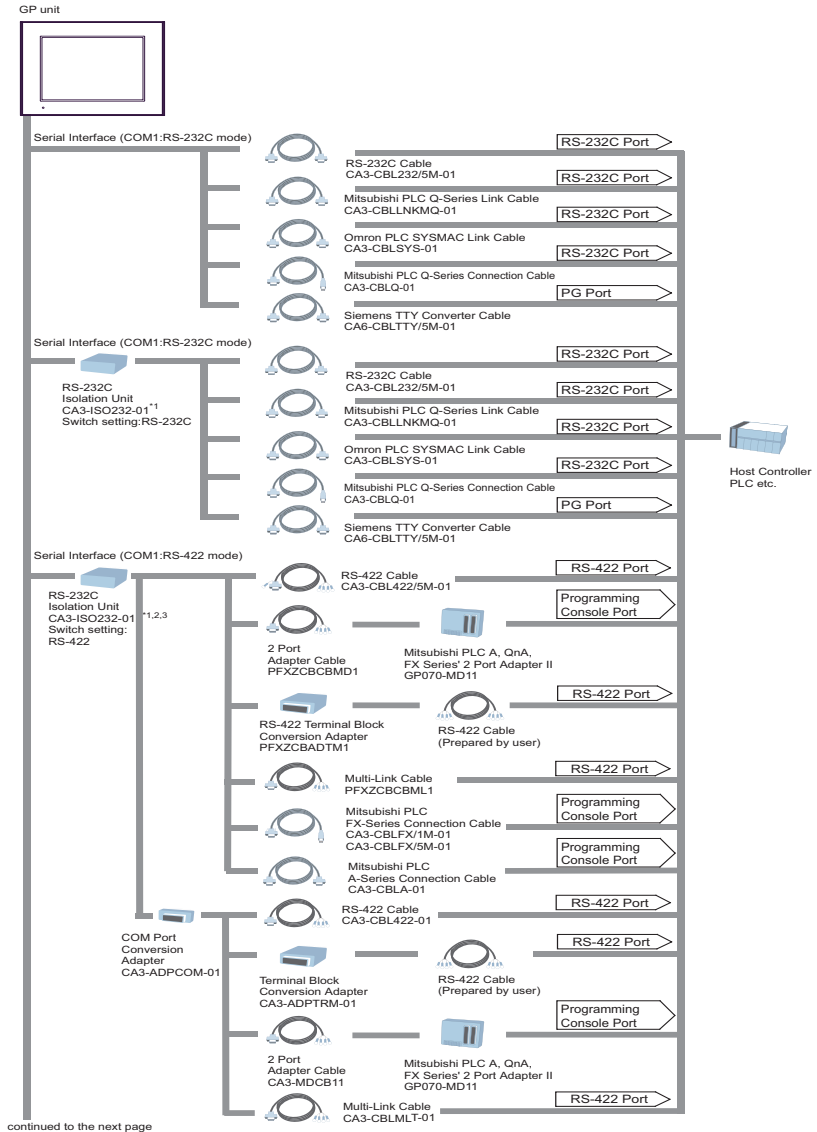

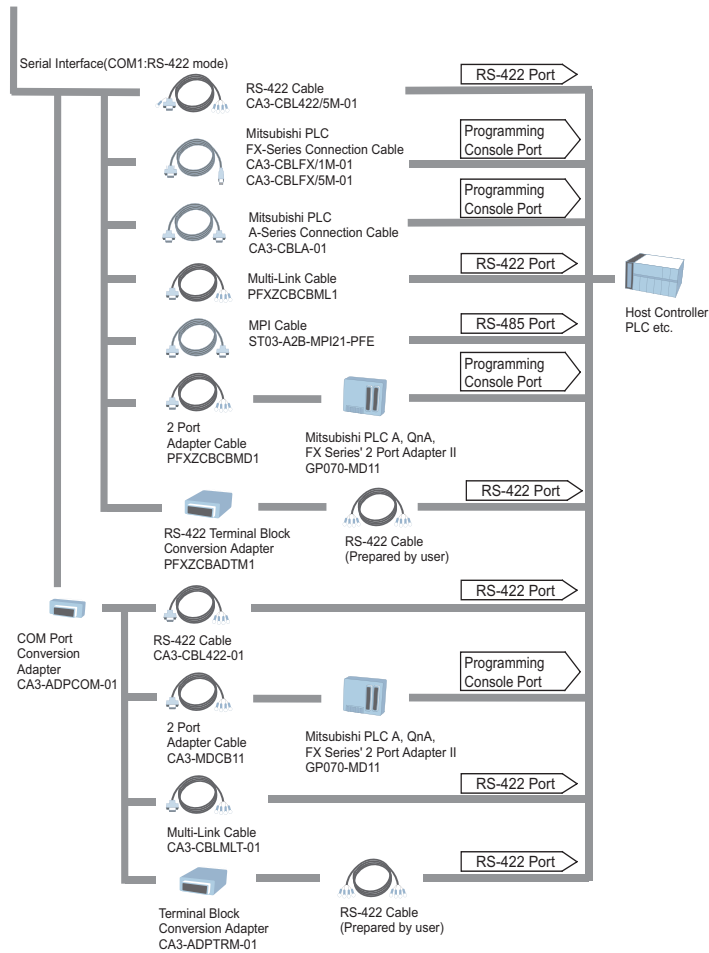


\*1 When connecting the CA3-ISO232-01, the COM port's pin 9 setting should be VCC. You can define COM port settings in GP-Pro EX or in the GP unit's offline menu.

\*2 The RS-232C Isolation Unit does not correspond to RS-422/485 (2 wire) communication.

\*3 The RS-232C Isolation Unit does not correspond to Serial Multilink communication.


### RUN Mode Peripherals - COM1: RS-485 (isolation)

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

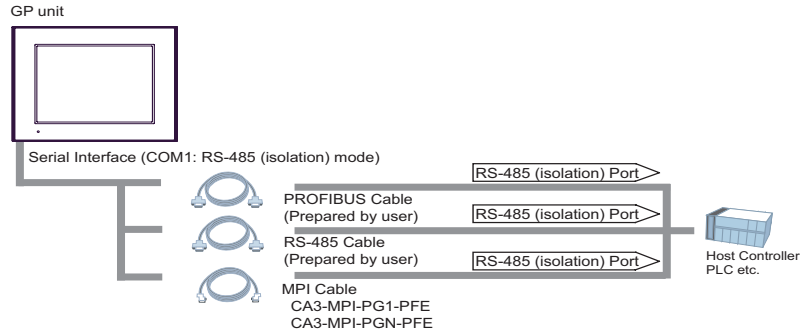


**RUN Mode Peripherals - COM2: RS-422/RS-485**

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

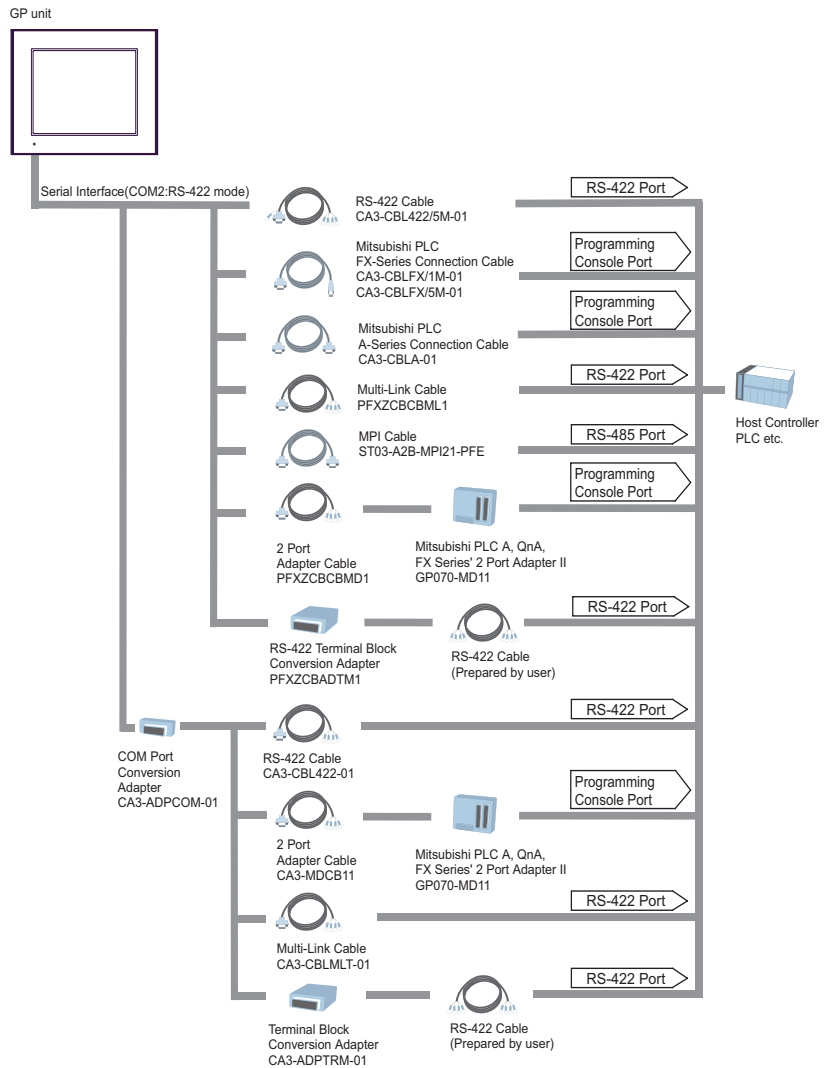


### RUN Mode Peripherals - COM2: RS-485 (isolation)

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

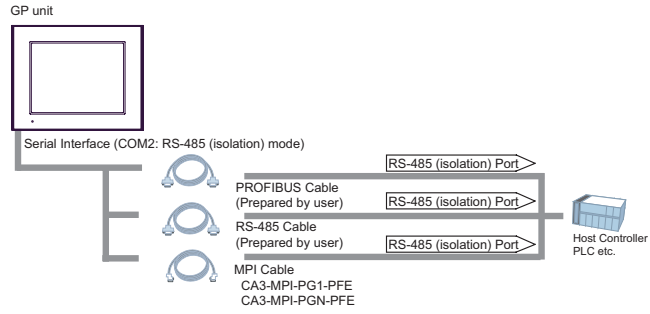


### RUN Mode Peripherals - Ethernet Communication

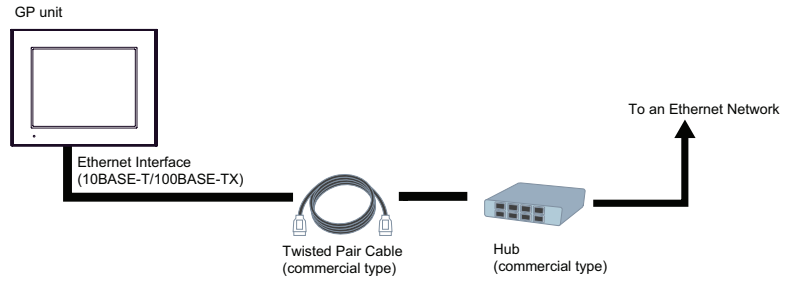




## RUN Mode Peripherals - USB Type A / mini-B Interface

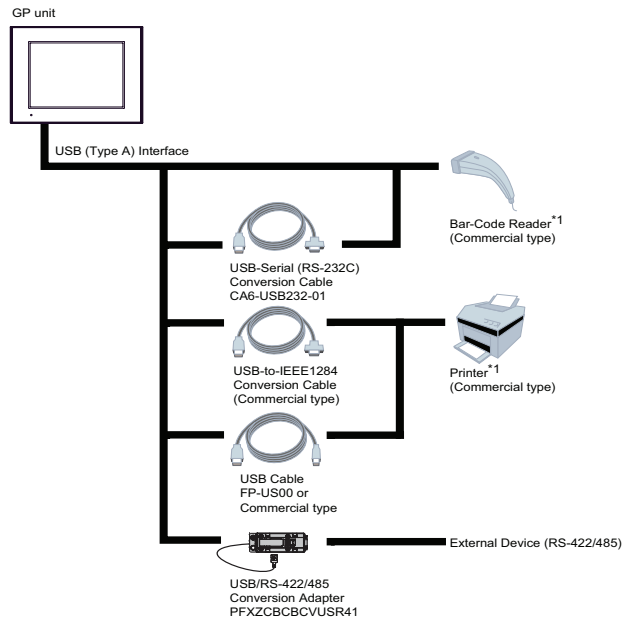

\*1 For supported models, refer to Pro-face's support site "Otasuke Pro!" (<http://www.pro-face.com/otasuke/>). You can connect to this site in GP-Pro EX: from the [Help (H)] menu, click [Connect to Support Site "Otasuke Pro!"] (C)].

## Edit Mode Peripherals

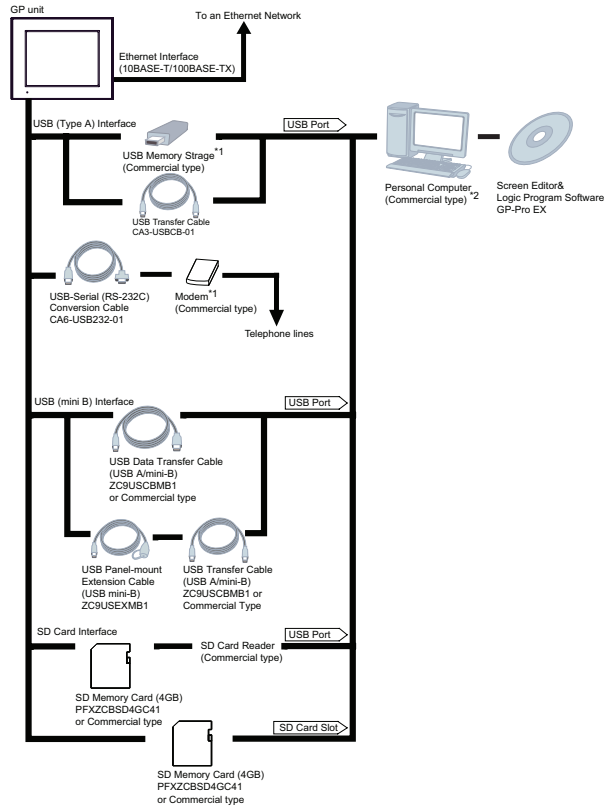

\*1 For supported models, refer to Pro-face's support site "Otasuke Pro!" (<http://www.pro-face.com/otasuke/>). You can connect to this site in GP-Pro EX: from the [Help (H)] menu, click [Connect to Support Site "Otasuke Pro!"] (C)

\*2 There are certain types and models of PCs that are not supported. Please refer to the "GP-Pro EX Reference Manual" for the software's operating environment requirements.

## Accessories

### Serial Interface Items

Product Name	Product Number	Description
RS-232C Cable (5m)	CA3-CBL232/5M-01	Connects a host controller to the GP unit. (RS-232C)
RS-422 Cable (5m)	CA3-CBL422/5M-01	Connects a host controller to the GP unit. (RS-422)
Mitsubishi PLC Q-Series Link Cable (5m)	CA3-CBLLNMQ-01	Connects Mitsubishi PLC Q-Series (or other host controller) to the GP unit. (RS-232C)
Omron PLC SYSMAC Link Cable (5m)	CA3-CBLSYS-01	Connects Omron PLC SYSMAC Series unit (or other host controller) to the GP unit. (RS-232C)
Mitsubishi PLC A-Series Connection Cable (5m)	CA3-CBLA-01	Connects Mitsubishi PLC A or QnA Series programming console I/F to GP unit. (Simultaneous use of programming consoles is not possible.)
Mitsubishi PLC Q-Series Connection Cable (5m)	CA3-CBLQ-01	Connects Mitsubishi PLC Q-Series programming console I/F to GP unit. (Simultaneous use of programming consoles is not possible.)
Mitsubishi PLC FX-Series Connection Cable	CA3-CBLFX/1M-01 (1m) CA3-CBLFX/5M-01 (5m)	Connects Mitsubishi PLC FX-Series programming console I/F and GP unit. (Simultaneous use of programming consoles is not possible.)
RS-422 Cable (5m)	CA3-CBL422-01	Connects a host controller to the GP unit. (RS-422)
2 Port Adapter Cable (5m)	CA3-MDCB11	Connects Mitsubishi PLC to the GP unit using 2 port adapter II (RS-422). Please see "GP-Pro EX Device/PLC Connection Manual" for how to connect the cable.
	PFXZCBCBMD1	Connects Mitsubishi PLC directly to the GP unit (D-sub 9 pin plug) using 2 port adapter II (RS-422).
Mitsubishi PLC A, QnA, FX Series 2 Port Adapter II	GP070-MD11	Enables simultaneous use of a GP unit and a Mitsubishi PLC A, QnA, or FX Series peripheral device.
Terminal Block Conversion Adapter	CA3-ADPTRM-01	Connects output from a GP unit's Serial Interface (D-sub 9 pin plug) directly with an RS-422 terminal block.
RS-422 Terminal Block Conversion Adapter	PFXZCBADTM1	Connects output from a GP unit's Serial Interface (D-sub 9 pin plug) directly with an RS-422 terminal block.
COM Port Conversion Adapter	CA3-ADPCOM-01	Connects optional RS-422 communication items to GP unit's Serial Interface.
Multi-Link Cable (5m)	CA3-CBLMLT-01	Connects a host controller to the GP unit for multi-link (n:1) communication. Please see "GP-Pro EX Device/PLC Connection Manual" for how to connect the cable.
	PFXZCBCBML1	Connects a host controller directly to the GP unit (D-sub 9 pin plug) for multi-link (n:1) communication.

Product Name	Product Number	Description
9-pin-to-25-pin RS-232C Conversion Cable (0.2m)	CA3-CBLCBT232-01	Connects a standard RS-232C cable (D-Sub 25-pin socket) to the GP unit (D-sub 9-pin plug).
RS-422 9/25-pin Conversion Cable (0.2m)	PFXZCBCBCVR41	Connects a standard RS-422 cable (D-sub 25-pin socket) to the GP unit (D-sub 9 pin plug).
Siemens TTY Converter Cable (5m)	CA6-CBLTTY/5M-01	Connects Siemens PLC S5 Series to the GP unit.
MPI Cable (3.5m)	ST03-A2B-MPI21-PFE CA3-MPI-PG1-PFE CA3-MPI-PGN-PFE	Connects a host controller to the GP unit for MPI communication.
RS-232C Isolation Unit	CA3-ISO232-01	Connects a host controller to the GP unit and provides isolation. (RS-232C and RS-422 are switchable.)

### USB Interface Items

Product Name	Product Number	Description
USB Transfer Cable (2m)	CA3-USBCB-01	Downloads project data created with the Screen Editor & Logic Program Software via the GP unit's USB I/F.
USB Cable (5m)	FP-US00	Connects a USB printer. (TYPE-B)
USB Front Cable (1m)	CA5-USBEXT-01	Extension cable attaching USB interface to front panel.
USB-Serial (RS-232C) Conversion Cable (0.5m)	CA6-USB232-01	Cable for converting a GP unit's USB interface into a serial interface (RS-232C). Allows connection to modems <sup>*1</sup> or bar code readers <sup>*1</sup> that support RS-232C.
USB/RS-422/485 Conversion Adapter	PFXZCBCBCVUSR41	Adapter for connecting a GP unit (USB Type A) with an external device (RS-422/RS-485).
USB Transfer Cable (USB Type A/mini-B) (1.8 m)	ZC9USCBMB1	Cable for transferring screen data from a PC (USB Type A) to the GP unit (USB mini-B).
USB Panel-mount Extension Cable (USB mini-B) (1 m)	ZC9USEXMB1	Extension cable that attaches to the USB (mini-B) interface on the front side of the operation panel.

<sup>\*1</sup> For supported models, refer to Pro-face's support site "Otasuke Pro!" (<http://www.proface.com/otasuke/>). You can connect to this site in GP-Pro EX: from the [Help (H)] menu, click [Connect].

### SD Card Items

Product Name	Product Number	Description
SD Memory Card (4 GB)	PFXZCBSD4GC41	SD Memory Card (4 GB, CLASS4)

## Option Items

Product Name	Product Number	Corresponding GP unit	Description
12.1-inch Screen Protection Sheet	CA7-DFS12-01	GP-4600 Series	Disposable, dirt-resistant sheet for the GP unit screen (5 sheets/set)
10.4-inch Screen Protection Sheet	PFXZCBDS101	GP-4500 Series	
7.5-inch Screen Protection Sheet	PFXZCBDS71	GP-4401T	
7.0-inch Wide Screen Protection Sheet	PFXZCBDS72	GP-4401WW	
5.7-inch Screen Protection Sheet	PFXZCBDS61	GP-4300 Series	
3.5-inch Screen Protection Sheet	CA6-DFS4-01	GP-4200 Series	
12.1-inch Environment Cover	PFXZCBOP121	GP-4600 Series GP-4501TW	Disposable, environment cover for the GP unit screen (1 sheet/set)
10.4-inch Environment Cover	PFXZCBOP101	GP-4500 Series* <sup>1</sup>	
7.0/7.5-inch Environment Cover	PFXZCBOP71	GP-4400 Series	
5.7-inch Environment Cover	PFXZCBOP61	GP-4300 Series	
3.5-inch Environment Cover	PFXZCBOP41	GP-4200 Series	

\*<sup>1</sup> Please use "12.1-inch Environment Cover" for GP-4501TW (10.4-inch model).

## Maintenance Options

Product Name	Product Number	Corresponding GP unit	Description
Installation Fastener	PFXZCBAF1	GP4000 Series* <sup>1</sup>	Used to install the GP unit into a solid panel (4 pieces/ set)
10.4-inch TW models & 12.1-inch Installation Gasket	PFXZCBWG121	GP-4600 Series GP-4501TW	Provides dust and moisture resistance when GP unit is installed into a solid panel (1 piece)
10.4-inch Installation Gasket	PFXZCBWG101	GP-4500 Series (except GP-4501TW)	
7.0-inch Wide & 7.5-inch Installation Gasket	PFXZCBWG71	GP-4400 Series	
5.7-inch Installation Gasket	PFXZCBWG61	GP-4300 Series	
3.5-inch Installation Gasket	PFXZCBWG41	GP-4200 Series	
USB Clamp TypeA (1 port)	PFXZCBCLUSA1	GP4000 Series* <sup>1</sup>	Clamp to prevent disconnection of USB cable (USB/A, 1 port, 5 clamps/set)
USB Clamp mini-B (1 port)	ZC9USCLMB1	GP4000 Series* <sup>1</sup>	Clamp to prevent disconnection of USB cable (USB/mini-B, 1 port, 5 clamps/set)
DC Power Supply Connector	PFXZCBCNDC1	GP-4400 Series GP-4300 Series GP-4200 Series	Connector to connect DC power supply cables (5 pcs/set)
DC Power Supply Connector (Right-angle)	PFXZCBCNDC2	GP-4600 Series GP-4500 Series	Right-angle connector to connect DC power supply cables (5 pcs/set)
Battery for Memory Backup	PFXZCBBT1	GP-4600 Series GP-4500 Series GP-4400 Series GP-4300 Series (except GP-4301TW)	Primary battery for memory and time data backup (1)
Panel Cutout Adapter	CA4-ATM10-01	GP-4500 Series	Panel cutout adapter for mounting GP-4500 Series in cutout for GP-2500/2600 series.

\*<sup>1</sup> Does not include GP-4100 Series, GP-4201TM, or GP-4301TM.

# Parts Identification and Functions



## Parts Identification and Functions

### GP-4200 Series Parts Identification

<b>Side</b>	<b>GP-4200 Series</b>
Front	
Rear	
Bottom	<p>GP-4201T/4203T</p> <p>GP-4201TW</p>


Part	Name	Description
A	Status LED	*1
B	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.

Part	Name	Description
C	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5Vdc+/-5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).
D	Serial Interface (COM1)	GP-4201T: RS-232C/422/485 Serial Interface. (You can switch the communication method via software.) Connector: D-Sub 9 pin (plug) x 1. GP-4201TW: RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1. GP-4203T: RS-485 (isolation) Serial Interface. Connector: D-Sub 9 pin (socket) x 1.
E	Ethernet Interface* <sup>2</sup>	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ-45) x 1. Ethernet Interface is not attached to GP-4201TW.
F	Power Plug Connector	-
G	Serial Interface (COM2)	GP-4201TW: RS-422/485 Serial Interface. Connector: D-Sub 9 pin (plug) x 1.

\*1 Status LED operations are as shown below:


Color	Indicator	Operation Mode (Drawing)	Logic execution mode (when logic is enabled)
Green	ON	Offline	-
		In operation	RUN
	Flashing	In operation	STOP
Orange	Flashing	Software starting up.	
Red	ON	Power is turned ON.	
	Flashing	In operation	Major Error
LED fade (Green)	ON	The GP unit's "Backlight Control" is set to Standby Mode and the screen has gone blank.	
-	OFF	Power is turned OFF.	

\*2 Ethernet LED operations are as shown below.

	Color	Indicator	Description
	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.



**GP-4300 Series Parts Identification**

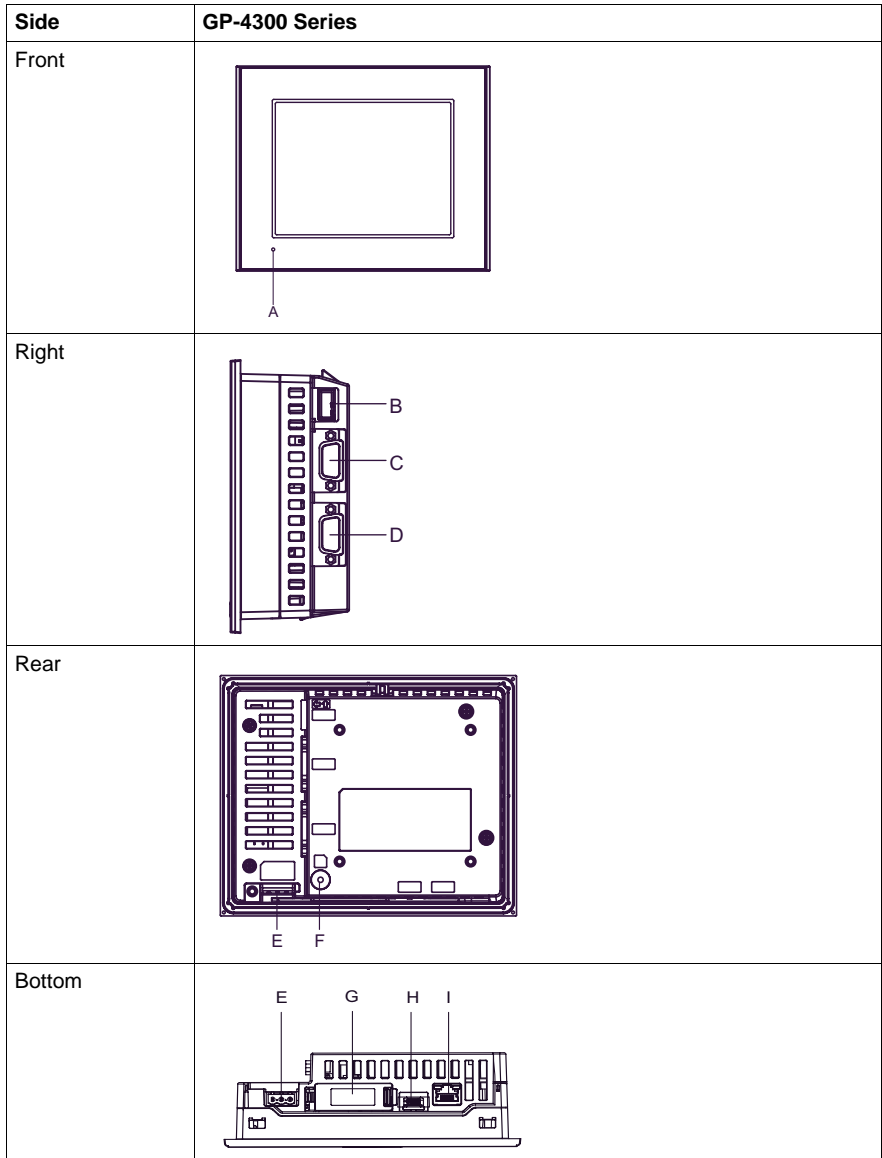

Part	Name	Description
A	Status LED	*1
B	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5Vdc+/-5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).
C	Serial Interface (COM1)	RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1.
D	Serial Interface (COM2)	GP-4301T/GP-4301TW: RS-422/485 Serial Interface. Connector: D-Sub 9 pin (plug) x 1. GP-4303T: RS-485 (isolation) Serial Interface. Connector: D-Sub 9 pin (socket) x 1.

Part	Name	Description
E	Power Plug Connector	-
F	SD Card Access LED *2	This lamp lights up when SD Card is inserted. <b>NOTE:</b> Do not remove or insert the SD Card when the LED lamp is on. Doing so may damage data on the SD Card.
G	SD Card Interface Cover/Replacement Battery Insertion Cover	For information on how to open the cover, and insert or remove the SD Card, refer to SD Card Insertion / Removal (see page 150). For information on how to open the cover and replace the battery, refer to Replacing the Primary Battery (see page 168). <b>NOTE:</b> This cover is not on GP-4301TW
H	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.
I	Ethernet Interface *3	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ-45) x 1.


\*1 Status LED operations are as shown below:

Color	Indicator	Operation Mode (Drawing)	Logic execution mode (when logic is enabled)
Green	ON	Offline	-
	Flashing	In operation	RUN
		In operation	STOP
Orange	Flashing	Software starting up.	
Red	ON	Power is turned ON.	
	Flashing	In operation	Major Error
LED fade (Green)	ON	The GP unit's "Backlight Control" is set to Standby Mode and the screen has gone blank.	
-	OFF	Power is turned OFF.	






\*2 SD Card Access LED operations are as shown below.

Color	Indicator	Description
Green (Active)	ON	The SD Card is inserted.
	OFF	The SD Card is not inserted or is not being accessed.

\*3 Ethernet LED operations are as shown below.

	Color	Indicator	Description
	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.

**GP-4400 Series Parts Identification**

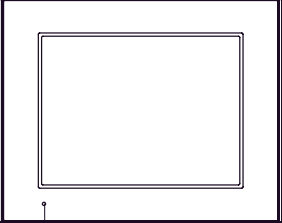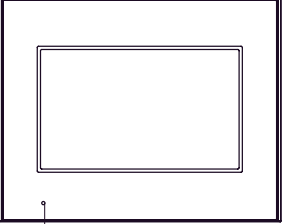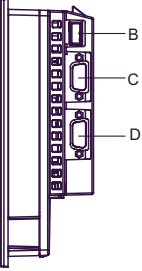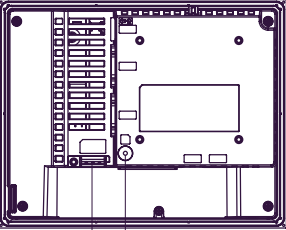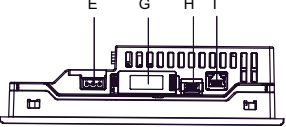Side	GP-4400 Series
Front	<p data-bbox="552 282 673 311">GP-4401T</p>  <p data-bbox="587 556 605 585">A</p> <p data-bbox="552 595 710 624">GP-4401WW</p>  <p data-bbox="587 869 605 898">A</p>
Right	 <p data-bbox="683 977 701 1006">B</p> <p data-bbox="683 1025 701 1054">C</p> <p data-bbox="683 1074 701 1103">D</p>
Rear	 <p data-bbox="648 1522 666 1551">E</p> <p data-bbox="680 1522 698 1551">F</p>
Bottom	 <p data-bbox="648 1615 666 1644">E</p> <p data-bbox="694 1615 712 1644">G</p> <p data-bbox="753 1615 771 1644">H</p> <p data-bbox="788 1615 806 1644">I</p>

Part	Name	Description
A	Status LED	*1
B	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5Vdc+/-5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).
C	Serial Interface (COM1)	RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1.
D	Serial Interface (COM2)	RS-422/485 Serial Interface. Connector: D-Sub 9 pin (plug) x 1.
E	Power Plug Connector	-
F	SD Card Access LED *2	This lamp lights up when SD Card is inserted. <b>NOTE:</b> Do not remove or insert the SD Card when the LED lamp is on. Doing so may damage data on the SD Card.
G	SD Card Interface Cover/Replacement Battery Insertion Cover	For information on how to open the cover, and insert or remove the SD Card, refer to SD Card Insertion / Removal ( <i>see page 150</i> ). For information on how to open the cover and replace the battery, refer to Replacing the Primary Battery ( <i>see page 168</i> ).
H	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.
I	Ethernet Interface *3	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ-45) x 1.


\*1 Status LED operations are as shown below:

Color	Indicator	Operation Mode (Drawing)	Logic execution mode (when logic is enabled)
Green	ON	Offline	-
		In operation	RUN
	Flashing	In operation	STOP
Orange	Flashing	Software starting up.	
Red	ON	Power is turned ON.	
	Flashing	In operation	Major Error
LED fade (Green)	ON	The GP unit's "Backlight Control" is set to Standby Mode and the screen has gone blank.	
-	OFF	Power is turned OFF.	


\*2 SD Card Access LED operations are as shown below.

Color	Indicator	Description
Green (Active)	ON	The SD Card is inserted.
	OFF	The SD Card is not inserted or is not being accessed.

\*3 Ethernet LED operations are as shown below.

	<b>Color</b>	<b>Indicator</b>	<b>Description</b>
	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.

**GP-4500 Series Parts Identification**

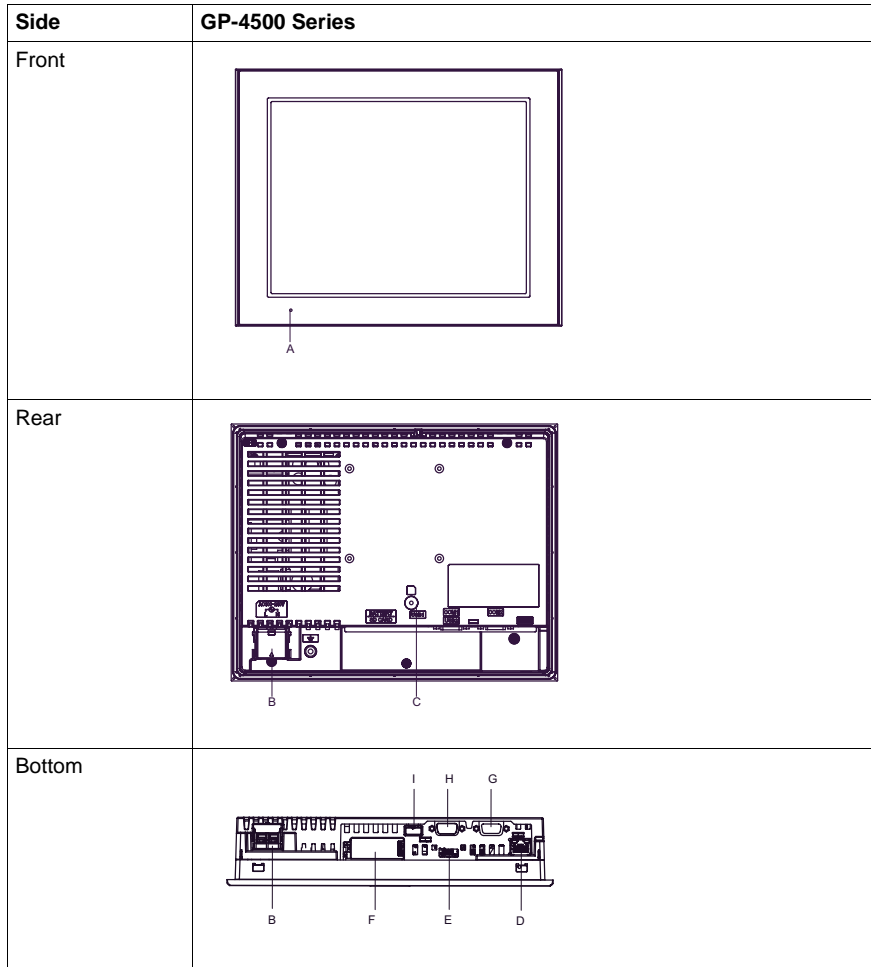

Part	Name	Description
A	Status LED	*1
B	Power Input Terminal Block (AC model), Power Plug Connector (DC model)	-
C	SD Card Access LED *2	This lamp lights up when SD Card is inserted. <b>NOTE:</b> Do not remove or insert the SD Card when the LED lamp is on. Doing so may damage data on the SD Card.
D	Ethernet Interface *3	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ-45) x 1.
E	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.

Part	Name	Description
F	SD Card Interface Cover/Replacement Battery Insertion Cover	For information on how to open the cover, and insert or remove the SD Card, refer to SD Card Insertion/Removal ( <i>see page 150</i> ). For information on how to open the cover and replace the battery, refer to Replacing the Primary Battery ( <i>see page 168</i> ).
G	Serial Interface (COM2)	GP-4501T/GP-4501TW: RS-422/485 Serial Interface. Connector: D-Sub 9 pin (plug) x 1. GP-4503T: RS-485 (isolation) Serial Interface. Connector: D-Sub 9 pin (socket) x 1.
H	Serial Interface (COM1)	RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1.
I	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5Vdc+/-5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).


\*1 Status LED operations are as shown below:

Color	Indicator	Operation Mode (Drawing)	Logic execution mode (when logic is enabled)
Green	ON	Offline	–
		In operation	RUN
	Flashing	In operation	STOP
Orange	Flashing	Software starting up.	
Red	ON	Power is turned ON.	
	Flashing	In operation	Major Error
LED fade (Green)	ON	The GP unit's "Backlight Control" is set to Standby Mode and the screen has gone blank.	
-	OFF	Power is turned OFF.	


\*2 SD Card Access LED operations are as shown below.

Color	Indicator	Description
Green (Active)	ON	The SD Card is inserted.
	OFF	The SD Card is not inserted or is not being accessed.

\*3 Ethernet LED operations are as shown below.

	Color	Indicator	Description
	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.

**GP-4600 Series Parts Identification**

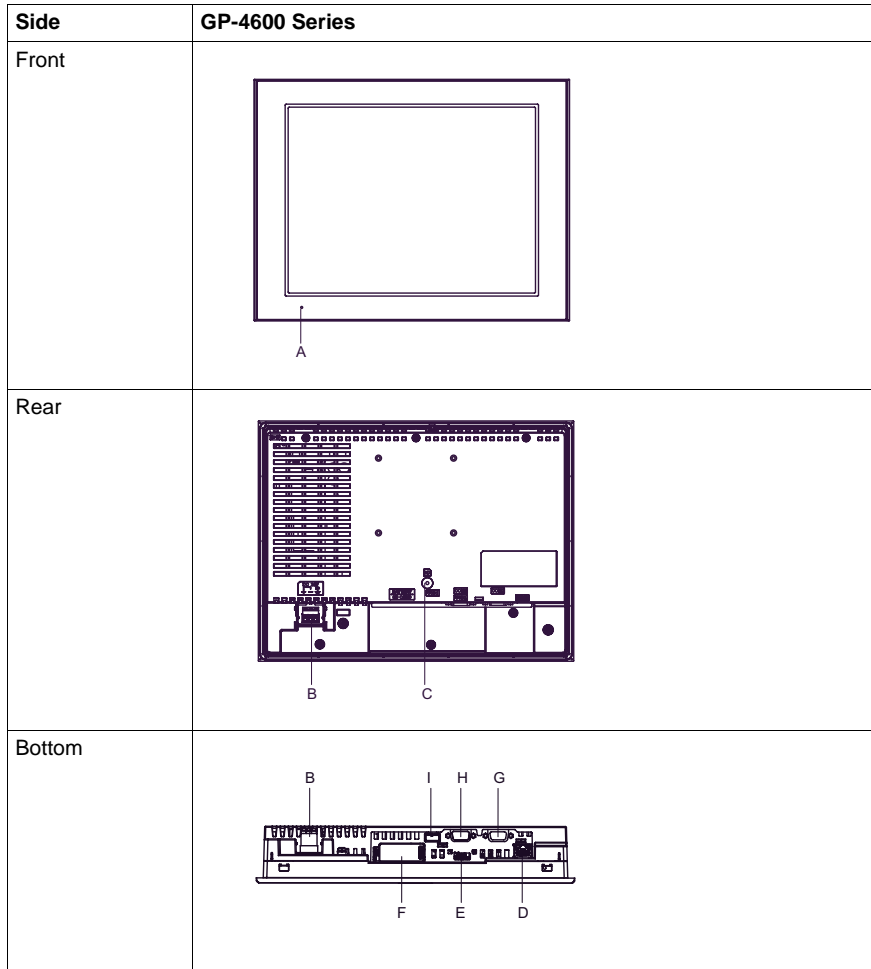

Part	Name	Description
A	Status LED	*1
B	Power Input Terminal Block (AC model), Power Plug Connector (DC model)	-
C	SD Card Access LED *2	This lamp lights up when SD Card is inserted. <b>NOTE:</b> Do not remove or insert the SD Card when the LED lamp is on. Doing so may damage data on the SD Card.
D	Ethernet Interface *3	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ-45) x 1.
E	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.



Part	Name	Description
F	SD Card Interface Cover/Replacement Battery Insertion Cover	For information on how to open the cover, and insert or remove the SD Card, refer to SD Card Insertion/Removal (see page 150). For information on how to open the cover and replace the battery, refer to Replacing the Primary Battery (see page 168).
G	Serial Interface (COM2)	GP-4601T: RS-422/485 Serial Interface. Connector: D-Sub 9 pin (plug) x 1. GP-4603T: RS-485 (isolation) Serial Interface. Connector: D-Sub 9 pin (socket) x 1.
H	Serial Interface (COM1)	RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1.
I	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5Vdc+/-5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).


\*1 Status LED operations are as shown below:

Color	Indicator	Operation Mode (Drawing)	Logic execution mode (when logic is enabled)
Green	ON	Offline	–
		In operation	RUN
	Flashing	In operation	STOP
Orange	Flashing	Software starting up.	
Red	ON	Power is turned ON.	
	Flashing	In operation	Major Error
LED fade (Green)	ON	The GP unit's "Backlight Control" is set to Standby Mode and the screen has gone blank.	
-	OFF	Power is turned OFF.	

\*2 SD Card Access LED operations are as shown below.

Color	Indicator	Description
Green (Active)	ON	The SD Card is inserted.
	OFF	The SD Card is not inserted or is not being accessed.

\*3 Ethernet LED operations are as shown below.

	Color	Indicator	Description
 Link Active	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.



---

# Specifications



---

## Overview

This chapter presents the GP unit specifications.

## What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
4.1	GP-4200 Series	44
4.2	GP-4300 Series	64
4.3	GP-4400 Series	82
4.4	GP-4500 Series	97
4.5	GP-4600 Series	117

## 4.1 GP-4200 Series

---

### What Is in This Section?

This section contains the following topics:

<b>Topic</b>	<b>Page</b>
Electrical Specifications	45
Environmental Specifications	46
Structural Specifications	47
Display Specifications	49
Memory, Clock, and Touch Panel	50
Interface Specifications	52
Specifications of Serial Interface COM1	53
Specifications of Serial Interface COM2	57
Dimensions	58

## Electrical Specifications

Power Supply	Rated Input Voltage	24 Vdc
	Input Voltage Limits	19.2...28.8 Vdc
	Voltage Drop	2 ms or less
	Power Consumption	9.6 W or less
	When power is not supplied to external devices	5.2 W or less
	Backlight OFF (Standby Mode)	4.2 W or less
	Backlight Dimmed (Brightness: 20%)	4.3 W or less
In-Rush Current	30 A or less	
Voltage Endurance	1,000 Vac 20 mA for 1 minute (between charging and FG terminals)	
Insulation Resistance	500 Vdc, 10 M $\Omega$ or more (between charging and FG terminals)	

## Environmental Specifications

Physical Environment	Surrounding Air Temperature	0...50 °C (32...122 °F)
	Storage Temperature	-20...60 °C (-4...140 °F)
	Surrounding Air and Storage Humidity	10%...90% RH (Non condensing, wet bulb temperature 39 °C [102.2 °F] or less)
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)
	Pollution Degree	For use in Pollution Degree 2 environment
	Corrosive Gases	Free of corrosive gases
	Atmospheric Pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 compliant 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 min.)
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times
Electrical Environment	Noise immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 μs Rise Time: 1 ns
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)

### Air quality requirements

Do not operate or store the panel where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

⚠ CAUTION
INOPERATIVE EQUIPMENT
Do not allow water, liquids, metal, and wiring fragments to enter the panel case.
Failure to follow these instructions can result in injury or equipment damage.

## Structural Specifications

Grounding	Functional grounding: Grounding resistance of $100\Omega$ , $2\text{mm}^2$ (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)
Cooling Method	Natural air circulation
Structure <sup>*1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)
External Dimensions	W132 x H106 x D42 mm (W5.2 x H4.17 x D1.65 in.)
Panel Cut Dimensions	W118.5 x H92.5 mm (W4.67 x H3.64 in.) <sup>*2</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in.) <sup>*3</sup>
Weight	0.4 kg (0.9 lb) or less (main unit only)

<sup>\*1</sup> The front face of the GP unit, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the GP unit's level of resistance is equivalent to these standards, oils that should have no effect on the GP unit can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the panel for long periods of time. If the GP unit's front face protection sheet peels off, these conditions can lead to the ingress of oil into the GP unit and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the GP unit, be sure to confirm the type of conditions that will be present in the GP unit's operating environment. If the installation gasket is used for a long period of time, or if the GP unit and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

<sup>\*2</sup> For dimensional tolerance, everything  $+1/-0$  mm ( $+0.04/-0$  in.) and R in angle are below R3 (R0.12 in.)

<sup>\*3</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the GP unit and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

The front face of the panel, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification.

### CAUTION

#### EQUIPMENT DAMAGE

Ensure that the panel is not in permanent and direct contact with oils.

**Failure to follow these instructions can result in injury or equipment damage.**

***NOTICE***

**STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS**

- Store the panel in areas where temperatures are within the panel's specifications.
- Do not restrict or block the panel's rear-face ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

***NOTICE***

**GASKET AGING**

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**



## Display Specifications

		GP-4201T / GP-4203T	GP-4201TW
Display Type		TFT Color LCD	
Display Size		3.5"	
Resolution		320 x 240 pixels (QVGA)	
Effective Display Area		W70.56 x H52.92 mm (W2.78 x H2.08 in.)	
Display Colors		65,536 colors (No blink) / 16,384 colors (Blink)	
Backlight		White LED (Not user replaceable. When replacement is required, contact your local distributor.)	
Backlight Service Life		50,000 hours or more (continuous operation at 25 °C [77 °F] before backlight brightness decreased to 50%)	
Brightness Control		16 levels (Adjusted with touch panel or software)	8 levels (Adjusted with touch panel or software)
Language Fonts		Japanese: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) ANK: 158 (Korean, Traditional Chinese and Simplified Chinese fonts are downloadable.)	
Character Sizes		Standard font: 8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts Stroke font: 6...127 pixel fonts Image font: 8...72 pixel fonts	
Font Sizes		Standard font: You can expand width up to 8 times, and expand height up to 8 times. *1	
Text	8 x 8 pixels	40 characters per row x 30 rows	
	8 x 16 pixels	40 characters per row x 15 rows	
	16 x 16 pixels	20 characters per row x 15 rows	
	32 x 32 pixels	10 characters per row x 7 rows	

\*1 You can set up other font sizes using the software.

## Memory, Clock, and Touch Panel

### Memory

	GP-4201T / GP-4203T	GP-4201TW
Application Memory *1	FLASH EPROM 16 MB (including the logic program area)	FLASH EPROM 8 MB (including the logic program area)
Logic Program Area	FLASH EPROM 132 KB (Equivalent to 15,000 steps)*2	
Font Area	FLASH EPROM 8 MB (when limit exceeded, uses application memory)	
Data Backup	SRAM 320 KB (Rechargeable lithium battery for data backup)	SRAM 128 KB (Rechargeable lithium battery for data backup)
Variable Area	SRAM 64 KB (Rechargeable lithium battery for retentive variables)	None

\*1 Capacity available for user application.

\*2 Up to 60,000 steps can be converted in software. However, this reduces application memory capacity for screen data by 1 MB.

#### NOTE:

- When the message "RAAA051 Low battery" is displayed, supply power to the GP unit and fully charge the battery. In 24 hours the battery charges to a level that allows backup operation. Completing a full charge requires about 120 hours (5 days).
- The lithium battery's lifetime is: 10 years when the battery's ambient temperature is 40 °C (104 °F) or less, 4.1 years when the battery's ambient temperature is 50 °C (122 °F) or less, and 1.5 years when the battery's ambient temperature is 60 °C (140 °F) or less.

When used for backup:

Approximately 100 days, with a fully charged battery.

Approximately 6 days, with a half-charged battery.

### Clock

± 65 seconds per month (deviation at room temperature and power is OFF).

Variations in operating conditions and battery life can cause clock deviations from -380 to +90 seconds per month.

For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

#### NOTE:

- When the message "RAAA051 Low battery" is displayed, supply power to the GP unit and fully charge the battery. In 24 hours the battery charges to a level that allows backup operation. Completing a full charge requires about 120 hours (5 days).
- The lithium battery's lifetime is: 10 years when the battery's ambient temperature is 40 °C (104 °F) or less, 4.1 years when the battery's ambient temperature is 50 °C (122 °F) or less, and 1.5 years when the battery's ambient temperature is 60 °C (140 °F) or less.

When used for backup:  
Approximately 100 days, with a fully charged battery.  
Approximately 6 days, with a half-charged battery.

**Touch Panel**

Touch Panel Type	Resistive Film (analog)
Touch Panel Resolution	1,024 x 1,024
Touch Panel Service Life	1 million times or more

## Interface Specifications

### Serial Interface COM1

	GP-4201T	GP-4201TW	GP-4203T
Asynchronous Transmission	RS-232C / RS-422 / RS-485	RS-232C	RS-485 (isolation)
Data Length	7 or 8 bits		
Stop Bit	1 or 2 bits		
Parity	None, odd or even		
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)	2,400...115,200 bps	2,400...115,200 bps, 187,500 bps (MPI)
Connector	D-Sub 9 pin (plug)		D-Sub 9 pin (socket)

### Serial Interface COM2

	GP-4201TW
Asynchronous Transmission	RS-422 / RS-485
Data Length	7 or 8 bits
Stop Bit	1 or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)
Connector	D-Sub 9 pin (plug)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc $\pm$ 5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

	GP-4201T / GP-4203T
Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

**NOTE:** GP-4201TW does not have an Ethernet interface.

## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

### DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM1

GP-4201T: D-Sub 9 pin plug connector via an RS-232C or RS-422/RS-485 cable.

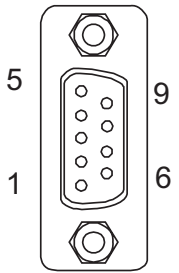Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input/-	Called Status Display +5V±5% Output 0.25A <sup>*1</sup>
	Shell	FG	-	Frame Ground (Common with SG)


**NOTE:** <sup>\*1</sup> You can switch pin #9 between RI and VCC via software.

### NOTICE

#### EQUIPMENT DAMAGE

Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

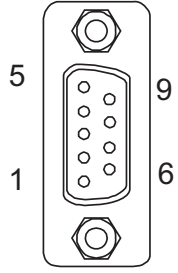Pin Connection	Pin No.	RS-422/RS-485		
		Signal Name	Direction	Meaning
 (GP unit side)	1	RDA	Input	Receive Data A (+)
	2	RDB	Input	Receive Data B (-)
	3	SDA	Output	Send Data A (+)
	4	ERA	Output	Data Terminal Ready A (+)
	5	SG	-	Signal Ground
	6	CSB	Input	Send Possible B (-)
	7	SDB	Output	Send Data B (-)
	8	CSA	Input	Send Possible A (+)
	9	ERB	Output	Data Terminal Ready B (-)
	Shell	FG	-	Frame Ground (Common with SG)

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.


## ⚠ CAUTION

**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

GP-4201TW: D-Sub 9 pin plug connector via an RS-232C cable.

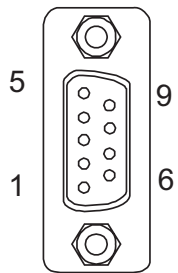Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
 (GP unit side)	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input/-	Called Status Display +5V±5% Output 0.25A <sup>*1</sup>
	Shell	FG	-	Frame Ground (Common with SG)

**NOTE:** <sup>\*1</sup> You can switch pin #9 between RI and VCC via software.

**NOTICE****EQUIPMENT DAMAGE**

Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

Interfit bracket is #4-40 (UNC).

Recommendations:


- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

**⚠ CAUTION****LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

GP-4203T: D-Sub 9 pin socket connector via a RS-485, PROFIBUS, or MPI cable.

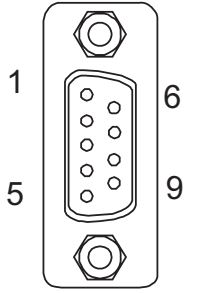Pin Connection	Pin No.	RS-485 (isolation)		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	NC	–	no connection
	2	NC	–	no connection
	3	Line A	Input/Output	Data A (+)
	4	RS(RTS)	Output	Request to Send
	5	SG	–	Signal Ground
	6	VCC	–	+5V±5% External Output* <sup>1</sup>
	7	NC	–	no connection
	8	Line B	Input/Output	Data B (-)
	9	NC	–	no connection
	Shell	FG	–	Frame Ground* <sup>2</sup> (Not connected with SG)

**NOTE:** \*<sup>1</sup> You can supply power to the Siemens PROFIBUS connector only. You cannot supply power to the device/PLC.

\*<sup>2</sup> The SG and FG terminals are isolated.

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2A-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

** CAUTION**

**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.


**Failure to follow these instructions can result in injury or equipment damage.**



## Specifications of Serial Interface COM2

### Introduction

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

 **DANGER**

**ELECTRIC SHOCK**


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2


GP-4201TW: D-Sub 9 pin plug connector via an RS-422/485 cable.

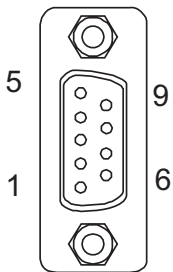Pin Connection	Pin No.	RS-422/RS-485		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	RDA	Input	Receive Data A (+)
	2	RDB	Input	Receive Data B (-)
	3	SDA	Output	Send Data A (+)
	4	ERA	Output	Data Terminal Ready A (+)
	5	SG	-	Signal Ground
	6	CSB	Input	Send Possible B (-)
	7	SDB	Output	Send Data B (-)
	8	CSA	Input	Send Possible A (+)
	9	ERB	Output	Data Terminal Ready B (-)
	Shell	FG	-	Frame Ground (Common with SG)

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

 **CAUTION**


**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**


## Dimensions

### External Dimensions

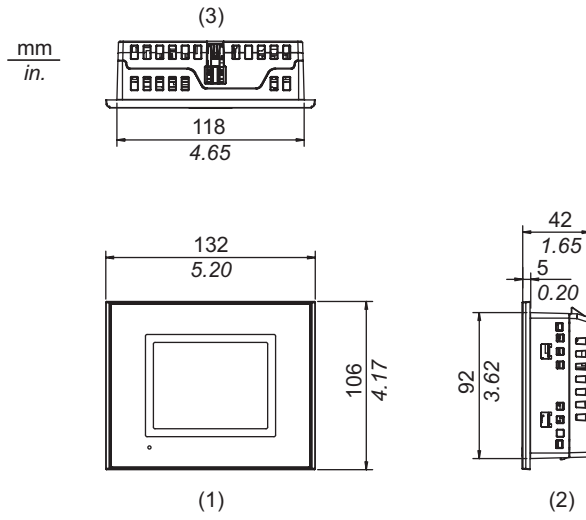


- 1 Front
- 2 Right Side
- 3 Top

Installation with Installation Fasteners

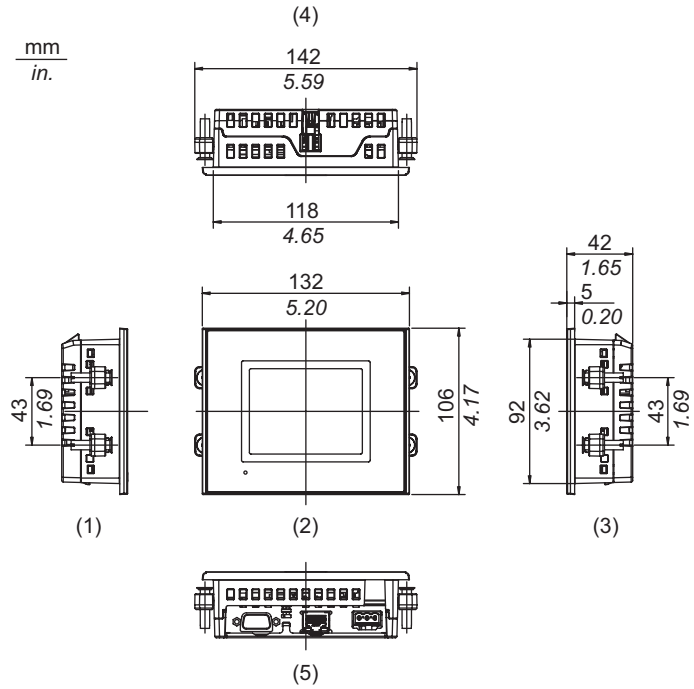

- 1 Left Side
- 2 Front
- 3 Right Side
- 4 Top
- 5 Bottom


**Dimensions with Cables: GP-4201T**

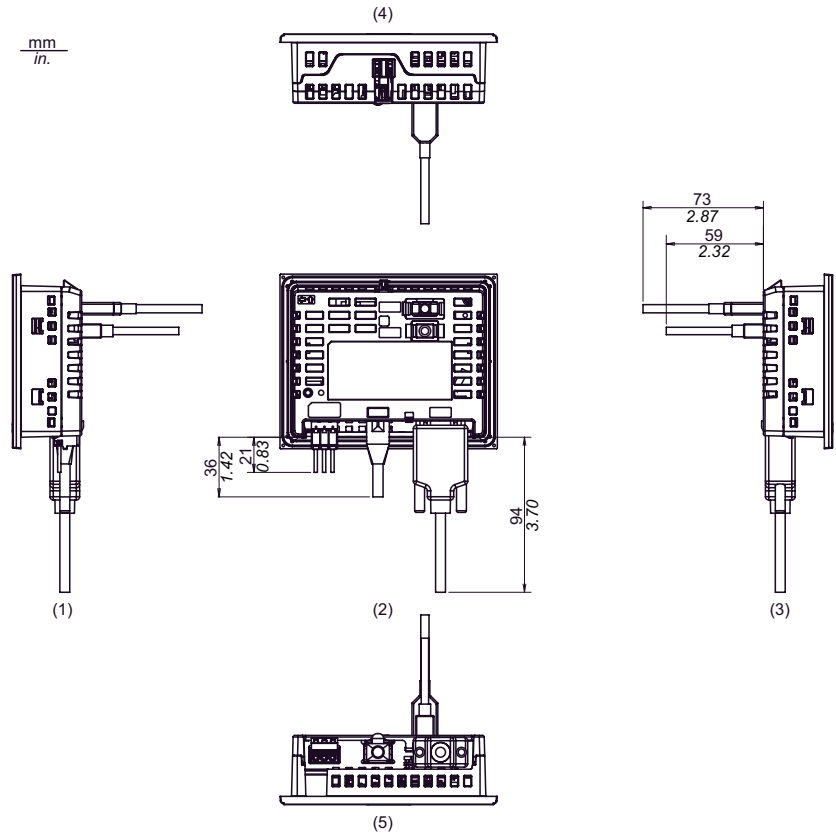

- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.


Dimensions with Cables: GP-4201TW

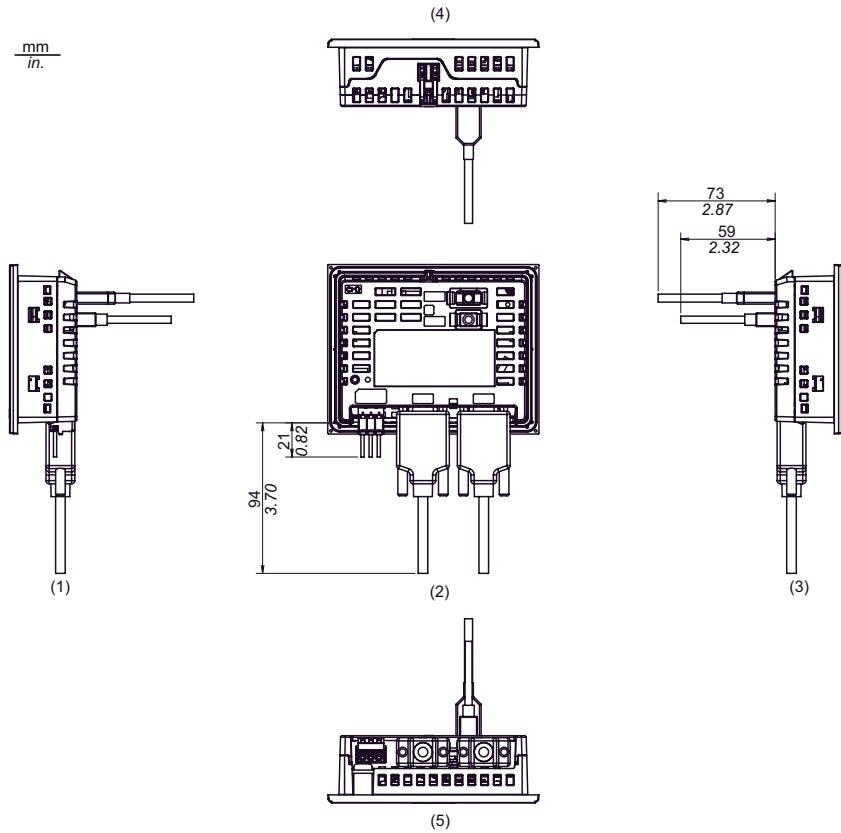

- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Dimensions with Cables: GP-4203T**

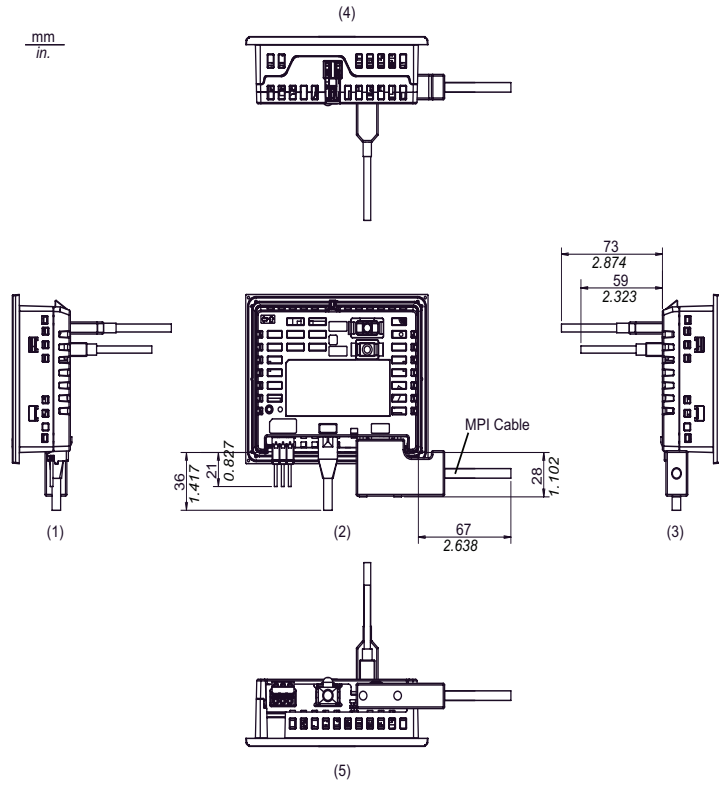


- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Panel Cut Dimensions**


Create a panel cut and insert the GP unit into the opening from the front.

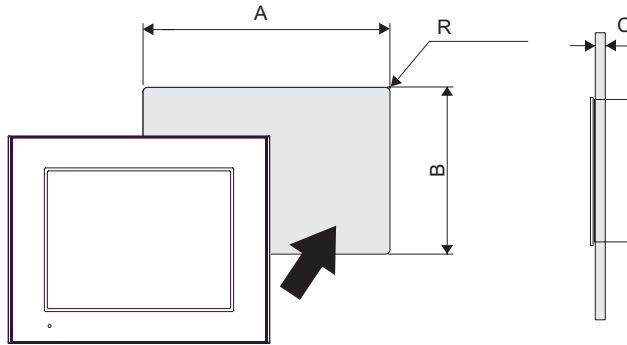

A	B	C	R
118.5 mm (+1, -0 mm) (4.67 in [+0.04, -0 in.])	92.5 mm (+1, -0 mm) (3.64 in. [+0.04, -0 in.])	1.6...5 mm (0.06...0.2 in)	3 mm (0.12 in.) maximum

**NOTE:** Before designing the panel cut, refer to Installation (see page 136).

**Installation Fastener Dimensions**

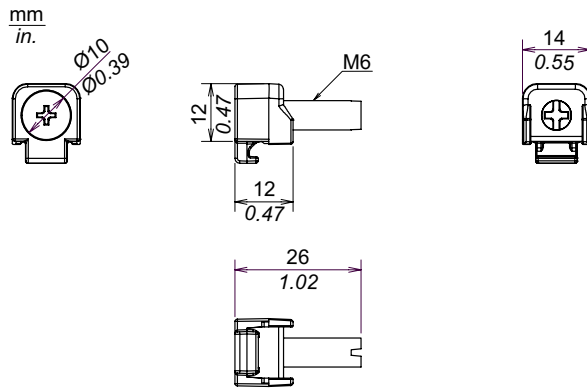

## 4.2 GP-4300 Series

---

### What Is in This Section?

This section contains the following topics:

<b>Topic</b>	<b>Page</b>
Electrical Specifications	65
Environmental Specifications	66
Structural Specifications	67
Display Specifications	69
Memory, Clock, and Touch Panel	70
Interface Specifications	72
Specifications of Serial Interface COM1	73
Specifications of Serial Interface COM2	75
Dimensions	77



## Electrical Specifications

Power Supply	Rated Input Voltage	24 Vdc
	Input Voltage Limits	19.2...28.8 Vdc
	Voltage Drop	5 ms or less
	Power Consumption	10.5 W or less
	When power is not supplied to external devices	6.5 W or less
	Backlight OFF (Standby Mode)	4.5 W or less
	Backlight Dimmed (Brightness: 20%)	5 W or less
In-Rush Current	30 A or less	
Voltage Endurance	1,000 Vac, 20 mA for 1 minute (between charging and FG terminals)	
Insulation Resistance	500 Vdc, 10 M $\Omega$ or more (between charging and FG terminals)	

## Environmental Specifications

		GP-4301T / GP-4303T	GP-4301TW
Physical Environment	Surrounding Air Temperature	0...55 °C (32 °F...131 °F)	0...50 °C (32...122 °F)
	Storage Temperature	-20...60 °C (-4...140 °F)	
	Surrounding Air and Storage Humidity	10...90% RH (Non condensing, wet bulb temperature 39 °C [102.2 °F] or less)	
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)	
	Pollution Degree	For use in Pollution Degree 2 environment	
	Corrosive Gases	Free of corrosive gases	
	Atmospheric Pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)	
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 compliant 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 min)	
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times	
Electrical Environment	Noise Immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 μs Rise Time: 1 ns	
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)	

### Air quality requirements

Do not operate or store the panel where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

⚠ CAUTION
INOPERATIVE EQUIPMENT
Do not allow water, liquids, metal, and wiring fragments to enter the panel case.
Failure to follow these instructions can result in injury or equipment damage.

## Structural Specifications

Grounding	Functional grounding: Grounding resistance of 100 $\Omega$ , 2 mm <sup>2</sup> (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)
Cooling Method	Natural air circulation
Structure <sup>*1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)
External Dimensions	W169.5 x H137 x D59.5 mm (W6.67 x H5.39 x D2.34 in.)
Panel Cut Dimensions	W156 x H123.5 mm (W6.14 x H4.86 in.) <sup>*2</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in.) <sup>*3</sup>
Weight	0.8 kg (1.8 lb) or less (main unit only)

**NOTE:** <sup>\*1</sup> The front face of the GP unit, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the GP unit's level of resistance is equivalent to these standards, oils that should have no effect on the GP unit can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the panel for long periods of time. If the GP unit's front face protection sheet peels off, these conditions can lead to the ingress of oil into the GP unit and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the GP unit, be sure to confirm the type of conditions that will be present in the GP unit's operating environment. If the installation gasket is used for a long period of time, or if the GP unit and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

<sup>\*2</sup> For dimensional tolerance, everything +1/-0 mm (+0.04/-0 in.) and R in angle are below R3 (R0.12 in.)

<sup>\*3</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the GP unit and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

### CAUTION

#### EQUIPMENT DAMAGE

Ensure that the panel is not in permanent and direct contact with oils.

**Failure to follow these instructions can result in injury or equipment damage.**

## ***NOTICE***

### **STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS**

- Store the panel in areas where temperatures are within the panel's specifications.
- Do not restrict or block the panel's rear-face ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

## ***NOTICE***

### **GASKET AGING**

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

## Display Specifications

	<b>GP-4301T / GP-4303T</b>	<b>GP-4301TW</b>
Display Type	TFT Color LCD	
Display Size	5.7"	
Resolution	320 x 240 pixels (QVGA)	
Effective Display Area	W115.2 x H86.4 mm (W4.54 x H3.40 in.)	
Display Colors	65,536 colors (No blink) / 16,384 colors (Blink)	
Backlight	White LED (Not user replaceable. When replacement is required, contact your local distributor.)	
Backlight Service Life	50,000 hours or more (continuous operation at 25 °C [77 °F] before backlight decreases to 50%.)	
Brightness Control	16 levels (Adjusted with touch panel or software)	8 levels (Adjusted with touch panel or software)
Language Fonts	Japanese: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) ANK: 158 (Korean, Traditional Chinese and Simplified Chinese fonts are downloadable.)	
Character Sizes	Standard font: 8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts Stroke font: 6...127 pixel fonts Image font: 8...72 pixel fonts	
Font Sizes	Standard font: You can expand the width up to 8 times, and expand the height up to 8 times.* <sup>1</sup>	
Text	8 x 8 pixels	40 characters per row x 30 rows
	8 x 16 pixels	40 characters per row x 15 rows
	16 x 16 pixels	20 characters per row x 15 rows
	32 x 32 pixels	10 characters per row x 7 rows

\*<sup>1</sup> You can set up other font sizes using the software.

## Memory, Clock, and Touch Panel

### Memory

	GP-4301T / GP-4303T	GP-4301TW
Application Memory *1	FLASH EPROM 16 MB (including the logic program area)	FLASH EPROM 8 MB (including the logic program area)
Logic Program Area	FLASH EPROM 132 KB (Equivalent to 15,000 steps*2)	
Font Area	FLASH EPROM 8 MB (when this limit exceeded, uses application memory)	
Data Backup	SRAM 320 KB (Replaceable lithium battery for data backup)	SRAM 128 KB (Rechargeable lithium battery for data backup)
Variable Area	SRAM 64 KB (Replaceable Lithium battery for retentive variables)	None

\*1 Capacity available for user application (internal memory).

\*2 Up to 60,000 steps can be converted in software. However, this reduces application memory capacity for screen data by 1 MB.

#### NOTE:

- When the message "RAAA051 Low battery" is displayed on the GP-4301TW, supply power to the GP unit and fully charge the battery. In 24 hours the battery charges to a level that allows backup operation. Completing a full charge requires about 120 hours (5 days).
- The lithium battery's lifetime is: 10 years when the battery's ambient temperature is 40 °C (104 °F) or less, 4.1 years when the battery's ambient temperature is 50 °C (122 °F) or less, and 1.5 years when the battery's ambient temperature is 60 °C (140 °F) or less.

When used for backup:

Approximately 100 days, with a fully charged battery.

Approximately 6 days, with a half-charged battery.

## Clock

± 65 seconds per month (deviation at room temperature and power is OFF). Variations in operating conditions and battery life can cause clock deviations from -380 to +90 seconds per month.

For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

### NOTE:

- When the message "RAAA051 Low battery" is displayed on the GP-4301TW, supply power to the GP unit and fully charge the battery. In 24 hours the battery charges to a level that allows backup operation. Completing a full charge requires about 120 hours (5 days).
- The lithium battery's lifetime is: 10 years when the battery's ambient temperature is 40 °C (104 °F) or less, 4.1 years when the battery's ambient temperature is 50 °C (122 °F) or less, and 1.5 years when the battery's ambient temperature is 60 °C (140 °F) or less.  
When used for backup:  
Approximately 100 days, with a fully charged battery.  
Approximately 6 days, with a half-charged battery.

## Touch Panel

Touch Panel Type	Resistive Film (analog)
Touch Panel Resolution	1,024 x 1,024
Touch Panel Service Life	1 million times or more

## Interface Specifications

### Serial Interface COM1

Asynchronous Transmission	RS-232C
Data Length	7 or 8 bits
Stop Bit	1 or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps
Connector	D-Sub 9 pin (plug)

### Serial Interface COM2

	GP-4301T / GP-4301TW	GP-4303T
Asynchronous Transmission	RS-422 / RS-485	RS-485 (isolation)
Data Length	7 or 8 bits	
Stop Bit	1 or 2 bits	
Parity	None, odd or even	
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)	
Connector	D-Sub 9 pin (plug)	D-Sub 9 pin (socket)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc $\pm$ 5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

### SD Card Interface

GP-4301T/GP-4303T: SD Card slot x 1 (maximum 32 GB SD/SDHC Card)

**NOTE:** GP-4301TW does not have an SD Card interface.



## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

### DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM1

**GP-4301T / GP-4301TW / GP-4303T:** D-Sub 9 pin plug connector via an RS-232C cable.

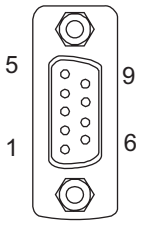Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
 (GP unit side)	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input/-	Called Status Display +5V±5% Output 0.25A <sup>*1</sup>
	Shell	FG	-	Frame Ground (Common with SG)

**NOTE:** <sup>\*1</sup> You can switch pin #9 between RI and VCC via software.

### NOTICE

#### EQUIPMENT DAMAGE

Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

** CAUTION**

**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

## Specifications of Serial Interface COM2

### Introduction

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

### DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2

GP-4301T / GP-4301TW: D-Sub 9 pin plug connector via an RS-422/485 cable.

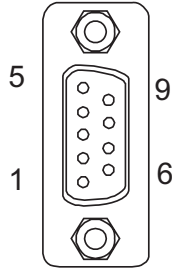Pin Connection	Pin No.	RS-422/RS-485		
		Signal Name	Direction	Meaning
 (GP unit side)	1	RDA	Input	Receive Data A (+)
	2	RDB	Input	Receive Data B (-)
	3	SDA	Output	Send Data A (+)
	4	ERA	Output	Data Terminal Ready A (+)
	5	SG	-	Signal Ground
	6	CSB	Input	Send Possible B (-)
	7	SDB	Output	Send Data B (-)
	8	CSA	Input	Send Possible A (+)
	9	ERB	Output	Data Terminal Ready B (-)
	Shell	FG	-	Frame Ground (Common with SG)

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.


### CAUTION

#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

GP-4303T: D-Sub 9 pin socket connector via an RS-485, PROFIBUS, or MPI cable.

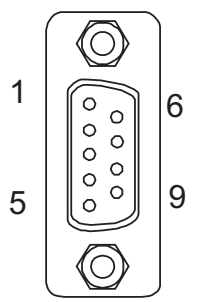Pin Connection	Pin No.	RS-485 (isolation)		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	NC	-	no connection
	2	NC	-	no connection
	3	Line A	Input/Output	Data A (+)
	4	RS(RTS)	Output	Request to Send
	5	SG	-	Signal Ground
	6	VCC	-	+5V±5% External Output <sup>*1</sup>
	7	NC	-	no connection
	8	Line B	Input/Output	Data B (-)
	9	NC	-	no connection
	Shell	FG	-	Frame Ground <sup>*2</sup> (Not connected with SG)

**NOTE:** <sup>\*1</sup> You can supply power to the Siemens PROFIBUS connector only. You cannot supply power to the device/PLC.

<sup>\*2</sup> The SG and FG terminals are isolated.

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2A-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

## ⚠ CAUTION


### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**


## Dimensions

### External Dimensions

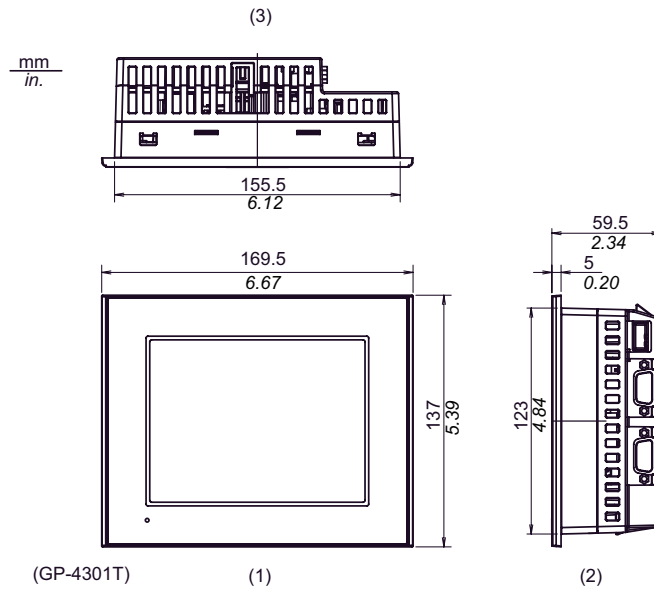


- 1 Front
- 2 Right Side
- 3 Top

Installation with Installation Fasteners

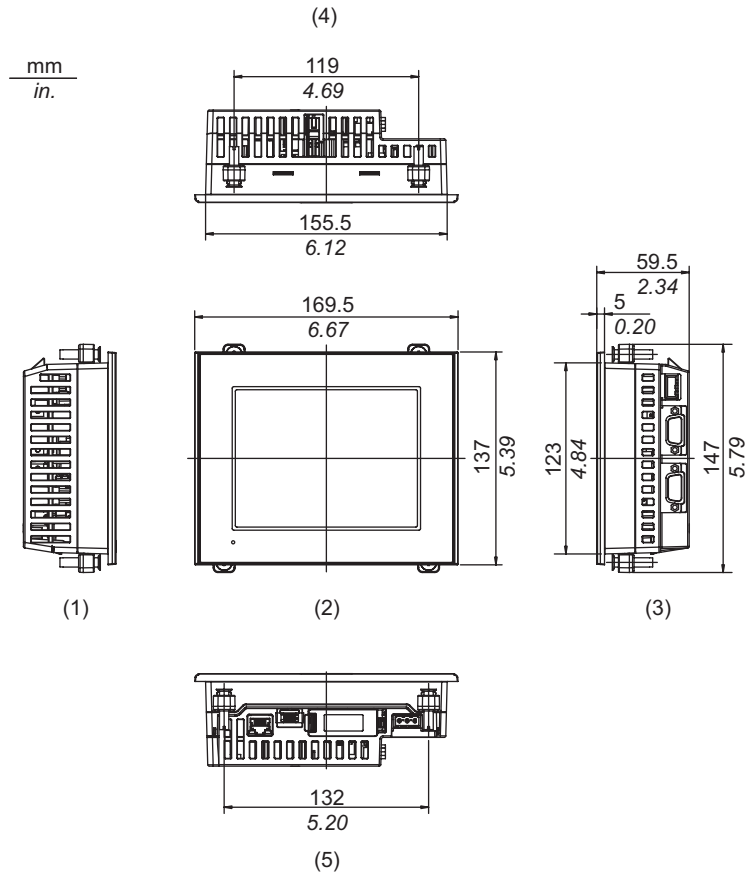

- 1 Left Side
- 2 Front
- 3 Right Side
- 4 Top
- 5 Bottom


## Dimensions with Cables: GP-4301T/GP-4301TW

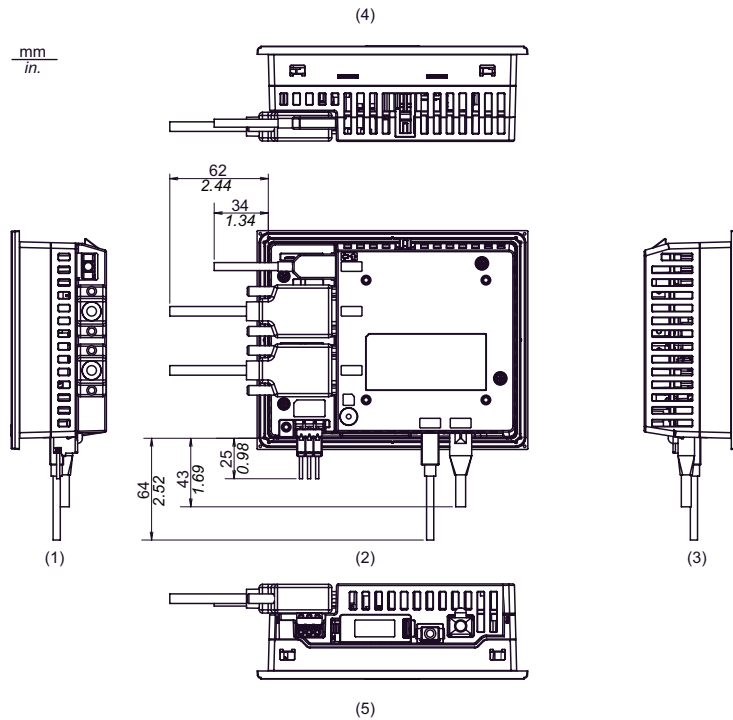

- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Dimensions with Cables: GP-4303T**

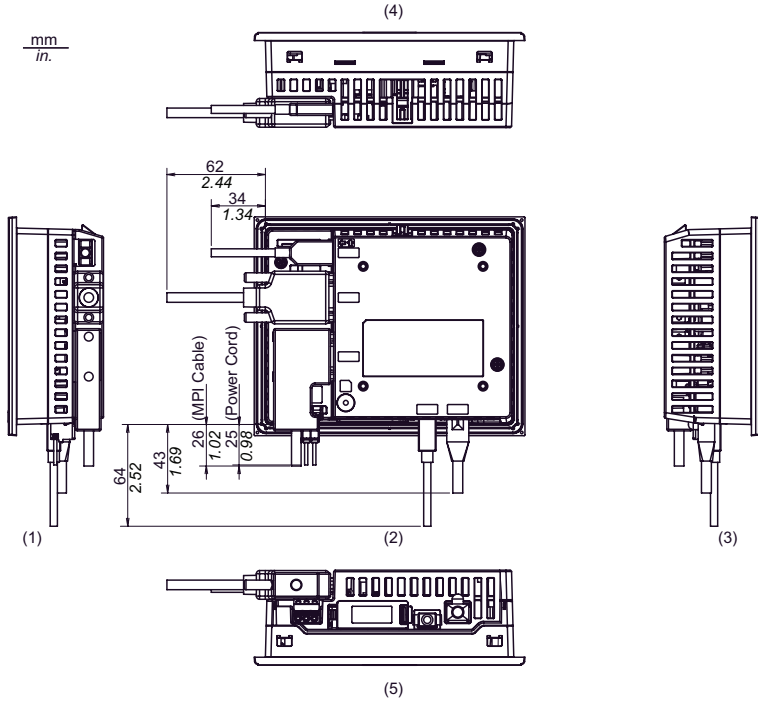


- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.



### Panel Cut Dimensions


Create a panel cut and insert the GP unit into the opening from the front.

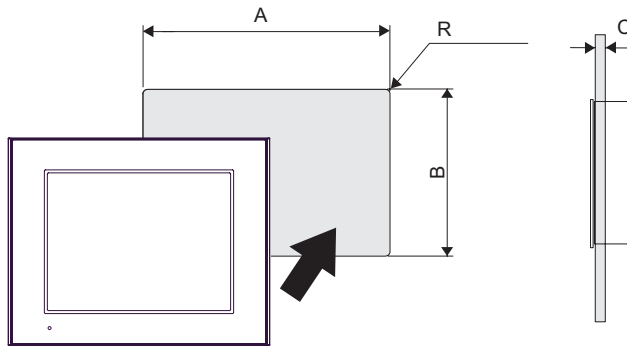

A	B	C	R
156 mm (+1/-0) mm (6.14 in [+0.04, -0 in.])	123.5 mm (+1, -0 mm) (4.86 in [+0.04, -0 in.])	1.6...5 mm (0.06...0.2 in.)	3 mm (0.12 in.) maximum

**NOTE:** Before designing the panel cut, refer to Installation (see page 136).

### Installation Fastener Dimensions

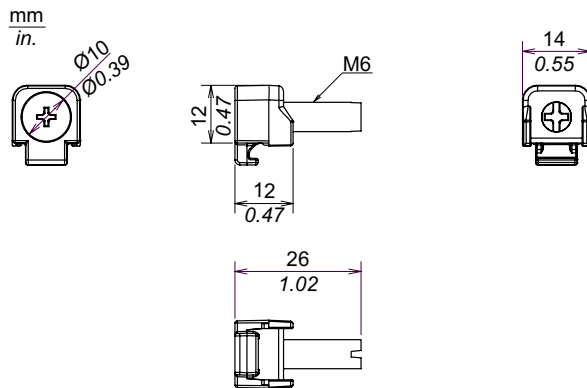

---

## 4.3 GP-4400 Series

---

### What Is in This Section?

This section contains the following topics:

<b>Topic</b>	<b>Page</b>
Electrical Specifications	83
Environmental Specifications	84
Structural Specifications	85
Display Specifications	87
Memory, Clock, and Touch Panel	88
Interface Specifications	89
Specifications of Serial Interface COM1	90
Specifications of Serial Interface COM2	92
Dimensions	93

## Electrical Specifications

Power Supply	Rated Input Voltage	24 Vdc
	Input Voltage Limits	19.2...28.8 Vdc
	Voltage Drop	5 ms or less
	Power Consumption	12 W or less
	When power is not supplied to external devices	8 W or less
	Backlight OFF (Standby Mode)	5 W or less
	Backlight Dimmed (Brightness: 20%)	5.5 W or less
In-Rush Current	30 A or less	
Voltage Endurance	1,000 Vac, 20 mA for 1 minute (between charging and FG terminals)	
Insulation Resistance	500 Vdc, 10 M $\Omega$ or more (between charging and FG terminals)	

## Environmental Specifications

		GP-4401T	GP-4401WW
Physical Environment	Surrounding Air Temperature	0...55 °C (32...131 °F)	0...50 °C (32...122 °F)
	Storage Temperature	-20...60 °C (-4...140 °F)	
	Surrounding Air and Storage Humidity	10...90% RH (Non condensing, wet bulb temperature 39 °C [102.2 °F] or less)	
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)	
	Pollution Degree	For use in Pollution Degree 2 environment	
	Corrosive Gases	Free of corrosive gases	
	Atmospheric pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)	
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 min)	
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times	
Electrical Environment	Noise Immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 µs Rise Time: 1 ns	
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)	

### Air quality requirements

Do not operate or store the GP unit where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

⚠ CAUTION
INOPERATIVE EQUIPMENT
Do not allow water, liquids, metal, and wiring fragments to enter the panel case.
Failure to follow these instructions can result in injury or equipment damage.

## Structural Specifications

Grounding	Functional grounding: Grounding resistance of 100 $\Omega$ , 2 mm <sup>2</sup> (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)
Cooling Method	Natural air circulation
Structure <sup>*1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)
External Dimensions	W218 x H173 x D60 mm (W8.58 x H6.81 x D2.36 in.)
Panel Cut Dimensions	W204.5 x H159.5 mm (W8.05 x H6.28 in.) <sup>*2</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in.) <sup>*3</sup>
Weight	1.2 kg (2.6 lb) or less (main unit only)

**NOTE:** <sup>\*1</sup> The front face of the GP unit, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the GP unit's level of resistance is equivalent to these standards, oils that should have no effect on the GP unit can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the panel for long periods of time. If the GP unit's front face protection sheet peels off, these conditions can lead to the ingress of oil into the GP unit and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the GP unit, be sure to confirm the type of conditions that will be present in the GP unit's operating environment. If the installation gasket is used for a long period of time, or if the GP unit and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

<sup>\*2</sup> For dimensional tolerance, everything +1/-0 mm (+0.04/-0 in.) and R in angle are below R3 (R0.12 in.)

<sup>\*3</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the GP unit and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

### CAUTION

#### EQUIPMENT DAMAGE

Ensure that the panel is not in permanent and direct contact with oils.

**Failure to follow these instructions can result in injury or equipment damage.**

## ***NOTICE***

### **STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS**

- Store the panel in areas where temperatures are within the panel's specifications.
- Do not restrict or block the panel's rear-face ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

## ***NOTICE***

### **GASKET AGING**

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

## Display Specifications

		GP-4401T	GP-4401WW
Display Type		TFT Color LCD	
Display Size		7.5"	7.0"
Resolution		640 x 480 pixels (VGA)	800 x 480 pixels (WVGA)
Effective Display Area		W153.7 x H115.8 mm (W6.05 x H4.56 in.)	W152.4 x H91.44 mm (W6.0 x H3.6 in.)
Display Colors		65,536 colors (No blink) / 16,384 colors Blink	
Backlight		White LED (Not user replaceable. When replacement is required, contact your local distributor.)	
Backlight Service Life		50,000 hours or more (continuous operation at 25 °C [77 °F] before backlight brightness decreases to 50%)	
Brightness Control		16 levels (Adjusted with touch panel or software)	8 levels (Adjusted with touch panel or software)
Language Fonts		Japanese: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) ANK: 158 (Korean, Traditional Chinese, and Simplified Chinese fonts are downloadable.	
Character sizes		Standard font: 8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts Stroke font: 6...127 pixel fonts Image font: 8...72 pixel fonts	
Font sizes		Standard font: You can expand the width up to 8 times, and expand the height up to 8 times. *1	
Text	8 x 8 pixels	80 characters per row x 60 rows	100 characters per row x 60 rows
	8 x 16 pixels	80 characters per row x 30 rows	100 characters per row x 30 rows
	16 x 16 pixels	40 characters per row x 30 rows	50 characters per row x 30 rows
	32 x 32 pixels	20 characters per row x 15 rows	25 characters per row x 15 rows

\*1 You can set up other font sizes using the software.

## Memory, Clock, and Touch Panel

### Memory

	GP-4401T	GP-4401WW
Application Memory *1	FLASH EPROM 32 MB (including the logic program area)	FLASH EPROM 16 MB (including the logic program area)
Logic Program Area	FLASH EPROM 132 KB (Equivalent to 15,000 steps)*2	
Font Area	FLASH EPROM 8 MB (when limit exceeded, uses application memory)	
Data Backup	SRAM 320 KB (Replaceable lithium battery for data backup)	SRAM 128 KB (Replaceable lithium battery for data backup)
Variable Area	SRAM 64 KB (Replaceable lithium battery for retentive variables)	None

\*1 Capacity available for user application (internal memory).

\*2 Up to 60,000 steps can be converted in software. However, this reduces application memory capacity for screen data by 1 MB.

### Clock

± 65 seconds per month (deviation at room temperature and power is OFF). Variations in operating conditions and battery life can cause clock deviations from -380 to +90 seconds per month.

For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

### Touch Panel

Touch Panel Type	Resistive Film (analog)
Touch Panel Resolution	1,024 x 1,024
Touch Panel Service Life	1 million times or more



## Interface Specifications

### Serial Interface COM1

Asynchronous Transmission	RS-232C
Data Length	7 or 8 bits
Stop Bit	1 or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps
Connector	D-Sub 9 pin (plug)

### Serial Interface COM2

Asynchronous Transmission	RS-422 / RS-485
Data Length	7 or 8 bits
Stop Bit	1 or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)
Connector	D-Sub 9 pin (plug)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc $\pm$ 5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

### SD Card Interface


SD Card slot x 1 (maximum 32 GB SD/SDHC Card)

## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

 **DANGER**

**ELECTRIC SHOCK**


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM1

**GP-4401T / GP-4401WW:** D-Sub 9 pin plug connector via an RS-232C cable.

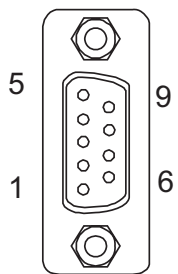Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input/–	Called Status Display +5V±5% Output 0.25A <sup>*1</sup>
	Shell	FG	–	Frame Ground (Common with SG)

**NOTE:** <sup>\*1</sup> You can switch pin #9 between RI and VCC via software.

### NOTICE

**EQUIPMENT DAMAGE**

Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

## CAUTION

### LOSS OF COMMUNICATION


- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

## Specifications of Serial Interface COM2

### Introduction

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

 **DANGER**

**ELECTRIC SHOCK**


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2


GP-4401T/GP-4401WW: D-Sub 9 pin plug connector via an RS-422/485 cable.

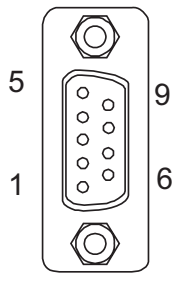Pin Connection	Pin No.	RS-422/RS-485		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	RDA	Input	Receive Data A (+)
	2	RDB	Input	Receive Data B (-)
	3	SDA	Output	Send Data A (+)
	4	ERA	Output	Data Terminal Ready A (+)
	5	SG	-	Signal Ground
	6	CSB	Input	Send Possible B (-)
	7	SDB	Output	Send Data B (-)
	8	CSA	Input	Send Possible A (+)
	9	ERB	Output	Data Terminal Ready B (-)
	Shell	FG	-	Frame Ground (Common with SG)

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

 **CAUTION**


**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**


## Dimensions

### External Dimensions

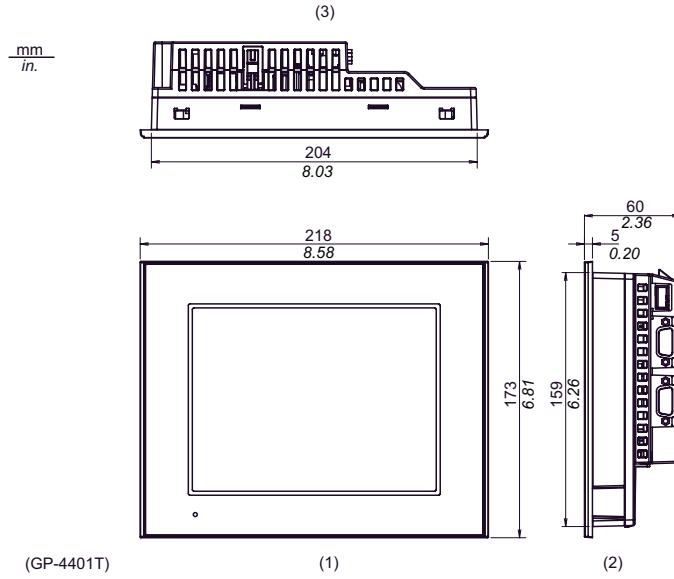


- 1 Front
- 2 Right Side
- 3 Top

Installation with Installation Fasteners

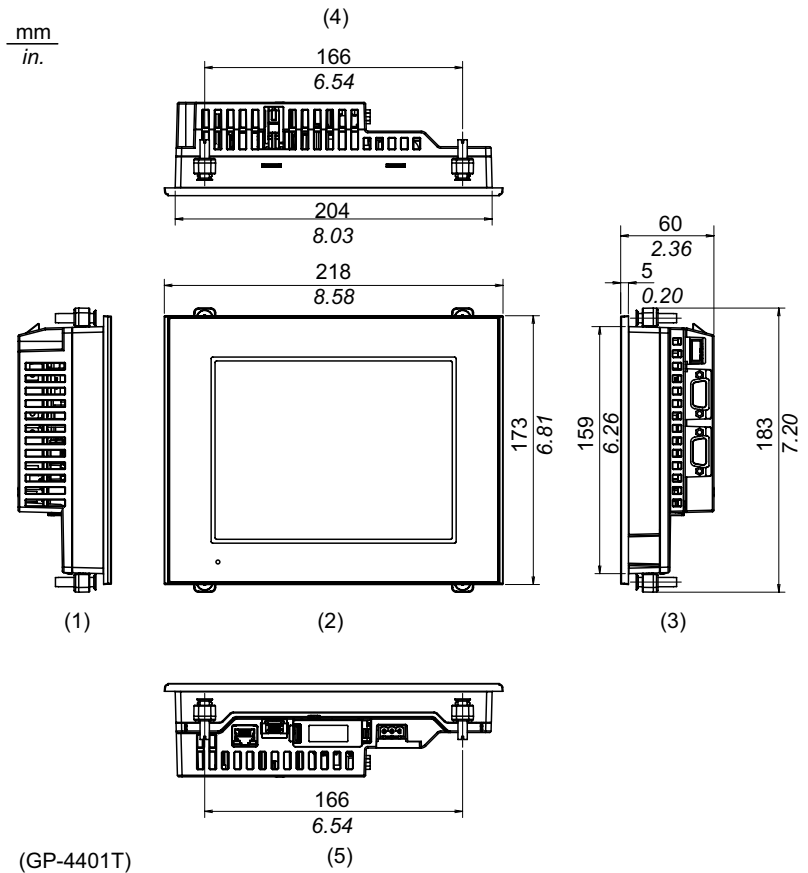

- 1 Left Side
- 2 Front
- 3 Right Side
- 4 Top
- 5 Bottom

Dimensions with Cables

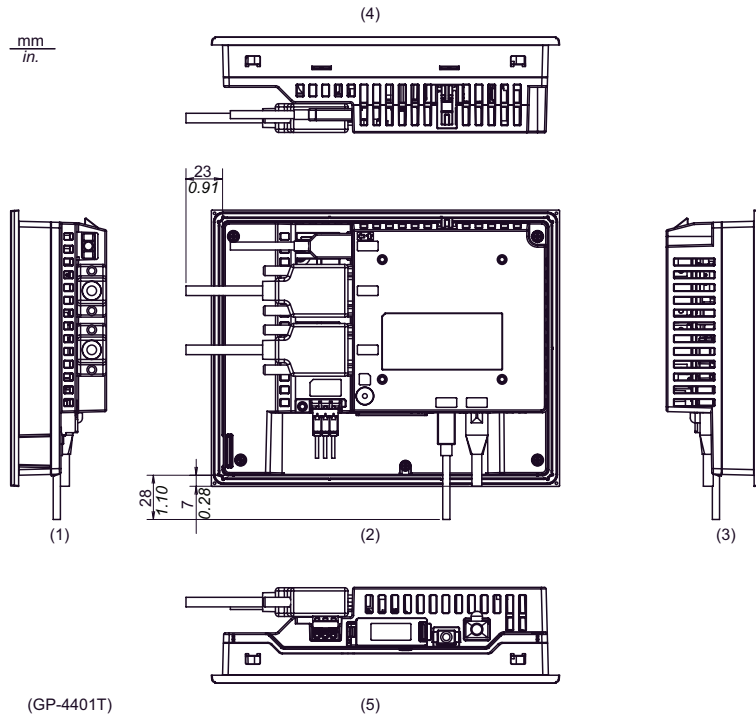


- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

### Panel Cut Dimensions


Create a panel cut and insert the GP unit into the opening from the front.

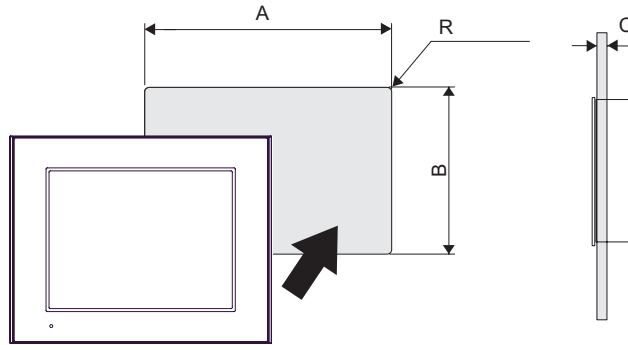

A	B	C	R
204.5 mm (+1, -0 mm) (8.05 in. [+0.04, -0 in.])	159.5 mm (+1, -0 mm) (6.28 in. [+0.04, -0 in.])	1.6...5 mm (0.06...0.2 in.)	3 mm (0.12 in.) maximum

**NOTE:** Before designing the panel cut, refer to Installation (see page 136).

### Installation Fastener Dimensions

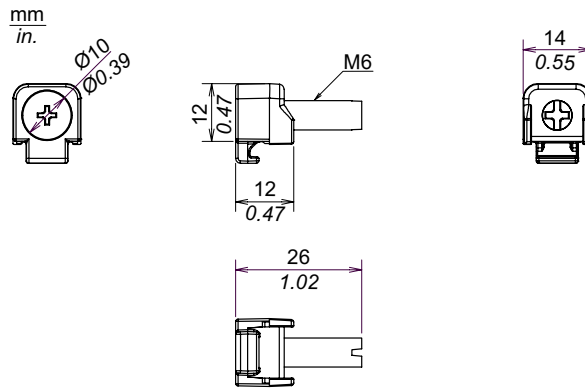



---

## 4.4 GP-4500 Series

---

### What Is in This Section?

This section contains the following topics:

Topic	Page
Electrical Specifications	98
Environmental Specifications	99
Structural Specifications	100
Display Specifications	102
Memory, Clock, and Touch Panel	103
Interface Specifications	104
Specifications of Serial Interface COM1	105
Specifications of Serial Interface COM2	107
Dimensions	109

## Electrical Specifications

		DC Model	AC Model
Power Supply	Rated Input Voltage	24 Vdc	100...240 Vac
	Input Voltage Limits	19.2...28.8 Vdc	85...264 Vac
	Rated Frequency	-	50/60 Hz
	Rated Frequency Range	-	47...63 Hz
	Voltage Drop	10 ms or less	1 cycle or less (Voltage drop interval must be 1 second or more)
	Power Consumption	17 W or less	100 Vac: 44 VA or less 240 Vac: 58 VA or less
	When power is not supplied to external devices	12 W or less	100 Vac: 30 VA or less 240 Vac: 44 VA or less
	Backlight OFF (Standby Mode)	7 W or less	100 Vac: 18 VA or less 240 Vac: 29 VA or less
	Backlight Dimmed (Brightness: 20%)	8 W or less	100 Vac: 22 VA or less 240 Vac: 31 VA or less
	In-Rush Current	30 A or less	
Voltage Endurance	1,000 Vac, 20 mA for 1 minute (between charging and FG terminals)	1,500 Vac, 20 mA for 1 minute (between charging and FG terminals)	
Insulation Resistance	500 Vdc, 10 MΩ or more (between charging and FG terminals)		

## Environmental Specifications

		DC Model		AC Model
		GP-4501T / GP-4503T	GP-4501TW	
Physical Environment	Surrounding Air Temperature	0...55 °C (32...131 °F)	0...50 °C (32...122 °F)	0...55 °C (32...131 °F)
	Storage Temperature	-20...60 °C (-4...140 °F)		
	Surrounding Air and Storage Humidity	10...90% RH (Non condensing, wet bulb temperature 39 °C [102.2 °F] or less)		
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)		
	Pollution Degree	For use in Pollution Degree 2 environment		
	Corrosive Gases	Free of corrosive gases		
	Atmospheric Pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)		
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 compliant 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 min)		
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times		
Electrical Environment	Noise Immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 μs Rise Time: 1 ns		Noise Voltage: 1,500 Vp-p Pulse Width: 1 μs Rise Time: 1 ns
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)		

### Air quality requirements

Do not operate or store the GP unit where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

## CAUTION

### INOPERATIVE EQUIPMENT

Do not allow water, liquids, metal, and wiring fragments to enter the panel case.

**Failure to follow these instructions can result in injury or equipment damage.**

## Structural Specifications


	GP-4501T / GP-4503T	GP-4501TW
Grounding	Functional grounding: Grounding resistance of 100Ω, 2mm <sup>2</sup> (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)	
Cooling Method	Natural air circulation	
Structure <sup>*1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)	
External Dimensions	W272.5 x H214.5 x D57 mm (W10.73 x H8.44 x D2.24 in.)	W315 x H241 x D56 mm (W12.4 x H9.49 x D2.2 in.)
Panel Cut Dimensions	W259 x H201 mm (W10.2 x H7.91 in.) <sup>*2</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in.) <sup>*3</sup>	W301.5 x H227.5 mm (W11.87 x H8.96 in.) <sup>*2</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in.) <sup>*3</sup>
Weight	2.0 kg (4.4 lb) or less (main unit only)	2.5 kg (5.5 lb) or less (main unit only)

**NOTE:** <sup>\*1</sup> The front face of the GP unit, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the GP unit's level of resistance is equivalent to these standards, oils that should have no effect on the GP unit can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the GP unit for long periods of time. If the GP unit's front face protection sheet peels off, these conditions can lead to the ingress of oil into the GP unit and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front GP unit's plastic cover. Therefore, prior to installing the GP unit, be sure to confirm the type of conditions that will be present in the GP unit' operating environment. If the installation gasket is used for a long period of time, or if the GP unit and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

<sup>\*2</sup> For dimensional tolerance, everything +1/-0 mm (+0.04/-0 in.) and R in angle are below R3 (R0.12 in.)

<sup>\*3</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the GP unit and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

 <b>CAUTION</b>
<b>EQUIPMENT DAMAGE</b>
Ensure that the panel is not in permanent and direct contact with oils.
<b>Failure to follow these instructions can result in injury or equipment damage.</b>

***NOTICE*****STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS**

- Store the panel in areas where temperatures are within the panel's specifications.
- Do not restrict or block the panel's rear-face ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

***NOTICE*****GASKET AGING**

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

## Display Specifications

	<b>GP-4501T / GP-4503T</b>	<b>GP-4501TW</b>
Display Type	TFT Color LCD	
Display Size	10.4"	
Resolution	640 x 480 pixels (VGA)	
Effective Display Area	W211.2 x H158.4 mm (W8.31 x H6.24 in.)	
Display Colors	65,536 colors (No blink) / 16,384 colors (Blink)	
Backlight	White LED (Not user replaceable. When replacement is required, contract your local distributor.)	
Backlight Service Life	50,000 hours or more (continuous operation at 25 °C [77 °F] before backlight brightness decreases to 50%)	
Brightness Control	16 levels (Adjusted with touch panel or software)	8 levels (Adjusted with touch panel or software)
Language Fonts	Japanese: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) ANK: 158 (Korean, Traditional Chinese, and Simplified Chinese fonts are downloadable)	
Character Sizes	Standard font: 8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts Stroke font: 6...127 pixel fonts Image font: 8...72 pixel fonts	
Font Sizes	Standard font: You can expand the width up to 8 times, and expand the height up to 8 times. <sup>*1</sup>	
Text	8 x 8 pixels	80 characters per row x 60 rows
	8 x 16 pixels	80 characters per row x 30 rows
	16 x 16 pixels	40 characters per row x 30 rows
	32 x 32 pixels	20 characters per row x 15 rows

<sup>\*1</sup> You can set up other font sizes using the software.

## Memory, Clock, and Touch Panel

### Memory

	<b>GP-4501T / GP-4503T</b>	<b>GP-4501TW</b>
Application Memory <sup>*1</sup>	FLASH EPROM 32 MB (including the logic program area)	FLASH EPROM 16 MB (including the logic program area)
Logic Program Area	FLASH EPROM 132 KB (Equivalent to 15,000 steps) <sup>*2</sup>	
Font Area	FLASH EPROM 8 MB (when limit exceeded, uses application memory)	
Data Backup	SRAM 320 KB (Replaceable lithium battery for data backup)	SRAM 128 KB (Replaceable lithium battery for data backup)
Variable Area	SRAM 64 KB (Replaceable lithium battery for retentive variables)	None

<sup>\*1</sup> Capacity available for user application (internal memory).

<sup>\*2</sup> Up to 60,000 steps can be converted in software. However, this reduces application memory capacity for screen data by 1 MB.

### Clock

± 65 seconds per month (deviation at room temperature and power is OFF). Variations in operating conditions and battery life can cause clock deviations from -380 to +90 seconds per month.

For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

### Touch Panel

	<b>GP-4501T (Analog Touch Panel) / GP-4501TW / GP-4503T</b>	<b>GP-4501T (Matrix Touch Panel)</b>
Touch Panel Type	Resistive Film (analog)	Resistive Film (matrix)
Touch Panel Resolution	1,024 x 1,024	32 x 24 keys/screen
Service Life	1 million times or more	

## Interface Specifications

### Serial Interface COM1

Asynchronous Transmission	RS-232C
Data Length	7 or 8 bits
Stop Bit	1 or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps
Connector	D-Sub 9 pin (plug)

### Serial Interface COM2

	GP-4501T / GP-4501TW	GP-4503T
Asynchronous Transmission	RS-422 / RS-485	RS-485 (isolation)
Data Length	7 or 8 bits	
Stop Bit	1 or 2 bits	
Parity	None, odd or even	
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)	
Connector	D-Sub 9 pin (plug)	D-Sub 9 pin (socket)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc $\pm$ 5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

### SD Card Interface

SD Card slot x 1 (maximum 32 GB SD/SDHC Card)



## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

### DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM1

**GP-4501T / GP-4501TW / GP-4503T:** D-Sub 9 pin plug connector via an RS-232C cable.

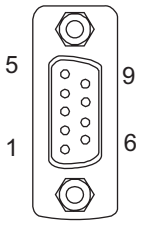Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
 (GP unit side)	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input/-	Called Status Display +5V±5% Output 0.25A <sup>*1</sup>
	Shell	FG	-	Frame Ground (Common with SG)

**NOTE:** <sup>\*1</sup> You can switch pin #9 between RI and VCC via software.

### NOTICE

#### EQUIPMENT DAMAGE

Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

** CAUTION**

**LOSS OF COMMUNICATION**


- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

## Specifications of Serial Interface COM2

### Introduction

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

 **DANGER**

**ELECTRIC SHOCK**


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2


GP-4501T / GP-4501TW: D-Sub 9 pin plug connector via an RS-422/485 cable.

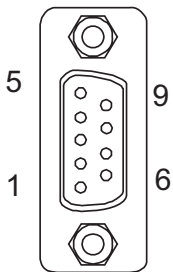Pin Connection	Pin No.	RS-422/RS-485		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	RDA	Input	Receive Data A (+)
	2	RDB	Input	Receive Data B (-)
	3	SDA	Output	Send Data A (+)
	4	ERA	Output	Data Terminal Ready A (+)
	5	SG	-	Signal Ground
	6	CSB	Input	Send Possible B (-)
	7	SDB	Output	Send Data B (-)
	8	CSA	Input	Send Possible A (+)
	9	ERB	Output	Data Terminal Ready B (-)
	Shell	FG	-	Frame Ground (Common with SG)

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.


 **CAUTION**

**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

GP-4503T: D-Sub 9 pin socket connector via an RS-485, PROFIBUS, or MPI cable.

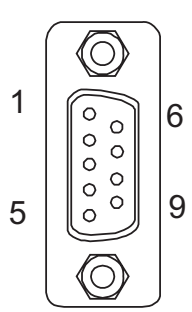Pin Connection	Pin No.	RS-485 (isolation)		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	NC	-	no connection
	2	NC	-	no connection
	3	Line A	Input/Output	Data A (+)
	4	RS(RTS)	Output	Request to Send
	5	SG	-	Signal Ground
	6	VCC	-	+5V±5% External Output <sup>*1</sup>
	7	NC	-	no connection
	8	Line B	Input/Output	Data B (-)
	9	NC	-	no connection
	Shell	FG	-	Frame Ground <sup>*2</sup> (Not connected with SG)

**NOTE:** <sup>\*1</sup> You can supply power to the Siemens PROFIBUS connector only. You cannot supply power to the device/PLC.

<sup>\*2</sup> The SG and FG terminals are isolated.

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2A-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

## ⚠ CAUTION


### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**


## Dimensions

### External Dimensions: GP-4501T / GP-4503T

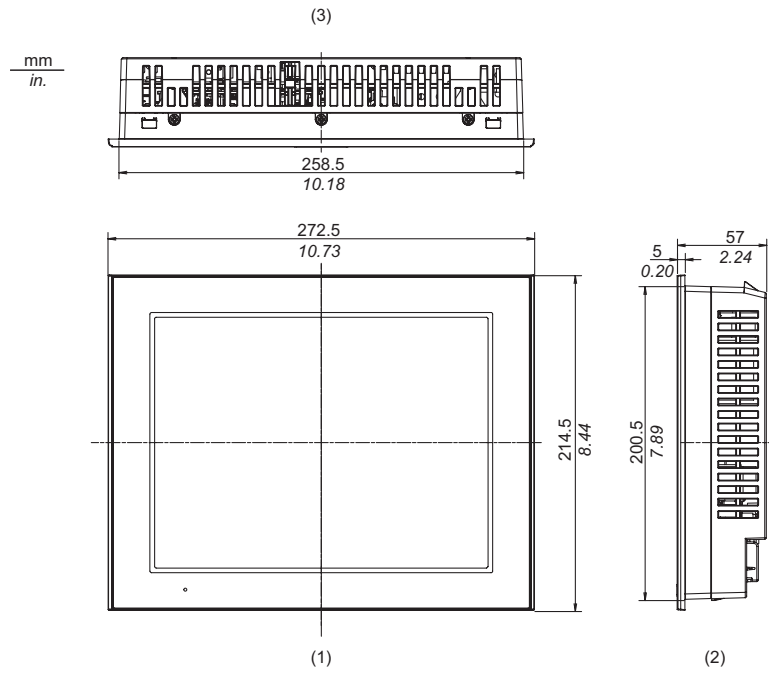


- 1 Front
- 2 Right Side
- 3 Top

**External Dimensions: GP-4501TW**

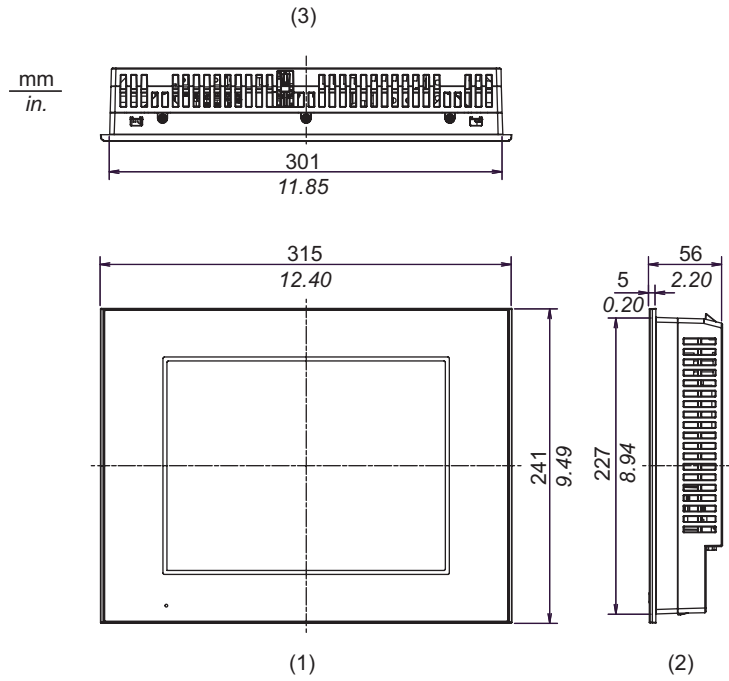


- 1 Front
- 2 Right Side
- 3 Top

Installation with Installation Fasteners: GP-4501T / GP-4503T

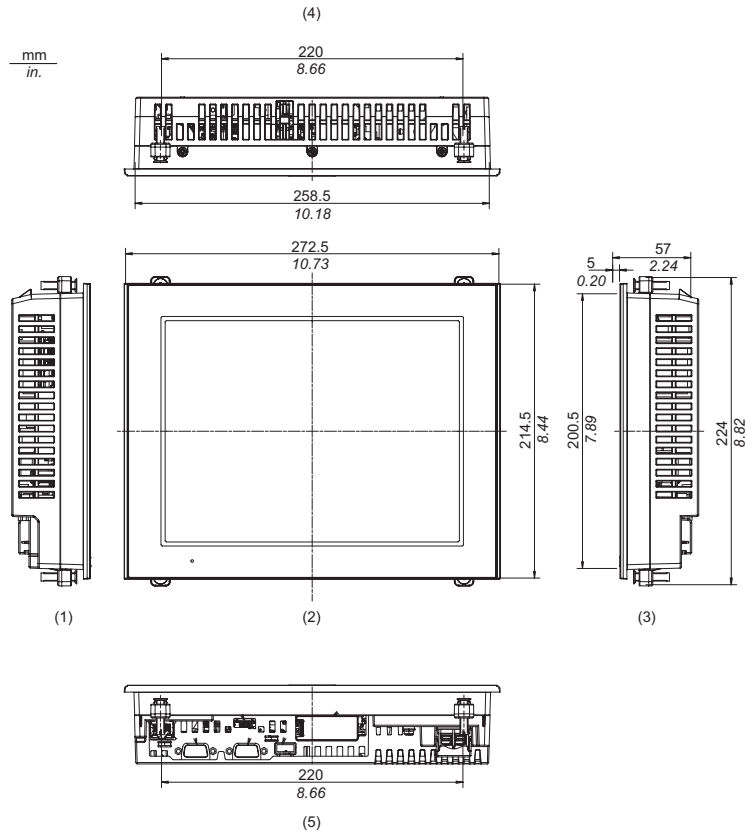

- 1 Left Side
- 2 Front
- 3 Right Side
- 4 Top
- 5 Bottom


Installation with Installation Fasteners: GP-4501TW

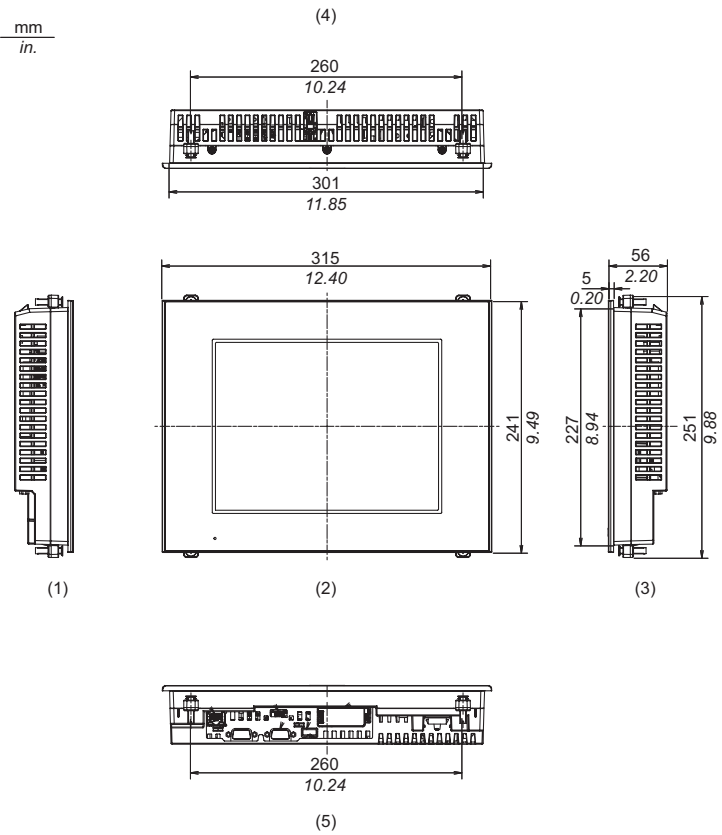

- 1 Left Side
- 2 Front
- 3 Right Side
- 4 Top
- 5 Bottom




Dimensions with Cables: GP-4501T

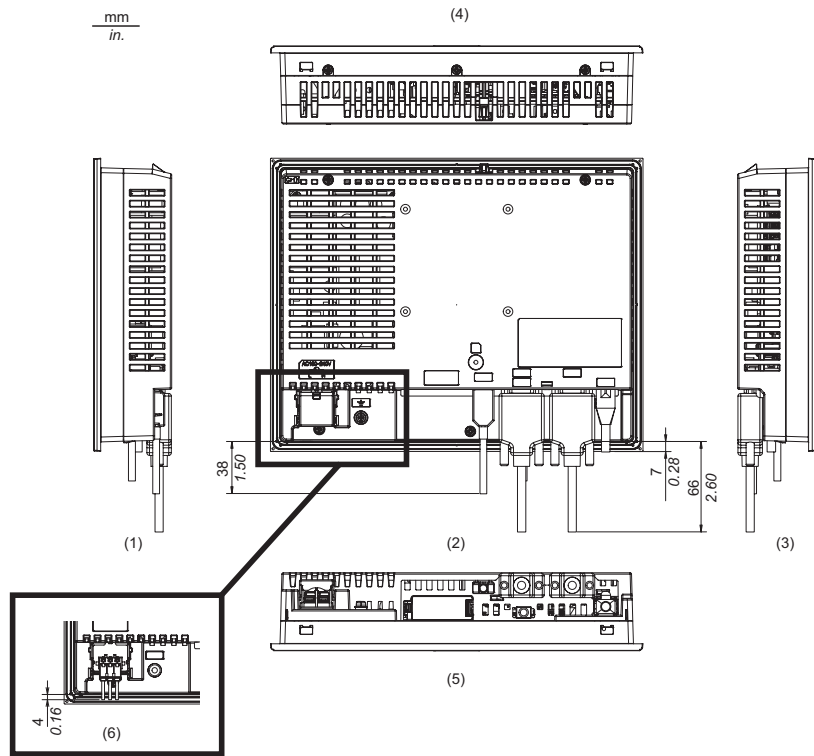

- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom
- 6 DC type units have power supply terminals

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.


**Dimensions with Cables: GP-4501TW**

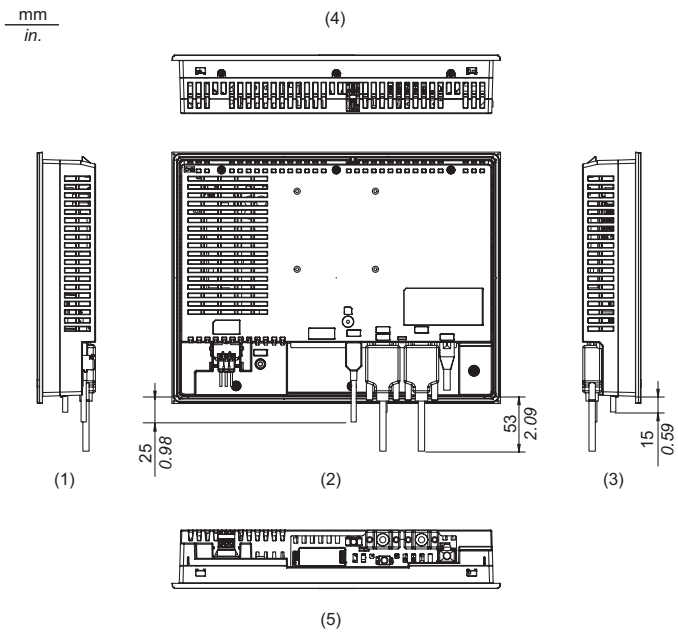

- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

Dimensions with Cables: GP-4503T

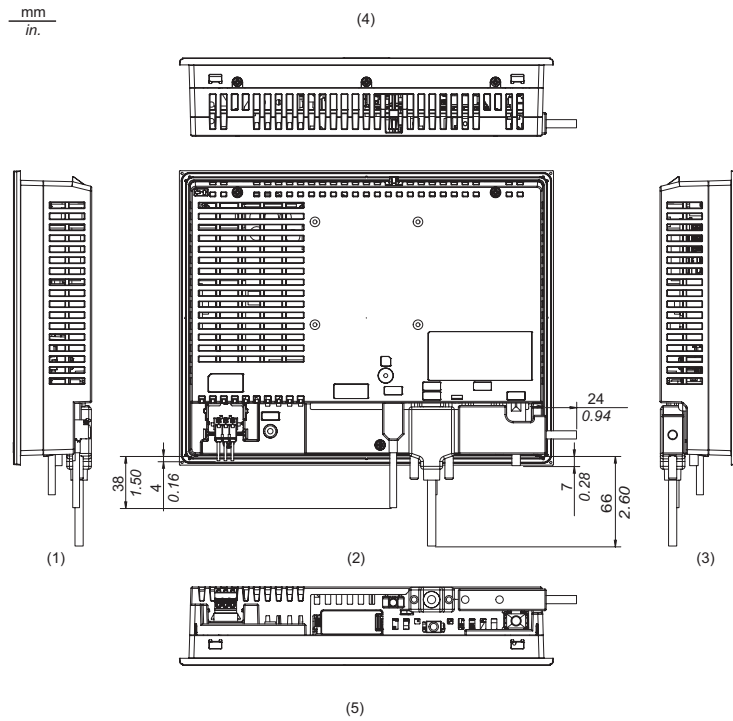


- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Panel Cut Dimensions**


Create a panel cut and insert the GP unit into the opening from the front.

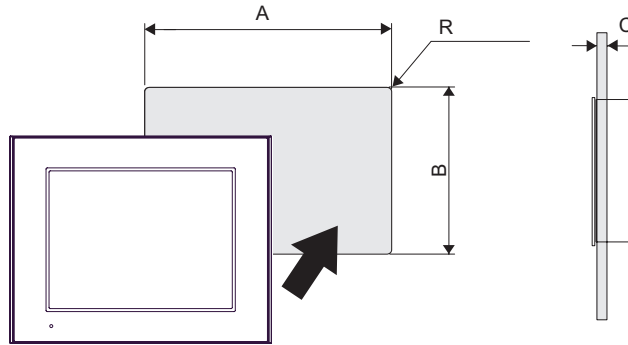

	A	B	C	R
GP-4501T GP-4503T	259 mm (+1, -0 mm) (10.2 in. [+0.04, -0 in.])	201 mm (+1, -0 mm) (7.91 in. [+0.04, -0 in.])	1.6...5 mm (0.06...0.2 in.)	3 mm (0.12 in.) maximum
GP-4501TW	301.5 mm (+1, -0 mm) (11.87 in. [+0.04, -0 in.])	227.5 mm (+1, -0 mm) (8.96 in. [+0.04, -0 in.])		

**NOTE:** Before designing the panel cut, refer to Installation (see page 136).

**Installation Fastener Dimensions**

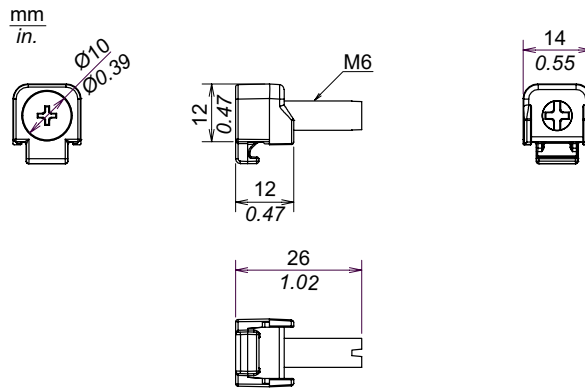

---

## 4.5 GP-4600 Series

---

### What Is in This Section?

This section contains the following topics:

Topic	Page
Electrical Specifications	118
Environmental Specifications	119
Structural Specifications	120
Display Specifications	122
Memory, Clock, and Touch Panel	123
Interface Specifications	124
Specifications of Serial Interface COM1	125
Specifications of Serial Interface COM2	127
Dimensions	129

## Electrical Specifications

		DC Model	AC Model
Power Supply	Rated Input Voltage	24 Vdc	100...240 Vac
	Input Voltage Limits	19.2...28.8 Vdc	85...264 Vac
	Rated Frequency	-	50/60 Hz
	Rated Frequency Range	-	47...63 Hz
	Voltage Drop	10 ms or less	1 cycle or less (Voltage drop interval must be 1 second or more)
	Power Consumption	17 W or less	100 Vac: 44 VA or less 240 Vac: 58 VA or less
	When power is not supplied to external devices	12 W or less	100 Vac: 30 VA or less 240 Vac: 44 VA or less
	Backlight OFF (Standby Mode)	7 W or less	100 Vac: 18 VA or less 240 Vac: 29 VA or less
	Backlight Dimmed (Brightness: 20%)	8 W or less	100 Vac: 22 VA or less 240 Vac: 31 VA or less
	In-Rush Current	30 A or less	
Voltage Endurance	1,000 Vac, 20 mA for 1 minute (between charging and FG terminals)	1,500 Vac, 20 mA for 1 minute (between charging and FG terminals)	
Insulation Resistance	500 Vdc, 10 MΩ or more (between charging and FG terminals)		

## Environmental Specifications

		DC Model	AC Model
Physical Environment	Surrounding Air Temperature	0...55 °C (32...131 °F)	
	Storage Temperature	-20...60 °C (-4...140 °F)	
	Surrounding Air and Storage Humidity	10...90% RH (Non condensing, wet bulb temperature 39 °C [102.2 °F] or less)	
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)	
	Pollution Degree	For use in Pollution Degree 2 environment	
	Corrosive Gases	Free of corrosive gases	
	Atmospheric Pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)	
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 compliant 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 minute)	
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times	
Electrical Environment	Noise Immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 μs Rise Time: 1 ns	Noise Voltage: 1,500 Vp-p Pulse Width: 1 μs Rise Time: 1 ns
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)	

### Air quality requirements

Do not operate or store the GP unit where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

## CAUTION

### INOPERATIVE EQUIPMENT

Do not allow water, liquids, metal, and wiring fragments to enter the panel case.

**Failure to follow these instructions can result in injury or equipment damage.**

## Structural Specifications

Grounding	Functional grounding: Grounding resistance of 100 $\Omega$ , 2 mm <sup>2</sup> (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)
Cooling Method	Natural air circulation
Structure <sup>*1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)
External Dimensions	W315 x H241 x D56 mm (W12.4 x H9.49 x D2.2 in.)
Panel Cut Dimensions	W301.5 x H227.5 mm (W11.87 x H8.96 in.) <sup>*2</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in.) <sup>*3</sup>
Weight	2.5 kg (5.5 lb) or less (main unit only)

**NOTE:** <sup>\*1</sup> The front face of the GP unit, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the GP unit's level of resistance is equivalent to these standards, oils that should have no effect on the GP unit can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the GP unit for long periods of time. If the GP unit's front face protection sheet peels off, these conditions can lead to the ingress of oil into the GP unit and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front GP unit's plastic cover. Therefore, prior to installing the GP unit, be sure to confirm the type of conditions that will be present in the GP unit's operating environment. If the installation gasket is used for a long period of time, or if the GP unit and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

<sup>\*2</sup> For dimensional tolerance, everything +1/-0 mm (+0.04/-0 in.) and R in angle are below R3 (R0.12in.)

<sup>\*3</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the GP unit and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

### CAUTION

#### EQUIPMENT DAMAGE

Ensure that the panel is not in permanent and direct contact with oils.

**Failure to follow these instructions can result in injury or equipment damage.**



***NOTICE*****STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS**

- Store the panel in areas where temperatures are within the panel's specifications.
- Do not restrict or block the panel's rear-face ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

***NOTICE*****GASKET AGING**

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

## Display Specifications

Display Type	TFT Color LCD	
Display Size	12.1"	
Resolution	800 x 600 pixels (SVGA)	
Effective Display Area	W246.0 x H184.5 mm (W9.69 x H7.26 in.)	
Display Colors	65,536 colors (No blink) / 16,384 colors (Blink)	
Backlight	White LED (Not user replaceable. When replacement is required, contact your local distributor.)	
Backlight Service Life	50,000 hours (continuous operation at at 25 °C [77 °F] before backlight brightness decreases to 50%)	
Brightness Control	16 levels (Adjusted with touch panel or software)	
Language Fonts	Japanese: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) ANK: 158 (Korean, Traditional Chinese, and Simplified Chinese fonts are downloadable.	
Character Sizes	Standard font: 8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts Stroke font: 6...127 pixel fonts Image font: 8...72 pixel fonts	
Font Sizes	Standard font: You can expand width up to 8 times, and expand height up to 8 times.*1	
Text	8 x 8 pixels	100 characters per row x 75 rows
	8 x 16 pixels	100 characters per row x 37 rows
	16 x 16 pixels	50 characters per row x 37 rows
	32 x 32 pixels	25 characters per row x 18 rows

\*1 You can set up other font sizes using the software.

## Memory, Clock, and Touch Panel

### Memory

Application Memory* <sup>1</sup>	FLASH EPROM 32 MB (including logic program area)
Logic Program Area	FLASH EPROM 132 KB (Equivalent to 15,000 steps)* <sup>2</sup>
Font Area	FLASH EPROM 8 MB (when limit exceeded, uses application memory)
Data Backup	SRAM 320 KB (Replaceable lithium battery for backup memory)
Variable Area	SRAM 64 KB (Replaceable lithium battery for retentive variables)

\*<sup>1</sup> Capacity available for user application (internal memory).

\*<sup>2</sup> Up to 60,000 steps can be converted in software. However, this reduces application memory capacity for screen data by 1 MB.

### Clock

± 65 seconds per month (deviation at room temperature and power is OFF). Variations in operating conditions and battery life can cause clock deviations from -380 to +90 seconds per month.

For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

### Touch Panel

	<b>GP-4601T (Analog Touch Panel) / GP-4603T</b>	<b>GP-4601T (Matrix Touch Panel)</b>
Touch Panel Type	Resistive Film (analog)	Resistive Film (matrix)
Touch Panel Resolution	1,024 x 1,024	40 x 30 keys/screen
Touch Panel Service Life	1 million times or more	

## Interface Specifications

### Serial Interface COM1

Asynchronous Transmission	RS-232C
Data Length	7 or 8 bits
Stop Bit	1 or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps
Connector	D-Sub 9 pin (plug)

### Serial Interface COM2

	GP-4601T	GP-4603T
Asynchronous Transmission	RS-422 / RS-485	RS-485 (isolation)
Data Length	7 or 8 bits	
Stop Bit	1 or 2 bits	
Parity	None, odd or even	
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)	
Connector	D-Sub 9 pin (plug)	D-Sub 9 pin (socket)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc $\pm$ 5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

### SD Card Interface

SD Card slot x 1 (maximum 32 GB SD/SDHC Card)

## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

### DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM1

**GP-4601T / GP-4603T:** D-Sub 9 pin plug connector via an RS-232C cable.

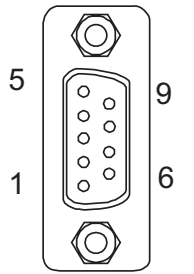Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
 (GP unit side)	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input/-	Called Status Display +5V±5% Output 0.25A <sup>*1</sup>
	Shell	FG	-	Frame Ground (Common with SG)

**NOTE:** <sup>\*1</sup> You can switch pin #9 between RI and VCC via software.

### NOTICE

#### EQUIPMENT DAMAGE

Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

 <b>CAUTION</b>
--

<b>LOSS OF COMMUNICATION</b>
------------------------------

- |   |
|---|
| <ul style="list-style-type: none"><li>● All connections to the communication ports must not put excessive stress on the ports.</li><li>● Securely attach communication cables to the panel wall or cabinet.</li><li>● Use only D-Sub 9 pin cables with a locking tab in good condition.</li></ul> |
|---|

<b>Failure to follow these instructions can result in injury or equipment damage.</b>
---

## Specifications of Serial Interface COM2

### Introduction

**NOTE:** For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the GP unit.

### DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2

GP-4601T: D-Sub 9 pin plug connector via an RS-422/485 cable.

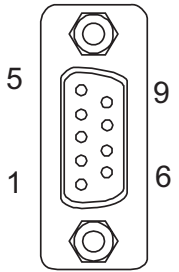Pin Connection	Pin No.	RS-422/RS-485		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	RDA	Input	Receive Data A (+)
	2	RDB	Input	Receive Data B (-)
	3	SDA	Output	Send Data A (+)
	4	ERA	Output	Data Terminal Ready A (+)
	5	SG	-	Signal Ground
	6	CSB	Input	Send Possible B (-)
	7	SDB	Output	Send Data B (-)
	8	CSA	Input	Send Possible A (+)
	9	ERB	Output	Data Terminal Ready B (-)
	Shell	FG	-	Frame Ground (Common with SG)

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2D-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.


**⚠ CAUTION**

**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

GP-4603T: D-Sub 9 pin socket connector via an RS-485, PROFIBUS, or MPI cable.

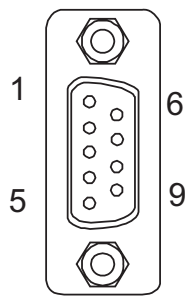Pin Connection	Pin No.	RS-485 (isolation)		
		Signal Name	Direction	Meaning
 <p>(GP unit side)</p>	1	NC	-	no connection
	2	NC	-	no connection
	3	Line A	Input/Output	Data A (+)
	4	RS(RTS)	Output	Request to Send
	5	SG	-	Signal Ground
	6	VCC	-	+5V±5% External Output <sup>*1</sup>
	7	NC	-	no connection
	8	Line B	Input/Output	Data B (-)
	9	NC	-	no connection
	Shell	FG	-	Frame Ground <sup>*2</sup> (No connection with SG)

**NOTE:** <sup>\*1</sup> You can supply power to the Siemens PROFIBUS connector only. You cannot supply power to the device/PLC.

<sup>\*2</sup> The SG and FG terminals are isolated.

Interfit bracket is #4-40 (UNC).

Recommendations:

- Cable Connector: XM2A-0901 manufactured by OMRON Corporation.
- Cable Cover: XM2S-0913 manufactured by OMRON Corporation.
- Jack Screw (#4-40 UNC): XM2Z-0073 manufactured by OMRON Corporation.

**⚠ CAUTION**

**LOSS OF COMMUNICATION**


- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**



## Dimensions





### External Dimensions

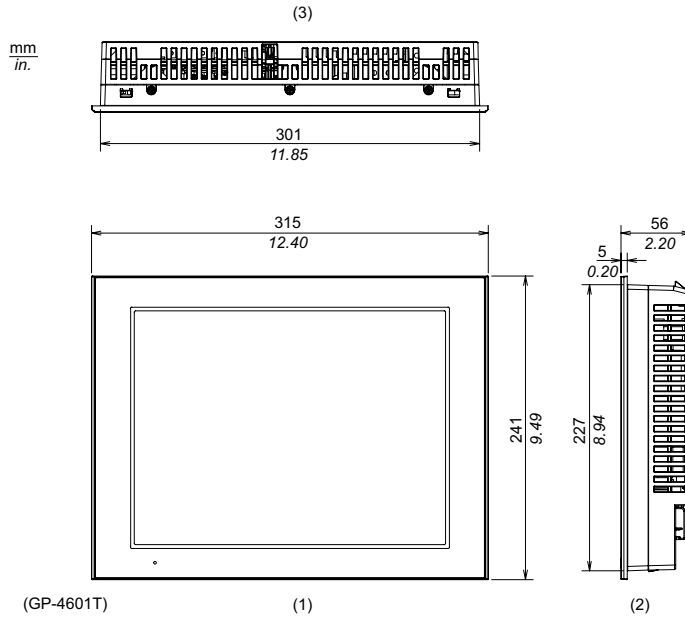

- 1 Front
- 2 Right Side
- 3 Top

Installation with Installation Fasteners


mm  
in.

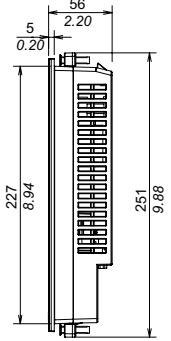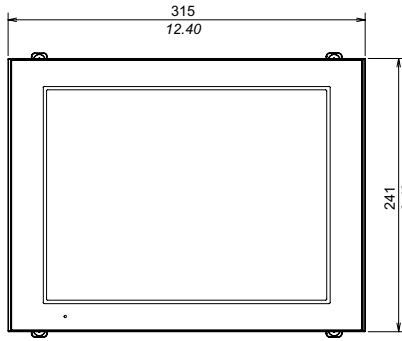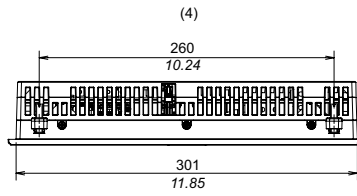

(1)

(2)

(3)

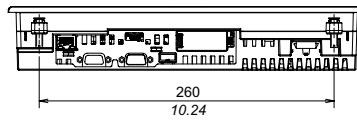


(GP-4601T)

(5)

- 1 Left Side
- 2 Front
- 3 Right Side
- 4 Top
- 5 Bottom


Dimensions with Cables: GP-4601T

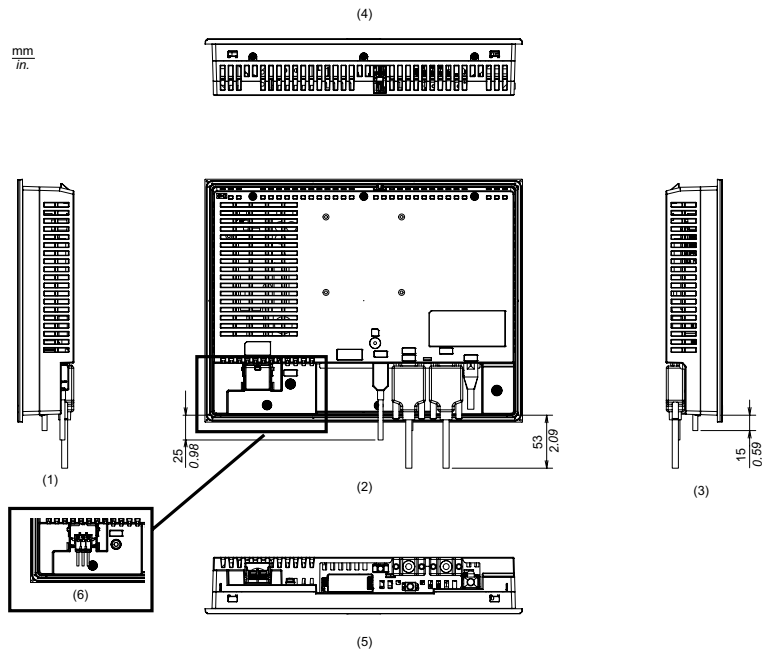

- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom
- 6 DC type units have power supply terminals

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Dimensions with Cables: GP-4603T**

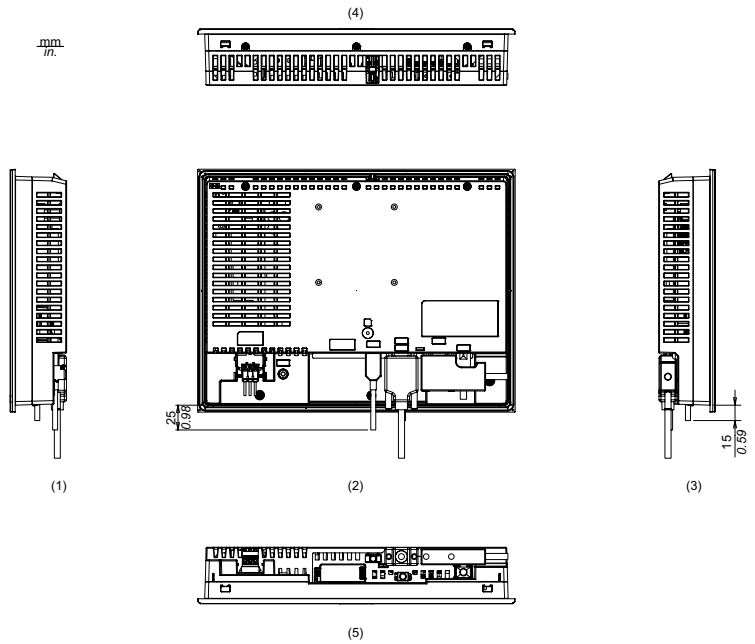


- 1 Left Side
- 2 Rear
- 3 Right Side
- 4 Top
- 5 Bottom

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

### Panel Cut Dimensions


Create a panel cut and insert the GP unit into the opening from the front.

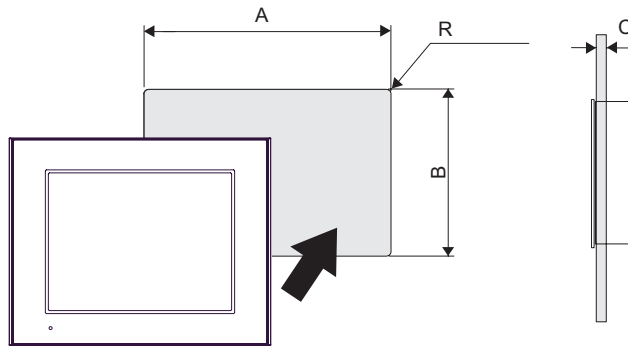

A	B	C	R
301.5 mm (+1, -0 mm) (11.87 [+0.04, -0 in.])	227.5 mm (+1, -0 mm) (8.96 in. [+0.04, -0 in.])	1.6...5 mm (0.06...0.2 in.)	3 mm (0.12 in.) maximum

**NOTE:** Before designing the panel cut, refer to Installation (see page 136).

### Installation Fastener Dimensions

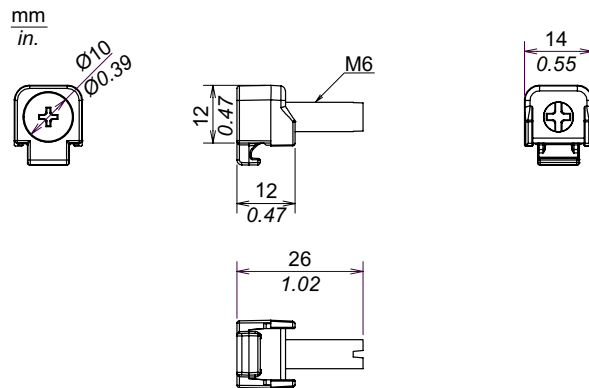



---

# Installation and Wiring



# 5

---

## What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
5.1	Installation	136
5.2	Wiring Principles	141
5.3	SD Card Insertion/Removal	150
5.4	USB Cable Clamp	157

# 5.1 Installation

## Installation Procedures

### Introduction

The installation fasteners are required when installing the GP unit.


Mount the GP unit in an enclosure that provides a clean, dry, robust and controlled environment. (IP65, Type 1, Type 4X [Indoor Use Only] or Type 13 Enclosure.)

### Installation Requirements

Check that the installation wall or cabinet's surface is flat, in good condition and has no jagged edges. Metal reinforcing strips may be attached to the inside of the wall, near the panel-cut, to increase its rigidity.


Decide on the thickness of the enclosure wall, based on the level of strength required: 1.6...5 mm (0.06...0.2 in.).

Be sure that the surrounding air temperature and the ambient humidity are within their designated ranges. Surrounding air temperature: 0 to 50 °C (32 to 122 °F) or 0 to 55 °C (32 to 131 °F) (please see the Environment Specifications for your GP unit); ambient humidity: 10 to 90%RH; wet bulb temperature: maximum 39 °C [102 °F]. When installing the GP unit in a cabinet or enclosure, the surrounding air temperature is the cabinet's or enclosure's internal temperature.

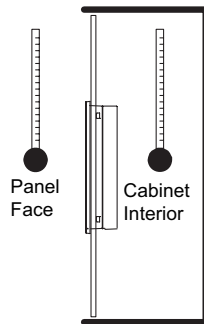

Be sure that heat from surrounding equipment does not cause the GP unit to exceed its standard operating temperature.


When mounting the GP unit vertically, ensure that the right side of the unit faces up. In other words, the power connector for DC model, power terminal block for AC model, should be at the top.

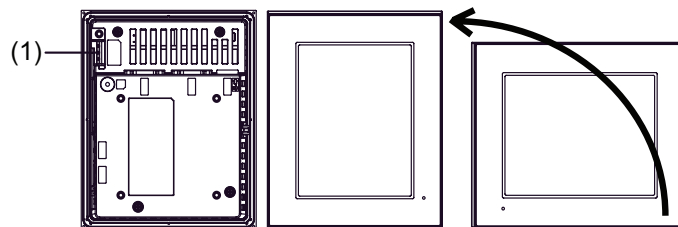

1 Power connector or power terminal block




When installing the GP unit in a slanted position, the GP unit face should not incline more than 30°.

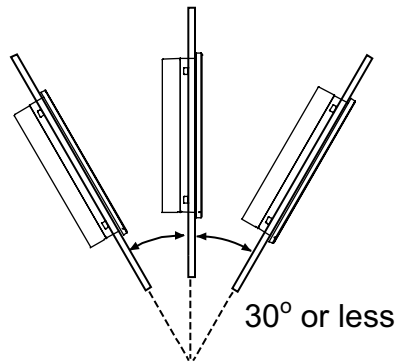

When installing the GP unit in a slanted position with an incline more than 30°, the ambient temperature must not exceed 40 °C (104 °F). You may need to use forced air cooling (fan, A/C) to ensure the ambient operating temperature is 40°C or less (104 °F or less).

For easier maintenance, operation and improved ventilation, install the GP unit at least 100 mm (3.94 in.) away from adjacent structures and other equipment as shown in the following illustration:

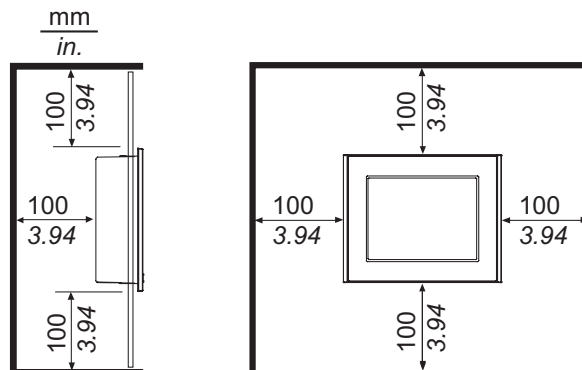

The holes on the rear of the GP unit (except GP-4200 Series) do not correspond to VESA 75 mm standards. Do not attach the GP unit to a commercial-type VESA arm.




## Panel Mounting Procedure



### **NOTICE**

#### **PANEL UNSTEADY WHEN UNSECURED**

Keep GP unit stabilized in the panel-cut while you are installing or removing the screw fasteners.

**Failure to follow these instructions can result in equipment damage.**

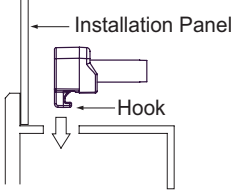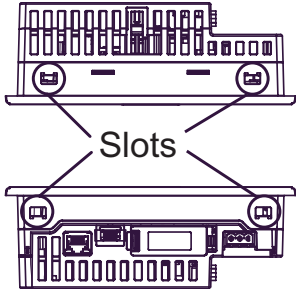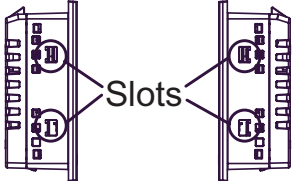Step	Action
1	Place the GP unit on a clean and level surface with the display facing downward.
2	Check that the GP unit's gasket is seated securely into the gasket's groove, which runs around the perimeter of the GP unit frame.
3	<p>Cut a hole in the installation panel as defined by the GP unit's panel cutout dimensions.</p> <p>GP-4200 Series (see page 63)                      GP-4300 Series (see page 81)                      GP-4400 Series (see page 96)                      GP-4500 Series (see page 116)                      GP-4600 Series (see page 133)</p>
4	Insert the GP unit into the panel-cut.
5	<p>Insert the installation fasteners into the GP unit's insertion slots on the top and bottom sides (left and right sides for the GP-4200 Series). Slide the fasteners to the back. If the fasteners are not correctly attached, the GP unit may shift or fall out.</p>  <p>Installation Panel Hook</p> <p>GP-4301T</p>  <p>Slots</p> <p>GP-4201T</p>  <p>Slots</p>

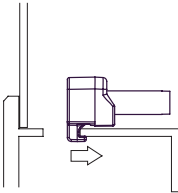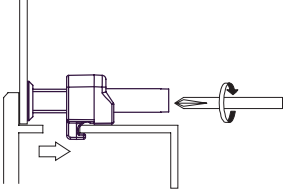Step	Action
6	<p>Insert each of the fasteners shown below. Make sure you pull the fastener back until it is flush with the rear of the attachment hole insert.</p> 
7	<p>Use a Phillips screwdriver to tighten each fastener screw and secure the GP unit in place. The necessary torque is 0.5 Nm (4.4 in•lb).</p> 


## ***NOTICE***

### **BROKEN ENCLOSURE**

- Do not exert more than 0.5 Nm (4.4 in•lb) of torque when tightening the fastener's screws.
- Use on flat surface of a Type 1, Type 4X (Indoor Use Only) or Type 13 Enclosure.

**Failure to follow these instructions can result in equipment damage.**

**Removal Procedure**

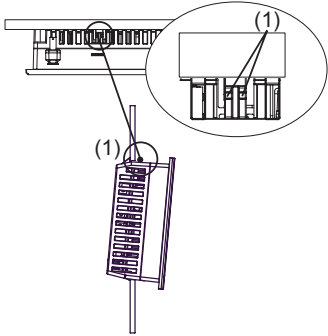Step	Action
1	Loosen the installation fasteners (4) from the GP unit.
2	<p>Remove the GP unit slowly from the panel while pressing the projections on the top of the GP unit.</p>  <p>1 Projections</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• You could damage the GP unit if you try and remove it without holding down the projections.</li> <li>• Watch your fingers so they do not get caught when holding down the projections.</li> </ul>

**⚠ CAUTION**

**RISK OF INJURY**

Do not drop the GP unit when you remove it from the panel.

- Hold the GP unit in place after removing the fasteners.
- Use both hands.

**Failure to follow these instructions can result in injury or equipment damage.**

---

## 5.2 Wiring Principles

---

### Overview

This section presents the GP unit wiring principles.

### What Is in This Section?

This section contains the following topics:

Topic	Page
Connecting the AC Power Cord	142
Connecting the DC Power Cord	144
Connecting the Power Supply	147
Grounding	149

## Connecting the AC Power Cord

### ⚠ WARNING

#### EXCESSIVE ELECTROMAGNETIC INTERFERENCE

- When the functional ground (FG) terminal is connected, be sure the wire is grounded. Not grounding the GP unit can result in excessive Electromagnetic Interference (EMI). Grounding is required to meet EMC level immunity.
- Remove power before wiring the GP unit's power terminals.
- The AC model is designed to use 100 Vac to 240 Vac input. Using any other level of power can damage both the power supply and the GP unit.
- Since the GP unit is not equipped with a power switch, be sure to connect a power switch to the power supply.
- Be sure to ground the GP unit's FG terminal.

Use the following torque to tighten the terminals:



- Terminal Block: 1.4 N•m (12.4 lb•in.)
- Functional Ground (FG) Terminal: 1.4 N•m (12.4 lb•in.)

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**NOTE:** The shield ground (SG) and FG terminals are connected internally in the GP unit.


### AC Power Cord Preparation

- Make sure the ground wire is either the same or heavier gauge than the power wires.
- Do not use aluminum wires in the power supply's power cord.
- Use copper conductors only.
- The temperature rating of field installed conductors: 75 °C (167 °F) only.

	AC Power Cord	Grounding Wire
Power Cord	Double-insulated Wire 0.75 to 3.5 mm <sup>2</sup> (18-12AWG)	0.75 to 3.5 mm <sup>2</sup> (18-12AWG)
Recommended Ring Terminal <sup>*1</sup>	J.S.T Mfg. Co., Ltd compatible: <ul style="list-style-type: none"> <li>• V1.25-M4 (18-16AWG)</li> <li>• V2-P4 (16-14AWG)</li> <li>• V5.5-S4 (14-12AWG)</li> </ul> <div style="text-align: center;">  </div> <p>(1) <math>\phi</math>4.3 mm (0.17 in.) or more (2) Less than 7.2 mm (0.28 in.)</p>	J.S.T Mfg. Co., Ltd compatible: <ul style="list-style-type: none"> <li>• V1.25-M4 (18-16AWG)</li> <li>• V2-P4 (16-14AWG)</li> <li>• V5.5-S4 (14-12AWG)</li> </ul> <div style="text-align: center;">  </div> <p>(1) <math>\phi</math>4.3 mm (0.17 in.) or more (2) Less than 7.2 mm (0.28 in.)</p>

<sup>\*1</sup> To prevent a short circuit caused by loose screws, use a crimp-type terminal with an insulating sleeve.

## How to connect the AC Power Cord

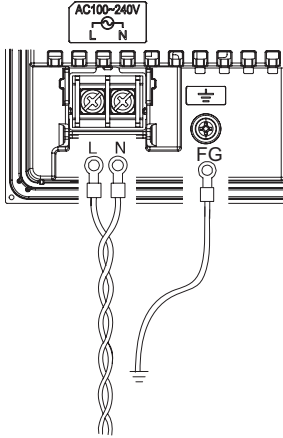Step	Action
1	Confirm the power cord is not connected to the power supply.
2	Open the terminal strip's clear plastic cover.
3	<p>Remove screws from the L, N, and FG (functional ground) terminals. Attach the ring terminals and reinsert the screws. Check each wire to make sure the connections are correct.</p> <p><b>NOTE:</b> The torque required to tighten these screws are as follows:</p> <ul style="list-style-type: none"><li>● Terminal Block: 1.4 N•m (12.4 lb•in.)</li><li>● FG (functional ground) Terminal: 1.4 N•m (12.4 lb•in.)</li></ul>  <p>The diagram shows a terminal block with three main terminals labeled L, N, and FG. The L and N terminals are connected to a power cord with two twisted wires. The FG terminal is connected to a ground symbol. Above the terminals, there is a label 'AC100-240V' with a switch symbol and 'L' and 'N' labels. To the right of the FG terminal, there is a ground symbol and the label 'FG'.</p>
4	Close the terminal strip's clear plastic cover.

## Connecting the DC Power Cord

### **⚠ WARNING**

#### **EXCESSIVE ELECTROMAGNETIC INTERFERENCE**

- When the functional ground (FG) terminal is connected, be sure the wire is grounded. Not grounding the GP unit can result in excessive Electromagnetic Interference (EMI). Grounding is required to meet EMC level immunity.
- Remove power before wiring the GP unit's power terminals.
- The DC model uses only 24 Vdc power. Using any other level of power can damage both the power supply and the GP unit.
- Since the GP unit is not equipped with a power switch, be sure to connect a power switch to the power supply.
- Be sure to ground the GP unit's FG terminal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


**NOTE:** The shield ground (SG) and FG terminals are connected internally in the GP unit.

#### **DC Power Cord Preparation**

- Make sure the ground wire is either the same or heavier gauge than the power wires.
- Do not use aluminum wires in the power supply's power cord.
- If the ends of the individual wires are not twisted correctly, the wires may create a short circuit.
- Wherever possible, use wires that are 0.75 to 2.5 mm<sup>2</sup> (AWG 18 - 13) for the power cord, and twist the wire ends before attaching the terminals.
- The conductor type is solid or stranded wire.
- Use copper conductors only.
- The temperature rating of field installed conductors: 75 °C (167 °F) only.


#### **DC Power Supply Connector (Plug) Specifications**

GP-4200 Series / GP-4300 Series / GP-4400 Series

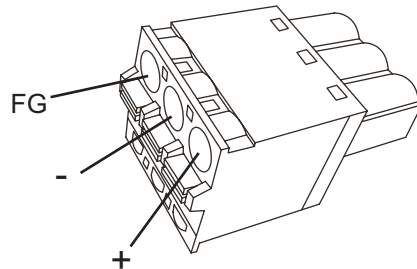



## GP-4500 Series / GP-4600 Series

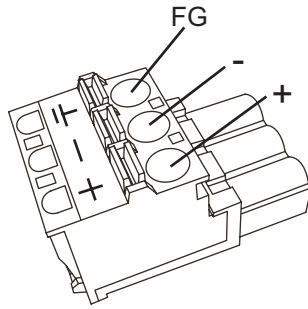

Connection	Wire
+	24 Vdc
-	0 Vdc
FG	Grounded terminal connected to the panel chassis.

**NOTE:** The DC power supply connector (plug) for GP-4200 Series / GP-4300 Series / GP-4400 Series is PFXZCBCNDC1 (manufactured by Pro-face).



The DC power supply connector (plug) for GP-4500 Series / GP-4600 Series is PFXZCBCNDC2 (manufactured by Pro-face).

Recommended Driver	SZS 0.6x3.5 (1205053)
Recommended Pin Terminals	3201288 AI 0,75-10 GY 3200182 AI 1 -10 RD 3200195 AI 1,5 -10 BK 3202533 AI 2,5 -10 BU
Recommended Pin Terminal Crimp Tool	CRIMPFOX 6

(The above items are manufactured by Phoenix Contact.)

### How to connect the DC Power Cord

Step	Action
1	Confirm the power cord is not connected to the power supply.
2	Check the rated voltage and remove the "DC24V" sticker on the DC power supply connector.
3	Remove 10 mm (0.39 in.) of the vinyl membrane off the ends of the power cord wires.
4	If using stranded wire, twist the ends. Tinning the ends with solder reduces risk of fraying and ensures good electrical transfer.
5	Push the Opening button with a small and flat screwdriver to open the desired pin hole.

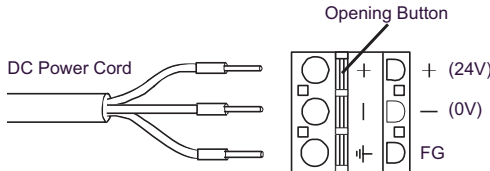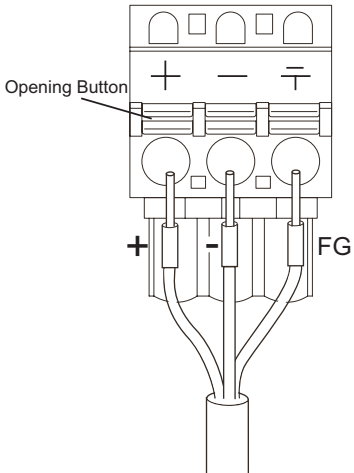Step	Action
6	<p>Insert each pin terminal into its corresponding hole. Release the Opening button to clamp the pin in place.</p> <p>GP-4200 Series / GP-4300 Series / GP-4400 Series</p>  <p>GP-4500 Series / GP-4600 Series</p> 
7	<p>After inserting all three pins, insert the power plug into the power connector on the GP unit.</p>

**NOTE:**

- Do not solder the wire directly to the power receptacle pin.
- To prevent the possibility of a terminal short, use a pin terminal that has an insulating sleeve.
- You can connect the DC power supply connector for GP-4200 Series, GP-4300 Series, or GP-4400 Series to GP-4500 Series or GP-4600 Series units. However, the reverse is not possible. You cannot connect the DC power supply connector for GP-4500 Series or GP-4600 Series to GP-4200 Series, GP-4300 Series, or GP-4400 Series units.

## Connecting the Power Supply

### Precautions

- You must use a 24 Vdc input unit with a Class 2 power supply.
- To increase the electromagnetic noise resistance, make sure you twist the ends of the power cord wires before connecting them to the power plug or ring terminal.
- The GP unit's power supply cord should not be bundled with or kept close to main circuit lines (high voltage, high current), or input/output signal lines.
- Connect a lightning surge absorber to handle power surges.
- To reduce electromagnetic noise, make the power cord as short as possible.

## ⚠ WARNING

### SHORT CIRCUIT, FIRE, OR UNINTENDED EQUIPMENT OPERATION


Avoid excessive force on the power cable to prevent accidental disconnection

- Securely attach power cables to the GP unit or cabinet.
- Use the designated torque to tighten the unit terminal block screws.
- Install and fasten the GP unit on installation panel or cabinet prior to connecting power supply and communication lines.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


### Power Supply Connections

When supplying power to the GP unit, separate the input/output and power lines, as shown.

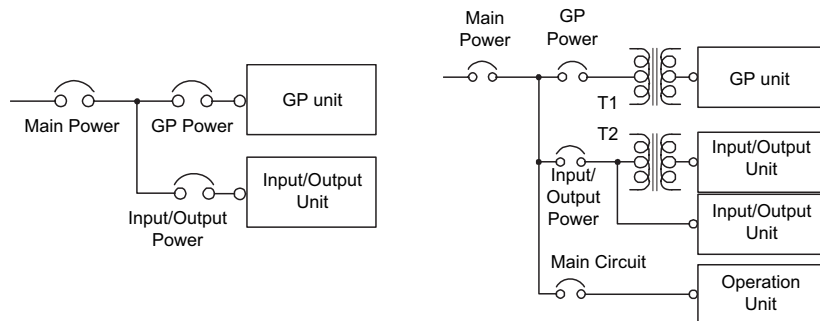


### NOTE:

The following shows a lightning surge absorber connection:

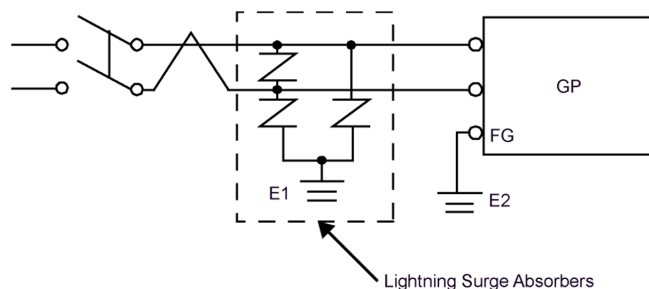


- Ground the surge absorber (E1) separately from the GP unit (E2).
- Select a surge absorber that has a maximum circuit voltage greater than that of the peak voltage of the power supply.

If the supplied voltage exceeds the GP unit range, connect a constant voltage transformer.

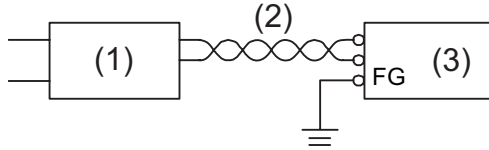

- 1 Constant voltage transformer
- 2 Twisted-pair cord
- 3 GP unit

Select a power supply low in noise for between the line and ground. If there is an excess amount of noise, connect an insulating transformer.

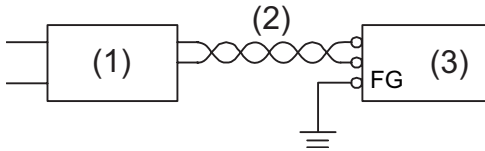

- 1 Insulating transformer
- 2 Twisted-pair cord
- 3 GP unit


**NOTE:** Use constant voltage and insulating transformers with capacities exceeding the Power Consumption value.

## Grounding

### Exclusive Grounding

When supplying power to the GP unit, separate the input/output and power lines as shown below.


Connect the frame ground (FG) terminal on the power plug to an exclusive ground.

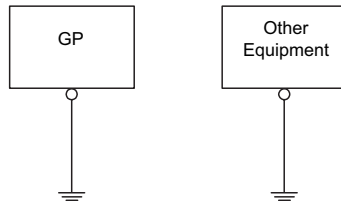


### Precautions

Electromagnetic Interference (EMI) can be created if the devices are improperly grounded. EMI can cause loss of communication. Do not use common grounding, except for the authorized configuration described below. If exclusive grounding is not possible, use a common grounding point.

Correct grounding

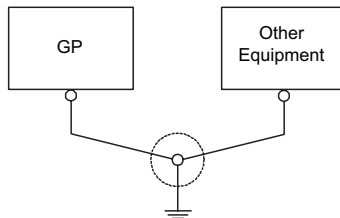

Incorrect grounding

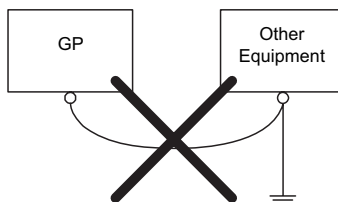

- Check that the grounding resistance is 100  $\Omega$  or less.\*<sup>1</sup>
- The FG wire should have a cross sectional area greater than 2 mm<sup>2</sup> (AWG 14)<sup>(1)</sup>. Create the connection point as close to the GP unit as possible, and make the wire as short as possible. When using a long grounding wire, replace the thin wire with a thicker wire, and place it in a duct.
- FG and SG terminals are internally connected in the GP unit. When connecting an external device to the GP unit using the SG terminal, check that you do not create a short-circuit loop when you set up the system.

\*<sup>1</sup> Observe local codes and standards. Ensure the ground connection has a resistance of 100  $\Omega$  and that the ground wire has a cross-section of at least 2 mm<sup>2</sup> or AWG 14.

## 5.3 SD Card Insertion/Removal

---

### What Is in This Section?

This section contains the following topics:

Topic	Page
Introduction	151
Inserting the SD Card	152
Before Removing the SD Card	154
Removing the SD Card	155
SD Card Data Backup	156

## Introduction

### ***NOTICE***

#### **LOSS OF DATA**

When using the GP unit and a SD Card, observe the following to avoid losing valuable data:

- Since accidental data loss can occur at any time, back up GP unit screen and SD Card data regularly. Once GP unit data is lost, it cannot be recovered.
- Before removing the SD Card from the GP unit, make sure you run the Offline Mode's hardware removal process. If you do not run the removal process and forcibly extract the SD Card, data on the SD Card may become corrupted.
- While a SD Card is accessed, do not turn OFF or reset the GP unit, and do not insert or remove the SD Card. Doing so could damage the SD Card, or corrupt its data.
- Before using the SD Card, familiarize yourself with the SD Card's front and rear face orientation, as well as the position of the SD Card connectors. If the SD Card is not positioned correctly when inserted into the GP unit, the card's internal data and GP unit could become damaged.

**Failure to follow these instructions can result in equipment damage.**

### ***NOTICE***

#### **LOSS OF DATA**


When handling the SD Card, follow the instructions below to prevent internal data on the SD Card from being destroyed or a SD Card malfunction from occurring:


- Avoid storing the SD Card where there is static electricity or electromagnetic waves.
- Avoid storing the SD Card in direct sunlight, near a heater, or other locations where high temperatures can occur.
- Do not bend the SD Card.
- Do not drop or strike the SD Card against another object.
- Keep the SD Card dry.
- Do not touch the SD Card connectors.
- Do not disassemble or modify the SD Card.
- Use only SD Cards formatted using FAT or FAT32. The GP unit does not recognize NTFS formatted SD Cards. Format the SD Card on your computer using FAT or FAT32.

**Failure to follow these instructions can result in equipment damage.**


## Inserting the SD Card

**NOTE:** As shown in the image below (example on the left-hand side), you can set the Write-Control Tab to prevent write operations to the SD Card. Push the tab up, as shown in the example on the right-hand side, to release the lock and enable writing to the SD Card. Before using a commercial-type SD Card, read the manufacturer's instructions.

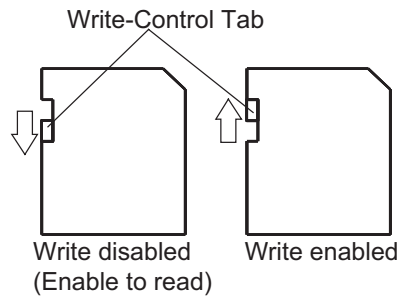

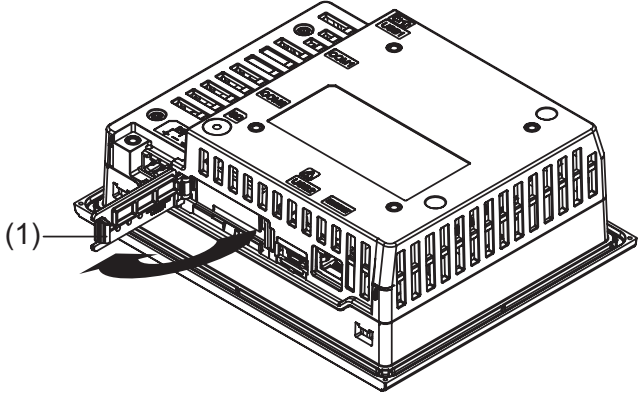Step	Action
1	<p>Pull on the tab and open the SD Card cover.</p>  <p>(1) Tab</p>




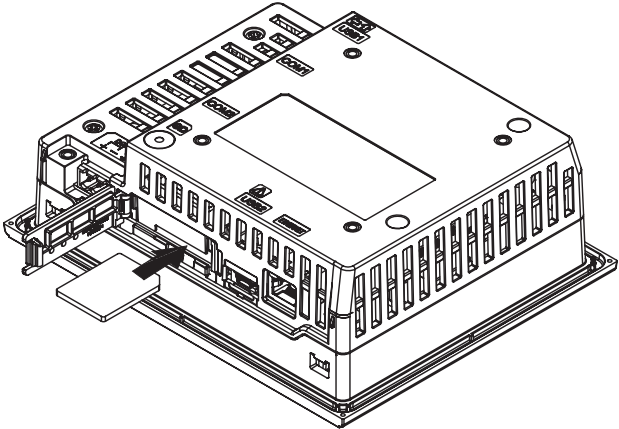



Step	Action
2	<p data-bbox="473 202 1208 229">Insert the SD Card into the SD Card interface, and push until you hear it “click”.</p>  A technical line drawing of a rectangular electronic device, likely a network switch or router, shown from a three-quarter perspective. The device has a front panel with a series of vertical slots and a top panel with various ports and indicators. An SD card is shown being inserted into a slot on the front panel. The card is partially inserted, with its top edge flush with the slot's opening. The device is mounted on a base with a series of vertical ridges.
3	<p data-bbox="473 695 718 722">Close the SD Card cover.</p>

## Before Removing the SD Card



Do not remove the SD Card while it is being accessed. Doing so could corrupt the data on the SD Card. Before removing the SD Card from the GP unit, make sure you run the following procedure to stop SD Card operation.

**NOTE:**

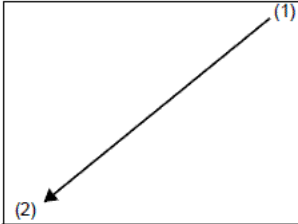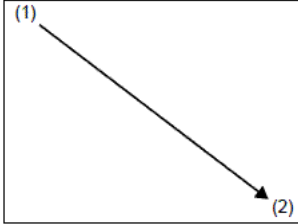- When the GP unit is in offline mode or in screen transfer mode, you cannot stop SD Card operation. Return to RUN mode to stop the SD Card.
- When the SD Card removal process is complete, the GP unit's SD Card Access LED is off. Confirm the lamp is off, then remove the SD Card.
- For instructions on how to stop SD Card operation, refer to the GP-Pro EX Reference Manual, "Safely Detaching the SD Card or USB Storage Device".

Step	Action
1	<p>Either touch the top-right then the bottom-left corner, or the top-left then bottom-right corner of the panel (within a 40 pixel area) in 0.5 seconds.</p> <div style="display: flex; align-items: center; justify-content: center;">  <span style="margin: 0 10px;">or</span>  </div>
2	<p>In the system menu, touch the SD Card icon.</p> 
3	<p>In the "Remove SD Card?" message, touch [Yes].</p>
4	<p>When the GP unit completes the removal process, the SD Card icon disappears from the system menu.</p> 
5	<p>Touch the Close icon to exit the system menu.</p> 

## Removing the SD Card

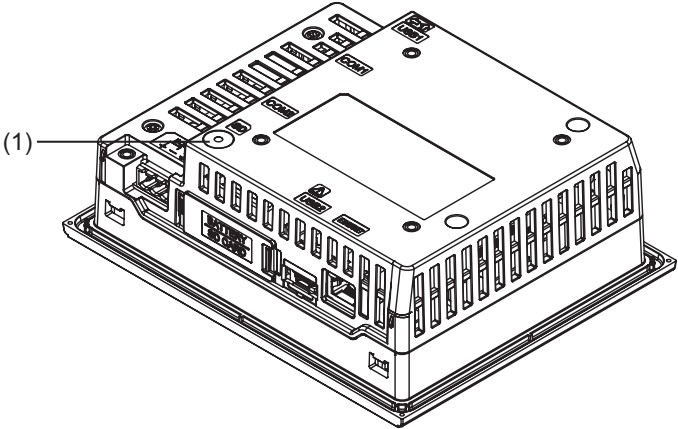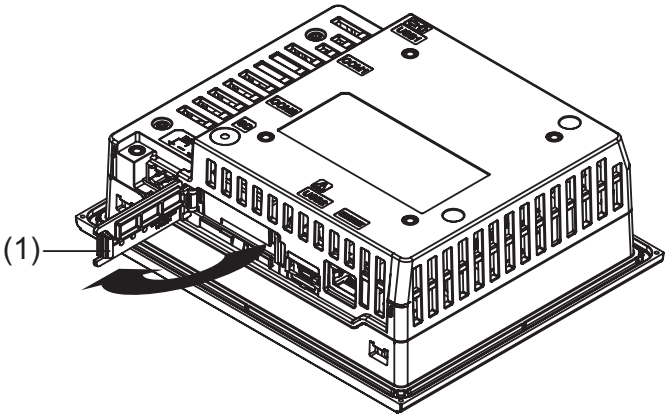Step	Action
1	<p data-bbox="473 332 879 357">Make sure the SD Card Access LED is off.</p>  <p data-bbox="473 823 718 848">1 SD Card Access LED</p>
2	<p data-bbox="473 859 1112 884">Push down the tab on the SD Card cover, then pull open the cover.</p>  <p data-bbox="473 1348 550 1373">1 Tab</p>
3	<p data-bbox="473 1387 1195 1437">Push the SD Card once to release, and pull out the card. After removing the card, close the cover.</p> <p data-bbox="473 1441 1188 1487"><b>NOTE:</b> After using the SD Card, store the SD Card in its case or other safe location.</p>

## **SD Card Data Backup**

To make your backups, you can either insert the SD Card directly into the SD Card interface on your computer, or use a commercially available SD Card reader.

---

## 5.4 USB Cable Clamp

---

### Overview

This section presents the USB cable clamp.

### What Is in This Section?

This section contains the following topics:

Topic	Page
USB Cable Clamp for USB (Type A)	158
USB Holder for USB (mini-B)	160

## USB Cable Clamp for USB (Type A)


### Introduction



When using a USB device, attaching a USB cable clamp to the USB interface to prevent the USB cable from being disconnected.

<b>⚠ WARNING</b>
<b>RISK OF EXPLOSION IN HAZARDOUS LOCATIONS</b>
<ul style="list-style-type: none"> <li>● Confirm that the USB cable has been attached with the USB cable clamp before using the USB interface.</li> <li>● Remove power before attaching or detaching any connectors to or from the unit.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p>

### Attaching the USB Cable Clamp


**NOTE:** Watch your fingers. The edge of the clip is sharp.

Step	Action
1	<p>Mount the clip to the USB mark  connector shell so that it overlaps. The clip matches the 27 to 43.5 mm [1.06 to 1.71 in.] length of the USB connector.</p>
2	<p>Align the clip and the USB cable connector shell. Adjust the position of the holes where the clip is attached. To ensure stability, select the clip-hole position that is closest to the base of the connector shell.</p>

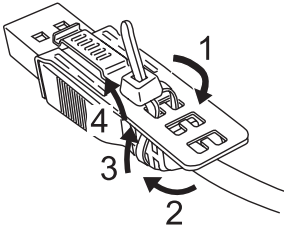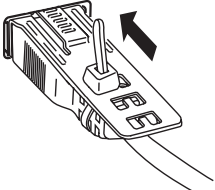Step	Action
3	<p>As shown, pass the tie through the clip hole. Next, turn the tie and pass it through the head so that the USB cable can pass through the center of the tie loop. The clip is now attached to the USB cable.</p>  <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>● Check the direction of the head beforehand. Make sure the USB cable is through the center of the tie loop and that the tie can pass through the head.</li> <li>● You can substitute the tie provided with PFXZCBCLUSA1 (manufactured by Pro-face, or other commercially available ties with a width of 4.8 mm [0.19 in.] and thickness of 1.3 mm [0.05 in.].</li> </ul>
4	<p>While pressing the grip on the clip, insert the cable from step 3 all the way into the USB host interface. Make sure that the clip tab is secured to the USB cable attached to the GP unit.</p> 

### Removing the USB Cable

Remove the USB cable while pushing the grip section of the clip.

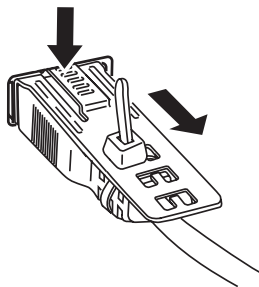



## USB Holder for USB (mini-B)

### Introduction

When using a USB device, you can attach a USB holder to the USB (mini-B) interface to prevent the USB cable from being disconnected.

<b>⚠ WARNING</b>
<b>RISK OF EXPLOSION IN HAZARDOUS LOCATIONS</b>
<ul style="list-style-type: none"> <li>• Confirm that the USB cable has been attached with the USB holder before using the USB interface.</li> <li>• Remove power before attaching or detaching any connectors to or from the unit.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p>


### Attaching the USB Holder

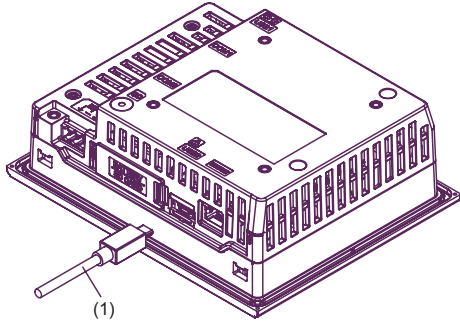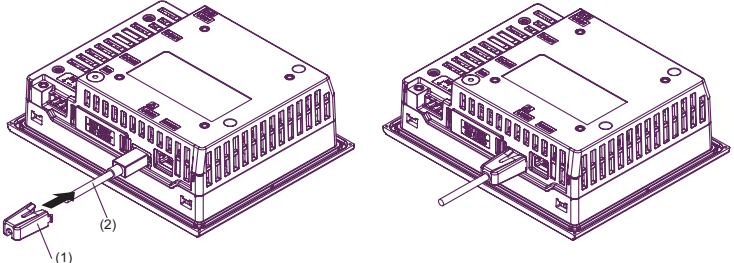Step	Action
1	<p>Insert the USB cable into the USB (mini-B) interface.</p>  <p style="text-align: center;">1 USB cable</p>
2	<p>Attach the USB holder to fix the USB cable in place. Insert the USB holder into the USB (mini-B) interface.</p>  <p style="text-align: center;">1 USB holder 2 USB cable</p>

### Removing the USB Holder

Remove the USB holder by pressing the tabs from the sides.



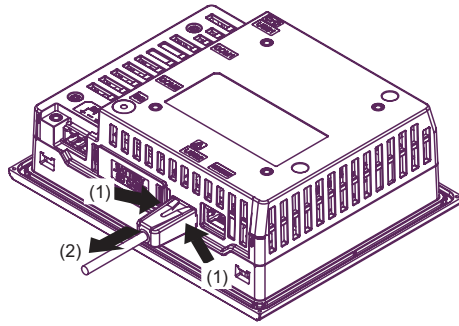

- 1 USB holder
- 2 USB cable



---

# Maintenance



# 6

---

## Overview

This chapter explains how to maintain your GP unit.

## What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Regular Cleaning	164
Replacing the Installation Gasket	165
Periodic Check Points	167
Replacing the Primary Battery	168

---

## Regular Cleaning

### Cleaning the display

#### ***NOTICE***

##### **EQUIPMENT DAMAGE**

- Power off the GP unit before cleaning it.
- Do not use hard or pointed objects to operate the touch panel as you may damage the panel surface.
- Do not use paint thinner, organic solvents, or a strong acid compound to clean the unit.

**Failure to follow these instructions can result in equipment damage.**

When the surface or the frame of the display gets dirty, soak a soft cloth in water with a neutral detergent, wring the cloth tightly and wipe the display.

## Replacing the Installation Gasket

### Overview

The installation gasket provides protection against dust and moisture.

### **NOTICE**

#### **GASKET AGING**


- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

### Installing the Installation Gasket

Stage	Description
1	Place the GP unit on a flat, level surface, with the display face pointing down.
2	Remove the gasket from the GP unit.
3	<p>Attach the new gasket to the GP unit. Position the gasket in the installation groove so that the gasket seam is at the bottom of the GP unit. First, insert the gasket into the 4 corners, in the order shown in the image below. Then, insert the rest of the gasket into the installation groove.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• The center of the GP unit bezel's installation groove is ribbed. Make sure you insert the gasket all the way in without catching the ribbed sections.</li> <li>• When using a tool to insert the gasket, make sure the tool does not catch the rubber gasket and cause a tear.</li> </ul>

(GP-4301T)

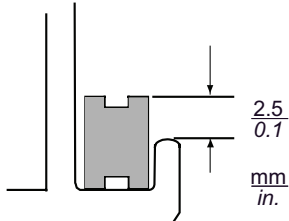Stage	Description
4	<p>The upper surface of the gasket should protrude approximately 2.5 mm (0.1 in.) from the groove. Check the gasket is inserted correctly before installing the GP unit into a panel.</p> 

The gasket must be inserted correctly into the groove for IP65f moisture resistance for the GP unit.

## ⚠ CAUTION

### EQUIPMENT DAMAGE

- Since the gasket is flexible but not elastic, be careful not to stretch it unnecessarily.
- Make sure the gasket seam is not inserted into any of the GP unit corners.
- Insert the gasket in the installation groove

**Failure to follow these instructions can result in injury or equipment damage.**

## Periodic Check Points

### Operation Environment

- Is the operating temperature within the allowable range? Refer to Environmental Specifications (*see page 46*), (*see page 66*), (*see page 84*), (*see page 99*), (*see page 119*).
- Is the operating humidity within the specified range? (10%RH to 90%RH, dry bulb temperature of 39 °C [102.2 °F] or less)
- Is the operating atmosphere free of corrosive gasses?

When the GP unit is inside a panel, the ambient environment refers to the interior of the panel.

### Electrical Specifications

Is the input voltage appropriate?

- 100 Vac to 240 Vac 50/60 Hz
- 19.2 Vdc to 28.8 Vdc

### Related Items

- Are all power cords and cables connected properly? Are there any loose cables?
- Are all mounting brackets holding the unit securely?
- Are there scratches or traces of dirt on the installation gasket?

---

## Replacing the Primary Battery

### Introduction

The replacement battery (sold separately) for the primary battery in the GP unit is available from Pro-face.

**NOTE:** The GP-4200 Series and GP-4301TW are not equipped with a primary battery.

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Follow the procedures step by step to replace the battery correctly and safely.
- Before replacing the battery, turn OFF the GP unit's power.

**Failure to follow these instructions will result in death or serious injury.**

### **DANGER**

#### **EXPLOSION, FIRE, OR CHEMICAL HAZARD**

- Use only the replacement battery manufactured by Pro-face.
- Do not cause a short circuit.
- Recycle or properly dispose of used batteries.

**Failure to follow these instructions will result in death or serious injury.**

### **NOTICE**




#### **LOSS OF DATA**

The primary battery is non-rechargeable, and is used for data backup of memory and the internal clock. If the primary battery is depleted, the backup data is lost. One month before the primary battery is completely depleted, an alarm will beep to indicate it is time to replace the primary battery.

- Replace the battery within one month after the alarm occurs. Otherwise, backup data may be lost.
- Complete replacing the battery within ten minutes of shutting down the GP unit.
- The primary battery replacement time (within a month after the alarm occurs) is only a guideline. When backup SRAM data and clock data is lost after the alarm occurs, Pro-face does not perform data recovery/retrieval. Pro-face does not accept any responsibility for the loss of data.
- Replace the primary battery regularly every five years after you purchase the GP unit.

**Failure to follow these instructions can result in equipment damage.**

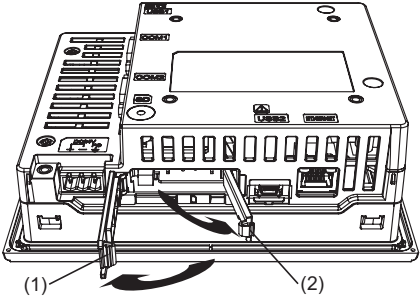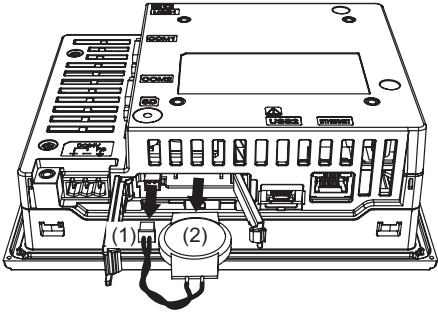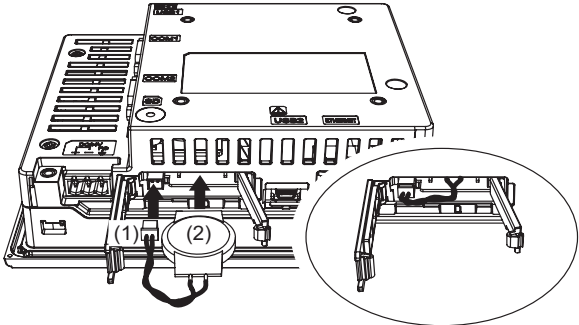

Step	Action
1	Disconnect the power supply from the GP unit.
2	Touch the housing or ground connection (not the power supply) to discharge any electrostatic charge from your body.
3	<p>Open the SD Card Interface Cover by pressing its tab. Next, open the Replacement Battery Insertion Cover by pressing its tab.</p>  <p>1 SD Card Interface Cover / Tab 2 Replacement Battery Insertion Cover / Tab</p>
4	<p>Remove the primary battery and connector.</p>  <p>1 Connector 2 Primary battery</p>
5	<p>Insert the replacement battery and connector all the way. Either side of the battery can face top or bottom.</p>  <p>1 Connector 2 Replacement battery</p>

---

Step	Action
6	First close the replacement battery cover, then close the SD Card Interface Cover. <b>NOTE:</b> Make sure the cables are inserted completely inside the enclosure. Otherwise, you can damage the cables when you close the cover.
7	Reconnect the power supply to the GP unit.